



Practical Approaches to Wood Finishing

Salim Hiziroglu

Assistant Professor, Wood Products

The major purposes of wood finishing are stabilization, protection, and aesthetics. The first two purposes are related to the hygroscopic nature of wood, while aesthetics is concerned with developing a product that is visually appealing.

Wood reacts to changes in the moisture content of the surrounding environment. This response causes shrinkage and swelling, which results in defects such as splitting, cracking, and warping. (For more information on shrinkage and swelling in wood see OSU Extension Facts F-5009, "Dimensional Changes in Wood"). A finish acts as a barrier and stabilizer, reducing the development of defects from changing moisture conditions. The protection provided by finishes also plays an important role during the service life of wood products, reducing or preventing damage from environmental conditions and everyday use. The aesthetic or decorative purpose of wood finishes can be classified into three major groups—texture, color, and sheen. Finishes are fashion oriented and are a significant factor in the marketability of wood products.

Surface Preparation and Finish Types

Surface preparation is the first step in the finishing process. Generally after planing, the wood surface will need some degree of preparation prior to finishing. Sandpaper, steel wool, or various finishing pads are commonly used to smooth and clean the surface to eliminate roughness and other defects that might influence the quality of the finish. Many types of material are used to manufacture sandpaper. Silicon carbide, zirconia, ceramic, and garnet are the minerals most commonly used. Cloth, paper, or a combination of different films is used for the backing layer of the sandpaper. Figure 1 illustrates a schematic of typical sandpaper construction.

A typical furniture finishing process includes the following stages:

- sanding
- bleaching
- filling
- staining
- sealing
- washcoat
- glazing
- topcoat
- rubbing

Depending on the type of finish desired, some of these steps may be eliminated, or other finishing processes may be added. For example, bleach is applied if lightening or removing the natural wood colorant is required. Because bleaching is an expensive and hazardous operation, the highest quality

Oklahoma Cooperative Extension Fact Sheets are also available on our website at: <http://osufacts.okstate.edu>

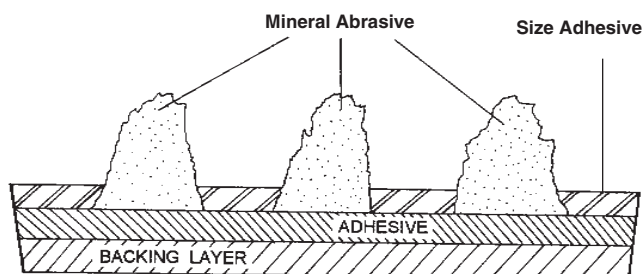


Figure 1 . A schematic of a typical sandpaper construction.

solid wood or veneer should be selected to balance the cost of the total finishing process. Sodium hydroxide and hydrogen peroxide are most commonly used as bleaching agents.

The purpose of staining is to change the color of wood. Either oil-soluble or water-soluble stains can be used for wood staining. Nongrain-raising stains (NGR) are water-soluble dyes that can be thinned using alcohol. They are usually applied using low air pressure in the range of 25-30 psi. Stains are formulated in a wide range of intense colors at a relatively low cost in comparison to the total cost of finish and their functions.

Filling can also be an important part of the finishing process. Filling covers pores of species such as oak, ash, and walnut. Depending on the anatomical characteristics of the species of wood, not all surfaces need to be smoothed with a filling agent. Linseed oil and varnish-based wood filler paste are the most popular types of fillers. Fillers are applied to the surface as a thick coat, and excessive filler is later wiped off by rubbing across the grain with a coarse fabric. Paste wood filler cures within several days, while water-based fillers cure faster. Because curing time is shorter for water-based fillers, it is very difficult to remove excess filler after application. Fine sandpaper (200-220 grit) can be used to clean the surface and make it ready for the next coat of finish.

A sealer is any finishing material applied with the primary purpose to stop the absorption of succeeding coats. There is a misconception that a special chemical should be used as a sealer since a regular finish will not seal the surface.

However, any coat of finish can be considered a sealer. No matter what type of finish is used, the first coat will cause raising of fibers on the surface, to some extent resulting in a rough surface. This can be eliminated by the application of a sanding sealer, which usually contains zinc stearate. Application of a sanding sealer is one of the most critical steps in the finishing process. It will increase the smoothness of the surface so that the remaining finish coats will adhere to the surface. A major disadvantage of a sanding sealer is its lower resistance to water than finish itself. The sealer should be applied only once; otherwise, extra coats may weaken the finish.

Glaze stains are usually applied to more expensive furniture. They can add depth, richness, and decor. Most glazes have a pigment suspended in an oil varnish or water-based binder.

In general, finishes can be classified into two main groups: penetrating and film finishes. Penetrating finishes are usually oils and don't cure as a hard surface layer, while film finishes cure to form a hard surface layer and can be built up to any desired thickness. If a film-type finish is used, topcoats can be applied to increase the thickness of the film, add decorative color, and modify sheen after the initial sealer coat. Figure 2 shows topcoat glaze and sealer coat on a surface.

Application of Spraying

Airless and electrostatic spraying techniques have been significantly improved since their development in the 1940s. Airless spray (conventional spray) is still considered the most versatile finishing application. Lower amounts of finish and energy expenditure are major advantages of airless spraying techniques. Liquid paint is broken up or atomized by the pressure difference between the tip of the spray gun and the air just in front of the spray gun. Pressure level, viscosity of finish, temperature, and geometry of the spray gun nozzle are some of the factors influencing the degree of atomization.

Viscosity—the fluidity of the finish—is a critical property for proper atomization. If the finishing liquid is too viscous, results can include pinholes, bubbling, or surface roughness due to improper distribution of the liquid. On the other hand, viscosity that is too low will cause sagging of the finish. In a general finishing application, 70-80 centipoise viscosity

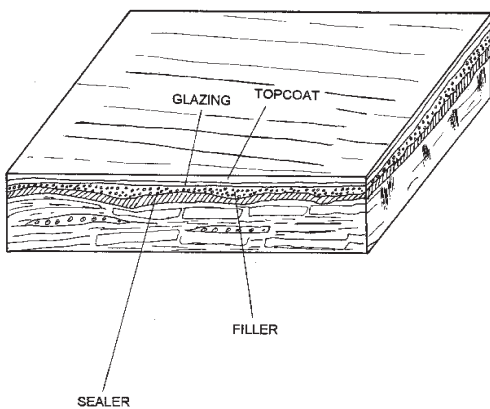


Figure 2. Location of topcoat, glaze, and sealer on wood surface.

should yield desirable results. Figure 3 illustrates a typical relationship between viscosity and temperature.

High-volume, low-pressure (HVLP) spraying has become a very popular technique in finishing. This system utilizes the same volume as conventional spray techniques, but uses lower pressure at the nozzle. The amount of material bounced from the surface being sprayed is reduced, resulting in 65-90% coating efficiency. This method is ideal for low-capacity production lines.

Ultraviolet coating has also been successfully used in many automated finishing lines. Light energy at wavelengths of about 0.04 to 0.8 micrometers breaks certain chemical bonds and helps cure finish films. Since many ultraviolet coatings are 100% solid, this method also substantially reduces volatile organic compounds used during the finishing operation.

Another method applies an electrostatic finish to the wood and requires that the part being sprayed be electrically conductive. Therefore, moisture content of wood should be at least 10-13%. This method is ideal for chairs, cabinet doors, table legs, and bed rails. Usually, parts are transported on an overhead material conveyor. A uniform high-quality coat and lower volatile organic compounds are two main advantages electrostatic finishes have over conventional spraying methods.

Application of finish spray is one of the most important factors influencing the amount of finish, homogeneous distribution of finish on the surface, and quality of the subsequent coats. The spray should be applied differently depending on vertical or horizontal orientation of the panel. In both vertical and horizontal panel applications, the spray gun should be held approximately 5-11 inches from the panel and should be moved parallel to the panel rather than in a swinging motion, which may produce uneven distribution of the finish. Ideally, the spray pattern at the edge of the panel should be centered, and the next application should overlap about 40-50% of the previously sprayed area on the return. In horizontal applications, spray the edges first; spray the face last in overlapping parallel bands. Figures 4A, 4B, and 4C illustrate finish spraying for various applications.

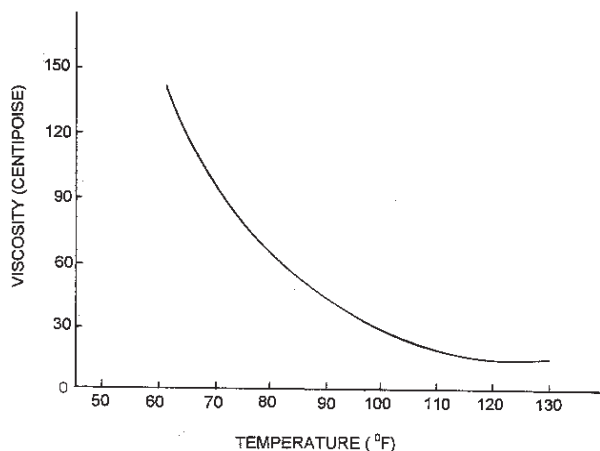


Figure 3. Relationship between temperature and viscosity of the finishing material.

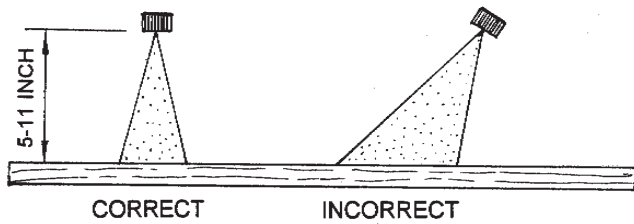


Figure 4A. Spraying distance in both horizontal and vertical applications.

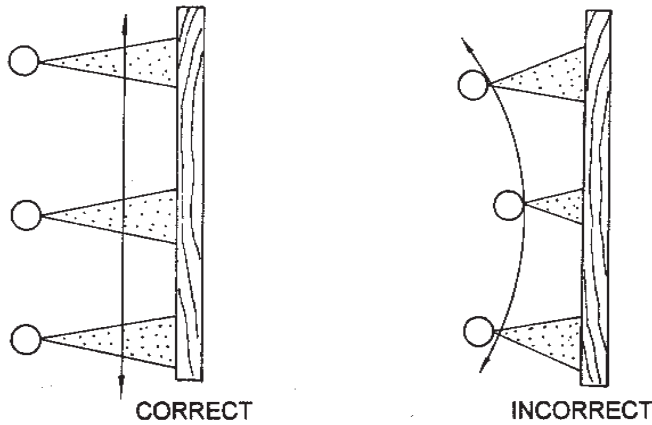
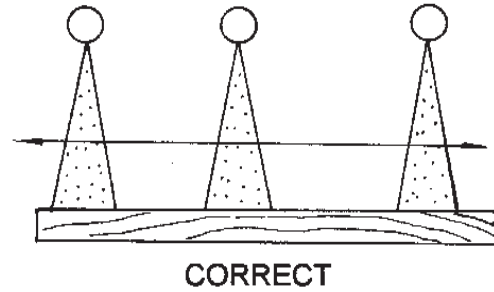


Figure 4B. Application of finish to a vertical panel.

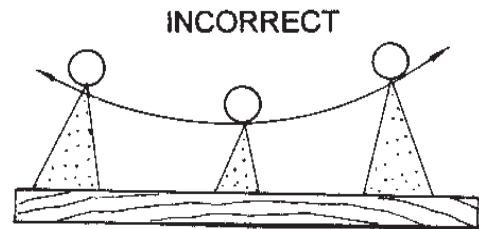


Figure 4C. Application of finish to a horizontal panel.

The main objective of any spraying line is to apply finish to the products in a safe, efficient, and effective way under the right conditions. Removing flammable and toxic fumes and having sufficient air ventilation, proper temperature, and controlled humidity are some important factors necessary to achieve this objective.

Clean air circulation plays an important role in keeping the environment at the desired temperature and relative humidity. It also acts as a drying medium for the part being sprayed. This effect is more prominent when spray booths are used instead of other types of finishing lines.

Conclusion

Unless a proper, defect-free finish is applied to wood products, their final value will be low, even though high-value, well crafted products are used. All steps of the finishing process should be closely monitored, and possible problems related to finishing material, application techniques, or environmental conditions should be eliminated in order to have high-quality, value-added finished products.

The Oklahoma Cooperative Extension Service

Bringing the University to You!

The Cooperative Extension Service is the largest, most successful informal educational organization in the world. It is a nationwide system funded and guided by a partnership of federal, state, and local governments that delivers information to help people help themselves through the land-grant university system.

Extension carries out programs in the broad categories of agriculture, natural resources and environment; family and consumer sciences; 4-H and other youth; and community resource development. Extension staff members live and work among the people they serve to help stimulate and educate Americans to plan ahead and cope with their problems.

Some characteristics of the Cooperative Extension system are:

- The federal, state, and local governments cooperatively share in its financial support and program direction.
- It is administered by the land-grant university as designated by the state legislature through an Extension director.
- Extension programs are nonpolitical, objective, and research-based information.
- It provides practical, problem-oriented education for people of all ages. It is designated to take the knowledge of the university to those persons who do not or cannot participate in the formal classroom instruction of the university.
- It utilizes research from university, government, and other sources to help people make their own decisions.
- More than a million volunteers help multiply the impact of the Extension professional staff.
- It dispenses no funds to the public.
- It is not a regulatory agency, but it does inform people of regulations and of their options in meeting them.
- Local programs are developed and carried out in full recognition of national problems and goals.
- The Extension staff educates people through personal contacts, meetings, demonstrations, and the mass media.
- Extension has the built-in flexibility to adjust its programs and subject matter to meet new needs. Activities shift from year to year as citizen groups and Extension workers close to the problems advise changes.

Oklahoma State University, in compliance with Title VI and VII of the Civil Rights Act of 1964, Executive Order 11246 as amended, Title IX of the Education Amendments of 1972, Americans with Disabilities Act of 1990, and other federal laws and regulations, does not discriminate on the basis of race, color, national origin, gender, age, religion, disability, or status as a veteran in any of its policies, practices, or procedures. This includes but is not limited to admissions, employment, financial aid, and educational services.

Issued in furtherance of Cooperative Extension work, acts of May 8 and June 30, 1914, in cooperation with the U.S. Department of Agriculture, Robert E. Whitson, Director of Cooperative Extension Service, Oklahoma State University, Stillwater, Oklahoma. This publication is printed and issued by Oklahoma State University as authorized by the Vice President, Dean, and Director of the Division of Agricultural Sciences and Natural Resources and has been prepared and distributed at a cost of 20 cents per copy. 0607