

# Analysis and verification of an automatic document feeder

*Citation for published version (APA):* Ploeger, B., & Somers, L. J. A. M. (2006). *Analysis and verification of an automatic document feeder*. (Computer science reports; Vol. 0625). Technische Universiteit Eindhoven.

Document status and date: Published: 01/01/2006

#### Document Version:

Publisher's PDF, also known as Version of Record (includes final page, issue and volume numbers)

#### Please check the document version of this publication:

• A submitted manuscript is the version of the article upon submission and before peer-review. There can be important differences between the submitted version and the official published version of record. People interested in the research are advised to contact the author for the final version of the publication, or visit the DOI to the publisher's website.

• The final author version and the galley proof are versions of the publication after peer review.

• The final published version features the final layout of the paper including the volume, issue and page numbers.

Link to publication

#### General rights

Copyright and moral rights for the publications made accessible in the public portal are retained by the authors and/or other copyright owners and it is a condition of accessing publications that users recognise and abide by the legal requirements associated with these rights.

- · Users may download and print one copy of any publication from the public portal for the purpose of private study or research.
- You may not further distribute the material or use it for any profit-making activity or commercial gain
  You may freely distribute the URL identifying the publication in the public portal.

If the publication is distributed under the terms of Article 25fa of the Dutch Copyright Act, indicated by the "Taverne" license above, please follow below link for the End User Agreement:

www.tue.nl/taverne

#### Take down policy

If you believe that this document breaches copyright please contact us at:

openaccess@tue.nl

providing details and we will investigate your claim.

# Analysis and Verification of an Automatic Document Feeder

Bas Ploeger Lou Somers

Department of Mathematics and Computer Science *Technische Universiteit Eindhoven* P.O. Box 513, 5600 MB Eindhoven, The Netherlands {S.C.W.Ploeger, L.J.A.M.Somers}@tue.nl

#### Abstract

Modern copying machines are versatile and complex systems in which embedded software plays an essential role. The progress towards faster and more stable machines that can satisfy ever growing customers' needs, places strict requirements on the efficiency and quality of such software. In order to meet these requirements, the software should be well-designed and this design should be free of errors. Using modern formal verification techniques, software designs can be checked for errors and deadlocks so that their quality can be assessed and improved at an early stage of the development process.

In this report, we analyze the embedded software of an Automatic Document Feeder (ADF). ADFs are important components of many copier machines. The ADF studied here is a prototype developed by Océ–Technologies B.V., a company that develops professional printing systems. We construct a model of the ADF in  $\mu$ CRL, a process algebra-based specification language, and express the system's requirements in the modal  $\mu$ -calculus. Next, we use the  $\mu$ CRL and CADP toolsets to check whether the system meets its requirements. This analysis reveals important errors in the ADF and we propose solutions to these problems. Also, we show that some requirements that engineers assumed to be valid, are too strict. We present slightly weaker versions of these requirements and show that these do hold. In this sense, in addition to finding errors in the ADF, our analysis also led to a better understanding of the behaviour the system.

# 1 Introduction

At the Research & Development (R&D) department of Océ–Technologies B.V. in Venlo, the Netherlands, various professional document systems are developed. Océ's product line ranges from wide format to cut sheet and from full colour to black-andwhite printing systems. In all of these machines, embedded software is used to control the hardware and provide functionalities to the user. The progress towards faster and more stable machines that can satisfy ever growing customers' needs, places increasingly higher requirements on the efficiency and quality of that software. In order to meet these requirements, it is important that the software is well-designed and that this design is free of errors.

Typically, the embedded software is a distributed system: it consists of a number of components that are running in parallel. The behaviour of such systems tends to become very complex as more components are added. Consequently, trying to understand or describe all situations that may possibly occur in the system, in order to check whether errors can occur, becomes a formidable task.

In this report, we apply formal verification techniques to find errors in the embedded software of a copier machine. In particular, we study a prototype of an Automatic Document Feeder (ADF). The ADF automatically feeds sheets of paper to the scanner of the copying machine. It moves the sheets in its input tray over the scanner one at a time and places every sheet into an output tray after it has been scanned<sup>1</sup>. We construct a model of the ADF's embedded control software by specifying the behaviour of each of its components in a specification language called  $\mu$ CRL. Next, we formulate the system's requirements in a formal logic called the  $\mu$ -calculus and verify whether the specified system meets its requirements using model checking techniques.

The  $\mu$ CRL language and the  $\mu$ -calculus are introduced shortly in Section 2. In Section 3 we describe the ADF and we translate its behaviour to  $\mu$ CRL in Section 4. Section 5 contains the requirements that the ADF should meet, along with their translations to the  $\mu$ -calculus. We also report the results of model checking the requirements on the specification of Section 4 and propose solutions to the problems that are found. We conclude in Section 6.

# 2 Languages and tools

### 2.1 $\mu$ CRL

For the specification of the ADF behaviour we use  $\mu$ CRL [7] which is based on the process algebra ACP [1], with extensions to support abstract data types. The language and its accompanying toolset [2] have been used successfully for the analysis of various real-life distributed systems and protocols [4, 6, 9, 11]. For a more thorough treatment of the language we refer to [7]. A  $\mu$ CRL specification mainly consists of two parts: a data type specification and a process specification.

The data type specification defines sorts (abstract data types) that can be used in the specification of the processes. Functions on sorts can be declared and their meanings can be defined using equations. For example, the following sort defines the natural numbers  $0, S(0), S(S(0)), \ldots$ :

sort Nat func  $0: \rightarrow Nat$  $S: Nat \rightarrow Nat$ 

The process specification defines the processes that model the behaviour of the system under scrutiny. Processes are defined using process terms that can be built from actions and other process terms using operators. Given processes p and q, operators include sequential composition  $p \cdot q$  (first p then q), alternative composition p + q (either p or q), summation over a sort  $D \sum_{d:D} p(d)$  (that is  $p(d_0) + \ldots + p(d_n)$  if  $D = \{d_0, \ldots, d_n\}$ ) and conditional  $p \triangleleft b \triangleright q$  (if b then p else q). The action  $\delta$  denotes deadlock. The parallel composition  $p \parallel q$  of p and q denotes all possible interleavings of the action sequences of p with those of q. In addition, actions from p and q may synchronize to a communication action if a communication rule has been defined for them. Actions may carry data parameters and two actions can only synchronize if all of their data parameters have the same values. To prevent the separate actions of a communication

<sup>&</sup>lt;sup>1</sup>Note that it is not the responsibility of the ADF to actually scan the sheet.

action from occurring in isolation, they can be blocked using the encapsulation  $\partial_H(p)$  which replaces every occurrence of an action from set *H* in *p* by  $\delta$ .

For example, the following is a specification of two buffers in sequence. Buffer  $B_1$  repeatedly receives a natural number over channel 1 and sends it to buffer  $B_2$  over channel 2. On receipt of a number over channel 2,  $B_2$  sends the number over channel 3 to the outside world.

```
\begin{array}{ll} \textbf{act} & rcv_1, snd_2, rcv_2, cmm_2, snd_3: Nat\\ \textbf{comm} & snd_2 \mid rcv_2 = cmm_2\\ \textbf{proc} & B_I = \sum_{n:Nat} rcv_I(n) \cdot snd_2(n) \cdot B_I\\ & B_2 = \sum_{n:Nat} rcv_2(n) \cdot snd_3(n) \cdot B_2\\ \textbf{init} & \partial_{\{snd_2, rcv_2\}}(B_1 \parallel B_2) \end{array}
```

The  $\mu$ CRL toolset includes tools with which a labelled transition system (LTS) can be generated from a  $\mu$ CRL specification. An LTS contains all states that the modelled system can reach via any number of transitions, which correspond to actions in the  $\mu$ CRL specification. This LTS can be used for model checking of temporal logic formulas.

#### **2.2** The $\mu$ -calculus

For expressing the requirements of the system we use the  $\mu$ -calculus of Kozen [8], although we do not use propositional constants in our formulas. Given  $\mu$ -calculus formulas *f* and *g*, action *a* and propositional variable *X*, this logic includes:

- constants T (true) and F (false);
- boolean negation  $\neg f$ , disjunction  $f \lor g$  and conjunction  $f \land g$ ;
- diamond modality \langle a \rangle f (there is an a-transition to a state in which f holds) and box modality [a] f (f holds in every state that is reachable via an a-transition);
- least fixpoint μX.f and greatest fixpoint vX.f in which cases f may contain free occurrences of X and every occurrence of X in f falls under an even number of negations in f.

It is possible to check whether the system satisfies or violates its requirements using an automatic model checker. In this report, we use the EVALUATOR model checker of the CADP toolset [3, 5].

# **3** System Description

#### 3.1 Hardware components

An overview of the ADF is given in Figure 1 (this figure is not to scale). The ADF consists of pinches (K1, K2, ...), a shoe pressure (S1), sensors (O1, O2, ...), clutches (C1, C2, ...), motors (M1, M2, ...), belts and trays. A pinch can hold a sheet of paper and can be connected to a motor. Pinch K1 is accompanied by shoe pressure S1 that can provide extra pressure when grabbing a sheet of paper. A sensor can be either covered or uncovered, which is indicated by its high or low electronic output signal, respectively. A clutch can be set to either on or off. If on, the motor on one side of the clutch is connected to the pinch on the other side. If off, the motor and the pinch are disconnected, meaning that no transmission between them is possible. There are two types of motor: motors that can run at one speed and in one direction only (M4 and M5) and motors that can run at various speeds and in two directions (M1, M2 and M3).

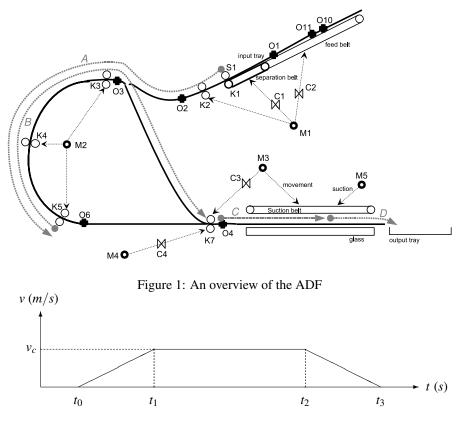


Figure 2: An example of a motor profile

Motors of the former type can be switched either on or off. Every motor of the latter type has a *controller* (indicated by suffix 'C') and an *encoder* (indicated by suffix 'E') attached to it. The encoder monitors the distance that the motor has covered thus far and can be asked to return this value. The controller can be in one of two states: Controlled and Idle. In the Controlled state the motor can receive instructions to execute *profiles*; in the Idle state it cannot. A profile (from here on indicated by X1, X2, ...) is a sequence of commands that instruct the motor to start/stop accelerating or decelerating at a certain rate. These commands are separated by specific time intervals. An example of a profile is depicted in Figure 2. Commands are given to the motor at time stamps  $t_0$ ,  $t_1$ ,  $t_2$  and  $t_3$  to accelerate, stop accelerating, decelerate and stop decelerating, respectively. Between  $t_1$  and  $t_2$  the motor runs at a constant speed  $v_c$ . The turn direction of the motor is indicated by the sign of the speed (positive or negative).

#### **3.2 Embedded software**

At any point in time, three instances of the control software are running in parallel. Every instance is responsible for guiding one sheet through the ADF. Hence, at most three sheets can be inside the ADF at the same time. Apart from the hardware components, the instances use a global boolean variable FirstSheet, semaphores sem1, sem2 and sem3 to ensure that some sections of the paper path contain at most one sheet at a time and a semaphore semN that is used to register the number of sheets inside the

machine.

The behaviour of the instances is described in an *execution sheet*, which is a table of state-trigger-response combinations. Intuitively, the table specifies that if the control software is in a certain state and it receives a certain trigger, it responds by executing a series of actions, after which it goes to the next state which usually is the state of the next row of the table. The comment column is used to provide additional information and can specify that the control software should go to another state than the one on the next row. Unless indicated otherwise by the comments, the software traverses the execution sheet from top to bottom. The execution sheet is included in Appendix A. A global description of the behaviour is included in the next section.

#### 3.2.1 Global description

**Initialization and aligning:** Every instance starts in a deactivated state, except for instance I0 which is already activated initially. If activated, the instance waits for a high signal from O1 (any low signals from this sensor are received but ignored). On receipt of a high signal, the instance continues with separation immediately if the FirstSheet flag is *false*. Otherwise, the set of sheets needs to be aligned and the instance waits for a fixed time interval. If O1 is still high after that interval, M5 is switched on, M1C, M2C and M3C are brought to the Controlled state and FirstSheet is set to *false*. The set of sheets is aligned by switching on C2 and S1, switching off C1 and executing profile X1 on motor M1. When M1 has finished executing the profile, the instance continues with separation.

**Separation:** The instance first reserves semaphore sem1 and increases semN by one, after which a short move to the right is executed on M1 (profile X2), followed by a move to the left (profile X3). This separates the sheet guided by the instance from the set. The sheet continues to move to the left until it covers O2. In the meanwhile, the instance monitors the value of M1E to determine when C1 should be switched on, S1 can be switched off and an error situation has occurred: if M1E exceeds some error value before O2 has become covered, M1 is stopped and the process halts.

Turning and blousing: The instance reserves semaphore sem2 and moves the sheet towards O3 and pinch K3: M1 and M2 start running at corresponding speeds and directions (profiles X4 and X5 respectively). An error check is performed to stop the motors at any time when O2 is covered, O3 is uncovered and M2E's value indicates that O3 should have been covered. When O3 becomes covered, the sheet is about to be moved by two motors at the same time: M1 and M2. When O2 becomes uncovered, M1 is stopped and the next instance is activated (the next sheet can be separated from the set in the input tray). The sheet proceeds until O3 becomes uncovered, upon which M2 is ordered to change its direction (profile X6). The sheet moves over O3 towards pinch K7. Every time the instance waits for O3 to become covered or uncovered, error checks are performed similar to those described earlier. As the sheet approaches K7, the speed of M2 is lowered (profile X7) and C4 and M4 are switched on, which makes K7 run in opposite direction to that of K3. This makes the sheet blouse (bulge and tremble) as soon as it hits K7. This ensures that the sheet is straightened before it is placed onto the scanner, as it may have become skewed on its way to K7. The instance stops the blousing process after a certain time period.

**Scanning and finalization:** The instance reserves semaphore sem3 and it moves the sheet towards O4 and the glass plate: M2 and M3 start running at corresponding speeds and directions (profiles X8 and X9 respectively). Error checks are performed to stop the motors at any time when:

- O3 is covered and M2E's value indicates that O3 should have been uncovered, or
- O4 is uncovered and M3E's value indicates that O4 should have been covered.

When O4 becomes covered (which happens before O3 becomes uncovered), we know that the sheet is being moved by two motors (M2 and M3). When O3 becomes uncovered, M2 is stopped and sem2 is released. When O4 becomes uncovered, the sheet is moved a bit further (so it is completely on top of the glass plate), after which M3 is stopped and the scanning process begins. Upon termination of the scanning process (modelled by a timeout that occurs after 500 ms), semN is decreased by one and sem3 is released. The instance now proceeds as follows, depending on the value of semN:

- If semN > 0, it does not take any further action: the sheet will be removed from the scanner by the next instance that executes profile X9 on M3.
- Otherwise (semN = 0), the sheet is moved to the right (profile X9 is executed on M3) in order to remove it from the ADF, after which M3 is stopped, FirstSheet is set to *true*, M5 is switched off and M1C, M2C and M3C are brought to the Idle state.

Finally, the instance returns to its initial state (deactivated), ready to guide another sheet through the ADF.

#### 3.2.2 Constraints.

The following constraints and assumptions apply:

- The real-time behaviour is not taken into account. By this we mean that we only consider the sequences of events an actions that can occur and their relative order, not the time they take or the time in-between them.
- Only simplex (one-sided) scanning is analyzed.
- Measuring the sheets before they enter the ADF is not taken into account. (It is assumed that all sheets are of size A4.)

# 4 Specification

The  $\mu$ CRL model of the ADF system contains processes that model the global variables, semaphores and three instances of the control software. The system as a whole consists of the parallel composition of these processes. We do not translate the full execution sheet of Appendix A to  $\mu$ CRL here. Instead, we translate a part of the execution sheet (see Figure 3) to illustrate the general idea. The full  $\mu$ CRL specification is included in Appendix B.

#### 4.1 Data types

**Booleans and natural numbers** We define a sort *Bool* representing booleans, along with the  $\land$ ,  $\lor$  and = relations and a sort *Nat* representing natural numbers, along with the > and = relations and the *dec* function which decreases a natural number by 1.

2 ExportToTurn ImportFromSep	Sem2	Receive	M2E	Capture value = p2	Needed for error check 2
			M1C	Start (execute Profile X4)	
			M2C	Start (execute Profile X5)	
			O3	If signal is high capture M2E value = $p3$	Via interrupt service routine done
			02	Poll for signal	
	O2:	(O2 is covered) &&	M1C	Stop	Error check 2
		(O3 is not covered) && (M2E_value > <i>p2</i> + ed2)	M2C	Stop	
				Exception	
		O2 is uncovered	M1C	Stop	
			M2E	Capture value = p4	Needed for error check 3
1	M1C	Stopped	Flag	ActivateFlag = true	next separation is possible -> Activate next instance
			O3	Poll for signal	

Figure 3: Part of the execution sheet of Appendix A

Identifiers For every type of component and for the motor profiles, we introduce a sort that contains the names of the components of that type and of the profiles, respectively. As the shoe pressure, clutches and motors M4 and M5 are all on/off components, we introduce one sort for all of these components. The sorts are called SensorID, OnOffID, ControllerID, EncoderID and ProfileID.

The sorts containing the identifiers of the instances and semaphores (InstanceID and SemaphoreID respectively) are defined similarly, yet in combination with an equality relation =, because they are used in the types of some synchronizing actions. In addition, functions *next*, *prev* : *InstanceID*  $\rightarrow$  *InstanceID* are defined as:

next(I0) = I1 next(I1) = I2 next(I2) = I0prev(I0) = I2 prev(I1) = I0 prev(I2) = I1

Sorts TimePeriod and Distance contain the time periods and distances respectively. The specific values have been replaced by dummy identifiers in the execution sheet of Appendix A for confidentiality reasons and because the specific values are irrelevant to the analysis.

#### 4.2 Processes

#### 4.2.1 **Global variables**

~ .

~ ---

~ 1

The value of the FirstSheet boolean variable can be set and read. This behaviour is specified by the *FirstSheet* process as follows: \_\_\_\_

-~ 1 ----

act	setFirstSheet,SetFirstSheet,getFirstSheet,GetFirstSheet : Bool × InstanceID
comm	setFirstSheet   setFirstSheet = SetFirstSheet
	getFirstSheet   getFirstSheet = GetFirstSheet
proc	$\begin{aligned} \textit{FirstSheet}(b:\textit{Bool}) = \\ \sum_{i:\textit{InstanceID}} (\sum_{c:\textit{Bool}} (\textit{setFirstSheet}(c, i) \cdot \textit{FirstSheet}(c)) + \\ \textit{getFirstSheet}(b, i) \cdot \textit{FirstSheet}(b)) \end{aligned}$

A semaphore can be reserved, released and checked for zero-valuedness (needed for semN). The behaviour is specified in the Semaphore process:

$reserve, Reserve, release, Release: Semaphore ID \times Instance ID$
semValueZero, SemValueZero : SemaphoreID  imes Bool  imes InstanceID
reserve   reserve = Reserve
$release \mid release = Release$
semValueZero   semValueZero = SemValueZero
Semaphore(s: SemaphoreID, n: Nat) =
$\sum_{i:InstanceID}(reserve(s,i) \cdot Semaphore(s,dec(n)) \triangleleft n > 0 \triangleright \delta +$
$release(s,i) \cdot Semaphore(s,S(n)) +$
$semValueZero(s, n = 0, i) \cdot Semaphore(s, n))$

#### 4.2.2 Instances

The behaviour of an instance is specified by 37 processes named *Instance*, *Instance*, *..., Instance*35. The following parts of the behaviour are modelled by the following  $\mu$ CRL processes:

- Initialization and aligning: Instance, Instance0, ..., Instance3;
- Separation: Instance4, ..., Instance13;
- Turning and blousing: Instance14, ..., Instance23;
- Scanning and finalization: Instance24, ..., Instance35.

In addition to the actions that correspond to actions or triggers in the execution sheet, we define the following actions that we will need for the verification of some of the requirements of Section 5:

act LEAVE\_K2, ENTER\_K3, LEAVE\_K3, ENTER\_K7, LEAVE\_K7, ENTER\_M1, LEAVE\_M1, ENTER\_M2, LEAVE\_M2, ENTER\_M3, LEAVE\_M3 : InstanceID

The actions represent the following events, for any *i* : *InstanceID*:

ENTER\_Mx(i): *i* enters the part of its behaviour in which it needs motor Mx;

LEAVE\_Mx(i): *i* leaves the part of its behaviour in which it needs motor Mx;

*ENTER\_Kx*(*i*): *i*'s sheet enters pinch K*x*;

*LEAVE\_Kx*(*i*): *i*'s sheet leaves pinch K*x*.

In order to translate the execution sheet of Figure 3 to  $\mu$ CRL, we have to *interpret* the behaviour described in the execution sheet. This is because some parts of the control software behaviour may be described by comments or other constructs that are less suitable for translation by automatic procedures or algorithms. For the greater part, the translation is straightforward, but we have to pay special attention to actions such as the fourth action from the top of the execution sheet. This action says that as soon as sensor O3 becomes covered (its signal becomes high) the value of encoder M2E should be captured. All this is done "via an interrupt service routine", as noted by the comment. This means that while the control software is waiting for sensor O2 to become uncovered, it should also check whether O3 has become covered after which the value of M2E should be captured. Furthermore, we note that after O3 has become covered, the condition for "Error check 2" can no longer be *true* as the second conjunct will always be *false*. The execution sheet of Figure 3 is now modelled by processes *Instance14*, ..., *Instance17*:

```
proc
          Instance14(id : InstanceID) =
             reserve(sem 2, id) \cdot Enter(M2C, id) \cdot Capture Value(M2E, id)
             \cdot ExecuteProfile(X4,M1C,id) \cdot ExecuteProfile(X5,M2C,id)
             \cdot Instance15(id)
proc
          Instance15(id : InstanceID) =
             SignalHigh(O2, id).
             (SignalHigh(O3, id) \cdot ENTER_K3(id) \cdot CaptureValue(M2E, id))
              \cdot Instance16(id) +
                SignalLow(O3, id).
                (NotTooHigh(M2E, id) · Instance15(id)
                + TooHigh(M2E, id) \cdot Stop(M1C, id) \cdot Stop(M2C, id) \cdot \delta))
              + SignalHigh(O3, id) \cdot ENTER_K3(id) \cdot CaptureValue(M2E, id)
             \cdot Instance16(id)
proc
          Instance16(id : InstanceID) =
             SignalHigh(O2, id) \cdot Instance16(id) +
             SignalLow(O2, id) \cdot LEAVE\_K2(id) \cdot Stop(M1C, id)
             \cdot Capture Value (M2E, id) \cdot Instance 17(id)
proc
          Instance17(id : InstanceID) =
             Stopped(M1C, id) \cdot Leave(M1C, id) \cdot activate(next(id), id)
             \cdot release(sem1, id) \cdot Instance18(id)
```

# 5 Verification

In this section we list the requirements that the ADF should meet and report on the verification of these requirements on the model discussed in Section 4. We propose solutions to any problems that are uncovered by the verification process, and show that these solutions indeed solve all problems.

## 5.1 Requirements

The following requirements have to be verified for the ADF. These requirements are made more explicit and formulated in the  $\mu$ -calculus in the next section.

- R1: Whenever a sheet approaches the scanner, motor M5 is on.
- R2: As long as a sheet is in pinch K7, motor M4 is off.
- R3: Two motors transporting the same sheet at the same time are not in conflict.
- R4: Every sheet that enters the ADF, eventually passes sensor O4.
- R5: Clutches C3 and C4 are not on at the same time.
- R6: A motor does not get conflicting commands from two instances.
- R7: Every sensor is always uncovered between two sheets.

## 5.2 Model checking

Using the INSTANTIATOR tool of the  $\mu$ CRL toolset, an LTS was generated from the specification of Appendix B on a Pentium 4 (3 GHz) machine with 1 GB of RAM. Gen-

eration took about two minutes and produced an LTS of 358.153 states and 1.101.648 transitions. The requirements were translated to the  $\mu$ -calculus. These formulas were then checked on the LTS using the EVALUATOR tool of the CADP toolset. For each requirement we give a  $\mu$ -calculus formula that expresses it and comment on the result of model checking the requirement on the LTS.

**Notation** In the  $\mu$ -calculus formulas below, we allow ourselves to use sets of actions between the brackets of the diamond and box modality operators. For instance, for any set of actions A and formula  $\varphi$ ,  $[A]\varphi$  denotes the property that  $\varphi$  holds in every state that is reachable via an action that is in A.

Let Act denote the set of all parameterised actions,  $a \in Act$  and  $A, B \subseteq Act$ . We shall use the following shorthands to denote sets of actions: T denotes Act, *a* denotes  $\{a\}$ ,  $\neg A$  denotes Act -A,  $A \land B$  denotes  $A \cap B$  and  $A \lor B$  denotes  $A \cup B$ . Moreover, we shall use the notation  $Act_{x_1,...,x_n}$  to denote "any action in which components  $x_1,...,x_n$  are involved" or, more formally, "any action  $a(p_1,...,p_m)$  for which there are  $i_1,...,i_n$  such that  $p_{i_1} = x_1 \land ... \land p_{i_n} = x_n$ ". The asterisk \* is used as a parameter to actions to denote "any value of type D" in places where a specific value of type D is expected.

#### 5.2.1 R1

R1 is formulated by the following property: always after M5 is switched off, O4 is not covered before M5 is switched on and M5 is always switched on at least once before O4 becomes covered:

(1.1) 
$$\forall X.[T]X \land [Off(M5,*)] \forall Y.([\neg On(M5,*)]Y \land [SignalHigh(O4,*)]F)$$
  
  $\land \forall X.[\neg On(M5,*)]X \land [SignalHigh(O4,*)]F$ 

**Result:** Using the EVALUATOR model checker, we have proven that formula (1.1) does not hold. Consider the following processes from the  $\mu$ CRL specification:

proc	$\begin{split} &Instance0(id:InstanceID) = \\ &SignalLow(O1,id) \cdot Instance0(id) + \\ &SignalHigh(O1,id) \cdot \\ &(getFirstSheet(T,id) \cdot InformIn(1s,id) \cdot Instance1(id) + \\ &getFirstSheet(F,id) \cdot ENTER\_M1(id) \cdot Instance4(id)) \end{split}$
proc	Instance33(id : InstanceID) = semValueZero(semN,F,id) · Leave(M3C,id) · Instance(id) + semValueZero(semN,T,id) · ExecuteProfile(X9,M3C,id) · InformIn(500ms,id) · Instance34(id)
proc	$Instance34(id : InstanceID) = Timeout(id) \cdot Stop(M3C, id) \cdot setFirstSheet(T, id) \cdot Off(M5, id) \cdot Instance35(id)$
proc	Instance35(id : InstanceID) = Stopped(M3C,id) · ActivateIdleState(M3C,id) · ActivateIdleState(M1C,id) · ActivateIdleState(M2C,id) · Leave(M3C,id) · Instance(id)

Suppose instance *i* has executed *semValueZero*(*semN*, T, *i*) in *Instance33* but has not yet executed *setFirstSheet*(T, *i*) in *Instance34* and instance *j* executes *getFirstSheet*(F, *j*) in

*Instance0*. Next, *j* can execute an arbitrary number of actions of its normal behaviour (process *Instance4* and beyond), before *i* switches off M5 in *Instance34* and executes the actions in *Instance35*. When *j*'s sheet approaches the scanner, M5 is still switched off which violates requirement R1.

This corresponds to the situation in which instance i has decided to move its sheet into the output tray (as it assumes its sheet is the last of the set) and right after that decision has been made, a new sheet is put into the input tray. Instance j guides the new sheet into the machine, assuming it belongs to the same set as i's sheet. When j's sheet reaches the scanner, i has already switched off M5 which complicates movement of the sheet over the glass plate as the sheet is not sucked against the transport belt.

However, j's sheet may not even reach the scanner: when i's sheet has reached the output tray, i brings M1C, M2C and M3C to the Idle state in which these motors are unable to respond to commands, in particular those issued by instance j. Hence, j's sheet gets stuck halfway through the ADF. Obviously, this is an situation that should be avoided at all times. This counter example and violation of R1 thus indicates a serious error in the system. We fix this error in Section 5.3.

#### 5.2.2 R2

R2 is formulated by the following property: for any *i* : *InstanceID*, always after M4 is switched on, *i*'s sheet does not enter pinch K7 before M4 is switched off and always after *i*'s sheet enters pinch K7, M4 is not switched on before *i*'s sheet leaves K7:

(2.1) 
$$vX.[\mathsf{T}]X \land [On(M4,*)] vY.([\neg Off(M4,*)]Y \land [ENTER_K7(i)]\mathsf{F}) \land vX.[\mathsf{T}]X \land [ENTER_K7(i)] vY.([\neg LEAVE_K7(i)]Y \land [On(M4,*)]\mathsf{F})$$

**Result:** Formula (2.1) does not hold, because the second conjunct evaluates to *false*. Consider the following processes from the  $\mu$ CRL specification:

proc	Instance14(id : InstanceID) =
	$reserve(sem 2, id) \cdot ENTER_M2(id) \cdot CaptureValue(M2E, id)$
	$\cdot$ ExecuteProfile(X4,M1C,id) $\cdot$ ExecuteProfile(X5,M2C,id)
	·Instance15(id)
proc	Instance21(id : InstanceID) =

- **PosReached**(M2E, id) · Stop(M2C, id) · On(M4, id) · InformIn(50ms, id) · Instance22(id) **proc** Instance28(id : InstanceID) =
- $Stopped(M2C, id) \cdot Leave(M2C, id) \cdot release(sem2, id) \cdot LEAVE\_K7(id) \\ \cdot Instance29(id)$

Suppose instance *i* has released semaphore *sem2* in process *Instance28*. Then an instance *j* can reserve semaphore *sem2* (*Instance14*) and execute all actions in subsequent processes up to and including On(M4, j) in *Instance21*, before *i* executes  $LEAVE\_K7(i)$ . This is a counter example to (2.1) and a violation of R2. It corresponds to the situation in which *i*'s sheet is in pinch K7 (moving towards the scanner) and has just stopped covering sensor O3. Instance *j* can have its sheet move over O3 towards K5, turn back, move towards pinch K7 and start blousing, which involves switching off C3 and switching on C4 and M4. This happens while *i*'s sheet is still in pinch K7 and moving onto the glass plate. Under influence of M4, K7 starts turning in opposite direction making *i*'s sheet move backward towards O3. This situation is clearly undesired and indicates an error in the system. We fix this error in Section 5.3.

#### 5.2.3 R3

R3 is formulated by the following properties:

- For any *i* : *InstanceID*, whenever *i*'s sheet enters pinch K3, M1 is executing profile X4 and M2 is executing X5 and whenever *i*'s sheet enters pinch K7, M2 is executing profile X8 and M3 is executing X9:
  - (3.1)  $vX.[T]X \land [Act_{M1C} \land \neg ExecuteProfile(X4,M1C,*)]$  $vY.([\neg ExecuteProfile(X4,M1C,*)]Y \land [ENTER\_K3(i)]F)$  $\land vX.[T]X \land [Act_{M2C} \land \neg ExecuteProfile(X5,M2C,*)]$ 
    - $vY.([\neg ExecuteProfile(X5, M2C, *)]Y \land [ENTER_K3(i)]F)$
    - $\wedge \quad vX.[\mathsf{T}]X \land [\mathsf{Act}_{M2C} \land \neg ExecuteProfile(X8, M2C, *)] \\ vY.([\neg ExecuteProfile(X8, M2C, *)]Y \land [ENTER\_K7(i)]\mathsf{F})$
    - $\land \quad vX.[\mathsf{T}]X \land [\mathsf{Act}_{M3C} \land \neg ExecuteProfile(X9, M3C, *)]$  $vY.([\neg ExecuteProfile(X9, M3C, *)]Y \land [ENTER\_K7(i)]\mathsf{F})$
- For any *i* : *InstanceID*, always after *i*'s sheet enters pinch K3, no command is sent to M1C or M2C before *i*'s sheet leaves pinch K2 and always after *i*'s sheet enters pinch K7, no command is sent to M2C or M3C before *i*'s sheet leaves pinch K3:

 $(3.2) vX.[T]X \land [ENTER_K3(i)] vY.([\neg LEAVE_K2(i)]Y \land [Act_{M1C} \lor Act_{M2C}]F)$  $(3.3) vX.[T]X \land [ENTER_K7(i)] vY.([\neg LEAVE_K3(i)]Y \land [Act_{M2C} \lor Act_{M3C}]F)$ 

**Result:** Formulas (3.1) and (3.2) hold, but (3.3) does not hold. Consider the following processes from the  $\mu$ CRL specification:

**proc** Instance25(id : InstanceID) = Timeout(id) · Enter(M3C, id) · ExecuteProfile(X8, M3C, id) · ExecuteProfile(X9, M3C, id) · ENTER\_K7(id) · CaptureValue(M3E, id) · Instance26(id)

 $\begin{array}{ll} \textbf{proc} & Instance26(id:InstanceID) = \\ & SignalLow(O4,id) \cdot \\ & ( & NotTooHigh(M3E,id) \cdot Instance26(id) \\ & + TooHigh(M3E,id) \cdot Stop(M2C,id) \cdot Stop(M3C,id) \cdot \delta \\ & + SignalHigh(O4,id) \cdot Instance27(id) \end{array}$ 

An instance *i* can first execute *ENTER\_K7(i)* in *Instance25* and later on send stop commands to M2C and M3C (in *Instance26*) without executing *LEAVE\_K3(i)* first. This is a counter example to formula (3.3) and a violation of requirement R3. It corresponds to the situation in which a sheet has entered pinch K7 and is moving towards the glass plate, driven by motor M3. If M3 has covered a certain distance and O4 has not yet detected the sheet, the instance assumes something went wrong, stops M2 and M3 and deadlocks. This is desired behaviour: if an error occurs, stop all running motors and bail out. Hence, the requirement is too strict and needs to be changed. The following formula expresses the requirement that for any *i* : *InstanceID*, always after *i*'s sheet enters pinch K7, no command is sent to M2C or M3C before *i*'s sheet leaves pinch K3 *unless* i *detects an error*. We have verified that this weaker version of (3.3) holds.

(3.4)  $vX.[T]X \land [ENTER_K7(i)]$  $vY.([\neg(LEAVE_K3(i) \lor TooHigh(*,i))]Y \land [Act_{M2C} \lor Act_{M3C}]F)$ 

#### 5.2.4 R4

R4 is a liveness property which can only be satisfied if the following fairness condition holds: if an action *a* is enabled infinitely often, then *a* is executed infinitely often (see also [10]). R4 is formulated by the following property, for all *i* : *InstanceID*:

(4.1)  $vX.[T]X \land [ENTER_M1(i)] vY.([\neg SignalLow(O4, i)]Y \land \\ \mu Z.(\langle \neg SignalLow(O4, i) \rangle Z \lor \langle SignalLow(O4, i) \rangle T))$ 

**Result:** Formula (4.1) does not hold. After an instance has detected an error (like the one in the counter example for R3 above) it will no longer be able to guide its sheet further towards sensor O4, because it always reaches a deadlock state. For the same reason as for R3, this is desired behaviour, so the requirement is too strict.

To obtain a weaker version of R4, we reason as follows. If an instance *i*'s sheet enters the ADF when another instance *j* has just detected an error, *i*'s sheet will not be able to reach O4. This is because *i* will at some point be waiting to reserve a semaphore that *j* will never release. We have verified this using the CADP toolset. For the same reason, if *i*'s sheet has entered the ADF and some instance (either *i* or another instance) detects an error, *i*'s sheet may not reach O4. We have also verified this using the CADP toolset. Based on these observations, we formulate the following weaker version of (4.1): for all *i* : *InstanceID*, if *i*'s sheet enters the ADF *and no error has occurred*, *i*'s sheet will eventually pass sensor O4 *unless an error occurs*. We have verified that this formula holds for all *i* : *InstanceID*:

$$(4.2) \quad \forall X.[TooHigh(*,*)]X \land [ENTER\_M1(i)] \\ \forall Y.([\neg(SignalLow(O4,i) \lor TooHigh(*,*))]Y \land \\ \mu Z.(\langle \neg(SignalLow(O4,i) \lor TooHigh(*,*))\rangle Z \lor \\ \langle SignalLow(O4,i) \lor TooHigh(*,*)\rangle \top))$$

### 5.2.5 R5

Initially both C3 and C4 are switched off. Then R5 is formulated by the following property: always after C3 is switched on, C4 is never switched on before C3 is switched off and always after C4 is switched on, C3 is never switched on before C4 is switched off:

(5.1) 
$$vX.[T]X \land [On(C3,*)] vY.([\neg Off(C3,*)]Y \land [On(C4,*)]F) \land vX.[T]X \land [On(C4,*)] vY.([\neg Off(C4,*)]Y \land [On(C3,*)]F)$$

**Result:** Formula (5.1) holds.

#### 5.2.6 R6

R6 is formulated by the following properties:

 For any *i*: *InstanceID*, always after *i* commands M1 to execute profile X1 or X2, M1 does not receive another command (from any instance) before it has finished executing the profile and always after *i* commands M2 to execute profile X7, M2 does not receive another command (from any instance) before *i* commands M2 to stop:

(6.1) 
$$vX.[T]X \land [ExecuteProfile(X1,M1C,i) \lor ExecuteProfile(X2,M1C,i)]$$
  
 $vY.([\neg PosReached(M1C,i)]Y \land [Act_{M1C} \land \neg PosReached(M1C,i)]F)$   
 $\land vX.[T]X \land [ExecuteProfile(X7,M2C,i)]$   
 $vY.([\neg Stop(M2C,i)]Y \land [Act_{M2C} \land \neg Stop(M2C,i)]F)$ 

For any *i*, *j* : *InstanceID*, *i* ≠ *j*, and *c* : *ControllerID*, as long as *i* needs *c*, *j* does not send a command to *c*:

(6.2) 
$$\forall X.[\mathsf{T}]X \land [Enter(c,i)] \forall Y.([\neg Leave(c,i)]Y \land [\mathsf{Act}_{c,j}]\mathsf{F})$$

**Result:** Formulas (6.1) and (6.2) hold.

#### 5.2.7 R7

For any *i* : *InstanceID* and *s* : *SensorID*,  $s \in \{O2, O3, O4\}$ , always after *i*'s sheet starts covering *s*, *next*(*i*)'s sheet does not cover *s* before *i*'s sheet has stopped covering *s*:

(7.1) 
$$vX.[T]X \land [SignalHigh(s,i)]$$
  
 $vY.([\neg SignalLow(s,i)]Y \land [SignalHigh(s,next(i))]F)$ 

**Result:** Formula (7.1) holds.

#### 5.3 Solutions

The problem revealed by the violation of R1 stems from the fact that it is possible for one instance to assume that the set contains no more sheets, while another instance assumes that a newly inserted sheet is still part of that set. In essence, the problem is that instances do not have exclusive access to the initialization and finalization parts of their behaviour. These parts contain behaviour (like accessing global variables) that should not be interleaved as a result of parallelism. Therefore we introduce a new semaphore sem4, which initially has value 1 and grants instances exclusive access to either the initialization or the finalization part. Initialization starts when the instance has detected a sheet in the input tray and ends when either the sheet is no longer detected after time period *t1* (if FirstSheet is *true*) or the SemN counter has been increased (if FirstSheet is *false*). Finalization starts when the instance is about to check whether the value of SemN equals zero and ends when either SemN is found to be unequal to zero or M1, M2 and M3 have been brought to Idle (if SemN equals zero).

R2 is violated because sheets do not have exclusive access to pinch K7. We introduce a new semaphore sem5 which initially has value 1 and grants instances exclusive access to K7. The first time an instance influences K7 is when it executes the Off(C3, id) action in process *Instance18*, which is right after the sheet has turned and starts moving towards K7. Semaphore sem5 should be reserved before the sheet turns. Because it is moving in the other direction at that time, the sheet should also be stopped before sem5 can be reserved. We introduce a new process *Instance18A* for this purpose. Naturally, sem5 can be released after the sheet has left K7. Action *LEAVE\_K7(id)* in *Instance28* would be an obvious choice for marking this event, but as this is not an action of the real system, we take *SignalLow(O4, id)* in *Instance29* instead.

#### 5.4 Revised specification

The solutions described above involve the following additions to the  $\mu$ CRL process definitions (additions listed in **bold**):

proc	$InstanceO(id : InstanceID) = \\ \dots + SignalHigh(O1, id) \cdot reserve(sem4, id) \cdot \dots$
proc	$Instance1(id : InstanceID) = Timeout(id) \cdot (SignalLow(O1, id) \cdot release(sem4, id) \cdot InstanceO(id) +)$
proc	$\begin{array}{l} \textit{Instance4}(\textit{id}:\textit{InstanceID}) = \\ \textit{reserve}(\textit{sem1},\textit{id}) \cdot \textit{Off}(\textit{S1},\textit{id}) \cdot \textit{On}(\textit{C2},\textit{id}) \cdot \textit{On}(\textit{C1},\textit{id}) \cdot \textit{release}(\textit{semN},\textit{id}) \\ \cdot \textit{release}(\textit{sem4},\textit{id}) \cdot \dots \end{array}$
proc	$Instance18(id : InstanceID) = \\ \dots + SignalLow(O3, id) \cdot Stop(M2C, id) \cdot Instance18A(id)$
proc	$\begin{aligned} & \textbf{Instance18A(id : InstanceID)} = \\ & \textbf{Stopped(M2C, id) \cdot reserve(sem5, id) \cdot } CaptureValue(M2E, id) \\ & \cdot ExecuteProfile(X6, M2C, id) \cdot Off(C3, id) \cdot Instance19(id) \end{aligned}$
proc	$Instance29(id : InstanceID) = \dots + SignalLow(O4, id) \cdot release(sem5, id) \cdot \dots$
proc	Instance32(id : InstanceID) = Timeout(id) · reserve(semN,id) · release(sem3,id) · reserve(sem4,id) · Instance33(id)
proc	$\label{eq:instance} \begin{split} \textit{Instance33}(\textit{id}:\textit{InstanceID}) = \\ \textit{semValueZero}(\textit{semN},\textit{F},\textit{id}) \cdot \textit{release}(\textit{sem4},\textit{id}) \cdot \textit{Instance}(\textit{id}) + \dots \end{split}$
proc	$Instance35(id : InstanceID) = Stopped(M3C, id) \cdot ActivateIdleState(M3C, id) \cdot ActivateIdleState(M1C, id) \cdot ActivateIdleState(M2C, id) \cdot Leave(M3C, id) \cdot release(sem4, id) \cdot Instance(id)$

Other changes include additions to the data specification and the initial process specification. The full revised  $\mu$ CRL specification is included in Appendix C. We have model checked all formulas of Section 5.2 against the LTS of the revised specification, which has 78.751 states and 231.456 transitions. The model checker returns *false* only on formulas (3.2) and (4.1), for the same reasons as described in Sections 5.2.3 and 5.2.4. The weaker versions of these properties (formulas (3.4) and (4.2), respectively) do hold.

# 6 Conclusions

We have analyzed the embedded software of an Automatic Document Feeder by applying formal verification techniques. We have given a system description, requirements, a specification in  $\mu$ CRL and the results of model checking the requirements using the CADP model checker. If requirement violations indicated errors in the system, we suggested solutions to these problems and showed that a system that incorporates these solutions meets all of the requirements. We formulated weaker versions of two requirements that were found to be too strict. Our analysis revealed errors in the ADF prototype that would have been difficult to find otherwise. This indicates that formal specification and verification is a very powerful and effective method for finding errors in systems.

Regarding the problem found by the violation of requirement R2, we note that it may very well be that this situation cannot occur if real time is taken into account, as the amount of time needed for a sheet to move from O2 to K7 (paths *A* and *B*) may exceed the amount of time needed for another sheet to move onto the glass plate (path *C*). As we did not consider real time in the analysis, we have not been able to verify this claim and cannot guarantee that R2 is never violated. To be 100% sure, we have solved the problem for either case (whether the timed behaviour allows R2 to be violated or not).

We have shown that both problems that were found, can be resolved very easily and efficiently by adding only two semaphores to the system and applying minor modifications to the behaviour. As can be seen from the fact that the LTS belonging to the revised system is more than four times as small as that of the original system, these solutions simplify the behaviour of the system as a whole.

For the verification of untimed properties on the ADF,  $\mu$ CRL and CADP are very well suited: generation of the LTS and model checking of the modal properties was easily done on a contemporary desktop computer. The fact that timed behaviour could not be taken into account, meant that no timed properties could be checked for the ADF. On the other hand, it allowed us to abstract away from irrelevant details and to focus on those parts of the behaviour that were relevant to the requirements we wanted to verify.

An important issue is that the execution sheet in which the behaviour of the embedded software is specified, is at some points unclear or ambiguous. A more strict and formal specification style or language can aid engineers in describing the behaviour of the system more precisely and unambiguously. It helps in the communication of system designs between engineers as it prevents misinterpretations and requires less additional explanation. Indeed, one of the greatest difficulties in this analysis was to gain a precise and correct understanding of the behaviour of the system.

Formal behavioural descriptions may also be better suited for the automatic translation of system descriptions to  $\mu$ CRL specifications. Regarding this issue we note however, that the real challenge and difficulties stem from the fact that the specifications are aimed at *modelling* the real behaviour and, hence, are usually at a higher level of abstraction. This often requires model design issues regarding the appropriate level of abstraction to be properly resolved, which is arguably a task at which humans perform better than machines. An example of such a model design issue is the decision to abstract away from specific time periods and distances if they are irrelevant to the requirements that will be checked.

# Acknowledgements

We would like to thank the engineers at Océ, Jan Friso Groote, Aad Mathijssen, Hannes Pretorius and Muck van Weerdenburg for valuable discussions and comments.

# References

[1] J.C.M. Baeten and W.P. Weijland. Process Algebra, volume 18 of Cambridge

*tracts in theoretical computer science*. Cambridge University Press, Cambridge, 1990.

- [2] S. Blom, W. Fokkink, J.F. Groote, I. van Langevelde, B. Lisser, and J. van de Pol. μCRL: A toolset for analysing algebraic specifications. In Gérard Berry, Hubert Comon, and Alain Finkel, editors, *Proceedings of the 13th Conference on Computer-Aided Verification (CAV'01)*, volume 2102 of *Lecture Notes in Computer Science*, pages 250–254. Springer, July 2001.
- [3] J.-C. Fernandez, H. Garavel, A. Kerbrat, A. Mounier, R. Mateescu, and M. Sighireanu. CADP: a protocol validation and verification toolbox. In Rajeev Alur and Thomas A. Henzinger, editors, *Proceedings of the Eighth International Conference on Computer Aided Verification CAV*, volume 1102 of *Lecture Notes in Computer Science*, pages 437–440, New Brunswick, NJ, USA, July/August 1996. Springer Verlag.
- [4] W.J. Fokkink, J.F. Groote, J. Pang, B. Badban, and J.C. van de Pol. Verifying a sliding window protocol in μCRL. In C. Rattray, S. Maharaj, and C. Shankland, editors, *Proceedings 10th Conference on Algebraic Methodology and Software Technology – AMAST'04*, Lecture Notes in Computer Science 3116, pages 148– 163. Springer, July 2004.
- [5] H. Garavel, F. Lang, and R. Mateescu. An overview of CADP 2001. Technical Report RT-0254, INRI, France, 2001.
- [6] Jan Friso Groote, Jun Pang, and Arno G. Wouters. Analysis of a distributed system for lifting trucks. *Journal of Logic and Algebraic Programming*, 55(1-2):21–56, 2003.
- [7] J.F. Groote and A. Ponse. The syntax and semantics of µCRL. Report CS-R9076, CWI, Amsterdam, 1990.
- [8] D. Kozen. Results on the propositional μ-calculus. *Theoretical Computer Science*, 27:333–354, 1983.
- [9] J. van de Pol and M. Valero Espada. Verification of JavaSpaces (TM) Parallel Programs. In J. Lilius, F. Balarin, and Machado R.J., editors, *Proceedings 3rd International Conference on Application of Concurrency to System Design (ACSD)*, Guimaraes, Portugal, pages 196–205. IEEE, June 2003.
- [10] J.P. Queille and J. Sifakis. Fairness and related properties in transition systems: a temporal logic to deal with fairness. *Acta Informatica*, 19(3):195–220, 1983.
- [11] C. Shankland and M.B. van der Zwaag. The tree identify protocol of IEEE 1394 in  $\mu$ CRL. *Formal Aspects of Computing*, 10:509–531, 1998.

# A Execution sheet

Reservation of a semaphore sem*S* is denoted by  $[S] \rightarrow$  and release by  $[S] \leftarrow$  in the margin on the lefthand side of the execution sheet. Some of the behaviour is not specified explicitly or clearly. For example, in the "alignOriginalSet" state, if O1's signal is high and the value of FirstSheet is *true* then the instance continues at the line where sem1 is reserved; if FirstSheet is *false* it continues as normal (switch on M5, etc.).

state	trigger		Action		comment
	Device/Timer	Result/Reply	Device/Timer	action	
	"Framework"	Initialisation	01	Poll for high signal	start-up (first
	01	O an a an ia hia h	<b>T</b>		sheet)
	01	Sensor is high	Timer	InformIn(t1)	t1 delay (avo
					signal
	Timer	Timesout	01	Chash if still high	chattering)
	Timer	Timeout	01	Check if still high	
alignOriginalSet	01	Sensor is low	01	Poll for high signal	
		Sensor is high	M5	On	
			C2	On	
			C1	Off	
			S1	Off	
			M1C	Activate control state	
			M2C	Activate control state	
			M3C	Activate control state	
			Flag	FirstSheet=false	
			Timer	InformIn(t2)	
	Timer	Timeout	M1C	Move left (execute Profile	
				X1)	
	M1C	Pos. reached			
If the set is already	ligned, the next sep	paration starts from here (re	alised with flag FirstSI	heet)	
and as precondition	Activated & O1 true		Ŭ	,	
			S1	Off	
]			C2	On	1
			C1	On	
			SemN	Increase	1
			Timer	InformIn(t3)	1
ShakeOriginalSet	Timer	Timeout	M1C	Move right (execute Profile	
ShakeOnginalSet	TITLET	nineout	WITC	X2)	
	M1C	Pos. reached	C2	Off	
	WITC	F 03. Teached	Timer	InformIn(t4)	
separateSet	Timor	Timoquit	S1	On	
separateSet	Timer	Timeout			
			C2	On	
			C1	Off	
			Timer	InformIn(t5)	
	Timer	Timeout	M1C	Move left (execute Profile	
				X3)	
			M1E	Capture value = $p1$	Needed for
					error check <sup>*</sup>
			M1E	InformAfter(d1)	
	M1E	Pos. reached	C1	On	
			M1E	InformAfter(d2)	
	M1E	Pos. reached	S1	Off	
			02	Poll for signal	
	02	sensor is not covered	M1C	Stop	Error check
		&& (M1E_value > p1		Exception	
		+ ed1)			
		Sensor is covered	C1	Off	
			Timer	InformIn(t6)	1
	Timer	Timeout	C2	On	1
			Timer	InformIn(t7)	1
			M1C	Stop	1
	M1C & Timer	Stopped & Timeout	Sem2	Request	1
ExportToTurn	Sem2	Receive	M2E	Capture value = <i>p2</i>	Needed for
ImportFromSep	JOINE			cupture value - pz	error check 2
importFromSep			M1C	Start (execute Profile X4)	- CHOI CHECK 2
			M2C	Start (execute Profile X5)	Materia
			03	If signal is high capture	Via interrupt
				M2E value = $p3$	service routin
					done
			02	Poll for signal	
	O2:	(O2 is covered) &&	M1C	Stop	Error check
		(O3 is not covered)	M2C	Stop	
		&& (M2E_value > <i>p2</i>		Exception	
		+ ed2)			
		O2 is uncovered	M1C	Stop	
			M2E	Capture value = $p4$	Needed for
					error check 3
	M1C	Stopped	Flag	ActivateFlag = true	next separat
				Ŭ	is possible ->
					Activate next
	1		1		
					instance

,		•				
	TurnCW	O3:	(sensor is covered) && (M2E_value > p4 + ed3)	M2C	Stop Exception	Error check 3
			Sensor is not covered	M2E	Capture value = <i>p5</i>	This value is used to calculate the actual paper length
				M2C	Change turn direction (execute Profile X6)	
				O3 C3	Poll for low to high	
			M2E_value > <i>p5</i> +	M2C	Off Stop	Error check 4
			ed4	WIZO	Exception	
		O3:	Sensor is high	M2E	Capture value = $p6$ Calculate paper length = $pl$	Needed for error check 5
				M2E	InformAfter(d3)	Each time in exe.: check >= <i>p6</i> + d3
		M2E	Pos. reached	M2C	Change speed (execute Profile X7)	
				C4 M2E	On InformAfter(d4)	
		M2E	Pos. reached	M2E M2C	InformAfter(d4) Stop	
			1 US. IEdulleu	M2C M4	On	
				Timer	InformIn(t8)	<u> </u>
		Timer	Timeout	C4	Off	
				M4	Off	
				Timer	InformIn(t9)	
		Timer	Timeout	Sem3	Request	
3		Sem3	Receive	C3	On	
	ExportToFeed	Timer	Timeout	Timer M2C	InformIn(t10) Start (execute Profile X8)	
	Feed	TIME	Timeout	M3C	Start (execute Profile X8)	
	1000			03	Poll for signal	
				M3E	Capture value = $p7$	Needed for error check 6
		03:	(O3 is covered) &&	M2C	Stop	Error check 5
			(M2E_value > <i>pl</i> + ed5)	M3C	Stop Exception	
			(O4 is not covered)	M2C	Stop	Error check 6
			&& (M3E_value >= <i>p7</i> + ed6)	МЗС	Stop Exception	
			Sensor is not covered	M2C	Stop	
2		M2C	Stopped	Sem2	Release	Next ExportToTurn is possible
				04	Poll for high to low	
		O4:	(O4 is covered) && (M3E_value > <i>p7</i> + <i>pl</i> + ed7)	МЗС	Stop Exception	Error check 7
		Mac	Sensor is not covered	M3E M3C	InformAfter(d5)	
-		M3E M3C	Pos. reached stopped	M3C Timer	Stop InformIn(t11)	Just a delay to simulate the scan
	Scan	Timer	Timeout	SemN	Decrease	
3 🗲				Sem3	Release	Next scan is possible
				SemN	Get value	Sheet transport is finished
		SemN	SemN ≠ 0	-	-	restart instance next sheet is waiting for transport
	Remove original		SemN = 0	M3C Timor	Start (execute Profile X9)	
		Timor	Timoout	Timer M3C	InformIn(t12)	L oot obcot
		Timer	Timeout	Flag	Stop FirstSheet=true	Last sheet restart instance
-				M5	Off	no following
		M20	at a man and	M3C	Go to idle	sheet, just wait
		M3C	stopped	IVISC	Go to lule	Sheet, just wait
		M3C	stopped	M1C M2C	Go to idle Go to idle	for next job

# **B** Original *µ*CRL specification

This is the  $\mu$ CRL specification of the original ADF system as specified by the execution sheet of Appendix A.

```
sort Bool
func T,F: ->Bool
map not:Bool->Bool
      and, or, eq:Bool#Bool->Bool
var b:Bool
rew not(F)=T
                   not(T)=F
      and(b,T)=b and(b,F)=F
      sort Nat
func 0:->Nat
      S:Nat->Nat
     gt,eq:Nat#Nat->Bool
map
      dec:Nat->Nat
var m,n:Nat
      gt(0,n)=F gt(S(m),0)=T gt(S(m),S(n))=gt(m,n)
eq(0,0)=T eq(0,S(n))=F eq(S(n),0)=F eq(S(m),S(n))=eq(m,n)
rew
      dec(S(n)) = n
sort SensorID
func 01,02,03,04:->SensorID
sort OnOffID
func S1,C1,C2,C3,C4,M4,M5:->OnOffID
sort ControllerID
func M1C,M2C,M3C:->ControllerID
sort EncoderID
func M1E,M2E,M3E:->EncoderID
sort ProfileID
func X1, X2, X3, X4, X5, X6, X7, X8, X9:->ProfileID
sort InstanceID
func I0,I1,I2: -> InstanceID
map eq:InstanceID#InstanceID->Bool
      next, prev: InstanceID->InstanceID
      eq(I0,I0)=T eq(I0,I1)=F eq(I0,I2)=F
rew
      eq(11,I0)=F eq(11,I1)=T eq(11,I2)=F
eq(12,I0)=F eq(12,I1)=F eq(12,I2)=T
next(I0)=I1 prev(I0)=I2
      next(I1)=I2 prev(I1)=I0
next(I2)=I0 prev(I2)=I1
sort SemaphoreID
func sem1,sem2,sem3,semN:->SemaphoreID
map
      eg:SemaphoreID#SemaphoreID->Bool
      eq(sem1, sem1)=T eq(sem1, sem2)=F eq(sem1, sem3)=F eq(sem1, semN)=F
rew
      eq(sem2, sem1)=F eq(sem2, sem2)=T eq(sem2, sem3)=F eq(sem2, semN)=F
      eq(sem3, sem1)=F eq(sem3, sem2)=F eq(sem3, sem3)=T eq(sem3, semN)=F
      eq(semN, sem1)=F eq(semN, sem2)=F eq(semN, sem3)=F eq(semN, semN)=T
sort TimePeriod
func t1,t2,t3,t4,t5,t6,t7,t8,t9,t10,t11,t12:->TimePeriod
sort Distance
func d1,d2,d3,d4,d5:->Distance
      ENTER_K3, LEAVE_K3, LEAVE_K2, ENTER_K7, LEAVE_K7, ENTER_M1, LEAVE_M1, ENTER_M2, LEAVE_M2, ENTER_M3, LEAVE_M3, Timeout: InstanceID
act
      setFirstSheet, SetFirstSheet, getFirstSheet,GetFirstSheet:Bool#InstanceID
      reserve, Reserve, release, Release: SemaphoreID#InstanceID
      semValueZero,SemValueZero:SemaphoreID#Bool#InstanceID
      activate, Activate: InstanceID#InstanceID
      SignalLow,SignalHigh:SensorID#InstanceID
      On,Off:OnOffID#InstanceID
```

```
ActivateControlState, ActivateIdleState, PosReached, Stop, Stopped:
      ControllerID#InstanceID
      CaptureValue, PosReached, NotTooHigh, TooHigh: EncoderID#InstanceID
      ExecuteProfile:ProfileID#ControllerID#InstanceID
      InformIn:TimePeriod#InstanceID
      InformAfter:EncoderID#Distance#InstanceID
comm setFirstSheet | setFirstSheet = SetFirstSheet
getFirstSheet | getFirstSheet = GetFirstSheet
      reserve | reserve = Reserve
      release | release = Release
      semValueZero | semValueZero = SemValueZero
      activate | activate = Activate
proc FirstSheet(b:Bool) =
        sum(i:InstanceID,
          sum(b1:Bool, setFirstSheet(b1,i).FirstSheet(b1))
          +getFirstSheet(b,i).FirstSheet(b) )
      Semaphore(sid:SemaphoreID,n:Nat) =
        sum(i:InstanceID,
          reserve(sid,i).Semaphore(sid,dec(n)) <| gt(n,0) |> delta
          +release(sid,i).Semaphore(sid,S(n))
          +semValueZero(sid,eq(n,0),i).Semaphore(sid,n) )
      %% ----- Initialization and aligning ----- %%
      Instance(id:InstanceID) =
        activate(id, prev(id)).Instance0(id)
      InstanceO(id:InstanceID) =
        SignalLow(O1,id).Instance0(id)
        + SignalHigh(O1,id).
          (getFirstSheet(T,id).InformIn(t1,id).Instance1(id)
           +getFirstSheet(F,id).ENTER_M1(id).Instance4(id))
      Instance1(id:InstanceID) =
        Timeout(id).
        (SignalLow(O1,id).Instance0(id)
        SignalHigh(O1,id).ENTER_M1(id).On(M5,id).On(C2,id).Off(C1,id).On(S1,id)
        .ActivateControlState (M1C, id) .ActivateControlState (M2C, id)
        .ActivateControlState(M3C,id).setFirstSheet(F,id).InformIn(t2,id)
        .Instance2(id))
      Instance2(id:InstanceID) =
        Timeout(id).ExecuteProfile(X1,M1C,id).Instance3(id)
      Instance3(id:InstanceID) =
        PosReached (M1C, id) . Instance4 (id)
      %% ----- Separation ----- %%
      Instance4(id:InstanceID) =
        reserve(sem1,id).Off(S1,id).On(C2,id).On(C1,id).release(semN,id)
         .InformIn(t3,id).Instance5(id)
      Instance5(id:InstanceID) =
        Timeout(id).ExecuteProfile(X2,M1C,id).Instance6(id)
      Instance6(id:InstanceID) =
        PosReached(M1C,id).Off(C2,id).InformIn(t4,id).Instance7(id)
      Instance7(id:InstanceID) =
        Timeout (id) .On (S1, id) .On (C2, id) .Off (C1, id) .InformIn (t5, id)
        .Instance8(id)
      Instance8(id:InstanceID) =
        Timeout(id).ExecuteProfile(X3,M1C,id).CaptureValue(M1E,id)
        .InformAfter (M1E, d1, id) .Instance9(id)
      Instance9(id:InstanceID) =
        PosReached (M1E, id).On (C1, id).InformAfter (M1E, d2, id).Instance10 (id)
```

```
Instance10(id:InstanceID) =
  PosReached (M1E, id).Off(S1, id).Instance11(id)
Instance11(id:InstanceID) =
  SignalLow(02,id).
  (NotTooHigh (M1E, id) .Instancel1 (id) + TooHigh (M1E, id) .Stop (M1C, id) .delta)
  +SignalHigh(02,id).Off(C1,id).InformIn(t6,id).Instance12(id)
Instance12(id:InstanceID) =
  Timeout(id).On(C2,id).InformIn(t7,id).Stop(M1C,id).Instance13(id)
Instance13(id:InstanceID) =
  (Timeout(id).Stopped(M1C,id)+Stopped(M1C,id).Timeout(id)).Instance14(id)
%% ----- Turning and blousing ----- %%
Instance14(id:InstanceID) =
  reserve(sem2,id).ENTER_M2(id).CaptureValue(M2E,id)
  .ExecuteProfile(X4,M1C,id).ExecuteProfile(X5,M2C,id).Instance15(id)
Instance15(id:InstanceID) =
  SignalHigh(02,id).
    (SignalHigh (O3, id) .ENTER_K3 (id) .CaptureValue (M2E, id)
     .Instance16(id)
     +SignalLow(O3,id).
      (NotTooHigh(M2E,id).Instance15(id)
  +TooHigh (M2E,id).Stop (M1C,id).Stop (M2C,id).delta))
+SignalHigh (03,id).ENTER_K3 (id).CaptureValue (M2E,id)
  .Instance16(id)
Instance16(id:InstanceID) =
  SignalHigh(02,id).Instance16(id)
  +SignalLow(O2,id).LEAVE_K2(id).Stop(M1C,id).CaptureValue(M2E,id)
   .Instance17(id)
Instance17(id:InstanceID) =
  Stopped(M1C,id).LEAVE_M1(id).activate(next(id),id).release(sem1,id)
  .Instance18(id)
Instance18(id:InstanceID) =
  SignalHigh(03,id).
  (NotTooHigh (M2E, id) .Instance18(id) + TooHigh (M2E, id) .Stop (M2C, id) .delta)
  +SignalLow(O3,id).CaptureValue(M2E,id).ExecuteProfile(X6,M2C,id)
   .Off(C3,id).Instance19(id)
Instance19(id:InstanceID) =
  SignalLow(03,id).
  (NotTooHigh(M2E,id).Instance19(id) + TooHigh(M2E,id).Stop(M2C,id).delta)
  +SignalHigh(O3, id).CaptureValue(M2E, id).InformAfter(M2E, d3, id)
   .Instance20(id)
Instance20(id:InstanceID) =
  PosReached (M2E, id) .ExecuteProfile (X7, M2C, id) .On (C4, id)
  .InformAfter(M2E,d4,id).Instance21(id)
Instance21(id:InstanceID) =
  PosReached(M2E,id).Stop(M2C,id).On(M4,id).InformIn(t8,id)
  .Instance22(id)
Instance22(id:InstanceID) =
  Timeout (id) .Off (C4, id) .Off (M4, id) .InformIn (t9, id) .Instance23 (id)
Instance23(id:InstanceID) =
  Timeout(id).Instance24(id)
%% ----- Scanning and finalization ----- %%
Instance24(id:InstanceID) =
  reserve(sem3,id).On(C3,id).InformIn(t10,id).Instance25(id)
Instance25(id:InstanceID) =
  Timeout(id).ENTER_M3(id).ExecuteProfile(X8,M2C,id)
  .ExecuteProfile(X9,M3C,id).ENTER_K7(id).CaptureValue(M3E,id)
```

```
.Instance26(id)
```

```
Instance26(id:InstanceID) =
        SignalLow(04,id).
        ( NotTooHigh (M3E, id) . Instance26(id)
          +TooHigh (M3E, id).Stop (M2C, id).Stop (M3C, id).delta )
        +SignalHigh(04,id).Instance27(id)
      Instance27(id:InstanceID) =
        SignalHigh(03,id).
        ( NotTooHigh (M2E, id) . Instance27 (id)
          +TooHigh (M2E, id).Stop (M2C, id).Stop (M3C, id).delta )
        +SignalLow(O3,id).LEAVE_K3(id).Stop(M2C,id).Instance28(id)
      Instance28(id:InstanceID) =
   Stopped(M2C,id).LEAVE_M2(id).release(sem2,id).LEAVE_K7(id)
        .Instance29(id)
      Instance29(id:InstanceID) =
        SignalHigh(04,id).
         ( NotTooHigh (M3E, id) . Instance29 (id)
          +TooHigh(M3E,id).Stop(M3C,id).delta)
        +SignalLow(O4,id).InformAfter(M3E,d5,id).Instance30(id)
      Instance30(id:InstanceID) =
        PosReached (M3E, id).Stop (M3C, id).Instance31 (id)
      Instance31(id:InstanceID) =
        Stopped(M3C,id).LEAVE_M3(id).InformIn(t11,id).Instance32(id)
      Instance32(id:InstanceID) =
        Timeout (id) .reserve (semN, id) .release (sem3, id) .Instance33 (id)
      Instance33(id:InstanceID) =
        semValueZero(semN,F,id).Instance(id)
        +semValueZero(semN, T, id).ENTER_M3(id).ExecuteProfile(X9, M3C, id)
         .InformIn(t12,id).Instance34(id)
      Instance34(id:InstanceID) =
        Timeout(id).Stop(M3C,id).setFirstSheet(T,id).Off(M5,id).Instance35(id)
      Instance35(id:InstanceID) =
        Stopped(M3C,id).ActivateIdleState(M3C,id).ActivateIdleState(M1C,id)
        .ActivateIdleState(M2C,id).LEAVE_M3(id).Instance(id)
init
      encap( {setFirstSheet,getFirstSheet,reserve,release,activate,semValueZero},
        FirstSheet(T) || InstanceO(IO) || Instance(I1) || Instance(I2)
        || Semaphore(sem1,S(0)) || Semaphore(sem2,S(0)) || Semaphore(sem3,S(0))
        || Semaphore(semN,0)
      )
```

# **C Revised** $\mu$ CRL **specification**

This is the  $\mu$ CRL specification of the ADF system in which all errors that were found in the verification process, have been fixed.

```
sort Bool
func T,F: ->Bool
map not:Bool->Bool
and,or,eq:Bool#Bool->Bool
var b:Bool
rew not(F)=T not(T)=F
and(b,T)=b and(b,F)=F
or(b,T)=T or(b,F)=b
eq(b,b)=T eq(T,F)=F eq(F,T)=F
sort Nat
func 0:->Nat
S:Nat->Nat
```

```
map gt,eq:Nat#Nat->Bool
```

```
dec:Nat->Nat
var
      m.n:Nat
      gt(0,n)=F gt(S(m),0)=T gt(S(m),S(n))=gt(m,n)
rew
      eq(0,0)=T eq(0,S(n))=F eq(S(n),0)=F eq(S(m),S(n))=eq(m,n)
      dec(S(n)) = n
sort SensorID
func 01,02,03,04:->SensorID
sort OnOffID
func S1,C1,C2,C3,C4,M4,M5:->OnOffID
sort ControllerID
func M1C,M2C,M3C:->ControllerID
sort EncoderID
func M1E,M2E,M3E:->EncoderID
sort ProfileID
func X1, X2, X3, X4, X5, X6, X7, X8, X9:->ProfileID
sort InstanceID
func I0,I1,I2: -> InstanceID
      eq:InstanceID#InstanceID->Bool
map
      next, prev: InstanceID->InstanceID
      eq(I0,I0)=T eq(I0,I1)=F eq(I0,I2)=F
rew
      eq(I1,I0)=F eq(I1,I1)=T eq(I1,I2)=F
      eq(I2,I0)=F eq(I2,I1)=F eq(I2,I2)=T
      next(I0)=I1 prev(I0)=I2
      next(I1)=I2 prev(I1)=I0
      next(I2)=I0 prev(I2)=I1
sort SemaphoreID
func sem1, sem2, sem3, sem4, sem5, semN:->SemaphoreID
      eq:SemaphoreID#SemaphoreID->Bool
map
      eq(sem1, sem1)=T eq(sem1, sem2)=F eq(sem1, sem3)=F eq(sem1, sem4)=F
rew
      eq(sem1, sem5)=F eq(sem1, semN)=F
      eq(sem2,sem1)=F eq(sem2,sem2)=T eq(sem2,sem3)=F eq(sem2,sem4)=F
      eq(sem2,sem5)=F eq(sem2,semN)=F
      eq(sem3, sem1)=F eq(sem3, sem2)=F eq(sem3, sem3)=T eq(sem3, sem4)=F
      eq(sem3, sem5)=F eq(sem3, semN)=F
      eq(sem4, sem1)=F eq(sem4, sem2)=F eq(sem4, sem3)=F eq(sem4, sem4)=T
      eq(sem4, sem5)=F eq(sem4, semN)=F
      eq(sem5, sem1)=F eq(sem5, sem2)=F eq(sem5, sem3)=F eq(sem5, sem4)=F
      eq(sem5,sem5)=T eq(sem5,semN)=F
      eq(semN, sem1)=F eq(semN, sem2)=F eq(semN, sem3)=F eq(semN, sem4)=F
      eq(semN, sem5) =F eq(semN, semN) =T
sort TimePeriod
func t1,t2,t3,t4,t5,t6,t7,t8,t9,t10,t11,t12:->TimePeriod
sort Distance
func d1,d2,d3,d4,d5:->Distance
act ENTER_K3, LEAVE_K3, LEAVE_K2, ENTER_K7, LEAVE_K7, ENTER_M1, LEAVE_M1,
ENTER_M2, LEAVE_M2, ENTER_M3, LEAVE_M3, Timeout: InstanceID
      setFirstSheet, SetFirstSheet, getFirstSheet,GetFirstSheet:Bool#InstanceID
      reserve, Reserve, release, Release: SemaphoreID#InstanceID
      semValueZero;SemValueZero:SemaphoreID#Bool#InstanceID
      activate, Activate: InstanceID#InstanceID
      SignalLow, SignalHigh:SensorID#InstanceID
      On,Off:OnOffID#InstanceID
      ActivateControlState,ActivateIdleState,PosReached,Stop,Stopped:
      ControllerID#InstanceID
      CaptureValue, PosReached, NotTooHigh, TooHigh: EncoderID#InstanceID
ExecuteProfile:ProfileID#ControllerID#InstanceID
      InformIn:TimePeriod#InstanceID
      InformAfter:EncoderID#Distance#InstanceID
comm setFirstSheet | setFirstSheet = SetFirstSheet
      getFirstSheet | getFirstSheet = GetFirstSheet
      reserve | reserve = Reserve
      release | release = Release
```

semValueZero | semValueZero = SemValueZero

```
activate | activate = Activate
proc FirstSheet(b:Bool) =
        sum(i:InstanceID,
          sum(b1:Bool, setFirstSheet(b1,i).FirstSheet(b1))
          +getFirstSheet(b,i).FirstSheet(b) )
      Semaphore(sid:SemaphoreID,n:Nat) =
        sum(i:InstanceID,
          reserve(sid,i).Semaphore(sid,dec(n)) <| gt(n,0) |> delta
          +release(sid,i).Semaphore(sid,S(n))
          +semValueZero(sid,eq(n,0),i).Semaphore(sid,n) )
      %% ----- Initialization and aligning ----- %%
      Instance(id:InstanceID) =
        activate(id, prev(id)).Instance0(id)
      Instance0(id:InstanceID) =
        SignalLow(01,id).Instance0(id)
        + SignalHigh(01,id).reserve(sem4,id).
( getFirstSheet(T,id).InformIn(t1,id).Instancel(id)
           +getFirstSheet(F,id).ENTER_M1(id).Instance4(id))
      Instance1(id:InstanceID) =
        Timeout(id).
        (SignalLow(O1,id).release(sem4,id).Instance0(id)
        SignalHigh(01,id).ENTER_M1(id).On(M5,id).On(C2,id).Off(C1,id).On(S1,id)
        .ActivateControlState(M1C,id).ActivateControlState(M2C,id)
        .ActivateControlState(M3C,id).setFirstSheet(F,id).InformIn(t2,id)
        .Instance2(id))
      Instance2(id:InstanceID) =
        Timeout(id).ExecuteProfile(X1,M1C,id).Instance3(id)
      Instance3(id:InstanceID) =
        PosReached (M1C, id) .Instance4 (id)
      %% ----- Separation ----- %%
      Instance4(id:InstanceID) =
        reserve(sem1,id).Off(S1,id).On(C2,id).On(C1,id).release(semN,id)
        .release(sem4,id).InformIn(t3,id).Instance5(id)
      Instance5(id:InstanceID) =
        Timeout(id).ExecuteProfile(X2,M1C,id).Instance6(id)
      Instance6(id:InstanceID) =
        PosReached(M1C,id).Off(C2,id).InformIn(t4,id).Instance7(id)
      Instance7(id:InstanceID) =
        Timeout(id).On(S1,id).On(C2,id).Off(C1,id).InformIn(t5,id)
        .Instance8(id)
      Instance8(id:InstanceID) =
        Timeout(id).ExecuteProfile(X3,M1C,id).CaptureValue(M1E,id)
        .InformAfter (M1E, d1, id) .Instance9 (id)
      Instance9(id:InstanceID) =
        PosReached (M1E, id) . On (C1, id) . InformAfter (M1E, d2, id) . Instance10 (id)
      Instance10(id:InstanceID) =
        PosReached(M1E,id).Off(S1,id).Instance11(id)
      Instance11(id:InstanceID) =
        SignalLow(O2,id).
        (NotTooHigh (M1E, id) .Instance11 (id) + TooHigh (M1E, id) .Stop (M1C, id) .delta)
        +SignalHigh(02, id).Off(C1, id).InformIn(t6, id).Instance12(id)
      Instance12(id:InstanceID) =
        Timeout (id) .On (C2, id) .InformIn (t7, id) .Stop (M1C, id) .Instance13 (id)
      Instance13(id:InstanceID) =
```

```
(Timeout(id).Stopped(M1C,id)+Stopped(M1C,id).Timeout(id)).Instance14(id)
%% ----- Turning and blousing ----- %%
Instance14(id:InstanceID) =
  reserve(sem2,id).ENTER_M2(id).CaptureValue(M2E,id)
  .ExecuteProfile(X4,M1C,id).ExecuteProfile(X5,M2C,id).Instance15(id)
Instance15(id:InstanceID) =
  SignalHigh(02,id).
    (SignalHigh(O3,id).ENTER_K3(id).CaptureValue(M2E,id)
     .Instance16(id)
     +SignalLow(O3,id).
      (NotTooHigh (M2E, id) .Instance15(id)
  +TooHigh (M2E, id) .Stop (M1C, id) .Stop (M2C, id) .delta))
+SignalHigh (03, id) .ENTER_K3 (id) .CaptureValue (M2E, id)
  .Instance16(id)
Instance16(id:InstanceID) =
  SignalHigh(02,id).Instance16(id)
  +SignalLow (02, id) .LEAVE_K2 (id) .Stop (M1C, id) .CaptureValue (M2E, id)
   .Instance17(id)
Instance17(id:InstanceID) =
  Stopped(M1C,id).LEAVE_M1(id).activate(next(id),id).release(sem1,id)
  .Instance18(id)
Instance18(id:InstanceID) =
  SignalHigh(O3,id).
  (NotTooHigh (M2E, id) .Instance18 (id) + TooHigh (M2E, id) .Stop (M2C, id) .delta)
  +SignalLow(O3,id).Stop(M2C,id).Instance18A(id)
Instance18A(id:InstanceID) =
  Stopped(M2C,id).reserve(sem5,id).CaptureValue(M2E,id)
  .ExecuteProfile (X6, M2C, id).Off (C3, id).Instance19(id)
Instance19(id:InstanceID) =
  SignalLow(03,id).
  (NotTooHigh (M2E, id) .Instance19(id) + TooHigh (M2E, id) .Stop (M2C, id) .delta)
  +SignalHigh (03, id).CaptureValue (M2E, id).InformAfter (M2E, d3, id)
   .Instance20(id)
Instance20(id:InstanceID) =
  PosReached(M2E,id).ExecuteProfile(X7,M2C,id).On(C4,id)
  .InformAfter(M2E,d4,id).Instance21(id)
Instance21(id:InstanceID) =
  PosReached (M2E, id) . Stop (M2C, id) . On (M4, id) . InformIn (t8, id)
  .Instance22(id)
Instance22(id:InstanceID) =
  Timeout(id).Off(C4,id).Off(M4,id).InformIn(t9,id).Instance23(id)
Instance23(id:InstanceID) =
  Timeout(id).Instance24(id)
%% ----- Scanning and finalization ----- %%
Instance24(id:InstanceID) =
  reserve(sem3,id).On(C3,id).InformIn(t10,id).Instance25(id)
Instance25(id:InstanceID) =
  Timeout(id).ENTER_M3(id).ExecuteProfile(X8,M2C,id)
  .ExecuteProfile(X9,M3C,id).ENTER_K7(id).CaptureValue(M3E,id)
  .Instance26(id)
Instance26(id:InstanceID) =
  SignalLow(04,id).
  ( NotTooHigh (M3E, id) . Instance26 (id)
    +TooHigh (M3E,id).Stop (M2C,id).Stop (M3C,id).delta )
  +SignalHigh(04,id).Instance27(id)
Instance27(id:InstanceID) =
  SignalHigh(O3,id).
```

```
( NotTooHigh(M2E,id).Instance27(id)
+TooHigh(M2E,id).Stop(M2C,id).Stop(M3C,id).delta )
+SignalLow(03,id).LEAVE_K3(id).Stop(M2C,id).Instance28(id)
Instance28(id:InstanceID) =
  Stopped(M2C,id).LEAVE_M2(id).release(sem2,id).LEAVE_K7(id)
  .Instance29(id)
Instance29(id:InstanceID) =
  SignalHigh(04,id).
  ( NotTooHigh (M3E, id) . Instance29(id)
     +TooHigh(M3E,id).Stop(M3C,id).delta)
  +SignalLow(04,id).release(sem5,id).InformAfter(M3E,d5,id).Instance30(id)
Instance30(id:InstanceID) =
  PosReached(M3E,id).Stop(M3C,id).Instance31(id)
Instance31(id:InstanceID) =
  Stopped(M3C,id).LEAVE_M3(id).InformIn(t11,id).Instance32(id)
Instance32(id:InstanceID) =
  Timeout (id) .reserve (semN, id) .release (sem3, id) .reserve (sem4, id)
  .Instance33(id)
Instance33(id:InstanceID) =
  semValueZero(semN,F,id).release(sem4,id).Instance(id)
+semValueZero(semN,T,id).ENTER_M3(id).ExecuteProfile(X9,M3C,id)
   .InformIn(t12,id).Instance34(id)
Instance34(id:InstanceID) =
  Timeout(id).Stop(M3C,id).setFirstSheet(T,id).Off(M5,id).Instance35(id)
Instance35(id:InstanceID) =
  Stopped(M3C,id).ActivateIdleState(M3C,id).ActivateIdleState(M1C,id)
  .ActivateIdleState(M2C, id).LEAVE_M3(id).release(sem4, id).Instance(id)
encap( {setFirstSheet,getFirstSheet,reserve,release,activate,semValueZero},
  FirstSheet(T) || Instance0(I0) || Instance(I1) || Instance(I2)
```

init

```
|| Semaphore(sem1,S(0)) || Semaphore(sem2,S(0)) || Semaphore(sem3,S(0))
|| Semaphore(sem4,S(0)) || Semaphore(sem5,S(0)) || Semaphore(semN,0)
)
```