

On line non-contact gas analysis on an industrial scale

Fateev, Alexander; Evseev, Vadim

Publication date:
2009

Document Version
Publisher's PDF, also known as Version of record

[Link back to DTU Orbit](#)

Citation (APA):
Fateev, A., & Evseev, V. (2009). On line non-contact gas analysis on an industrial scale [Sound/Visual production (digital)]. 1st GERG Academic Network Event, Brussels , Belgium, 04/06/2009

DTU Library

Technical Information Center of Denmark

General rights

Copyright and moral rights for the publications made accessible in the public portal are retained by the authors and/or other copyright owners and it is a condition of accessing publications that users recognise and abide by the legal requirements associated with these rights.

- Users may download and print one copy of any publication from the public portal for the purpose of private study or research.
- You may not further distribute the material or use it for any profit-making activity or commercial gain
- You may freely distribute the URL identifying the publication in the public portal

If you believe that this document breaches copyright please contact us providing details, and we will remove access to the work immediately and investigate your claim.

On line non-contact gas analysis on an industrial scale


Supervisor: Alexander Fateev

PhD student: Vadim Evseev

DENMARK



Risø DTU

National Laboratory for Sustainable Energy

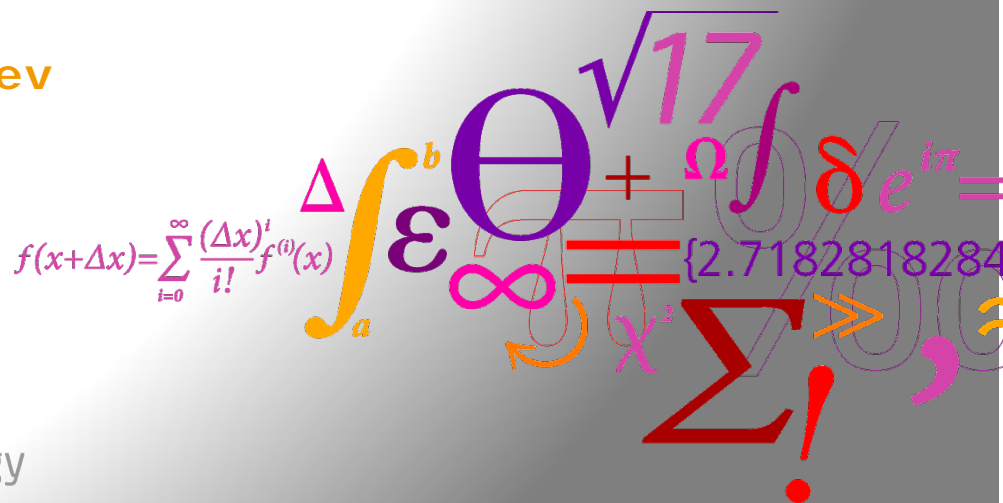

□ Technology for sustainable energy supply


- Wind energy
- Fuel cells and hydrogen
- Bioenergy
- Coming energy technologies:
 - Fusion
 - Solar cells
 - Cleaner energy technologies and energy conservation

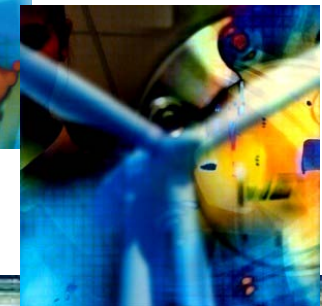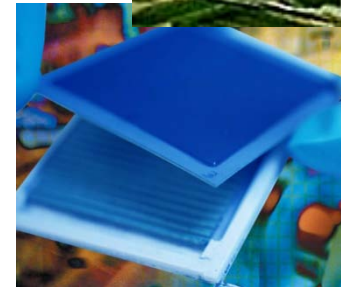

Introduction: Optical Diagnostics Group





- ❑ **Development of methods and equipment for on-line optical measurements of gas temperature and species concentrations**
 - such as O_2 , NO_x , SO_2 , CO , CO_2 , H_2O and C_xH_y
 - in flames or hot gas flows
 - inside boilers, exhaust pipes, engines, etc.
 - using IR/UV emission/absorption spectrum measurements
- ❑ **Investigation of spectral properties of gases at high temperatures**
 - This allows to improve quality of spectrum modeling and thus to increase accuracy of on-line measurements
- ❑ **Calibration of temperature and infrared measuring equipment (accredited by DANAK)**

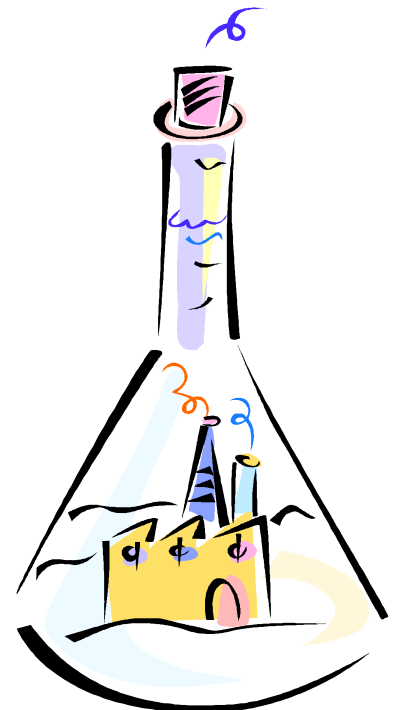

Optical instrumentation

Optical fibre gives flexibility & accessibility

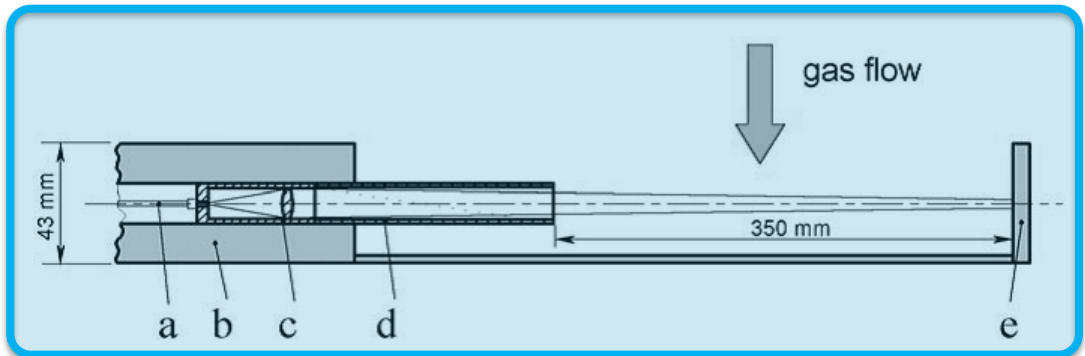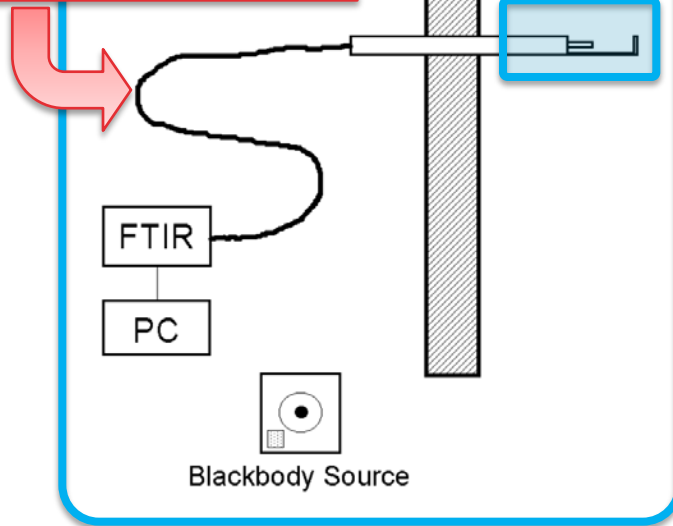


Measurements are possible under harsh conditions

IR emission probe

- a - infrared fibre
- b - water-cooled stainless steel probe
- c - optical mount
- d - protection tube
- e - water-cooled beam stop



Example of an IR emission spectrum

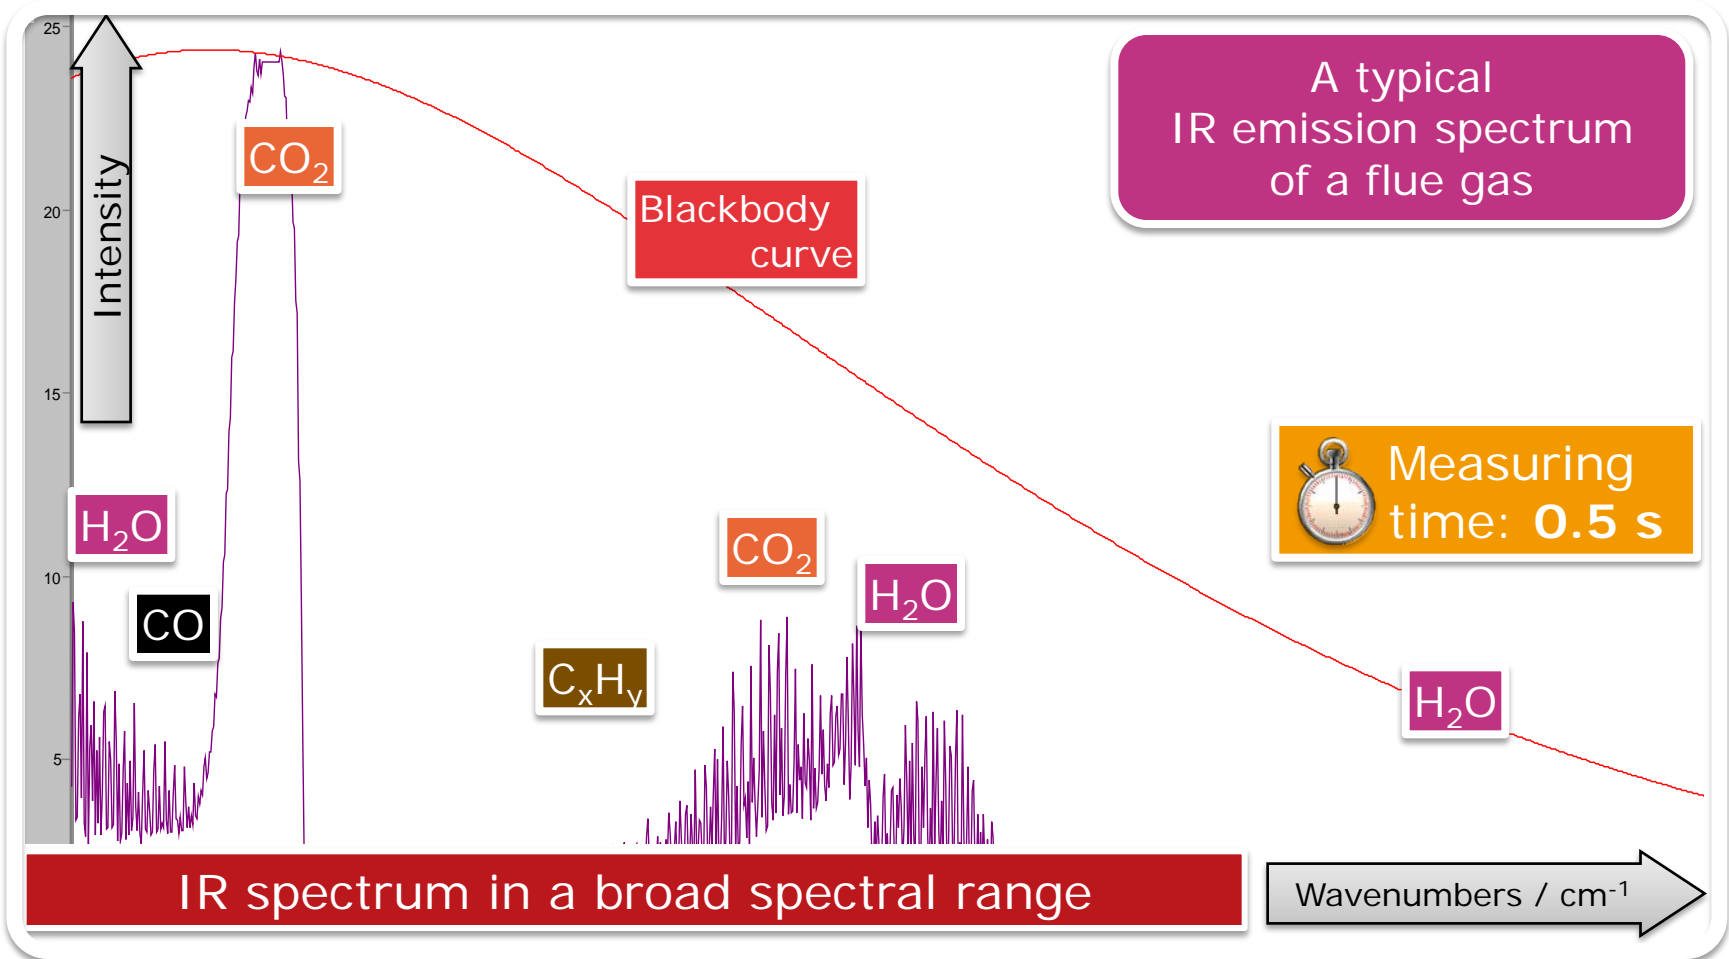


- Use of FTIR spectroscopy instead of e.g. laser spectroscopy allows to measure IR emission/absorption spectra in a broad spectral range within half a second

Optical instrumentation



**SO₂ & NO
are major pollutants**

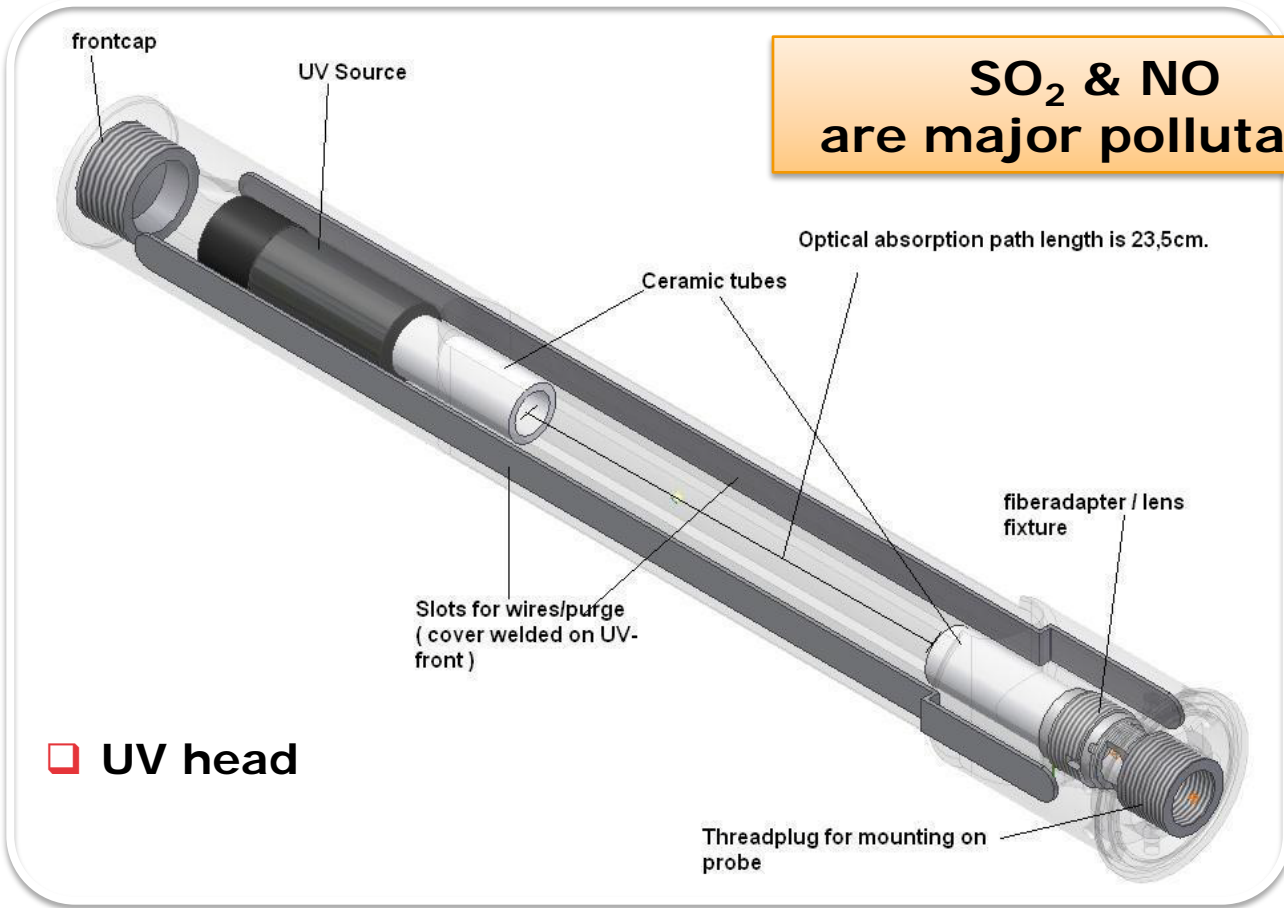


UV head



1 ms


Allows to measure **temperature** of **SO₂** **NO** **O₂** etc.
concentration

Example of an UV absorption spectrum

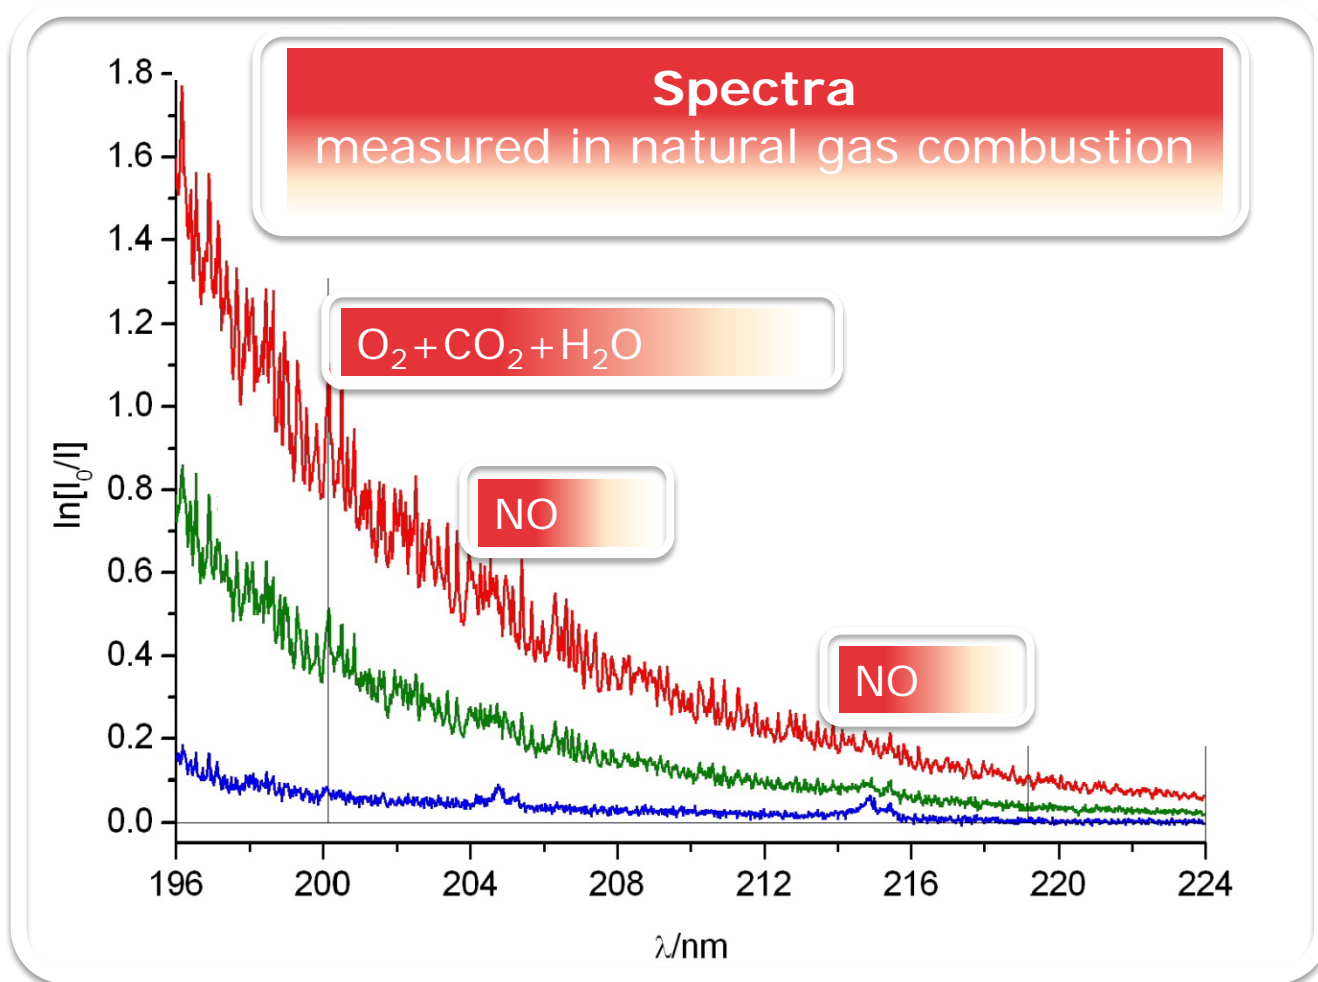


□ NO, O₂ and SO₂ have their unique absorption features in the UV region



Hot gas cells

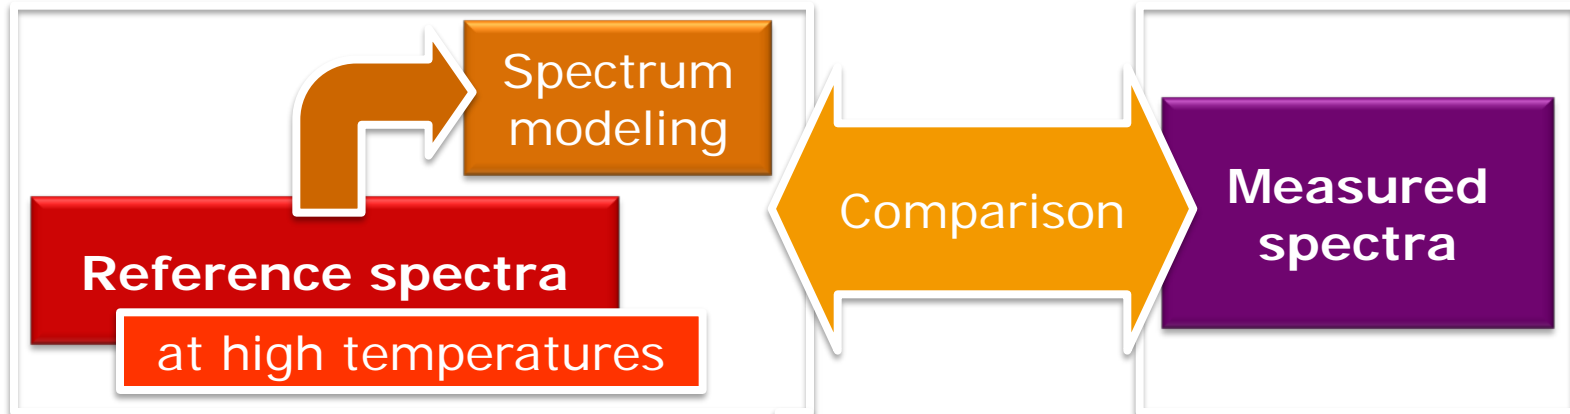

- ❑ **Uniform gas slabs at given temperatures are reproduced in specially designed gas cells**
- ❑ This allows
 - to validate spectra modeling databases at high temperatures
 - to provide spectra of gaseous species those are not available from known databases
 - to validate newly developed instrumentation for non-contact gas analysis

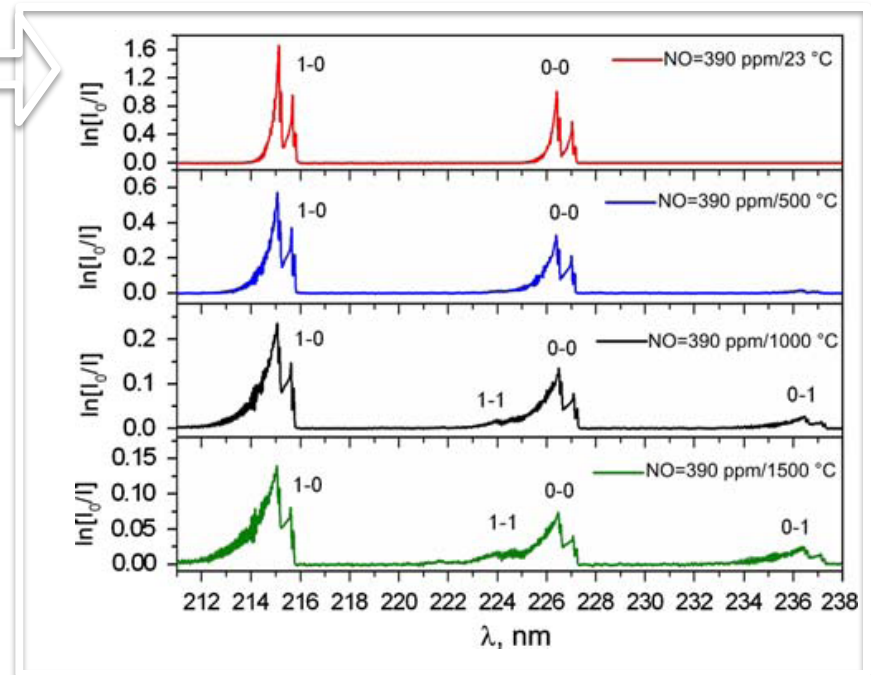


Ceramic hot flow gas cell (HGC)

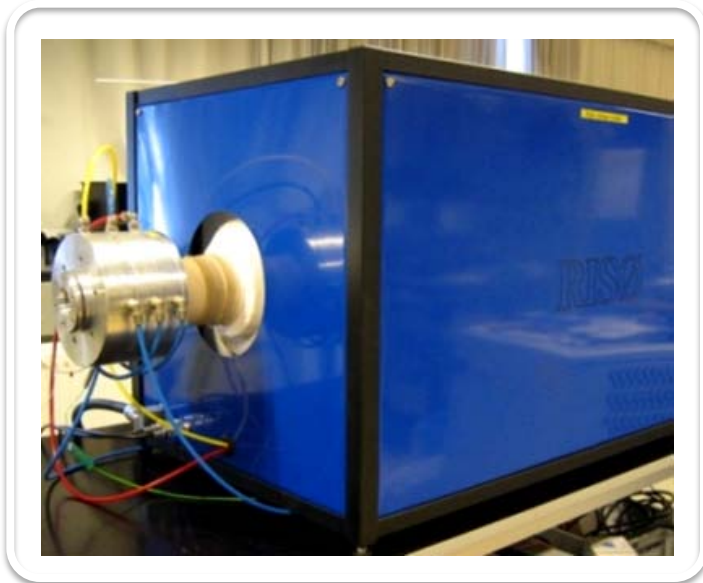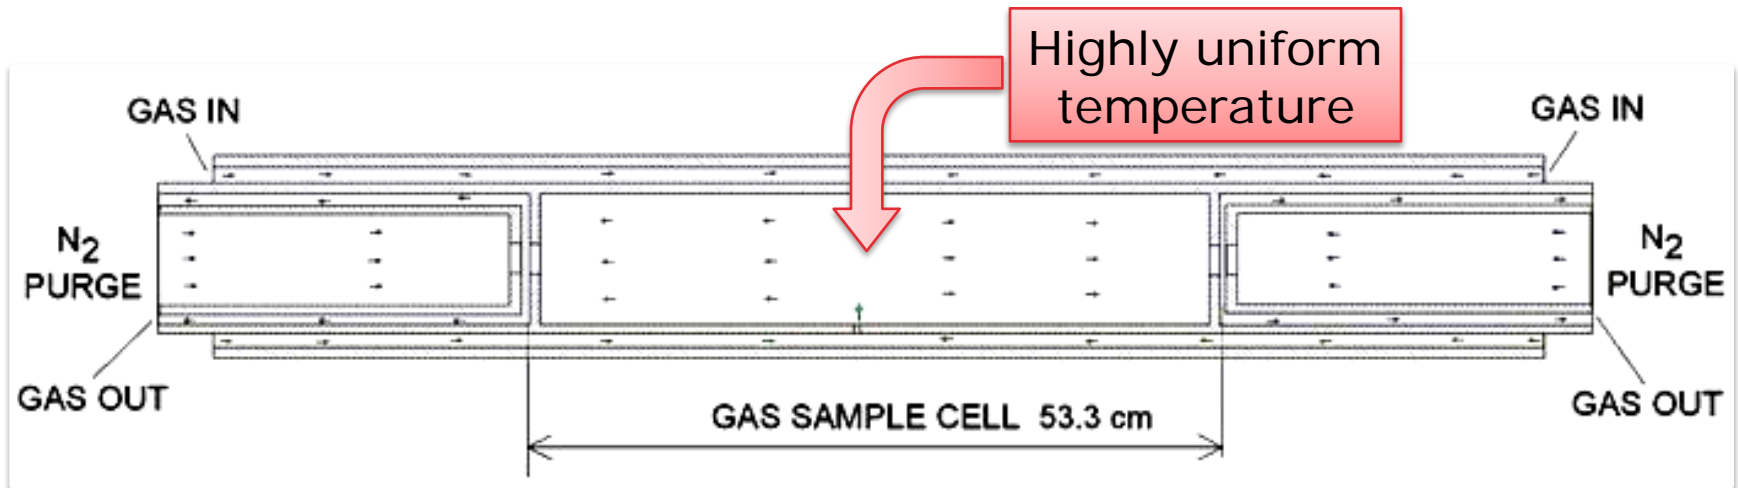


Temperature range	20 – 1600 °C
Pressure range	Approx. 1 bar abs
Optical path	53.3 cm
Spectral region	From 200 nm (UV) to 10 μm (IR)

New diagnostic tools: Fast IR imaging I

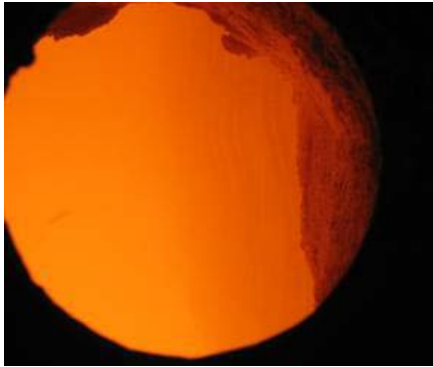

- Visual and thermal picture of a super-heater of a boiler

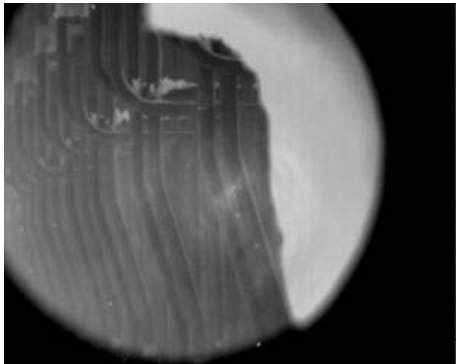


- Thermal picture of a burner of a boiler

Exposure:
333 μ s

Delay between
frames: **10 ms**


Frame rate:
90 images/s

IR images made with
IR Camera =
Endoscope + CEDIP camera

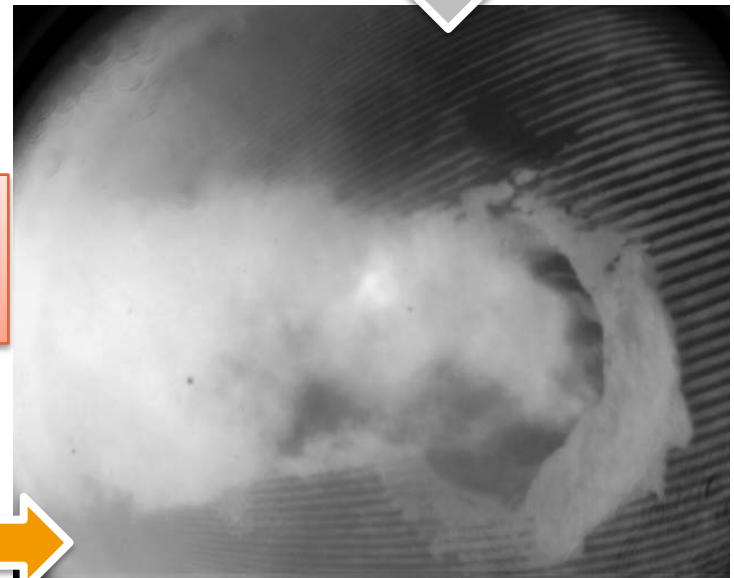

New diagnostic tools: Fast IR imaging II



- ❑ **In situ fast IR absorption/emission spectroscopy**
 - **ACTON spectrometer + CEDIP Camera (InSb 640x512 array)**
- ❑ It allows to accomplish measurements within a few microseconds
 - This gives an opportunity to trace the development of a combustion process in time providing useful information for better understanding of combustion phenomena

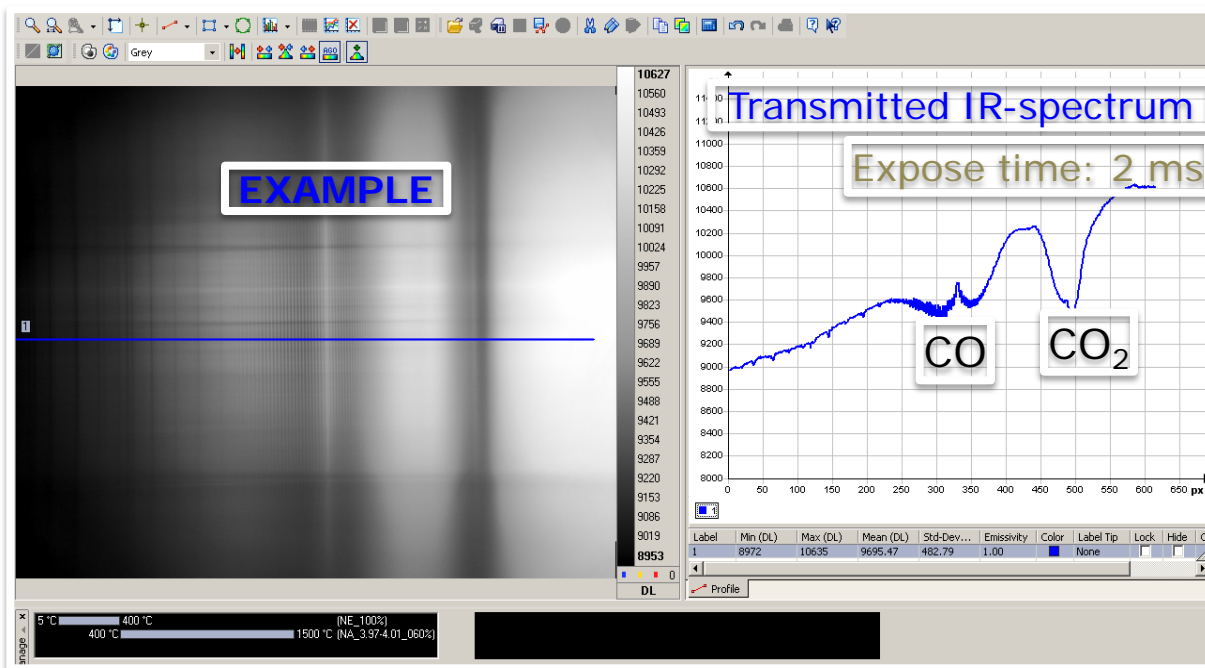


New diagnostic tools: Multichannel Spectrometer

Simultaneous spectral measurements

- ❑ A multichannel assembly allows to perform spectral measurements simultaneously from several positions

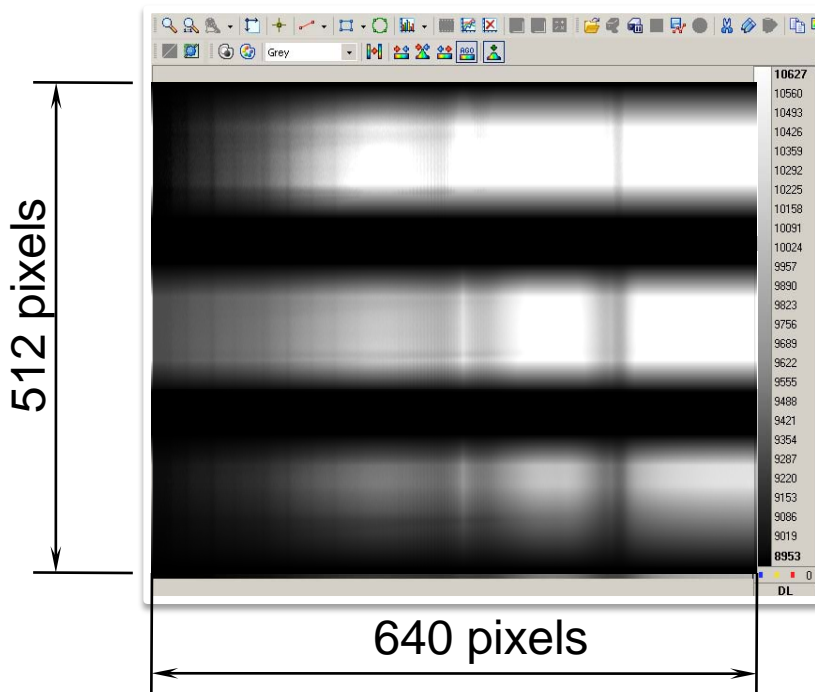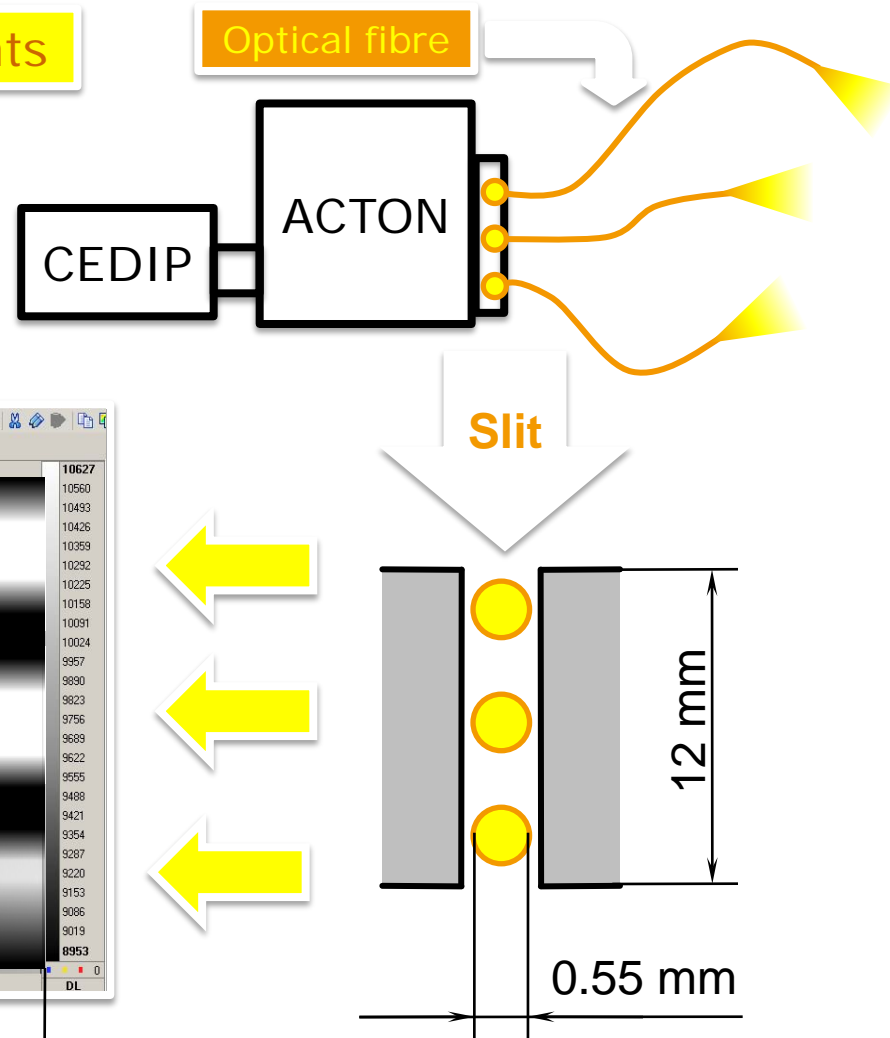

New diagnostic tools: 2D Tomography

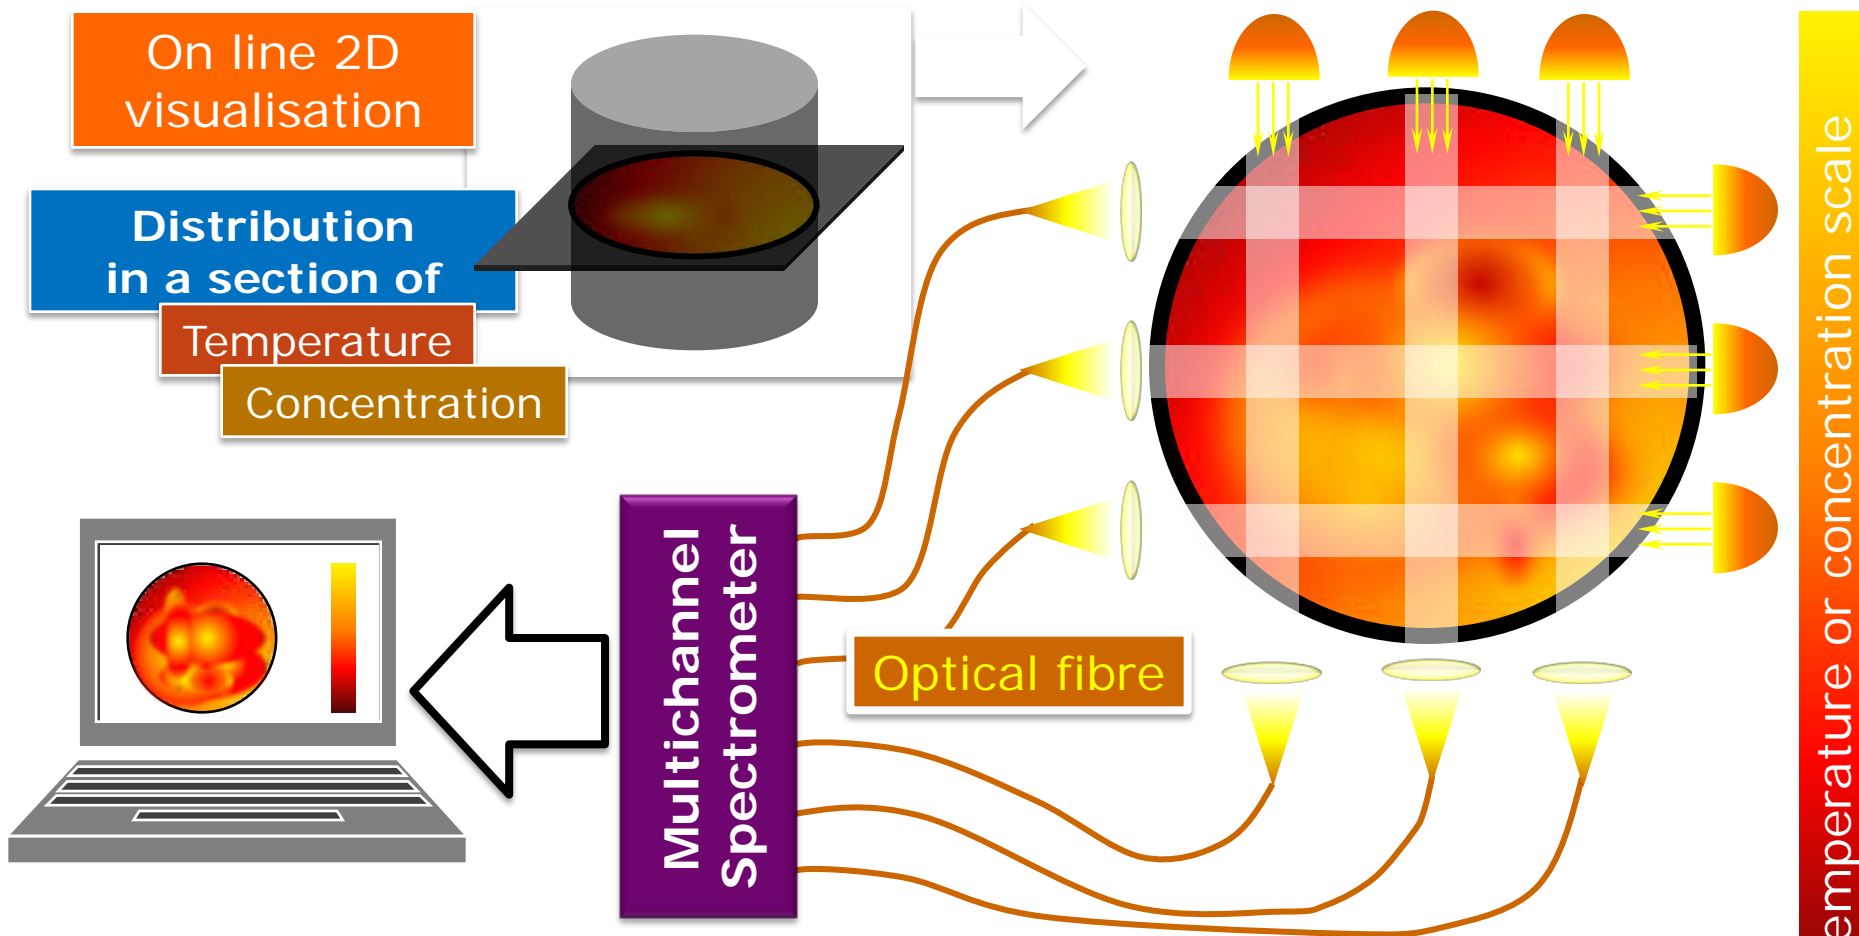

- ❑ 2D Tomography of e.g. hot gas inside of an exhaust pipe shows distribution of temperature or concentrations in a pipe section


- ❑ **Optically-based techniques developed at Risø make possible to carry out on-line optical measurements of**
 - gas and particle temperatures
 - concentration of gaseous species
- ❑ **These are achieved by**
 - measurements of the emission or absorption spectra of gases in UV- and/or IR-ranges
 - availability of high quality reference spectra for the species of interest either measured in one of Risø's hot gas cells or calculated with use of known and validated databases
 - post-processing of the acquired spectra
- ❑ **Spectral measurements can be performed**
 - within sufficiently short period of time
 - at various points inside a combustion unit
- ❑ **Risø's techniques give further opportunities to trace the development of a combustion process in time and space**
 - providing useful information for better understanding of the combustion phenomena


- Project leader: Sønnik Clausen, sqcl@risoe.dtu.dk
Supervisor: Alexander Fateev, alfa@risoe.dtu.dk
PhD student: Vadim Evseev, vaev@risoe.dtu.dk
- Risø National Laboratory for Sustainable Energy
Technical University of Denmark

Frederiksborgvej 399
P.O. Box 49
DK-4000 Roskilde

- Tel.: +45 4677 4677
Fax: +45 4677 5688
- www.risoe.dtu.dk

Risø DTU
National Laboratory for Sustainable Energy



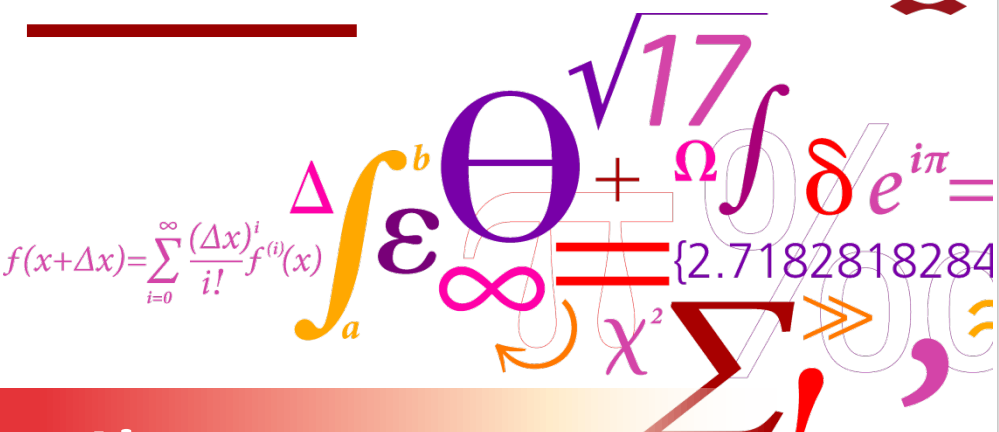

Thanks for your attention