## Technical University of Denmark



## Hydroformylation with Integrated Catalytic-Membrane Separation Reaction System

Marinkovic, Jakob Maximilian; Weiss, A.; Garcia Suárez, Eduardo José; Haumann, M.; Riisager, Anders; Fehrmann, Rasmus

Published in: Book of Abstracts Sustain 2017

Publication date: 2017

Document Version Publisher's PDF, also known as Version of record

Link back to DTU Orbit

Citation (APA):

Marinkovic, J. M., Weiss, A., Garcia Suárez, E. J., Haumann, M., Riisager, A., & Fehrmann, R. (2017). Hydroformylation with Integrated Catalytic-Membrane Separation Reaction System. In Book of Abstracts Sustain 2017 [C-18]

## DTU Library

Technical Information Center of Denmark

#### **General rights**

Copyright and moral rights for the publications made accessible in the public portal are retained by the authors and/or other copyright owners and it is a condition of accessing publications that users recognise and abide by the legal requirements associated with these rights.

- Users may download and print one copy of any publication from the public portal for the purpose of private study or research.
- You may not further distribute the material or use it for any profit-making activity or commercial gain
- You may freely distribute the URL identifying the publication in the public portal

If you believe that this document breaches copyright please contact us providing details, and we will remove access to the work immediately and investigate your claim.

# Hydroformylation with Integrated Catalytic-Membrane Separation Reaction System

J. M. Marinkovic<sup>1</sup>, A. Weiß<sup>2</sup>, E. J. García-Suárez<sup>1</sup>, M. Haumann<sup>2</sup>, A. Riisager\*<sup>1</sup> and R. Fehrmann<sup>1</sup>

- 1: Centre for Catalysis and Sustainable Chemistry, Department of Chemistry, Technical University of Denmark (DTU), 2800 Kgs. Lyngby, Denmark
- 2: Lehrstuhl für Chemische Reaktionstechnik, Friedrich-Alexander-Universität (FAU), 91058 Erlangen, Germany
- \*Corresponding author email: ar@kemi.dtu.dk

Catalysis with supported homogeneous catalyst systems has successfully been established over the last decades as an industrially attractive approach. Hydroformylation of olefins by syngas to produce aldehydes is an important industrial reaction. However, the long-term catalytic performance of such systems is often negatively influenced due to the formation of "heavies" by undesired condensation reactions hampering activity and selectivity.

In the HORIZON2020 project Reactor Optimisation by Membrane Enhanced Operation (ROMEO)<sup>[3]</sup> a new "two-in-one" reactor concept is being developed. The unique ROMEO reactor will overcome present challenges in the hydroformylation technology and its industrial application by combining two process steps in one module as depicted in Figure 1.

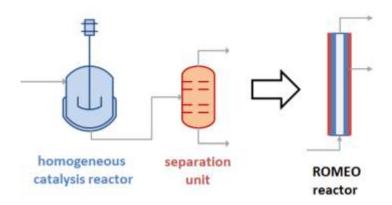


Fig. 1. Reactor Optimisation by Membrane Enhanced Operation (ROMEO) technology combines two standard process steps.

The ROMEO reactor is based on a catalytically active membrane, which is combined with a homogeneous catalyst to generate the "two-in-one" reactor module. Depending on the properties of the membrane, either the product or byproduct passes through the membrane once the reaction has taken place at the catalyst surface.

Preliminary investigations of olefin hydroformylation have demonstrated that the system is catalytically active affording high activity and selectivity. The results indicate that the ROMEO "two-in-one" reactor concept has a great potential to be applied in the chemical industry. Furthermore, a reduction in emissions, energy consumption, space needs and costs in the chemical industry are expected with this novel reactor type.

### Acknowledgments

This project has received funding from the European Union's Horizon 2020 research and innovation programme.

#### References

- [1] S. Bhaduri, D. Mukesh. Homogeneous Catalysis: Mechanisms and Industrial Applications, 2nd Edition. John Wiley & Sons, 2014.
- [2] R. Franke, D. Selent, A. Börner. Applied Hydroformylation. Chemical Reviews, 2012, 112 (11), 5675-5732.
- [3] http://www.romeo-h2020.eu