Pittsburg State University

Pittsburg State University Digital Commons

Paper and Posters Presentations

Research Colloquium 2017

4-2017

Reverse Hyperextension Device

Nayeli Feregrino Pittsburg State University

Aziz Alotaibi Pittsburg State University

Gage Becker Pittsburg State University

Kyle Brown Pittsburg State University

Dillon Fleming Pittsburg State University

Follow this and additional works at: https://digitalcommons.pittstate.edu/papers_2017

Part of the Mechanical Engineering Commons

Recommended Citation

Feregrino, Nayeli; Alotaibi, Aziz; Becker, Gage; Brown, Kyle; and Fleming, Dillon, "Reverse Hyperextension Device" (2017). *Paper and Posters Presentations*. 1. https://digitalcommons.pittstate.edu/papers_2017/1

This Presentation is brought to you for free and open access by the Research Colloquium 2017 at Pittsburg State University Digital Commons. It has been accepted for inclusion in Paper and Posters Presentations by an authorized administrator of Pittsburg State University Digital Commons. For more information, please contact mmccune@pittstate.edu, jmauk@pittstate.edu.

REVERSE HYPEREXTENSION DEVICE

Pittsburg State University

Senior Project WF16/SP17



Reverse Hyperextension Device



Pittsburg State University Senior Project WF16 / SP17

Group members

Abdulaziz Alotaibi
 MET - Design
 Gage Becker
 MET - Design
 Kyle Brown
 MET - Design

- Nayeli Feregrino
 MET Manufacturing
- Dillon Fleming*MFGET*
- Customer
 - > Dr. Derek Crawford, HHPR





- A Reverse Hyperextension device, sometimes called Reverse Hyper or RHD is generally designed to help those with lower back problems who can no longer do squats because of the strain that comes from them.
- The RHD presents the option to work out the same muscles that squats focus on, without having the added force of gravity acting upon the person's back.




Design Inputs

Reverse Hyperextension Device							
Input	Nominal Value	Tolerance	Rationale	Scale			
Collapsable	3'x10'x7'	max	Size of usable storage space	10			
Width	3	max	Size of usable storage space	-			
Length	10'	max	Size of usable storage space	-			
Height	7'	max	Size of usable storage space	-			
Assembled Footprint Dimensions	5' x 5.5' x 5.5'	max	Size of functioning space	10			
Width	5	max at rest	Size of functioning space	-			
Length	5.5'	max at rest	Size of functioning space	-			
Height	5.5'	max at rest	Size of functioning space	-			
Movable by one person	701Ь	max	Max weight for UPS package to be lifted safely/individually1	10			
Stability	Present	N/A	Utilize Solidworks Stability study	10			
Time to assemble or dissassemble	10 min.	max	Requirement for use; time between classes	8			
Tools needed for assembly	3	max	Requirement for use; device function	5			
Weight Device can support user	300 lb Person	max	Customer Requirement, user safety	10			
Weight Device can support plate weight	250 lb Plates	max	Customer Requirement, user safety	10			

Design Inputs


Size range of user	4'-10" - 6'5"	maxImin	5th percentile female2 - Specified by customer	10
Pendulum range of motion (0" is at resting point)	90' extension	min	Customer Requirement	10
	30 [°] flexion	min	Customer Requirement	10
Cleanable Surfaces with alcohol	Present	N/A	Customer Requirement; 70% Isopropyl Alcohol	7
Angular position readout	Present	5 ⁻ increments	Customer Requirement, for data analysis	6
Scratch Resitant Feet	Present	N/A	Design team requirement	2
How-to-Use Manual	Present	N/A	Customer Requirement, user safety	10
Paint	Present	N/A	Design team requirement	5
Clean weld beads	Present	N/A	Design team requirement	5
Safety				
No sharp points	Present	N/A	User Safety	10
Minimize or label pinch points	Present	N/A	User Safety	10

Initial Ideas

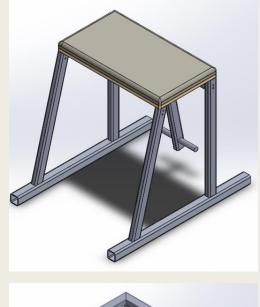






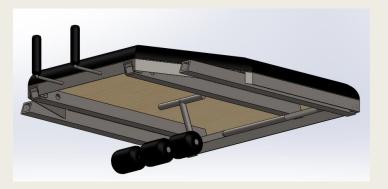







Final Frame Design

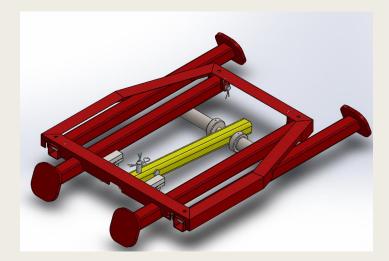


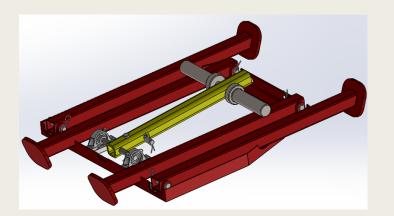






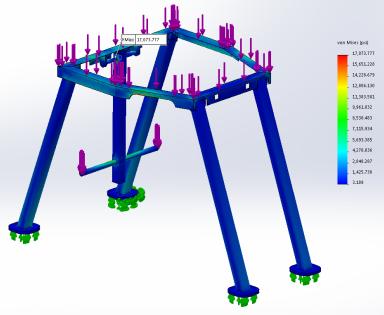

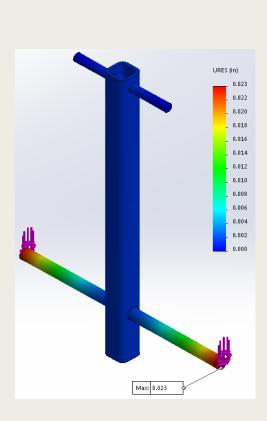

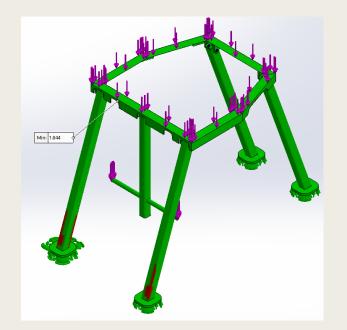


Manufacturing Process









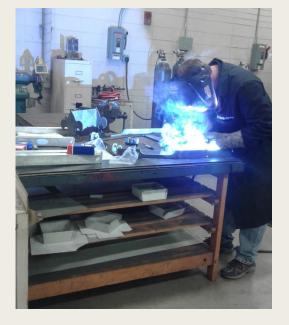

Manufacturing Process











Final Prototype







