

---

---

**GENERAL DYNAMICS**

Electric Boat

75 EASTERN POINT ROAD, GROTON, CONNECTICUT 06340

**REPORT NO. TDA-19195**

**APRIL, 2003**

---

---

**CYCLIC MATERIAL PROPERTIES TEST TO DETERMINE  
HARDENING/SOFTENING CHARACTERISTICS OF HY-80 STEEL**

S. C. Hodge, J. M. Minicucci, T. F. Trimble

**NOTICE**

This report was prepared as an account of work sponsored by the United States Government. Neither the United States, nor the United States Department of Energy, nor any of their employees, nor any of their contractors, subcontractors, or their employees, makes any warranty, express or implied, or assumes any legal liability or responsibility for the accuracy, completeness or usefulness of any information, apparatus, product or process disclosed, or represents that its use would not infringe privately owned rights.

### **ABSTRACT**

The Cyclic Material Properties Test was structured to obtain and provide experimental data for determining cyclic hardening/softening characteristics of HY-80 steel. The inelastic strain history data generated by this test program and the resulting cyclic stress-strain curve will be used to enhance material models in the finite element codes used to perform nonlinear elastic-plastic analysis.

### **ACKNOWLEDGMENT**

The Cyclic Material Properties Test was performed by Mr. Dan Bozik at the Materials Characterization Laboratory of the Lockheed Martin Corporation, Schenectady, NY in cooperation with Electric Boat Corporation. Mr. Bozik also provided assistance in formulating the test plan and supplied information and data on the test performance.

**TABLE OF CONTENTS**

SUMMARY	1
INTRODUCTION	1
METHODS, ASSUMPTIONS AND PROCEDURES	3
RESULTS AND DISCUSSION	5
CONCLUSIONS	7
REFERENCES	9
APPENDIX 1 - TEST SPECIMEN DRAWING	
APPENDIX 2 - SELECTED TEST CURVES	
APPENDIX 3 - TEST PHOTOGRAPHS	

**LIST OF FIGURES AND TABLES**

<u>FIGURE 1</u>	Comparison of Loading Profiles for Cyclic Testing	2
<u>FIGURE 2</u>	Composite Cyclic Engineering Stress-Engineering Strain Curve for HY-80 Based on Test Data	8
<u>TABLE 1</u>	Incremental Step Test Specimens	4
<u>TABLE 2</u>	Companion Specimen Test Specimens	4
<u>TABLE 3</u>	Incremental Step Test	5
<u>TABLE 4</u>	Companion Specimen Test	7

## SUMMARY

The use of elastic-plastic finite element analysis to model dynamic loading conditions in structures is possible using the latest analysis codes and computing capabilities. To fully utilize elastic-plastic capabilities, material properties, in the form of accurate stress-strain and cyclic data, for significant levels of strain, are required.

The cyclic stress-strain curve, obtained by cycling a material specimen between alternating loads of tension and compression, can be notably different from the monotonic stress-strain curve, traditionally obtained from a near-static tensile loading condition. The cyclic stress-strain curve provides a measure of the steady-state cyclic deformation resistance of a material. The two methods used to determine the cyclic stress-strain curve, the Incremental Step Test and the Companion Specimen Test, are discussed in this report.

Data generated from this test program were used to determine the cyclic stress-strain curve for HY-80 steel. The results provided the necessary data to enhance the material modeling capabilities of the finite element analysis program used for analysis.

## INTRODUCTION

The primary objective of this test program was to obtain and provide experimental data for determining cyclic hardening/softening characteristics of HY-80 steel. Fatigue specimens of this steel were subjected to alternating cycles of tensile and compressive load using mechanical testing machines. Test data was recorded in digital form and used to create a cyclic stress-strain curve for HY-80 steel. Information from this test program will be used to support elastic-plastic analysis efforts by providing data necessary for the development of a material model which can accurately predict inelastic reversal behavior.

Inelastic material properties for HY-80 steel that accurately account for the effects of strain reversal are required for elastic-plastic analysis used to predict strains and permanent set in structures that undergo dynamic loading. The accuracy of results from elastic-plastic analysis methods using material models that account for inelastic material behavior was confirmed by results of the Simple Structures Test reported in Reference (a).

This test program subjected HY-80 specimens of hourglass cylindrical cross section to alternating tension and compression loads that strained the specimens to pre-defined inelastic strain levels. Specimens were hourglass cylindrical cross sections fabricated according to the specifications of the drawing in Appendix 1. Specimen design was based on previous fatigue testing. Standard (full-size) specimens were fabricated from 1.00 inch HY-80 plate.

### Incremental Step Test

The Incremental Step Test subjected a specimen to blocks of cycles in which the strain amplitude incrementally decreased from a predetermined maximum strain value. In Reference (b), this method was proven to be an expedient way of generating the cyclic stress-strain curve. After several blocks of these incremental strain cycles, depending on the maximum strain value, the material cyclically stabilizes. In addition, the pattern of incrementally decreasing strain cycles in the first loading block is representative of the response of an initially unstrained structure when subjected to a dynamic load.

Continuously plotting the stress versus strain data throughout an incremental strain block generates a series of superimposed hysteresis loops. The cyclic stress-strain curve for a particular block can be formed by connecting the tips of the superimposed hysteresis loops. The initial cycle of each block subjected the specimen to the maximum strain amplitude required by the test for that test specimen. The remaining strain amplitudes in the block decreased by increments of one-fifteenth of the maximum strain amplitude. The pattern of incrementally decreasing strain amplitude blocks continued until stabilization or failure occurred. A zero strain increment approximately two seconds long was inserted between each loading block.

Using this method, the initial loading of the test represents the monotonic stress-strain curve of the material up to the maximum strain level for the test cycle. The cyclic hardening or softening characteristics of the material can be determined by comparing the cyclic stress-strain curve created using the first block of data to the stress-strain curve generated using the stabilized block of data.

A form of the Incremental Step Test described in Reference (b) was used to generate the required stress-strain curves for this cyclic test application, based on the following assumptions:

- The cyclic stress-strain curve can be generated using a single specimen; and
- A relatively few number of blocks of strain cycles at the specified strain amplitudes are required to attain a stable state of strain within the specimen.


A typical transient strain response to a dynamic load resembles a damped sinusoidal wave that decays over time. This pattern of straining is approximated by the gradually decreasing strain amplitude in the initial input block of the Incremental Step Test. Because of the type of strain response resulting from a dynamic load and its applicability to this test series, the strain input for the Incremental Step Test, indicated in Figure 1, was used.

The number of blocks required to reach a steady state is inversely proportional to the number of cycles per block. In a test procedure with a large number of cycles per block, stabilization is reached in a few blocks. For an input block containing cycles of both increasing and decreasing strain amplitudes, Reference (b) recommends between 20 and 30 cycles per block. To remain consistent with this requirement, the recommended procedure for this test used input blocks containing 15 cycles of decreasing strain amplitude only. This also appears to agree with the sample cyclic test data supplied as an attachment to Reference (b).

### Companion Specimen Test

The method for obtaining a cyclic stress-strain curve that is most generally accepted, and provides the most technically exact definition, is to define the curve by connecting the tips of stable stress-strain hysteresis loops. These hysteresis loops are obtained by subjecting several like, or companion, material specimens to a defined pattern of alternating tension and compression loading cycles. Each specimen is cycled at a different constant strain amplitude through a series of full strain reversals until plots of their hysteresis loops remain unchanged (i.e., a stabilized hysteresis loop). Figure 1 gives an illustration of the type of constant strain amplitude a specimen was subjected to under the conditions of the Companion Specimen Test. Reference (b) suggests that the number of cycles specified for the test be approximately equal to half the fatigue life of the material such that a fully stabilized condition is reached.

**FIGURE 1 Comparison of Loading Profiles for Cyclic Testing**

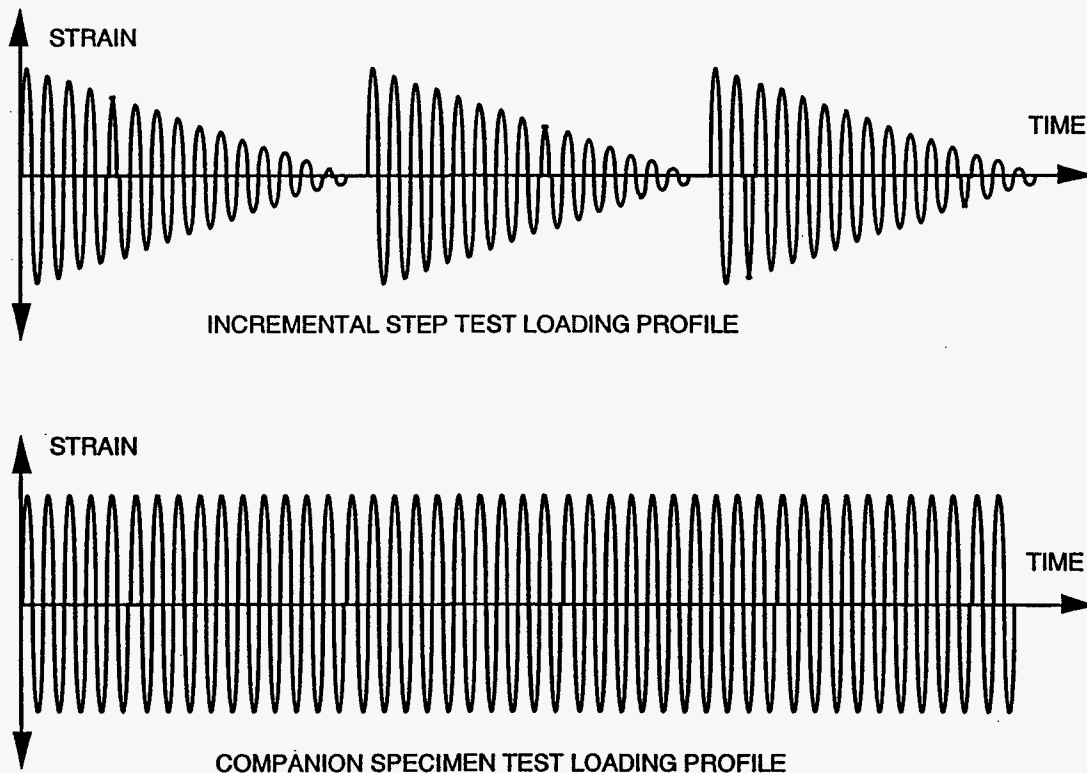

The testing effort to fully define the cyclic stress-strain curve using the companion specimen method could be prohibitive due to the large number of cycles required for each test and the large number of companion specimen data points necessary to generate a well-defined cyclic stress-strain curve. For this reason, a test procedure that could generate a cyclic stress-strain curve from a single test specimen (Incremental Step Test), similar to a monotonic material test, was used to define sets of cyclic data points from which a stress-strain curve could be

developed. Data points generated from the Companion Specimen Test were used to verify the resulting cyclic stress-strain curve.

**Maximum Strain Amplitude**

The cyclic material tests were performed on HY-80 specimens having a nominal ultimate strain (i.e., strain at ultimate stress,  $\epsilon_u$ ) of approximately 8%. Current elastic-plastic strain criteria (Reference (c)) sets limits on strain based on fractions of ultimate strain. The general surface strain limit allowed by the criteria is  $0.3\epsilon_u$  or 2.4% strain for HY-80 steel. Therefore, the maximum strain amplitudes reached in the cyclic tests should be at least 2.4 % for HY-80. Upon implementation of testing, it was determined that the testing apparatus was capable of attaining a maximum strain amplitude of 4.0%, providing data above the criteria limit.

**METHODS, ASSUMPTIONS AND PROCEDURES**

Test specimens were fabricated from HY-80 steel, according to the drawing in Appendix 1. Orientation with respect to the principal rolling direction of the plate stock was determined prior to specimen fabrication. The longitudinal specimens, stamped "L" on the end, were fabricated such that the long axis of the test specimen was parallel to the principal rolling direction of the plate. The transverse specimens, stamped "T", were fabricated such that the long axis was perpendicular to the principal rolling direction.

Biaxial strain gages were placed on either side ( $180^\circ$  apart) of the large diameter region (grip region) of one longitudinal and one transverse specimen. Poisson's ratio was determined with loading in the elastic range of the material.

All test data was recorded and reported as engineering stress and strain. Engineering stress and strain differ from true stress and strain in the following manner. The engineering measure is based on the original specimen diameter. The true measure is based on an updated area calculated from the measured diameter at each instant of loading.

Test control, achieved by monitoring axial strain levels, was accomplished by taking the diametral strain and converting it to axial strain. For the Incremental Step Test, this conversion was performed directly by the Material Testing Systems (MTS) 448.38 analog strain computer. In addition to diametral strain, measured force was also used as input to the conversion. The pre-test measured specimen diameter was used as the original diameter for strain calculations for each block of testing.

For all specimens, the following algorithm, derived from Reference (d), was used to obtain axial strain for test control;

$$\epsilon_t = \frac{\epsilon_d}{\gamma_p} + \frac{\sigma}{E} \left[ 1 - \frac{\gamma_e}{\gamma_p} \right]$$

- where :
- $\epsilon_t$  = total axial strain
  - $\epsilon_d$  = diametral strain
  - $\gamma_p$  = plastic Poisson's ratio (0.5)
  - $\gamma_e$  = elastic Poisson's ratio (0.3)
  - $\sigma$  = engineering stress
  - $E$  = modulus of elasticity

**Incremental Step Test**

Sixteen (8 transverse and 8 longitudinal) specimens were tested in strain control, at room temperature, on an MTS 20 KIP closed loop servo-hydraulic test machine. A summary of the specimens tested is included in Table 1. The strain waveform consisted of a series of blocks of incrementally decreasing alternating strain with a short (approximately 2 seconds) "hold" at zero strain between blocks. Each block consisted of fifteen cycles of full strain

reversals beginning with the designated maximum (+) strain amplitude. Four different maximum strain amplitude conditions were used. They were 0.5%, 1.0%, 2.5% and 4.0%.

Two specimens from each material orientation (longitudinal and transverse) were tested at each strain amplitude condition. All incremental testing was performed at a strain rate of 0.1% strain per second. For all blocks, the initial load was in the tensile direction. Testing of each specimen continued until stabilization of stress levels occurred between successive blocks. Stabilization was judged to occur by observing the stress versus time plot for each specimen as testing progressed. The specimens were judged to have reached a stabilized condition when indiscernible changes (less than 2.0%) in stress patterns occurred over a significant number of blocks of data.

**TABLE 1 Incremental Step Test Specimens**

NUMBER OF SPECIMENS		MAX. STRAIN AMPLITUDE (%)
LONGITUDINAL	TRANSVERSE	
2	2	0.5
2	2	1.0
2	2	2.5
2	2	4.0

In several higher strain amplitude tests, testing continued until specimen failure. This occurred from fatigue crack initiation in the gage portion of the test specimen. As crack size increased, the force range decreased. When crack size became substantial, testing was terminated to prevent damage to the diametral extensometer.

**Companion Specimen Test**

The Companion Specimen Test was a low cycle fatigue test. Seventeen (9 transverse and 8 longitudinal) specimens were tested in strain control, at room temperature, on the MTS Test Star #2 closed loop servo-hydraulic test machine. A summary of the specimens tested is included in Table 2. Cyclic frequency was based on a strain rate of 0.5% strain per second for all specimens except for specimens L1 and T9. They were tested at a strain rate of 0.1% strain per second. Testing was performed with a 0% mean strain and at the same strain amplitudes as the maximum amplitude for the Incremental Step Tests (0.5%, 1.0%, 2.5% and 4.0%). The first quarter cycle of loading was in the tension (+) direction. A minimum of two specimens from each orientation (longitudinal and transverse) were tested at each of the strain amplitudes. Stabilization criteria was the same as that used for the Incremental Step Tests.

**TABLE 2 Companion Specimen Test Specimens**

NUMBER OF SPECIMENS		MAX. STRAIN AMPLITUDE (%)
LONGITUDINAL	TRANSVERSE	
2	2	0.5
2	3	1.0
2	2	2.5
2	2	4.0

MTS diametral extensometers were used to measure the change in diameter during all testing. For the Incremental Step Test, a Model No. 632.41B-04 was used with the 906.57 data acquisition system on the MTS 20 KIP test machine that was equipped with 448 electronics and a Nicolet storage oscilloscope. For the Companion Specimen Test, a Model No. 632.20B-20 with the 315.81B data acquisition system was used on the MTS Test Star #2 test machine.

Data acquisition for the Incremental Step Test included real time stress versus strain plots of selected blocks and stress/strain versus time for the test duration. The maximum and minimum stress and strain values at each reversal point were printed to hard copy and subsequently used to generate the cyclic stress-strain curves for the initial block and the stabilized block for each specimen. Stress, strain and time data points defining the hysteresis loops of selected blocks were captured on a storage oscilloscope and transferred to magnetic media.

Data acquisition for the Companion Specimen Test was per Reference (d). This included specimen and test parameters, and maximum and minimum values of stress and strain during the test and hysteresis plots of selected cycles. Three hundred data points per cycle for the values of strain, force and time were stored on magnetic media.

The diametral extensometer used for test control measured a change in specimen diameter in a single plane. There was concern that test results may have been influenced by the direction of this measurement with respect to the principal rolling direction of the plate. Therefore, one of the two specimens for each orientation and strain amplitude was tested with the diametral measurement in the same plane as the principal rolling direction, and the second specimen measurement was taken at 90 degrees from the first.

### RESULTS AND DISCUSSION

The Incremental Step Test data at the four maximum strain values are summarized in Table 3. The 0.2% offset yield stress value is listed for the monotonic and cyclic stress-strain curves. The monotonic values represent the initial specimen loading that corresponds to the yield stress value normally reported from a static stress-strain test. Stabilization was judged to occur at the block of data where no appreciable change was observed in the hysteresis behavior from that of the previous block. The yield stress value from the cyclic stress-strain curve is the offset value calculated from the cyclic curve obtained by connecting the tips of the hysteresis loops of the stabilized load block.

**TABLE 3 Incremental Step Test**

SPEC. ID	DIAM. (INCH)	MAXIMUM STRAIN AMPLITUDE (%)	0.2% YIELD STRESS (KSI)			CYCLIC BEHAVIOR
			MONOTONIC STRESS-STRAIN CURVE	STABILIZED BLOCK NO.	CYCLIC STRESS-STRAIN CURVE	
L8	.251	0.5	88.51	130	67.41	S
L9	.250	0.5	88.98	118	68.52	S
T4	.250	0.5	89.20	108	68.89	S
T8	.250	0.5	88.72	109	68.89	S
L2	.250	1.0	87.54	91	64.44	S
L11	.250	1.0	87.93	60	65.19	S
T10	.251	1.0	88.51	60	65.19	S
T12	.250	1.0	88.47	51	66.36	S
L3	.249	2.5	87.39	32	68.89	S-H
L4	.250	2.5	87.20	45	69.78	S
T3	.251	2.5	89.04	24	67.78	S
T5	.252	2.5	88.43	25	68.44	S-H
L6	.250	4.0	87.19	11	72.89	S-H
L7	.251	4.0	86.86	8	72.44	S-H
T7	.250	4.0	89.11	10	72.00	S-H
T12A	.251	4.0	88.16	14	71.56	S-H

KEY      S - MATERIAL CYCLICALLY SOFTENS  
          S-H - MATERIAL CYCLICALLY SOFTENS THEN HARDENS

The cyclic behavior observed in the Incremental Step Test can be illustrated by considering the plots included in Appendix 2. The cyclic stress-strain curve, compiled from all test data, is included as Figure A2-1. Figure A2-2(a) shows a plot of the superimposed hysteresis loops for Block 1 of specimen L9, that was cyclically loaded to a maximum strain value of 0.5%. As seen in this plot, the initial strain cycle, from which the monotonic value is



taken, is evident as the curve that attains the maximum, positive value. Figure A2-2(b) is the superimposed hysteresis plot for the stabilized condition, Block 118, of the same specimen. The curves are fairly symmetric about the axes and material softening is evident by comparing the maximum stress values attained for the two blocks (-89.13 KSI for Block 1 vs. -74.77 KSI for Block 118).

The other plots included in Appendix 2 for the Incremental Step Test were those from specimens L2, L3, and L7. These specimens were subjected to maximum strain values of 1.0%, 2.5%, and 4.0%, respectively. A similar pattern of behavior is observed from the review of Figures A2-3 through A2-5. Cyclic stress-strain curves from the initial and stabilized blocks for these four specimens are included as Figures A2-6 through A2-9.

These curves are representative of all Incremental Step Test specimens. Comparisons of the initial versus the stabilized block cyclic stress-strain curves for the four levels of maximum strain are shown in Figures A2-6 through A2-9. Cyclic softening of the material is demonstrated by the difference between the initial and stabilized cyclic stress-strain curves. The softening behavior appears more pronounced for the specimens subjected to lower values of maximum strain (0.5% and 1.0%, Figures A2-6 and A2-7). These specimens require a large number of cycles to reach a stabilized state. Specimens subjected to the higher levels of strain (2.5% and 4.0%, Figures A2-8 and A2-9) require fewer cycles to reach stabilization and failure. The amount of cyclic softening that occurs appears to be proportional to the number of strain cycles required for stabilization which, in turn, is a function of the maximum strain amplitude. The lower number of load blocks required to reach stabilization and failure for the higher strain levels is not sufficient to develop the dramatic cyclic softening behavior observed for the lower strained specimens. However, softening does occur since the data points for the stabilized curve are slightly lower in magnitude than the initial curve. Therefore, the higher the maximum strain amplitude for the initial cycle of the loading block, the less pronounced the softening response. The softening then hardening-prior-to-failure phenomena is best illustrated using the stress versus number of cycles plots from the Companion Specimen Test.

For the specimens tested at the higher strain levels (2.5% and 4.0%), stress at the maximum tensile strain is not the maximum stress value for the loading block (Figures A2-8 and A2-9). The initial cycle of each load block subjects the specimen to the maximum tensile strain for that test. The strain amplitude of subsequent cycles decreases linearly to zero. Due to the higher levels of inelastic straining, a small amount of additional strain hardening occurs during the initial cycle of each load block. This additional strain hardening causes the stress level of the second tensile peak to be higher than the first, even for a slightly lower strain level. This hardening phenomenon appears to mitigate for subsequent cycles and stress levels continuously decrease along with strain levels. This effect is not seen for compressive strain since the majority of the hardening occurs during initial tensile loading.

The Companion Specimen Test data is summarized in Table 4. Stress at both the maximum tensile (+) and compressive (-) strain values during the loading history of each specimen is listed for the stabilized loop (cycle). As can be seen, stabilization occurred at a different number of loading cycles, depending on the strain amplitude, for each test specimen. The cycles to specimen failure also reflect the dependence on the strain amplitude. Stabilization and failure of the specimen occurred at significantly fewer cycles in those specimens subjected to the higher strain amplitudes (2.5% and 4.0%). Failure was judged to occur at the loading cycle where the specimen experienced a 90% or greater decrease in peak tensile stress, when compared to a stabilized, steady state cycle.

Each Companion Specimen Test yields two data points for the maximum tensile and compressive stress values at the maximum strain amplitude for each test specimen at stabilization. A hysteresis plot for the initial and stabilized cycle of loading for Specimen L6 is included in Figure A2-10. This specimen was subjected to a constant strain amplitude of +/- 0.5%. As in the incremental step test, a similar monotonic curve results from the initial load cycle. Unlike the incremental step test, the strain magnitude was maintained constant for as many cycles as required until failure. Data points for the cyclic stress-strain curve are determined by the stress values located at the tips of the hysteresis loop for the stabilized condition. Data plots for other specimens are also included in Appendix 2. These specimens were subjected to constant strain amplitudes of +/- 1.0%, 2.5%, and 4.0%.

As in the Incremental Step Test, the 0.5% and 1.0% specimens from this test showed significant softening when comparing the initial load cycle to a stabilized cycle (Figures A2-10 and A2-11). For the specimens tested at the higher strain amplitudes (2.5% and 4.0%), softening is less pronounced (Figures A2-12 and A2-13).

Plots of maximum tensile and compressive stress versus number of loading cycles are included in Figures A2-14 to A2-17. For these plots it is evident that maximum strain amplitude and cycles to stabilization and failure are inversely proportional, that is, the lower the strain amplitude, the greater the number of cycles to stabilization and failure. It can be seen from Figures A2-14 and A2-15, and Table 4, that there is almost an order of magnitude difference in the number of cycles to stabilization and failure between the 0.5% and 1.0% specimens. At both of these lower strain levels (0.5% and 1.0%), softening is evidenced by the gradual decrease in maximum stress values as the number of cycles approach stabilization (Figures A2-14 and A2-15).

For the higher strained specimens (2.5% and 4.0%), an initial strain hardening occurs between the first and second load cycles, similar to that in the Incremental Step Test. After this phenomena is observed for specimen

T(2)4, that was subjected to a 4.0% strain amplitude, the softening then hardening behavior is less evident, probably due to the fewer number of cycles to failure.

**TABLE 4 Companion Specimen Test**

SPEC. ID	DIAM. (INCH)	STRAIN AMPLITUDE (%)	STABILIZED HYSTERESIS LOOP			CYCLES TO FAILURE*
			LOOP NO.	STRESS AT MAX STRAIN (KSI)	STRESS AT MIN STRAIN (KSI)	
L6	.251	0.5	5000	67.5	-68.9	8036
T9	.250	0.5	5000	68.4	-70.7	7640
L1	.250	0.5	5000	68.1	-70.3	7586
T(2)8	.249	0.5	4000	68.1	-70.0	6267
L5	.251	1.0	500	77.7	-80.0	1322
T(2)14	.250	1.0	600	79.0	-81.1	1613
L3	.250	1.0	800	78.6	-81.7	1496
T(2)16	.251	1.0	500	78.7	-82.1	981
T(2)6	.251	1.0	500	77.4	-79.9	1055
L(2)5	.251	2.5	90	89.9	-95.5	175
T(2)13	.251	2.5	90	89.6	-95.6	173
L(2)2	.251	2.5	90	90.9	-97.1	172
T(2)17	.250	2.5	110	90.7	-95.8	213
L(2)7	.250	4.0	28	96.0	-105.2	56
T(2)4	.250	4.0	40	98.5	-107.2	84
L(2)3	.250	4.0	40	100.1	-110.4	82
T(2)9	.250	4.0	50	98.7	-108.8	81

STRAIN AMPLITUDE (%)	STRAIN RATE (% / SEC)	FREQUENCY (HZ)	
0.5	0.5	0.250	L6 & T(2)8
0.5	0.1	0.050	T9 & L1
1.0	0.5	0.125	
2.5	0.5	0.050	
4.0	0.5	0.031	


\* CYCLES TO FAILURE - CYCLE IN WHICH 90% OR GREATER DECREASE IN PEAK TENSILE STRESS, FROM A STEADY STATE CYCLE, IS DETECTED.

**CONCLUSIONS**

The cyclic stress-strain curve is determined by connecting the tips of the stabilized block hysteresis loops for the Incremental Step Test specimens. A composite fit from the data of all tested specimens (Incremental Step and Companion Specimen Tests) results in the overall cyclic stress-strain curve for HY-80 for a maximum strain value of 4.0%, which is included as Figure 2. A single curve was fit to the test data with a variable-knot B-spline algorithm using a least-squares approach to minimize error. This resulting curve may be used for elastic-plastic analysis of HY-80 structures for stabilized strain. In addition, the results of this test program show that the maximum tensile and compressive stress-strain coordinates of the stable Companion Specimen Test hysteresis loops are reasonably coincident with the cyclic stress-strain curve data derived from the Incremental Step Test.

Stress and strain response from the first several cycles of the Companion Specimen Test and the first block of loading from the Incremental Step Test provide insight into the initial cycle hardening/softening characteristics of HY-80 steel when subjected to inelastic strain histories typical of dynamic loads. In addition, this data, obtained using very controlled and repeatable testing methods, can be used as a uniaxial verification of material model enhancements made in the finite element codes used to perform nonlinear elastic-plastic analysis.

The cyclic test results show a high degree of consistency and repeatability. There appears to be no significant effect on test results due to specimen strain measurement direction with respect to material rolling direction or strain rate. Test results indicate no significant differences between transverse and longitudinal specimens for similar test conditions. Additionally, Incremental Step Test specimens loaded to different maximum strain amplitudes produce reasonably coincident cyclic stress-strain curves up to their respective strain limits.

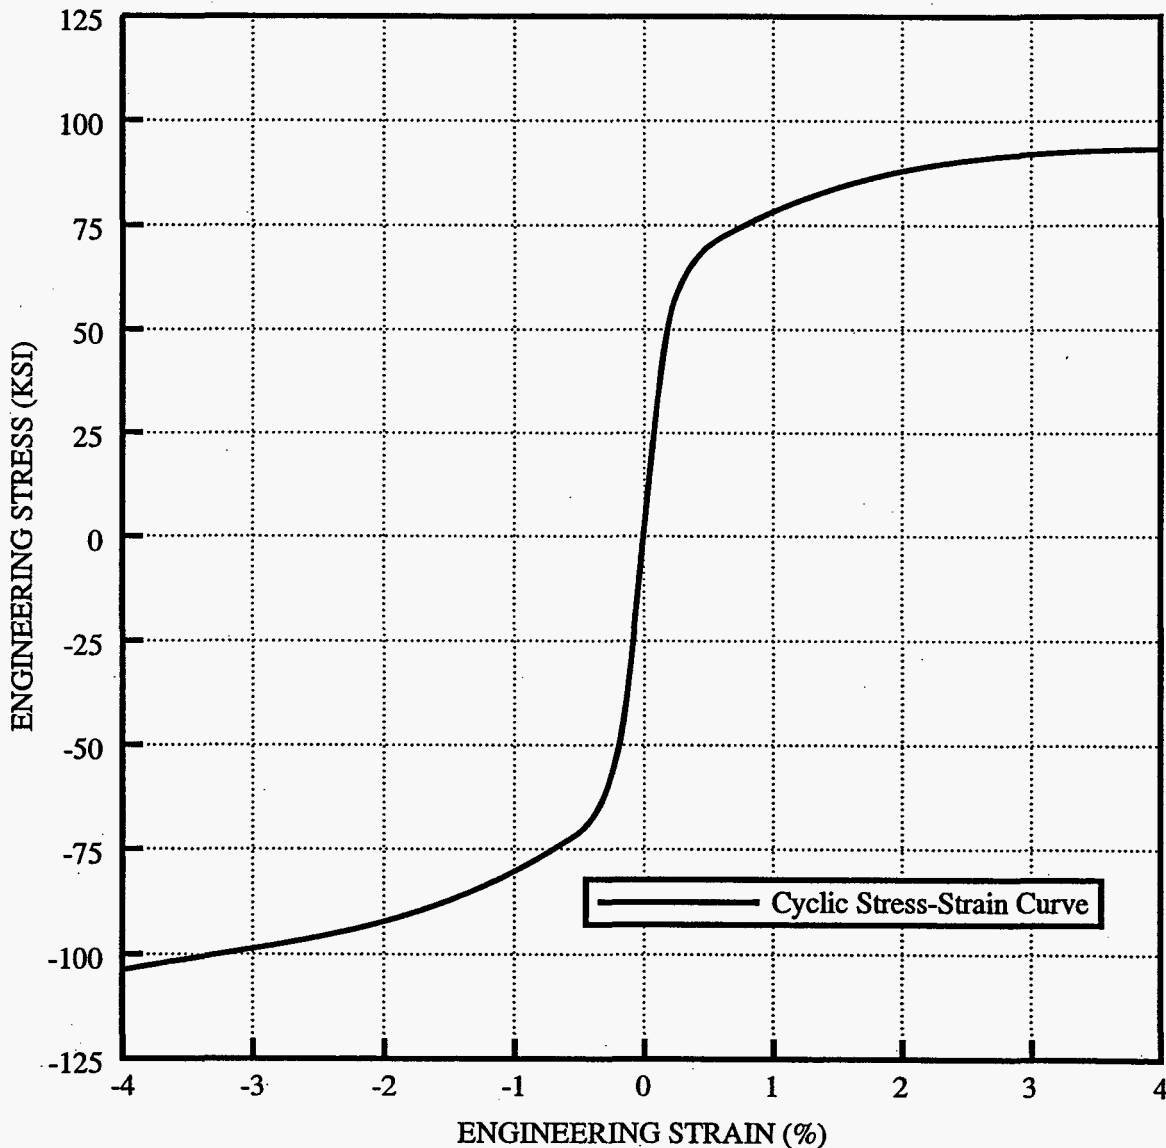

**FIGURE 2** Composite Cyclic Engineering Stress-Engineering Strain Curve for HY-80  
Based on Test Data


The general trend of HY-80 material is to cyclically soften. This behavior is apparent in the cyclic test results and the comparison of hysteresis data for the initial, intermediate, and stabilized blocks of data from the Incremental Step Test. It is also confirmed in the Companion Specimen Test plots of stress versus the number of cycles where stress values decrease as the specimen reaches a state of stabilized stress. The higher strain tests show some work hardening after an initial softening period. This is shown by the increased maximum/minimum stress values for some specimens after stabilization has been attained. The plots of stress versus number of cycles for the Companion Specimen Test may also suggest this behavior with a slight upturn in maximum stress just prior to failure for some specimens.

To accurately model elastic-plastic behavior of initially unstrained structures, including inelastic strain reversals, the initial plastic behavior typified by the monotonic stress-strain curve should be included in the material model as well as a method to account for the difference in the cyclic strain history of the first several inelastic strain reversals. The results from this test program can be used to develop and verify such a material model for use in elastic-plastic finite element analysis.

## REFERENCES

- (a) "Simple Structures Test and Correlation for Elastic-Plastic Dynamic Analysis Validation," Trimble, T. F., Krech, G. R., PVP-Vol. 343, Development, Validation, and Application of Inelastic Methods for Structural Analysis and Design, ASME 1996
- (b) "Determination of the Cyclic Stress-Strain Curve," Journal of Materials, JMLSA, Landgraf, R. W., Morrow, J., and Endo, T., Vol. 4, No. 1, March 1969, pp. 176-188
- (c) "Elastic-Plastic Strain Acceptance Criteria for Structures Subject to Rapidly Applied Transient Dynamic Loading," Solonick, William R.; PVP-Vol. 343, Development, Validation, and Application of Inelastic Methods for Structural Analysis and Design, ASME 1996
- (d) ASTM E606-92, Standard Practice for Strain-Controlled Fatigue Testing, Annual Book of ASTM Standards, Volume 03.01, 1995 edition

**APPENDIX 1 - TEST SPECIMEN DRAWING**

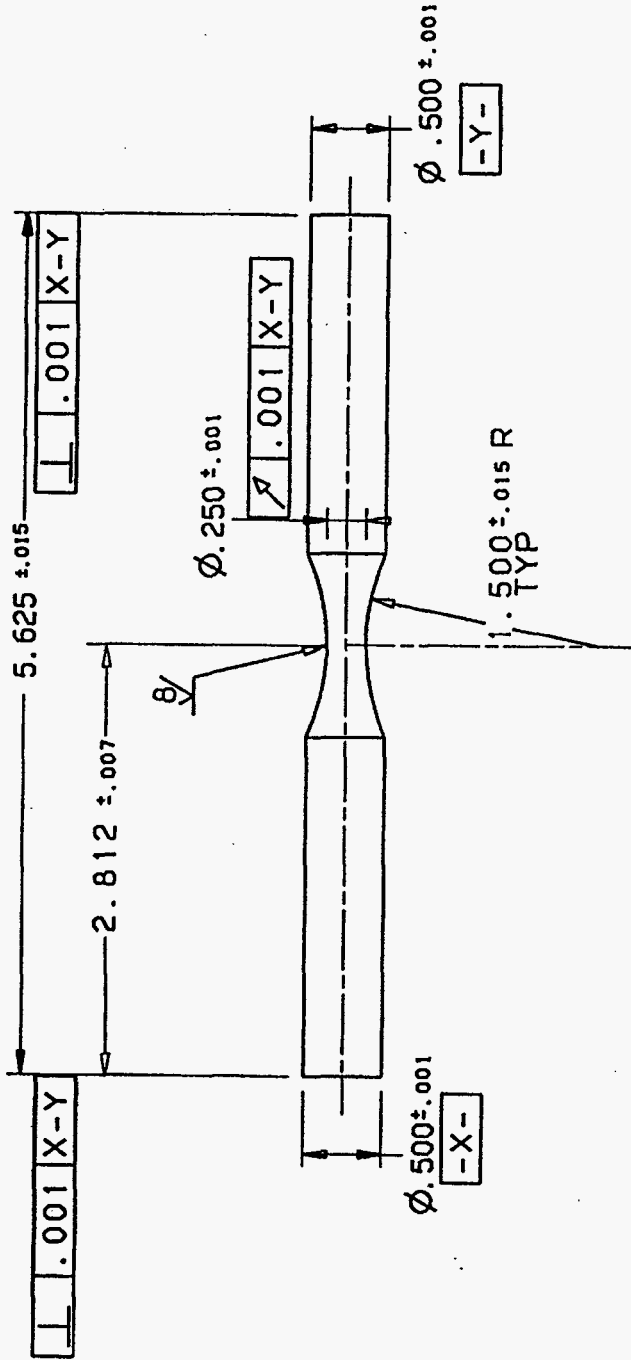

FULL - SIZE CYCLE SPECIMEN

- NOTES: 1- MATERIAL HY80 AS FURNISHED.  
 2- 32 VALL OVER, EXCEPT AS SHOWN AND NOT REQUIRED ON ENDS OF SPECIMEN.  
 3- FINISHING MARKS TO BE IN THE AXIAL DIRECTION. COMPLETELY REMOVE TRANSVERSE MARKS. CONTOURED CENTER PORTION ONLY.  
 4- MACHINING METHODS TO BE USED THAT LEAVE A MINIMUM OF RESIDUAL STRESSES.  
 5- CENTERS IN ENDS OF SPECIMEN PERMISSIBLE.  
 6- IDENTIFICATION MARKING SHALL BE END STAMPED BY EBDIV AND INDICATE ROLLING DIRECTION: "L" FOR LONGITUDINAL OR "T" FOR TRANSVERSE.

**APPENDIX 2 - SELECTED TEST CURVES**

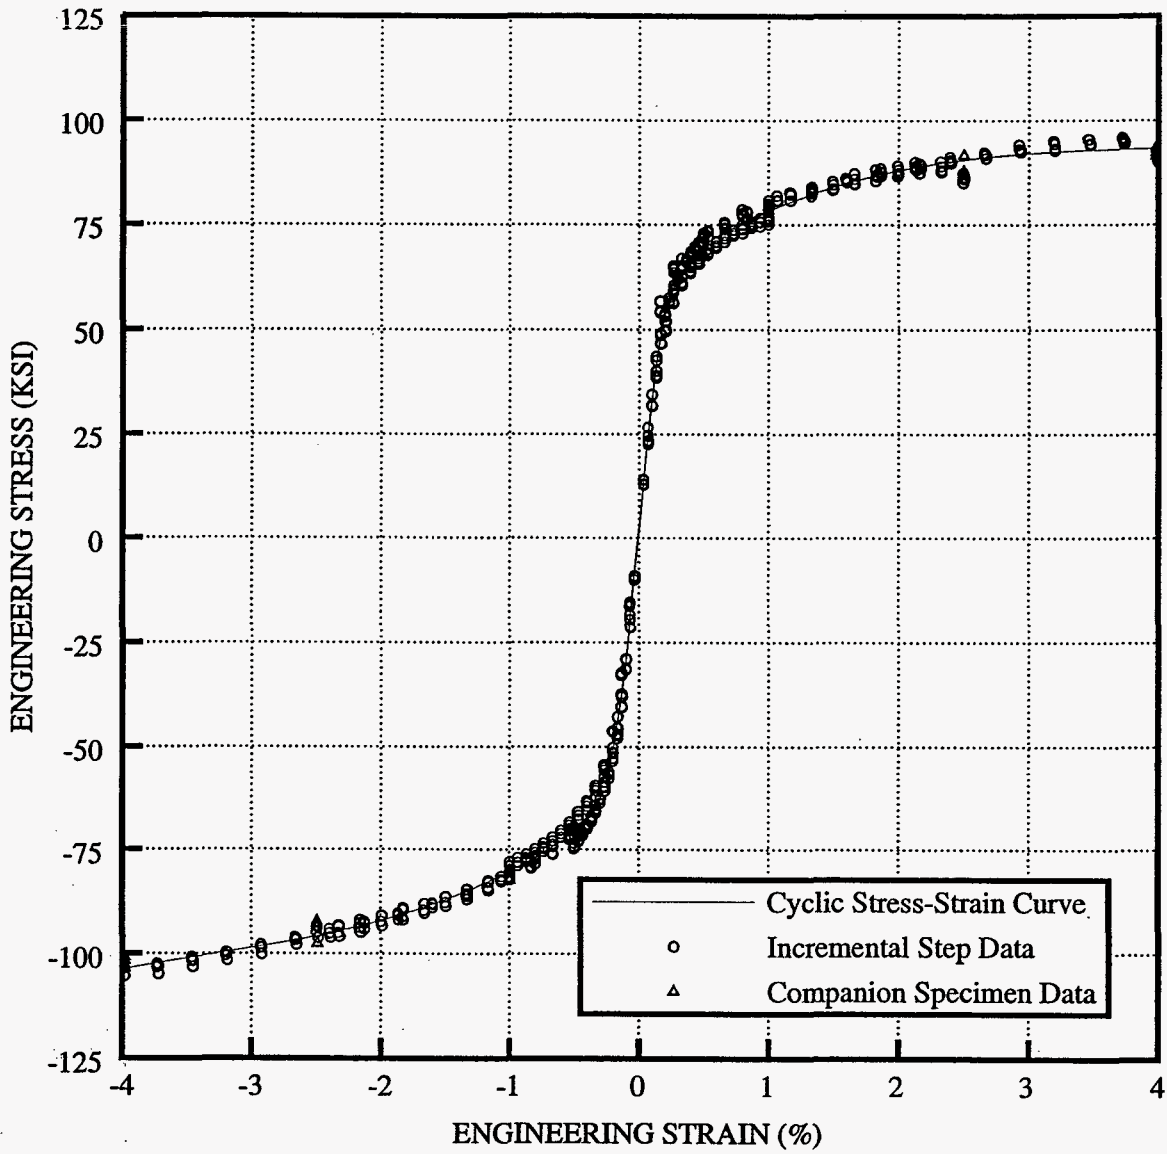


Figure A2-1. Composite Cyclic Engineering Stress-Engineering Strain Curve "Fitted" to Cyclic Test Data



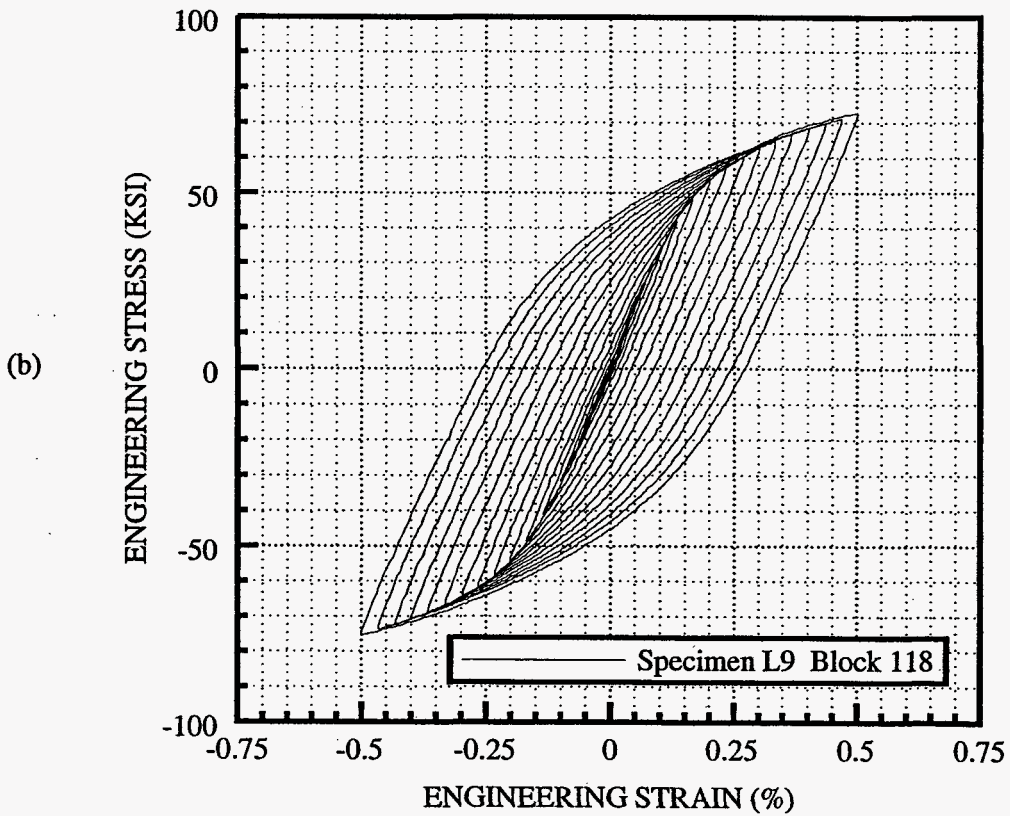
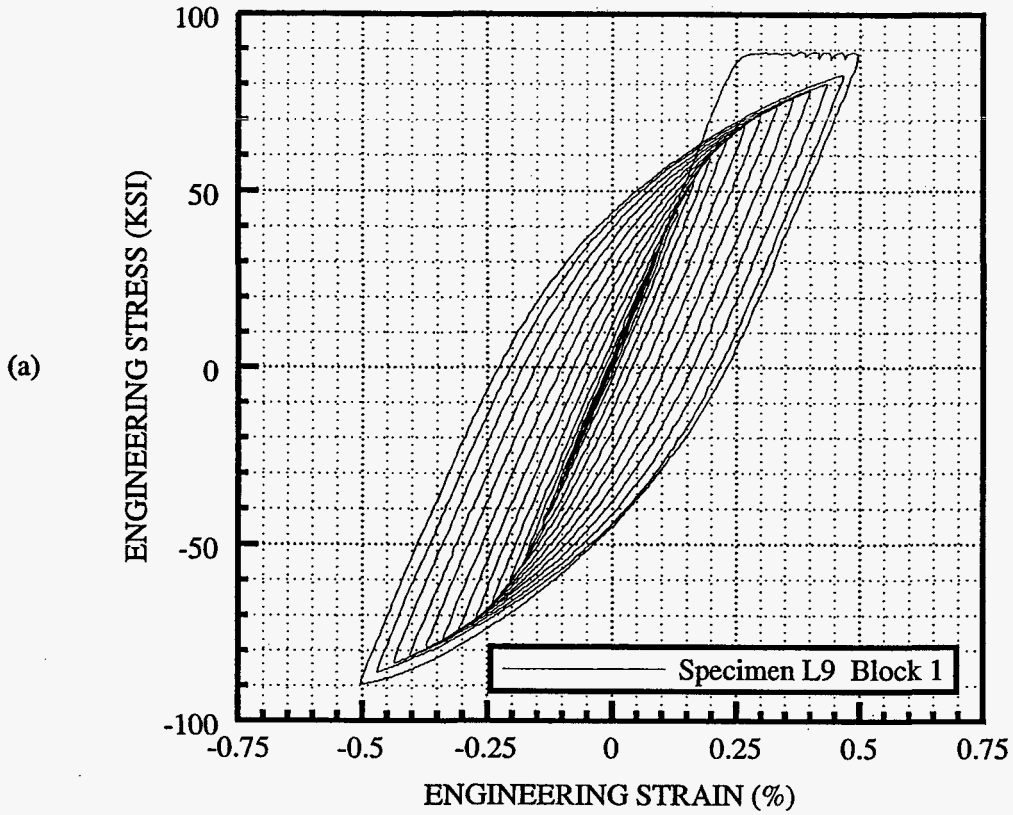


Figure A2-2. Cyclic Stress-Strain Hysteresis Loops for Incremental Test Specimen L9 from the (a) Initial Load Block and (b) Stabilized Load Block

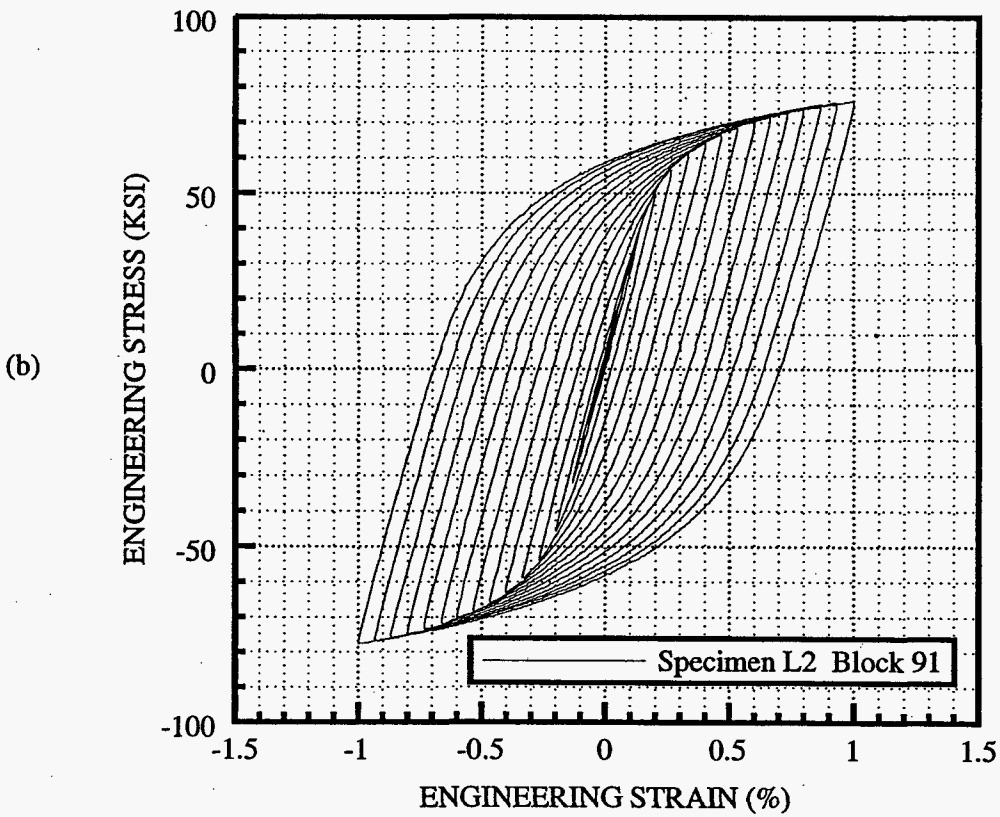
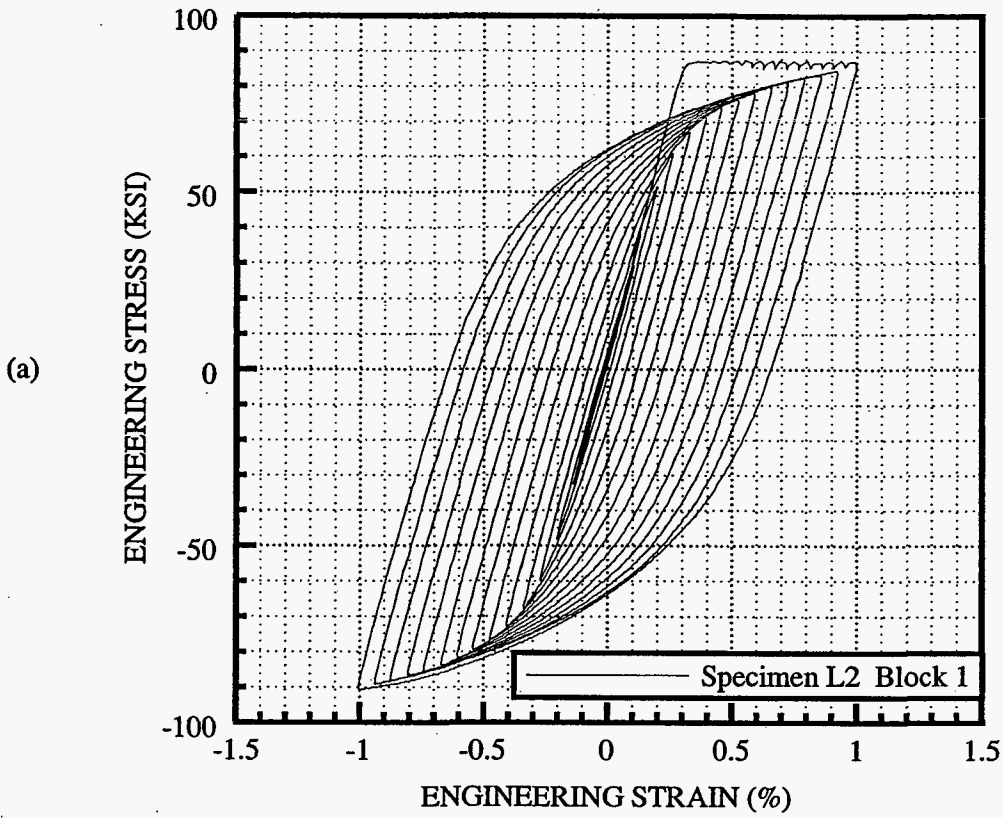


Figure A2-3. Cyclic Stress-Strain Hysteresis Loops for Incremental Test Specimen L2 from the (a) Initial Load Block and (b) Stabilized Load Block

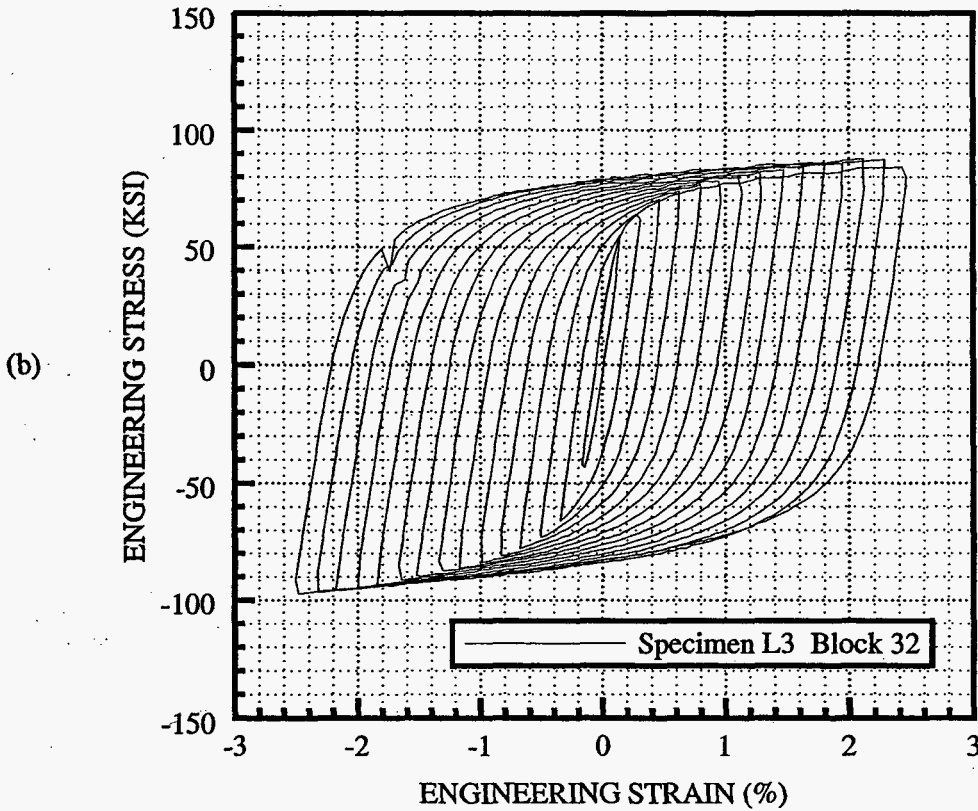
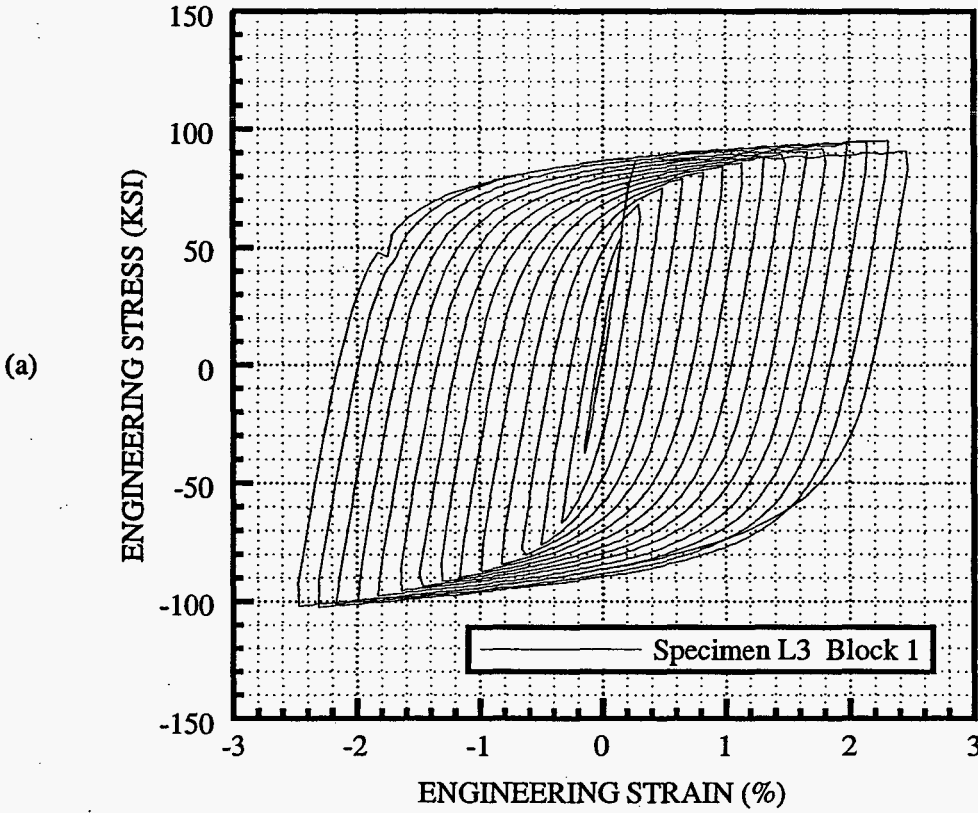


Figure A2-4. Cyclic Stress-Strain Hysteresis Loops for Incremental Test Specimen L3 from the (a) Initial Load Block and (b) Stabilized Load Block

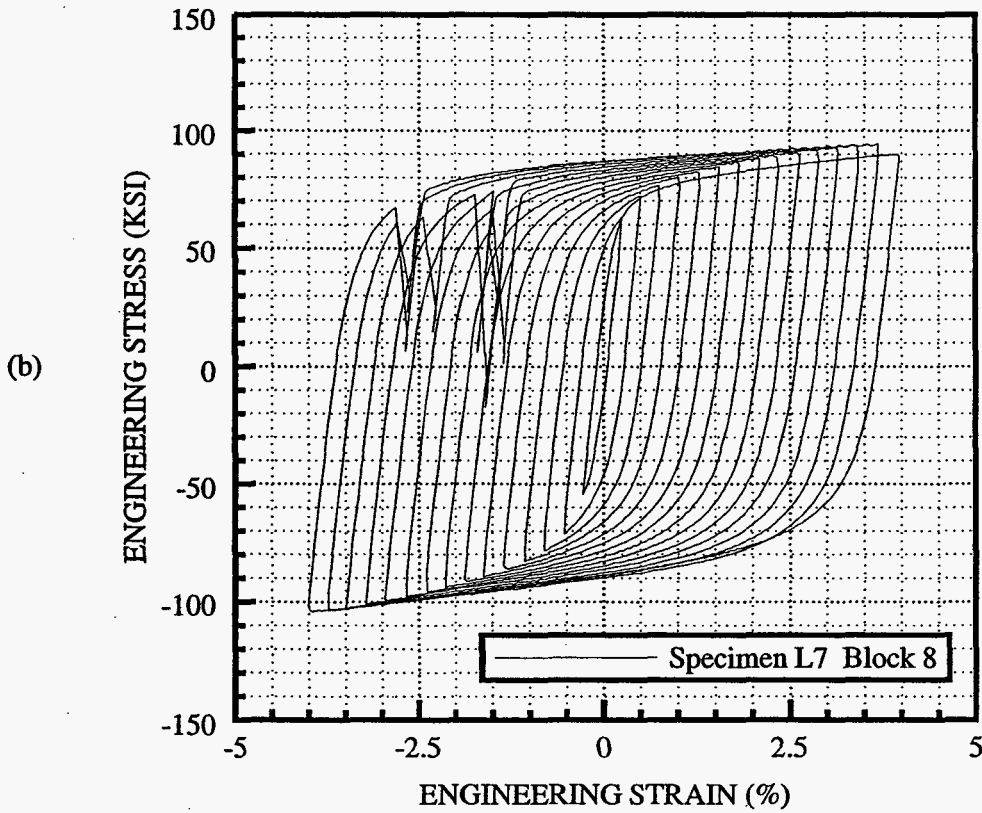
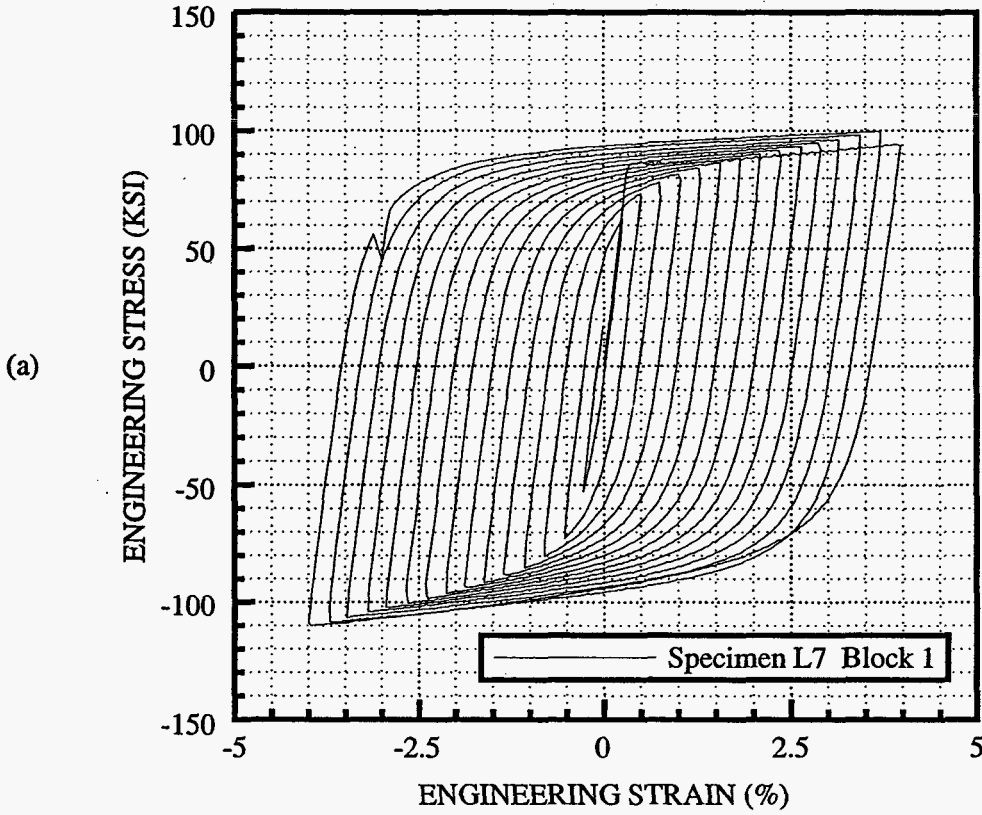


Figure A2-5. Cyclic Stress-Strain Hysteresis Loops for Incremental Test Specimen L7 from the (a) Initial Load Block and (b) Stabilized Load Block

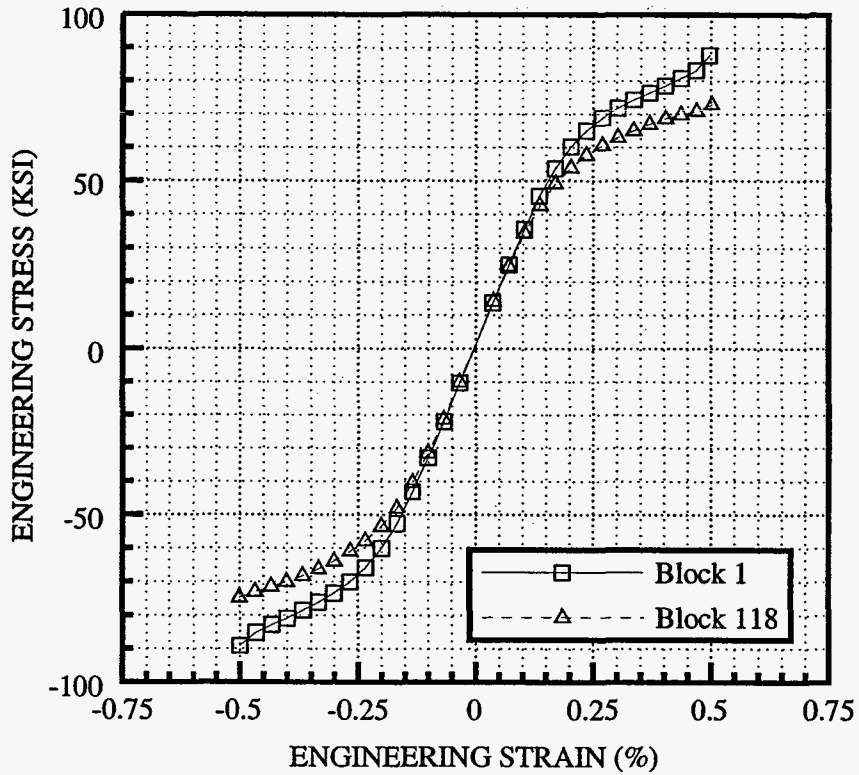


Figure A2-6. Specimen L9 Cyclic Stress-Strain Curves from Initial and Stabilized Load Blocks

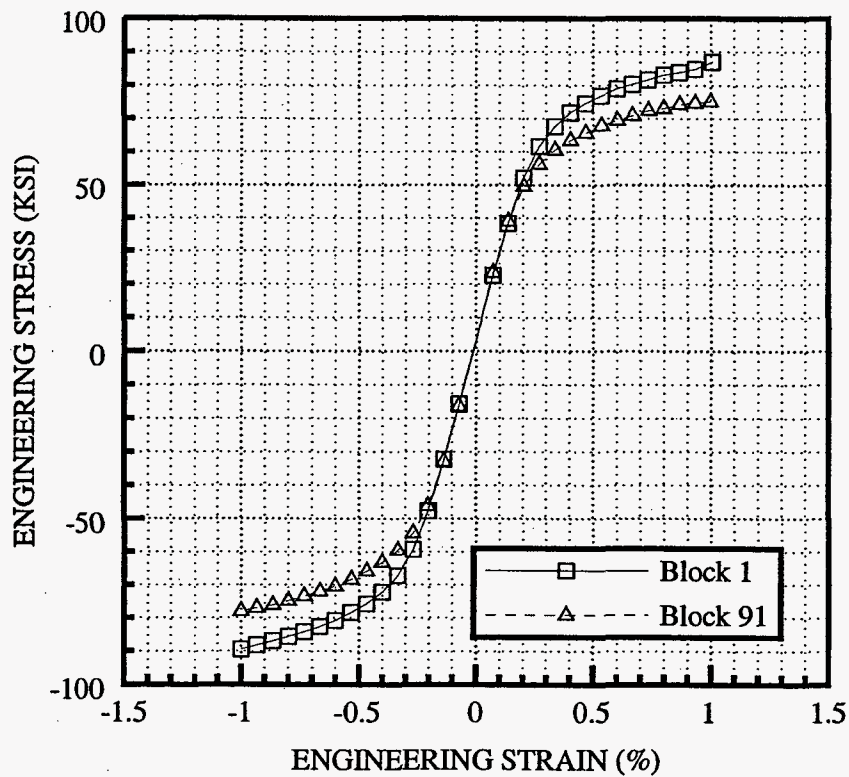


Figure A2-7. Specimen L2 Cyclic Stress-Strain Curves from Initial and Stabilized Load Blocks

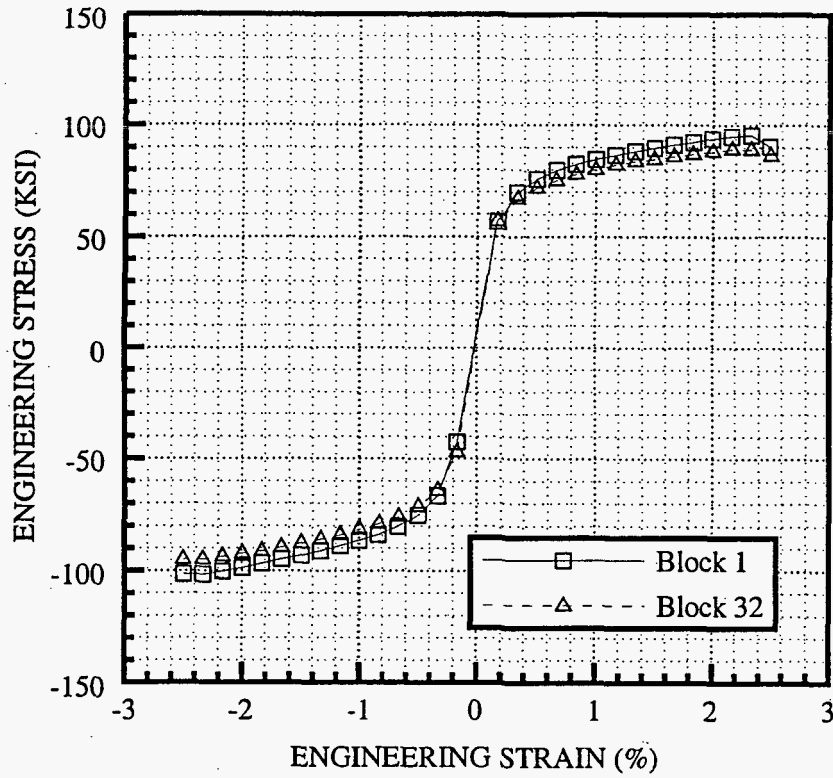


Figure A2-8. Specimen L3 Cyclic Stress-Strain Curves from Initial and Stabilized Load Blocks

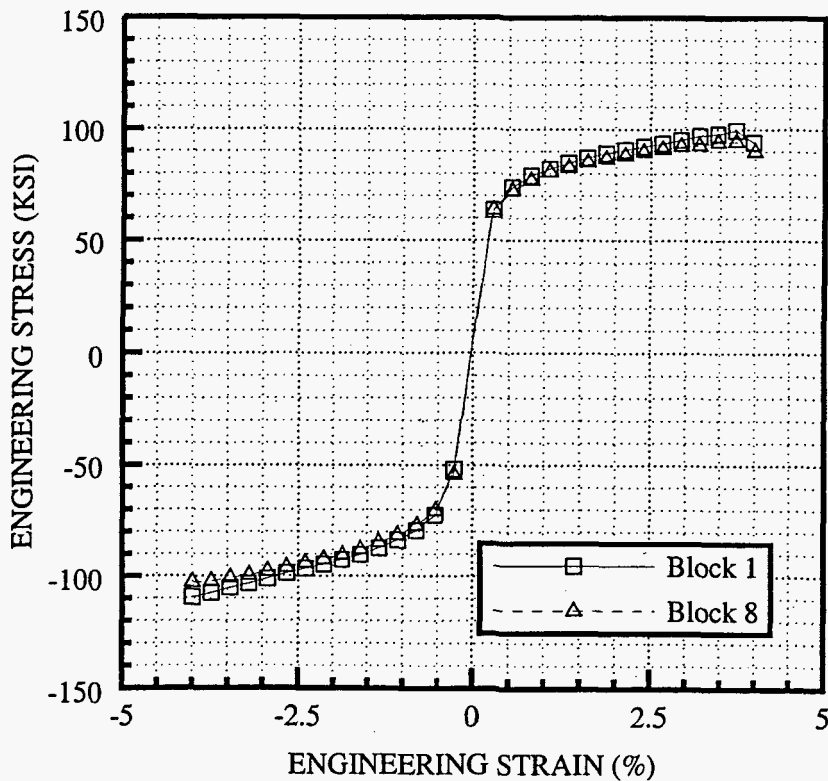


Figure A2-9. Specimen L7 Cyclic Stress-Strain Curves from Initial and Stabilized Load Blocks

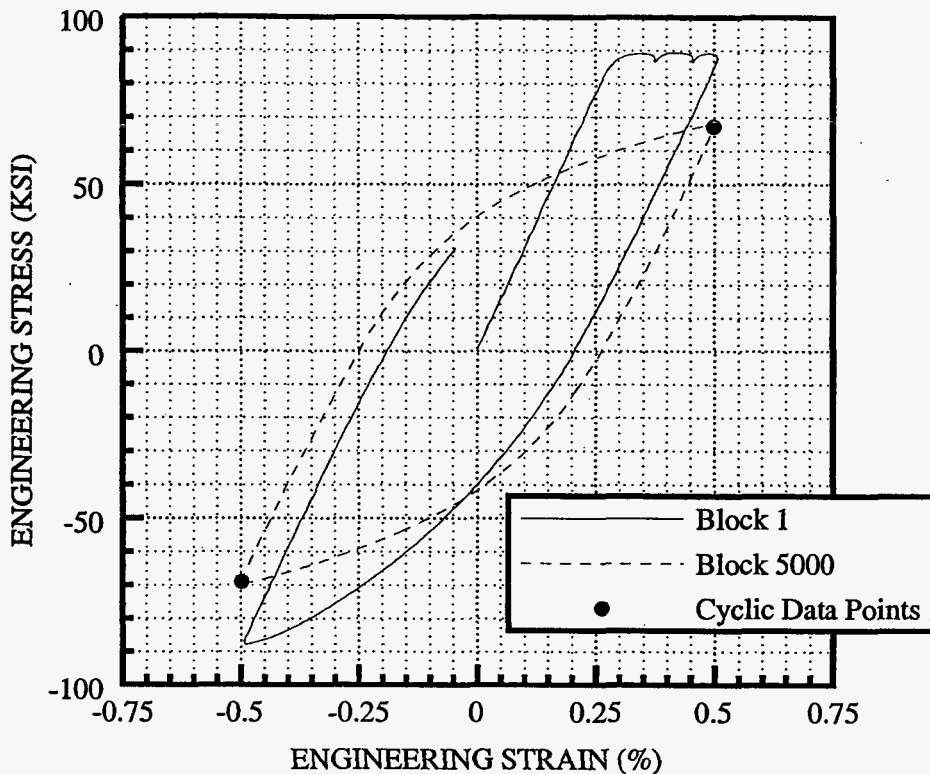


Figure A2-10. Initial and Stabilized Stress-Strain Hysteresis Loops for Companion Test Specimen L6

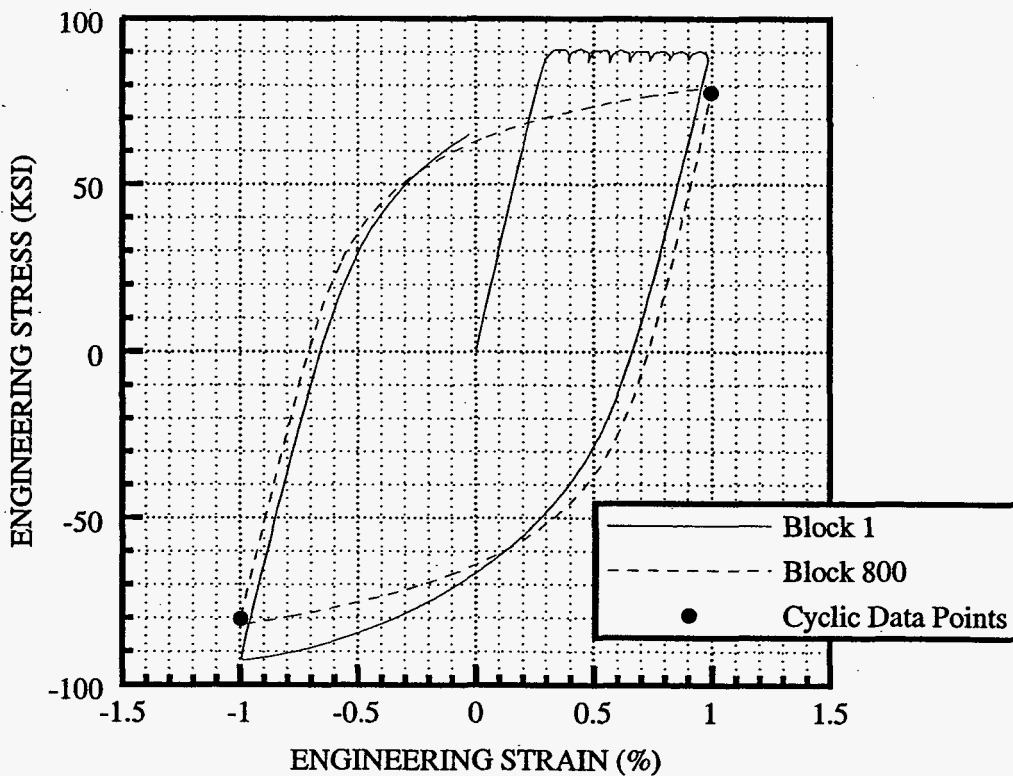


Figure A2-11. Initial and Stabilized Stress-Strain Hysteresis Loops for Companion Test Specimen L3

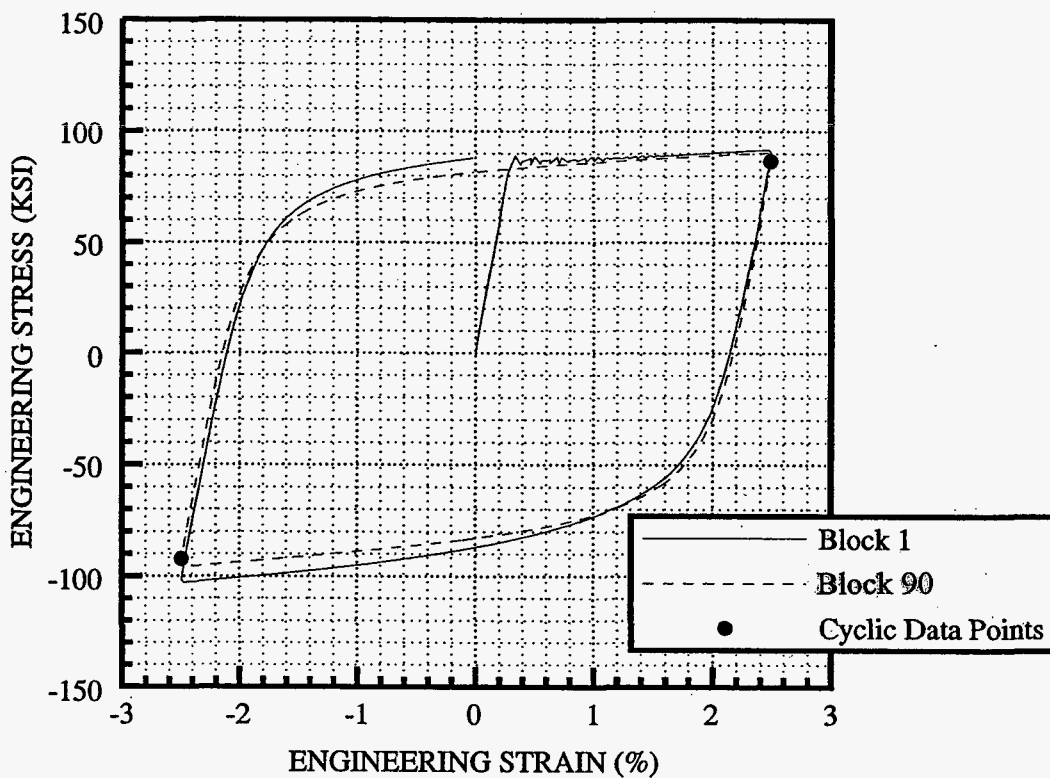


Figure A2-12. Initial and Stabilized Stress-Strain Hysteresis Loops for Companion Test Specimen L(2)5



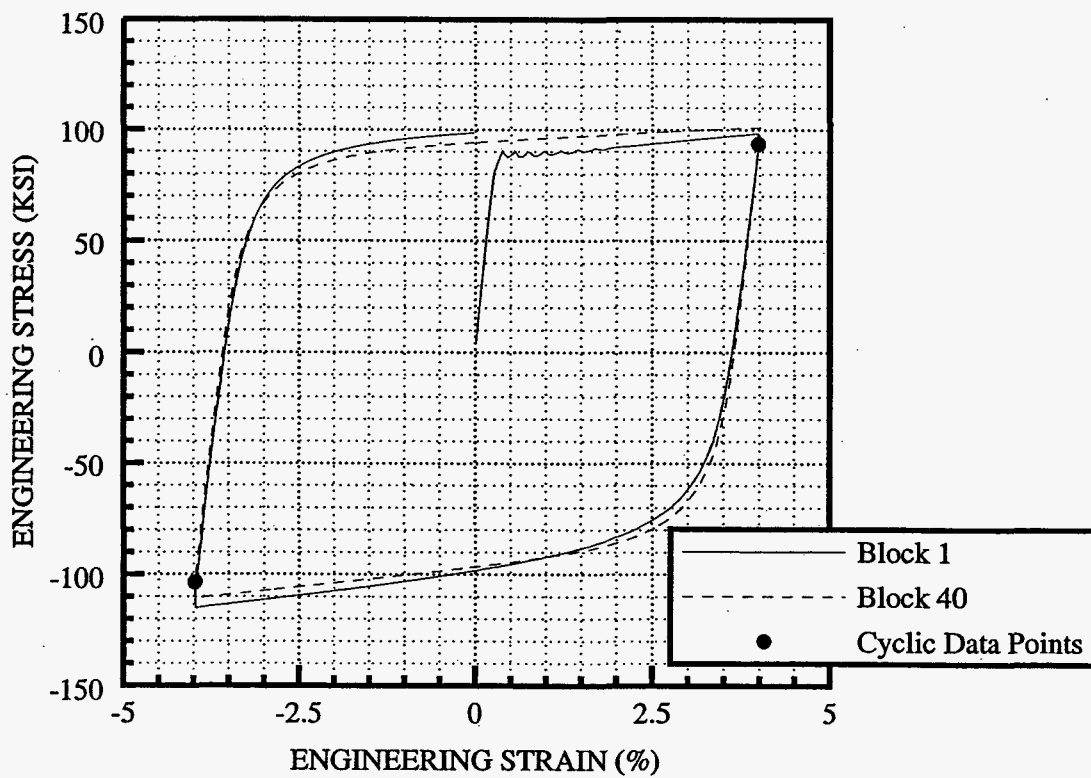


Figure A2-13. Initial and Stabilized Stress-Strain Hysteresis Loops for Companion Test Specimen L(2)3




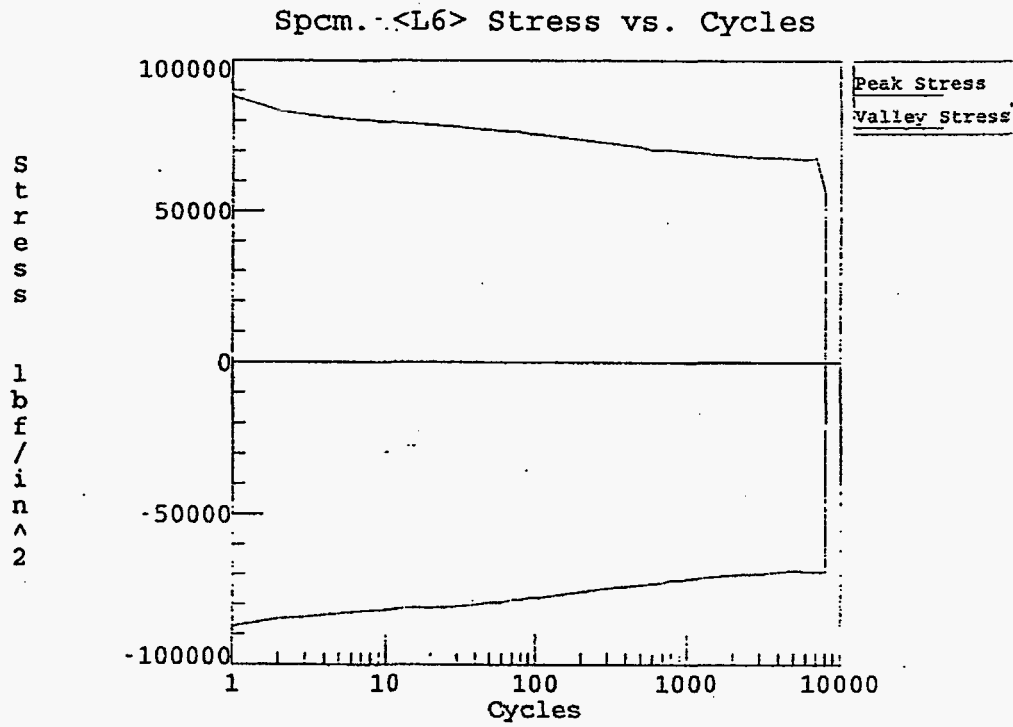


**FIGURE A2-14** Stress vs. Cycles-to-Failure  
Companion Specimen Test, Specimen L6, 0.5% Strain Amplitude

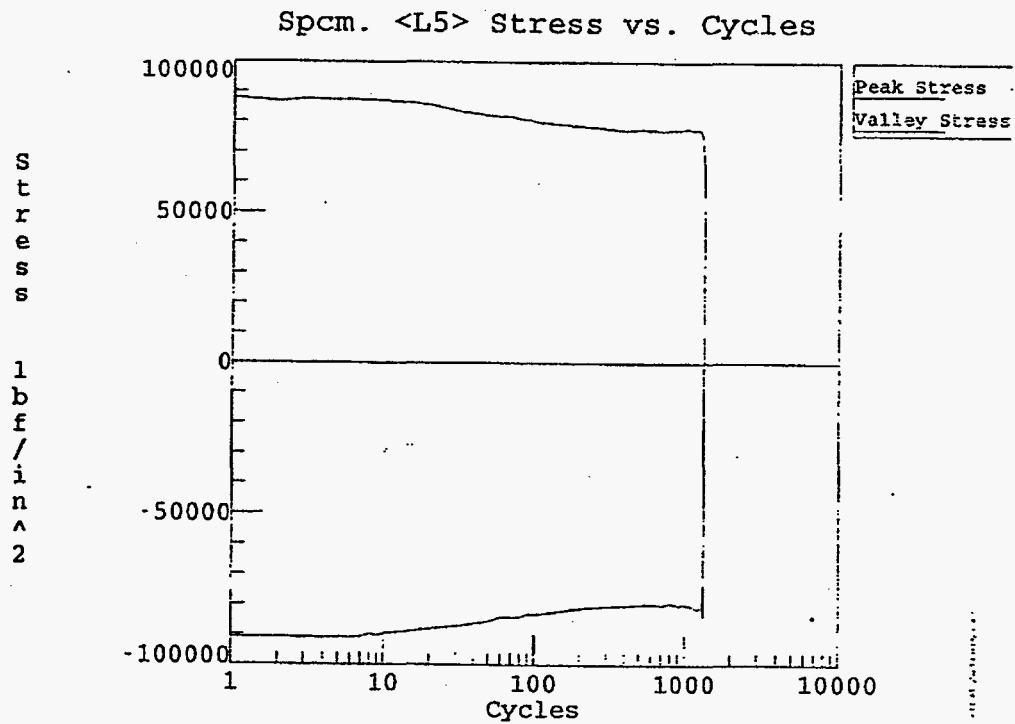

**FIGURE A2-15** Stress vs. Cycles-to-Failure  
Companion Specimen Test, Specimen L5, 1.0% Strain Amplitude

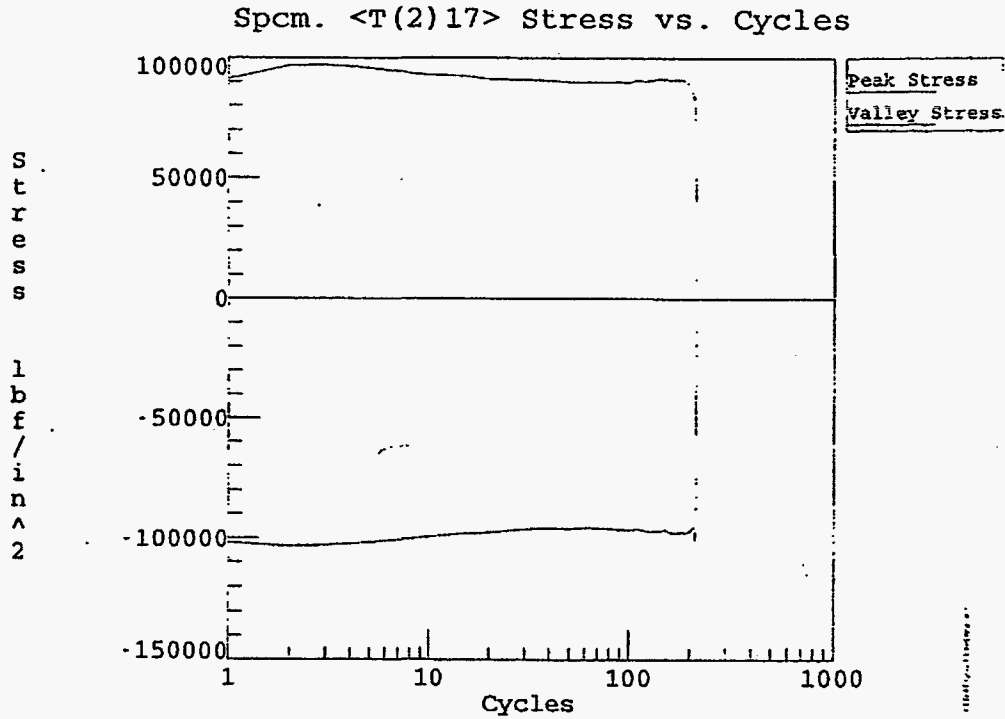


**FIGURE A2-16** Stress vs. Cycles-to-Failure  
Companion Specimen Test, Specimen T(2)17, 2.5% Strain Amplitude

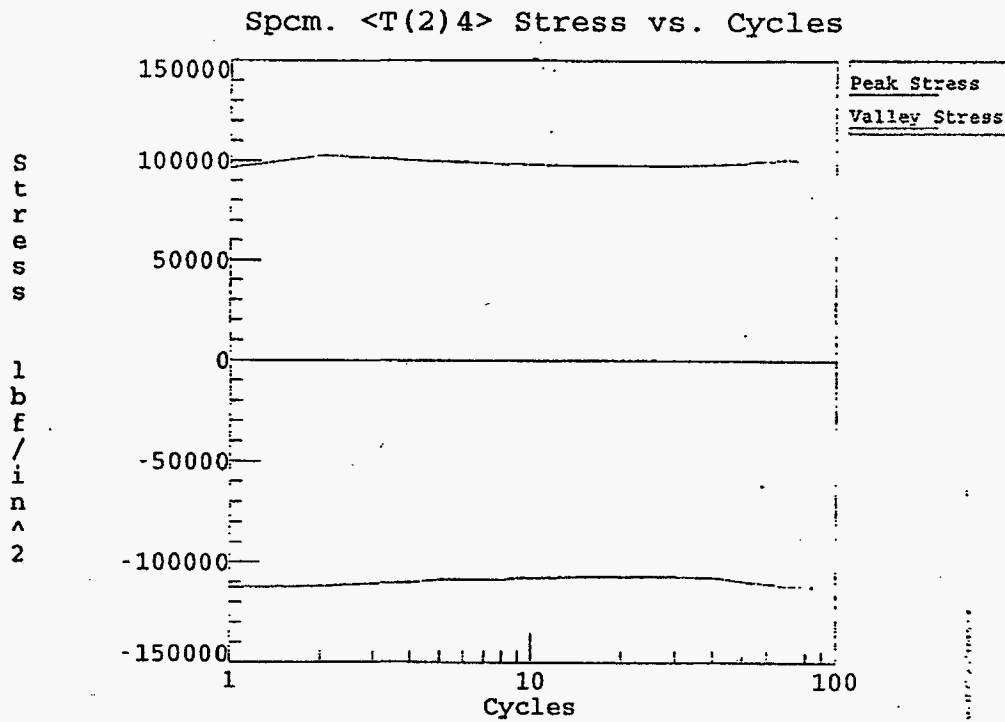


**FIGURE A2-17** Stress vs. Cycles-to-Failure  
Companion Specimen Test, Specimen T(2)4, 4.0% Strain Amplitude

**APPENDIX 3 - TEST PHOTOGRAPHS**

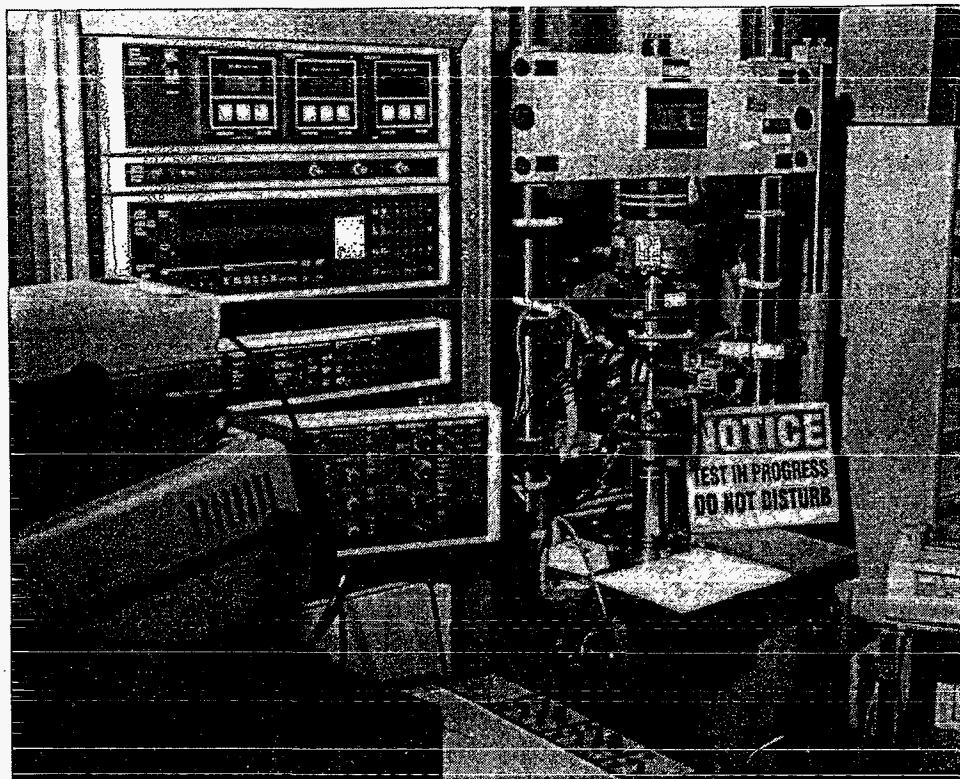

TEST SETUP SHOWING APPARATUS AND DATA ACQUISITION SYSTEM

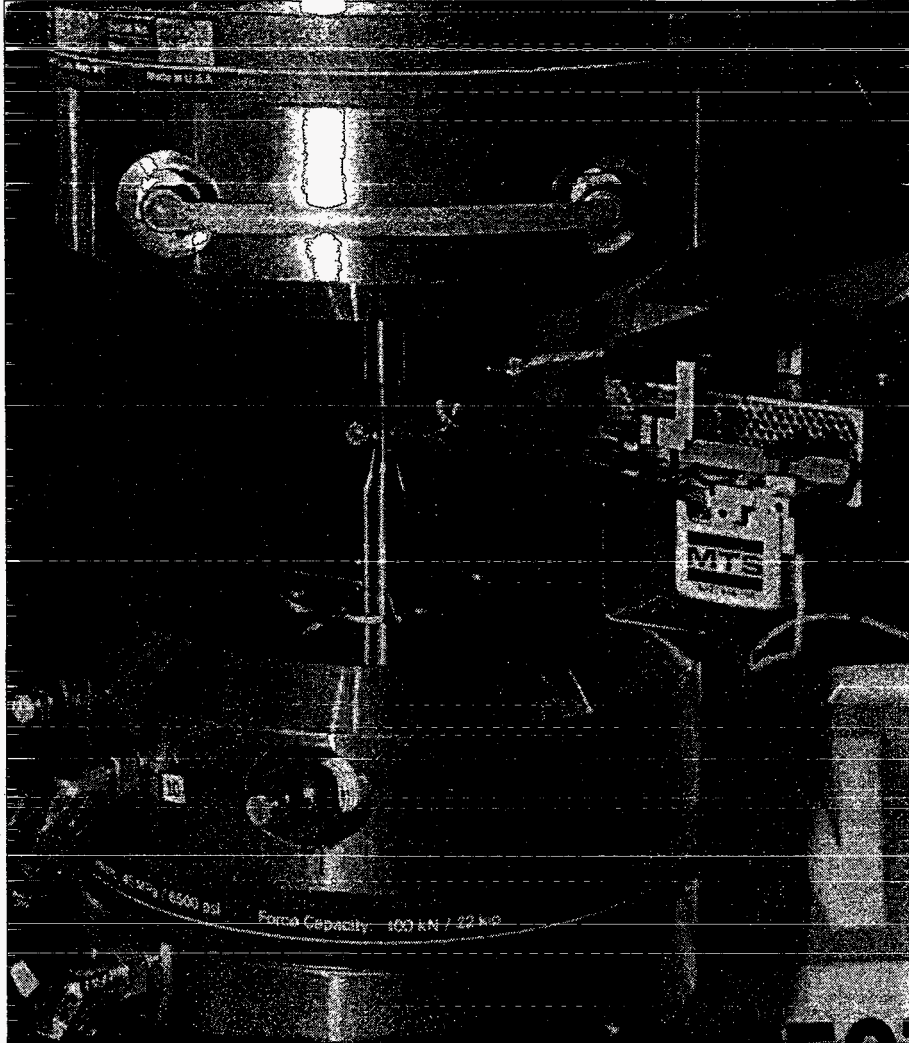

VIEW OF TEST HEAD SETUP WITH MOUNTED SPECIMEN