Solutions that make the Nation's energy systems safe, efficient

Albany Research Ce

Design, Construction and Operation of High Pressure Flow Loop Reactor for Carbon Sequestration

S. J. Gerdemann L. R. Penner

AIChE Annual Meeting November 16-21 San Francisco



Carbonation Reactions

 $Mg_2SiO_4 + 2CO_2(g)$ **4** $2MgCO_3 + SiO_2$

Olivine



Magnesite






Reaction Conditions

- 3-phase system: Gas/Liquid/Solid
- 1.0 M NaCl & 0.64M NaHCO₃ Solution
- 15 30 % solids
- 2500 psi
- 200 °C


Proposed Conceptual Reactor

(Pipe-Line Flow-Through Reactor)

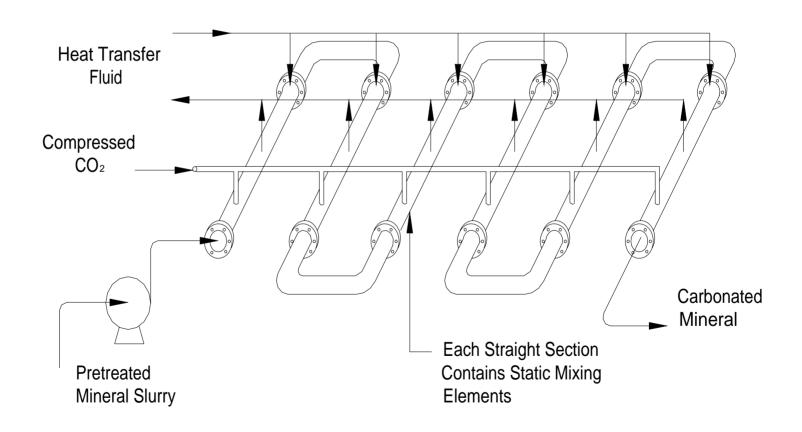



Loop Reactor

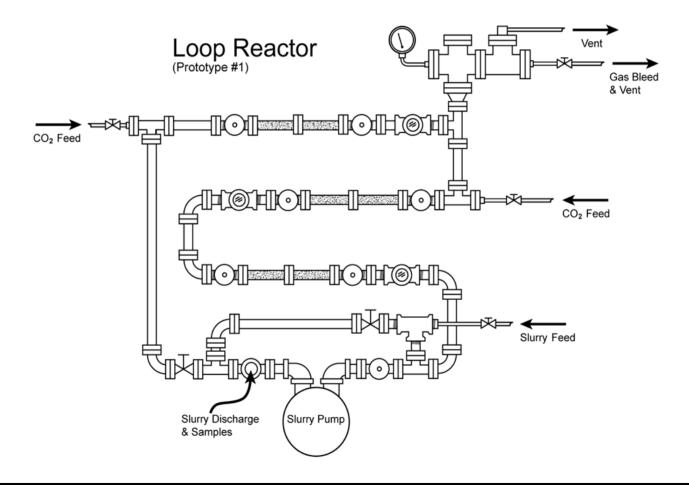



Measurements

- Flow Rate
- System Pressure
- Pressure Differentials
 - Across mixers
 - Across pump
- Temperature
- Extent of Reaction
- Wear and Corrosion



Design Tools



- Test Bench: Clear PVC tubing with static mixer and instrumented for pressure and flow
 - Component sizing
 - Determine minimum flow rate
 - Observation of flow and mixing
 - Pressure drop data
 - practice in filling and draining system



Mixer





Pump Requirements

- Handle 30% solids
- Handle NaCl/NaHCO₃ Solution
- Withstand 2500 psi
- Withstand 200°C
- Flow rate of 10 to 20 l/m



Pump Characteristics

- Magnetic Drive
- 316 SS Casing
- Single-Stage Regenerative Turbine
- Variable-Speed Motor



Slurry Pump






HTHP Flow Loop Reactor






Extent of Reaction

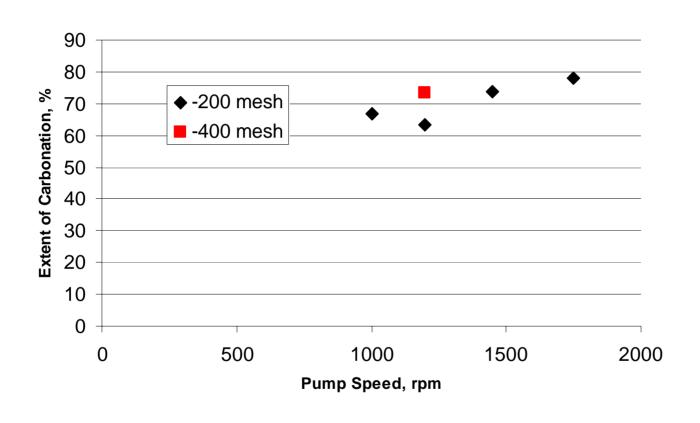




Gas Liquid Ratio

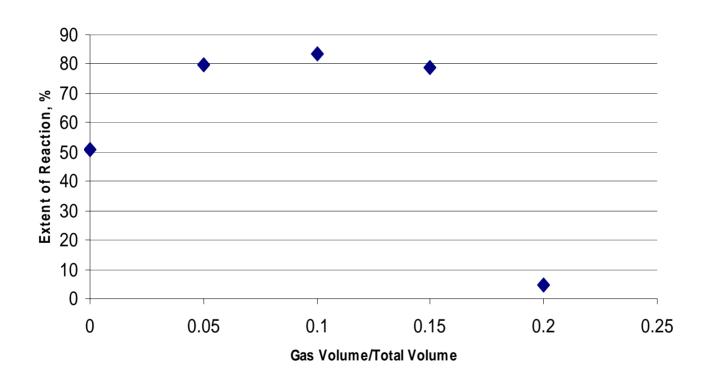




Pressure Drop

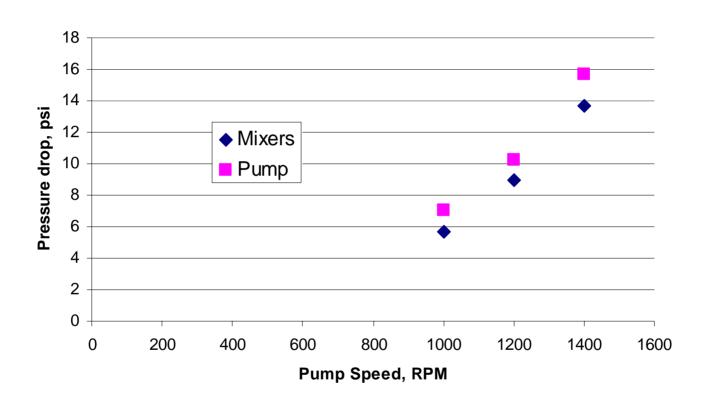



Wear and Corrosion

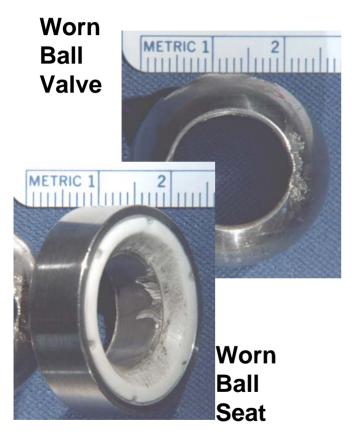



New mixer

Used Mixer

Albany Research Center



Conclusions

- Successful operation of high pressure, 3-phase reactor
- Extent of reaction exceed that obtained in batch autoclave tests

CO₂ Sequestration


by Calcium and Magnesium Silicate Minerals





Small bubbles

CO₂ Blanket



Mixers

Coalescing bubbles