

# NASA Tech Briefs

Official Publication of  
National Aeronautics and  
Space Administration  
Volume 15 Number 5

Transferring Technology  
to Industry and  
Government  
May 1991



**LASERS TRACK  
FAST FLUID FLOWS**

# NOW THAT 10GB FITS ON AN 8MM TAPE, WHAT ARE YOU WAITING FOR?



You don't need to wait hours to change tapes.

You don't need to wait months for other storage technologies to catch up.

One 8mm tape drive will already deliver more than they promise.

It's the digital CY-8200, now with optional data compression. And you can get it exclusively from Contemporary Cybernetics Group.

With data compression, the CY-8200 can quadruple the amount of data you can load on an 8mm cassette that fits neatly in your shirt pocket. Meaning the already tremendous savings in man hours, media costs, storage and shipping are multiplied by four.

Until now, the best 8mm drive on the market stored an impressive 2.5 GB per tape at speeds up to 15 MB per minute.



## True "Plug-And-Play" Compatibility With:

Alliant	DEC 3100	IBM S/36	Pertec
Alpha Micro	DEC HSC	IBM AS/400	Plexus
Altos	DEC Q-Bus	Macintosh	Prime
Apollo	DEC TU/TA81	NCR	Pyramid
Arix	DEC Unibus	Novell	Sequent
AT&T	Gould	PC 386/ix	Sun
Convergent	HP	PC MS-DOS	Unisys
Data General	IBM RT	PC Xenix/Unix	Wang
<i>and more...</i>			

Our data compression option allows you to write up to 10 GB per tape at up to 60 MB per minute. Completely unattended.

Of course, the data compression feature is switch-selectable, so you can turn off data compression to read and write standard 8mm tapes.

Plus it's a simple upgrade for the best tape drive built: our CY-8200. Offering a complete range of standard




interfaces, a 2-line, 40-column display option, and optional security card encryption. And assuring you of full support and a 12-month warranty from the leader in advanced 8mm helical scan technology.

The CY-8200 with data compression will remain the best value in data storage for a long time to come. So now you've got many good reasons for calling us today at (804) 873-0900 and no good reason for waiting.

CONTEMPORARY  
**CYBERNETICS**  
*Group*

Fortunately, the quality of hard copy has improved somewhat over the years.

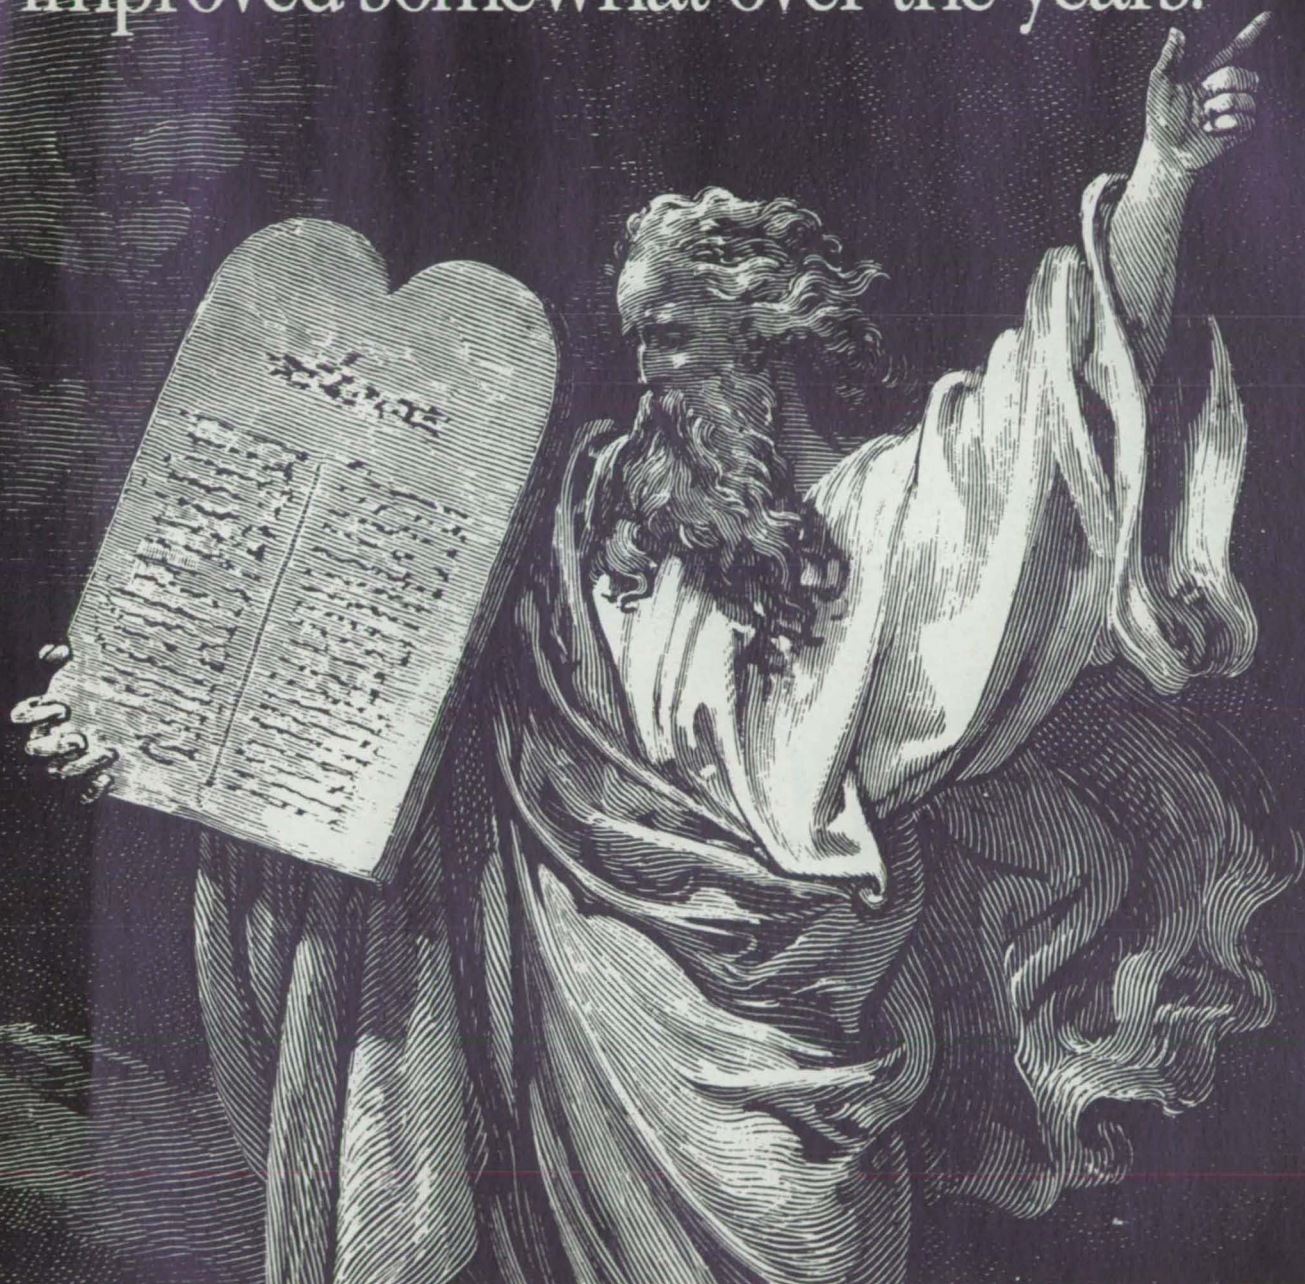


The Lasertechnics DIR Gray Scale Printer represents a new generation of laser printers that go beyond the reproduction of text and simple graphics to produce images that rival a conventional photograph. In fact, the Lasertechnics continuous tone printer provides the highest image quality, film or paper copy on the market today. Up to 2048 pixels per line with 256 levels of gray per pixel. Applications cover all forms of electronic image processing. Digital interfaces are available for most major computers. Finally, an output system that matches your input in less than 90 seconds for as little as 30 cents a page. Now that may be news you'll want to etch in stone!

## The DIR Gray Scale Printer

Circle Reader Action No. 600



 **Lasertechnics**

5500 Wilshire Avenue NE  
Albuquerque, NM 87113  
505-822-1123  
FAX: 505-821-2213



# The Right Choice Could Save You \$25,000.

HTBasic from TransEra will turn your PC into a scientific workstation at a fraction of the cost. A *real* alternative to a high-priced dedicated workstation, a PC with HTBasic gives you the capabilities you need for complex scientific/engineering applications, while retaining compatibility to run and share data with standard PC software.

The savings don't end with the workstation itself. With an HTBasic system, you can use industry-standard printers, graphic output devices, and networking systems. You get the flexibility you need to lay out the system you want without being tied to limited offerings from one supplier.

HTBasic is a state-of-the-art language which gives you a number of advanced scientific/engineering features not found in other BASIC packages.

Features such as data acquisition and IEEE-488/RS-232 instrument control syntax, COMPLEX arithmetic, matrix mathematics, complete HP-style graphics, a comprehensive on-line help facility, and many more, add up to increased productivity for all levels of users.

The right choice for your next engineering workstation is a PC with HTBasic. Call or write us today for more information.



**TransEra**

Engineering Excellence for 15 Years™

3707 N. Canyon Road Provo, UT 84604  
(801) 224-6550 Fax (801) 224-0355  
Circle Reader Action No. 473



## NOW TEAC'S XR SERIES IS 28-CHANNELS WIDE.

Introducing the world's first 28-channel VHS data recorder. The TEAC XR-9000. Now the performance and capacity of the larger open-reel decks are available with the convenience, economy and ease of operation of VHS cassettes. All within a lightweight, minimum foot print unit.

The XR-9000 offers TEAC's exclusive menu-driven on-screen display plus numerous auto-functions to provide a simple step-by-step setup procedure. You can use your computer to remotely control the XR-9000. And recorded data from the XR-9000 can be fed directly into a computer.

It's been over a decade since TEAC introduced

the world's first VHS cassette data recorder. Since then, we've helped develop every major improvement in VHS data recording technology. Today we're building VHS data recorders from 7- to 28-channels with models available in Wide Band Groups I and II, plus interchangeable FM, Super FM DR, and PCM modules. And in an industry with little tolerance for error, TEAC's enviable record of performance and reliability is unsurpassed.

So, if you're looking for greater capacity, with the most variety of options and models, at the most efficient cost-per-channel, TEAC XR series data recorders is the only place you'll find it.


# TEAC<sup>®</sup>

Information Products Division.

©1990. TEAC AMERICA, INC. 7733 TELEGRAPH RD., MONTEBELLO, CA 90640 WEST (213) 726-0303 EAST (508) 683-8322

Circle Reader Action No. 344

# The IBM RISC System/ The power you've been seeking

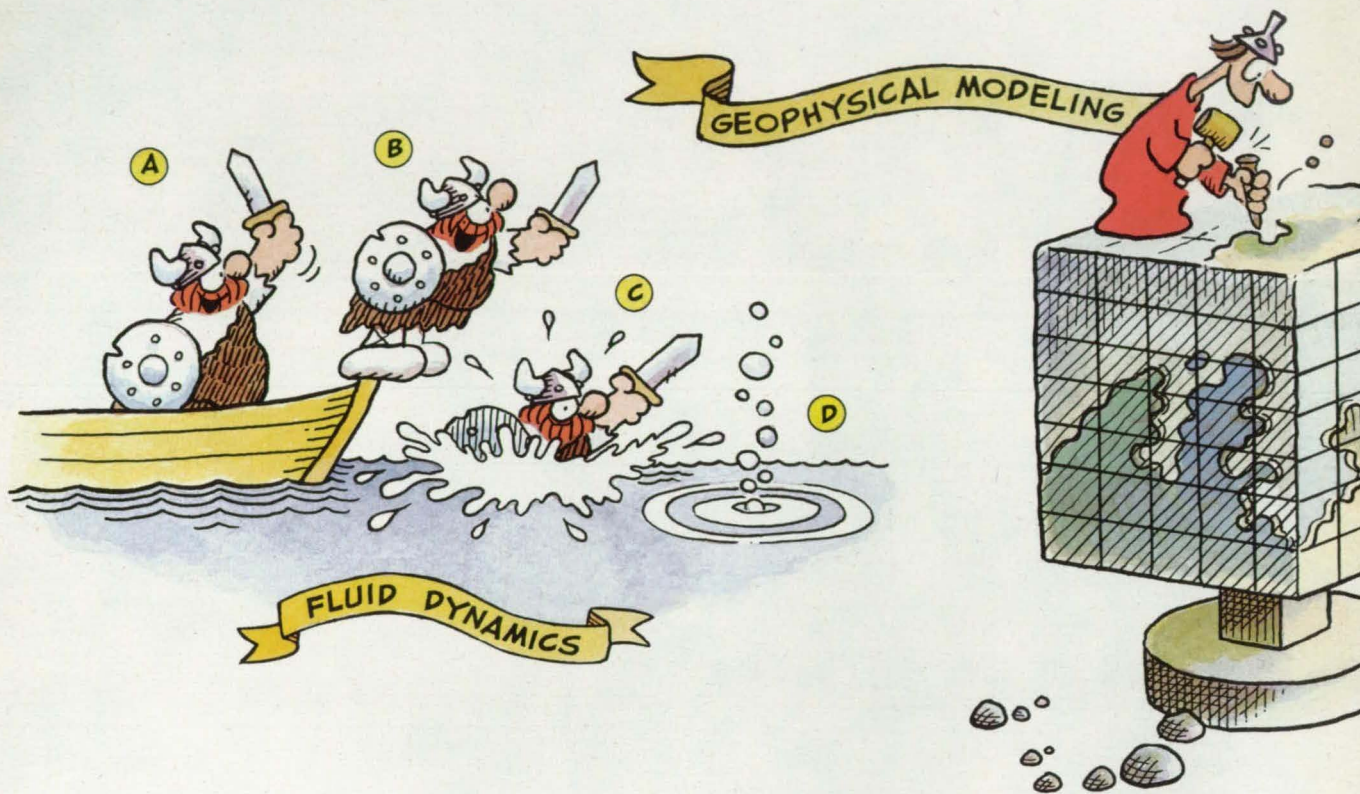

It's a never-ending quest for power seekers. You're always looking for ways to run your favorite applications faster. Well, search no more. The RISC System/6000™ family of POWERstations and POWERservers gives you power that soars as high as 23 MFLOPS.

	MFLOPS	MIPS	SPECmark™
POWERstation 320	8.5	29.5	24.6
DECstation 5000-200	3.7	24.2	18.5

**When it comes to porting, your ship has come in.** Of course, all the speed in the world wouldn't mean much without the applications you need. So the RISC System/6000 family

already has more than 2,500 of the most popular technical and commercial applications up, running and running fast. And if you think you know a good thing when you see it, so do software vendors. That's why you'll also be seeing more and more applications coming on board the RISC System/6000 platform all the time. And if you like to build your own solutions, there's a full arsenal of enablers and relational data bases from leading vendors, as well as CASE tools and a host of popular programming languages.

**A smorgasbord of solutions.** Applications already announced include the IBM engineering design packages CADAM™, CAEDS™, CBDS™,

MFLOPS are the results of the double-precision, all FORTRAN Linpack test 100x100 array suite. The Dhrystone Version 11 test results are used to compute RISC System/6000 Integer MIPS value where 1,757 Dhrystones/second is 1 MIPS (Vax 11/780). SPECmark is a geometric mean of ten benchmark tests. All performance data are based on published benchmark information.

IBM is a registered trademark, and RISC System/6000 and CAEDS are trademarks of International Business Machines Corporation. SPECmark is a trademark of Standard Performance Evaluation Corporation. UNIX is a registered trademark of UNIX System Laboratories, Inc. CADAM is a trademark of CADAM INC. CATIA is a trademark of Dassault Systemes. CBDS is a trademark of Bell Northern Research Corporation. DECstation is a trademark of Digital Equipment Corporation. HAGAR THE HORRIBLE Character(s) © 1990 King Features Syndicate, Inc. © IBM Corp. 1991, all rights reserved.

# 6000 family. for all your applications.



CATIA™ and AES. Also available are a broad spectrum of solutions from vendors like Valid Logic, MacNeal Schwendler, Swanson Analysis, SAS Institute, SPSS, Wavefront, Alias, Polygen, Cadence, Fluid Dynamics International, Western Atlas, ECL Petro and create.X. Scientific and technical applications are available in areas like physics, structural analysis, chemistry, securities trading, mathematics, earth resources, operations research, visualization, graphics, technical publishing and more. There's also accounting software like FourGen and support for leading UNIX®-based office automation packages. And there are key industry applications for businesses in medical groups, retail stores, newspapers, pharmacies and many more.

## Command enormous processing clout.

The RISC System/6000 family is built to boost the performance of the software power seekers use most. It's got the best floating point processor in the business for numerically intensive applications, plus a new superscalar processor and incredible 3D graphics capabilities. To find out more, call your IBM marketing representative or IBM Business Partner. For literature, call 1 800 IBM-6676, ext. 990.



**For the Power Seeker.**

**IBM®**

Transferring Technology to  
Industry and Government

May 1991  
Volume 15 Number 5

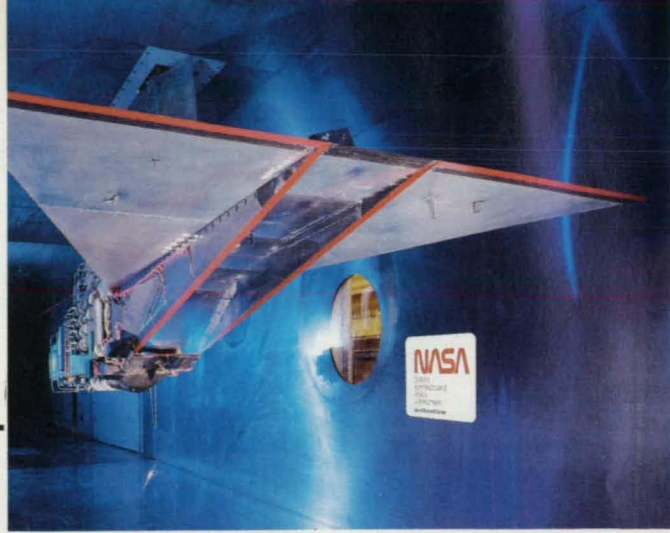



Photo courtesy Lewis Research Center

*Lewis Research Center tested this Mach 5 aircraft engine inlet model in its 10' x 10' supersonic wind tunnel to validate computational codes developed to analyze the inlet's performance. The model may provide the design basis for inlets used on the next generation of supersonic transport aircraft. For more on the Lewis Center's propulsion research, turn to page 12.*

## SPECIAL FEATURES

NASA Lewis 50th Anniversary Report .....	12
Mission Accomplished .....	82

## TECHNICAL SECTION

New Product Ideas .....	16
NASA TU Services .....	18
Electronic Components and Circuits .....	20
Electronic Systems .....	28
Physical Sciences .....	34
Materials .....	44
Computer Programs .....	49
Mechanics .....	51
Machinery .....	58
Fabrication Technology .....	60
Mathematics and Information Sciences .....	70
Life Sciences .....	74
Subject Index .....	78

## DEPARTMENTS

*On The Cover: NASA is employing laser spectroscopic techniques to simultaneously measure air temperature and density. A prime application is to track fluctuations in turbulent air flows inside wind tunnels. See the tech brief on page 43.*  
(Photo courtesy Ames Research Center)

New on the Market.....	75
New Literature.....	77
Advertisers Index.....	81

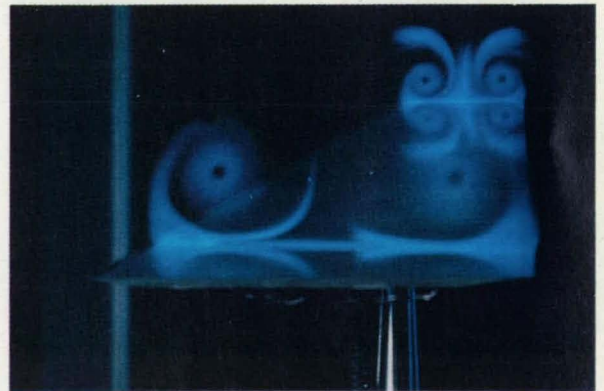


Photo courtesy Langley Research Center

*A laser-based system designed to illuminate flows in the Langley Center's Basic Aerodynamics Research Tunnel may be reapplied in the art and construction industries. See page 30.*

This document was prepared under the sponsorship of the National Aeronautics and Space Administration. Neither Associated Business Publications Co., Ltd. nor anyone acting on behalf of Associated Business Publications Co., Ltd. nor the United States Government nor any person acting on behalf of the United States Government assumes any liability resulting from the use of the information contained in this document, or warrants that such use will be free from privately owned rights. The U.S. Government does not endorse any commercial product, process, or activity identified in this publication.

Permissions: Authorization to photocopy items for internal or personal use, or the internal or personal use of specific clients, is granted by Associated Business Publications, provided that the flat fee of \$3.00 per copy is paid directly to the Copyright Clearance Center (21 Congress St., Salem, MA 01970). For those organizations that have been granted a photocopy license by CCC, a separate system of payment has been arranged. The fee code for users of the Transactional Reporting Service is: ISSN 0145-319X/91 \$3.00+.00

NASA Tech Briefs, ISSN 0145-319X, USPS 750-070, copyright © 1991 in U.S., is published monthly by Associated Business Publications Co., Ltd., 41 E. 42nd St., New York, NY 10017-5391. The copyrighted information does not include the individual tech briefs which are supplied by NASA. Editorial, sales, production and circulation offices at 41 East 42nd Street, New York, NY 10017-5391. Subscription for non-qualified subscribers in the U.S., Panama Canal Zone, and Puerto Rico, \$75.00 for 1 year; \$125.00 for 2 years; \$200.00 for 3 years. Single copies \$10.00. Foreign subscriptions one-year U.S. Funds \$150.00. Remit by check, draft, postal, express orders or VISA, MasterCard, and American Express. Other remittances at sender's risk. Address all communications for subscriptions or circulation to NASA Tech Briefs, 41 East 42nd Street, New York, NY 10017-5391. Second-class postage paid at New York, NY and additional mailing offices.

**POSTMASTER: please send address changes to NASA Tech Briefs, 41 E. 42nd Street, Suite 921, New York, NY 10017-5391.**



# To show you what our new DataGraf recorder can do,

 **GOULD**  
Electronics

No matter how advanced your recorder is, it still has to meet your most basic recording needs. That's why our new DataGraf offers everything you'd expect from a computer-based recorder—plus unique hard copy output flexibility.

How advanced is DataGraf? It offers 16-channel recording capability, all in a rugged, portable package weighing less than forty pounds. With DataGraf, you can store events on disk and replay them as often as you like. You can also expand or compress traces, overlay signals, and even label key points.


What's more, using advanced waveform analysis software, DataGraf automatically analyzes your data, virtually eliminating the need for manual interpolation and long-hand math. Whether you're interested in the entire signal or just a specific section, the touch of a button will calculate Max/Min, Standard Deviation,  $dY/dX$ , RMS, and much more.

And when it comes to seeing your results on paper, DataGraf can output your traces to hundreds of printers, plotters and traditional oscillographic recorders.

It's exactly the kind of solution you'd expect from Gould, a company with over fifty years of recorder development experience. By applying new technology to the real needs of today's engineers, we've developed a unit that offers real advantages. Advantages that go beyond advanced features. Advantages you can put on paper.

Send for a free DataGraf demo disk. Use the coupon below, or fax your request to (216) 328-7400.

## we put it on paper.

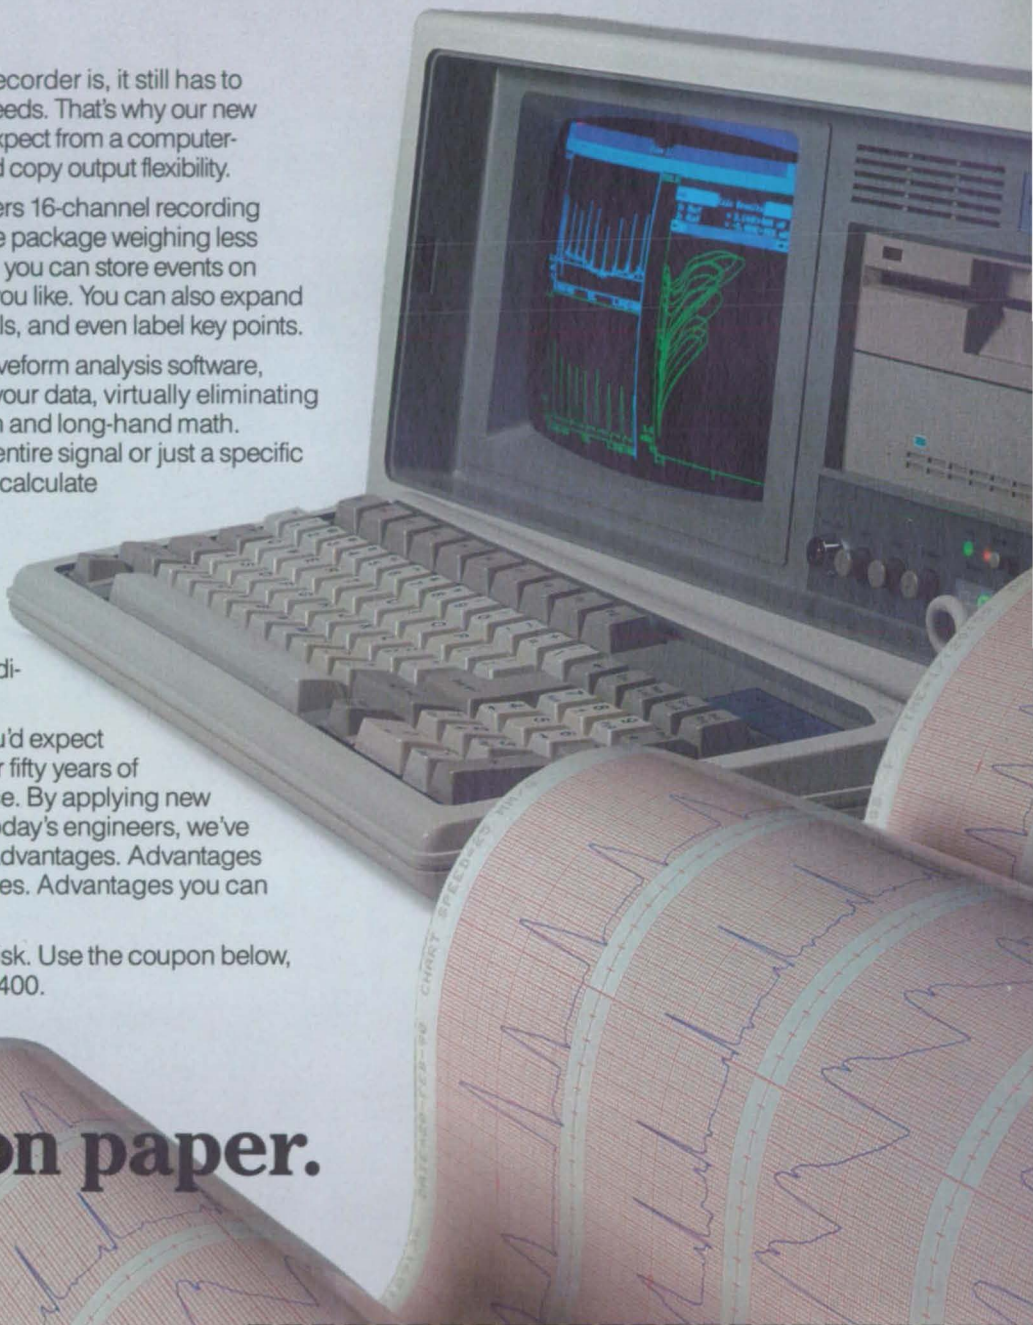

### Free demo disk!

NTB 5/91

Yes! I'd like to see what DataGraf can do. Send me a free demo disk and product information package.

NAME: \_\_\_\_\_ TITLE: \_\_\_\_\_

COMPANY: \_\_\_\_\_


STREET: \_\_\_\_\_

CITY: \_\_\_\_\_ STATE: \_\_\_\_\_ ZIP: \_\_\_\_\_

PHONE: \_\_\_\_\_

Send to: Gould, Inc., Test and Measurement, 8333 Rockside Road, Valley View, Ohio 44125, or call (216) 328-7000. Fax: (216) 328-7400

# The Road To The Future

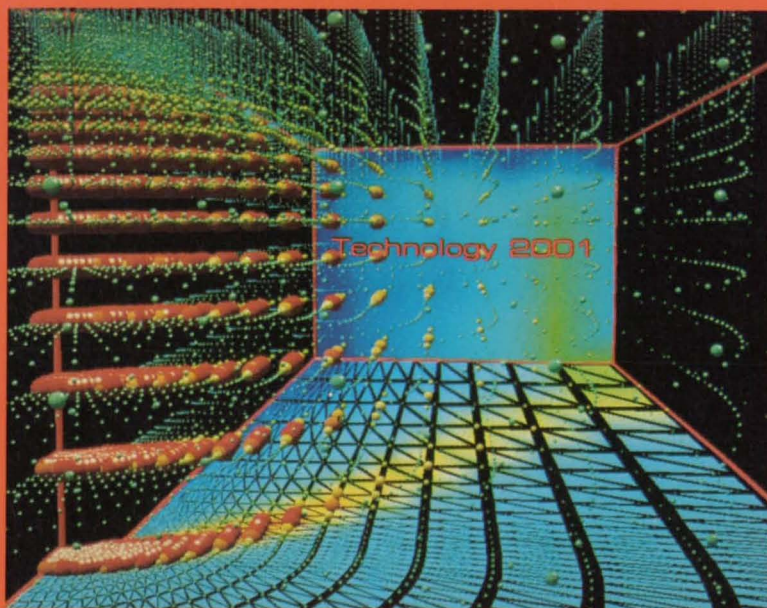

Graphic courtesy Stardent Computer Co.

# Technology 2001

The Second National Technology Transfer  
Conference & Exposition

December 3-5, 1991  
San Jose Convention Center  
San Jose, CA

- ▶ Discover the latest advances in Computer Technology and Software Engineering, Electronics, Advanced Manufacturing, Materials Science, and Biotechnology.
- ▶ Learn how to tap into the federal government's \$65 billion technology bank.
- ▶ Meet key government/industry researchers and technology transfer experts, who will help you turn innovative ideas into profitable products.

Sponsored by NASA, the Technology Utilization Foundation, and  
*NASA Tech Briefs Magazine*

The road to the future passes through San Jose this December as NASA, the Technology Utilization Foundation, and *NASA Tech Briefs* magazine host **Technology 2001**, the second national technology transfer conference and exposition. In three information-packed days, experts from top government research laboratories will reveal the latest innovations in five critical areas of technology: Computer Technology and Software Engineering, Electronics, Advanced Manufacturing, Materials Science, and Biotechnology and Life Sciences. Over 120 presentations in all...focusing on potential commercial applications of these new discoveries.

Between and after the symposia, visit the **Technology 2001** Exhibit Hall, featuring over 50,000 square feet of hands-on demonstrations by the federal laboratories, their contractors, and other high-tech companies and universities with leading-edge technologies available for license or sale.

**Government research programs have created a \$65 billion technology storehouse that's available to you now for use in developing new products and processes. Technology 2001 will show you how to tap into this amazing resource to improve your productivity and gain a vital competitive edge, and will introduce you to the nation's premier researchers and technology transfer experts. If you attend only one high-tech event this year, make it Technology 2001!**

#### Register Early And Save

Register by June 1, 1991 and save up to 33 percent. Mail the form below with check payable to the Technology Utilization Foundation, or fax the form with complete credit card information to (212) 986-7864. You can register by phone by calling (212) 490-3999 (VISA and Mastercard accepted). Government organizations may register using a purchase order.

	Postmarked by 6/1	After 6/1
Complete Registration Package	\$250	\$300
Symposia/Exhibits Registration	\$150	\$200
One-Day Exhibits Only Reg.	\$20	\$30

*Federal government employees are entitled to a 50% discount on above prices.*

**Complete Registration Package** includes entrance to the symposia and exhibits for all three days, tickets to the opening wine and cheese reception on Monday evening, Dec. 2 and to the Excellence in Technology Transfer Awards Dinner on Wednesday evening, Dec. 4, and a copy of the **Technology 2001** Official Proceedings.

**Symposia/Exhibits Registration** includes access to the technical sessions and exhibits for all three days.

Tickets to the Awards Dinner may be purchased separately for \$150 each. The dinner, a celebration of successful technology transfer to American industry, presents a unique opportunity to meet government leaders and industry executives in an elegant setting—the grand ballroom of the San Jose Fairmont Hotel.

Registrants may pick up their badges (and dinner tickets) in the registration area at the San Jose Convention Center, 150 West San Carlos St; registration confirmations will be sent via mail. All registrants automatically will be mailed the **Technology 2001** Preliminary Program, to be published in June.

#### Special Rates At San Jose's Finest Hotels

The following special rates have been negotiated for **Technology 2001** attendees:

	single	double
Fairmont Hotel (headquarter hotel) (800) 527-4727	\$105	\$105
Hyatt San Jose (408) 993-1234	\$85	\$105
The Red Lion (408) 453-4000	\$80	\$80
Hotel De Anza (800) 843-3700	\$115	\$130

Each of these hotels offers a limited number of government-rate rooms. Call for details.

**For further information about Technology 2001, call Justina Cardillo or Joseph Pramberger at (212) 490-3999.**

## Technology 2001 Registration Form

Use a separate form or photocopy for each registrant. Type or print clearly.

Name \_\_\_\_\_  
 Title \_\_\_\_\_  
 Company \_\_\_\_\_  
 Address \_\_\_\_\_  
 City/St/Zip \_\_\_\_\_  
 Phone \_\_\_\_\_

check enclosed      charge my:  VISA    Mastercard

Account No. \_\_\_\_\_

Expiration: Mo. \_\_\_\_\_ Yr. \_\_\_\_\_

Signature \_\_\_\_\_

Registration Fees:	By 6/1	After 6/1	
Complete Registration	\$250	\$300	\$ _____
Symposia/Exhibits Reg.	\$150	\$200	\$ _____
One-Day Exhibits Only	\$20	\$30	\$ _____
(circle day: Tues. Wed. Thurs.)			
Technology Transfer Awards Dinner—\$150			\$ _____
Total: (Fed. govt. employees deduct 50%)			\$ _____

*Registrations and awards dinner reservations are transferable, and may be cancelled until Nov. 8, 1991 subject to a \$50 cancellation fee. After that date no cancellations will be accepted and no money refunded.*

New Model

# Convert Computer Graphics to Television



## RGB/Videolink® Model 1450AX with Auto-sync

The first popularly priced full range scan converter for video taping, video projection and video teleconferencing

- Adjustment free auto-locking to all workstations, PCs and Mac IIs
- Horizontal scan range 21 to 80 kHz
- Full broadcast quality encoder and sync generator
- Flicker free output
- Genlock
- Linear keyer for overlaying live video with computer graphics
- Zoom EGA to fill video screen
- Full 24 bit color processing
- Wide range of outputs; Composite (NTSC or PAL), RGB, S-Video, Betacam/ MII
- Manufactured in the USA

Other models available



**SPECTRUM**

2550 Ninth Street Berkeley, CA 94710  
TEL: (415) 848-0180 FAX: (415) 848-0971

# NASA Tech Briefs

Official Publication of  
National Aeronautics and  
Space Administration



## NASA Tech Briefs:

Published by .....	Associated Business Publications
Editor-in-Chief/Publisher .....	Bill Schnirring
Associate Publisher .....	Frank Nothaft
Editor .....	Joseph T. Pramberger
Managing Editor .....	R.J. Laer
Assistant Editor .....	Kathleen Carrea
Assistant Editor .....	Justina Cardillo
Assistant Editor .....	Patrick Corbett
Technical Advisor .....	Dr. Robert E. Waterman
Production Manager .....	Rita Nothaft
Traffic Manager .....	James E. Cobb
Art Director .....	Pierre Granier
Circulation Manager .....	Cheryl Cohen
Advertising Coordinator .....	Daniel Murphy
Telecommunications Specialist .....	Evelyn Mars
Reader Service Manager .....	Sylvia Valentin

### Briefs & Supporting Literature:

Provided to National Aeronautics and Space Administration by  
**International Computers & Telecommunications, Inc.,**

NY, NY with assistance from Logical Technical Services, NY, NY	
Technical/Managing Editor .....	Ted Sellinsky
Art Director .....	Luis Martinez
Administrator .....	Elizabeth Teixeira
Chief Copy Editor .....	Lorne Bullen
Staff Writers/Editors .....	Dr. James Boyd, Dr. Larry Grunberger, Dr. Theron Cole, Jordan Randjelovich, George Watson, Oden Browne
Graphics .....	Zinaida Gimpeleva, Vernald Gillman, Pamela Baynham, Charles Sammartano
Editorial & Production .....	Bill Little, Ivonne Valdes, Susan Kyu Oh, Frank Ponce

### NASA:

NASA Tech Briefs are provided by the National Aeronautics and Space Administration, Technology Utilization Division, Washington, DC:

Administrator.....Richard H. Truly  
 Assistant Administrator for Commercial Programs.....James T. Rose  
 Deputy Assistant Administrator(Programs).....Frank E. Penaranda  
 Deputy Director TU Division(Publications Manager).....Leonard A. Ault  
 Manager, Technology Utilization Office, NASA Scientific and Technical Information Facility.....Walter M. Heiland

### Associated Business Publications

41 East 42nd Street, Suite 921, New York, NY 10017-5391  
(212) 490-3999 FAX (212) 986-7864

President .....	Bill Schnirring
Executive Vice President .....	Frank Nothaft
Vice President .....	Domenic A. Mucchetti
Operations Manager .....	Rita Nothaft
Controller .....	Felecia Lahey
Systems Analyst .....	Patrick Wolfert

### Advertising:

New York Office:(212) 490-3999 FAX (212) 986-7864

Director of Advertising Sales.....	Domenic A. Mucchetti
Account Executive (NY,NJ).....	Brian Clerkin at (212) 366-2751
Account Executive (VA,DC,MD,DE,WV).....	John D. Floyd, CBC at (215) 399-3265
Account Executive.....	Debby Crane at (201) 967-9838
Account Executive (Midwest).....	Paul Leshner,CBC at (708) 501-4140
Account Executive (Northwest).....	Bill Hague at (206) 858-7575
Regional Sales Manager (South).....	Douglas Shaller at (212) 490-3999
Account Executives (Eastern MA,NH,ME,RI).....	Paul Gillespie at (508) 429-8907; Bill Doucette at (508) 429-9861
Account Executives (Western MA,CT,VT) .....	George Watts at (413) 253-9881
Account Executives (Calif.,AZ,NV,NM)	

for Area Codes 714/619 Tom Murphy  
 for Area Codes 213/818/805/602/702/505 Robert D'Alexander  
 at (213) 372-2744  
 for Area Codes 408/415/916/209/707 Elizabeth Cooper  
 at (415) 673-5123

### NTBM-Research Center

Account Supervisor.....Lourdes Del Valle

**PC**  
MAGAZINE  
EDITORS'  
CHOICE


March 26, 1991  
Graftool, Version 3.3

# GRAFTOOL™



“extremely flexible, powerful, and easy-to-use”  
...“the ultimate graphics package, fulfilling everybody’s needs.”

Reprinted with permission from PC Magazine, March 14th, 1989, Copyright ©1989 Ziff Communications Co. and PC Magazine, March, 26th, 1991 © Ziff Communications Co.

Surface Cross-Section Analysis

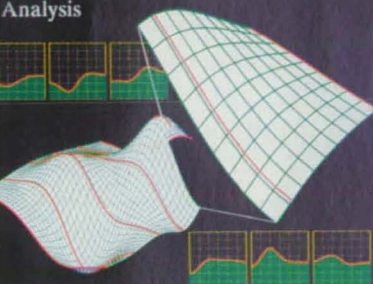


Generate contours, surfaces, and cross-sections from random X, Y, Z points.

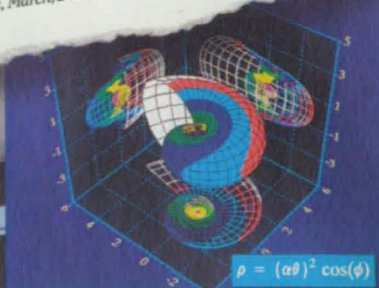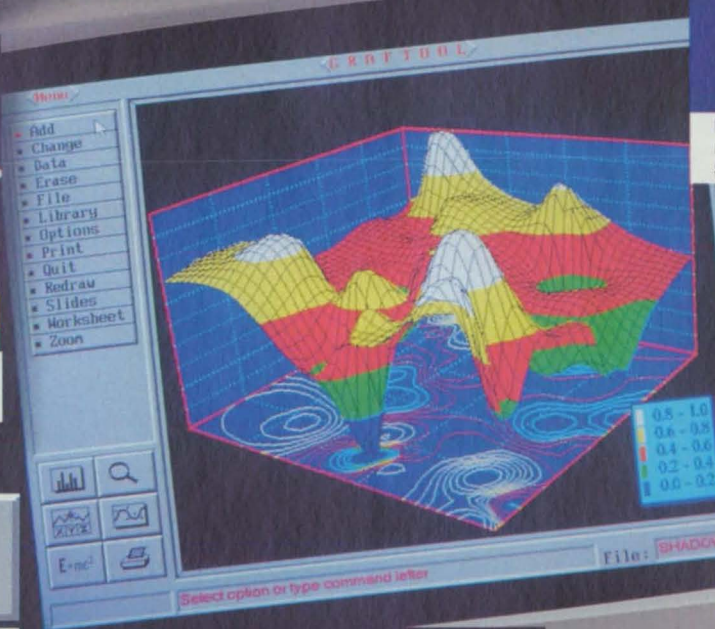


Easily create complex curves & surfaces with the graphical Formula-Solver.\*




Choose from 26 graph types for business, technical, & scientific data

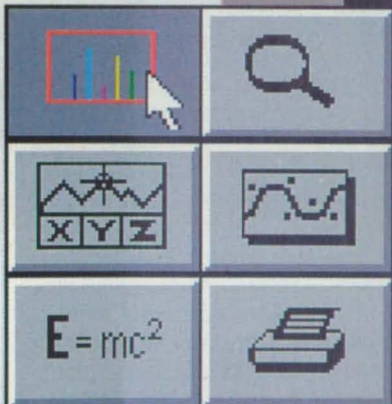

NEW push-button “mouse-menus” allow easy access to frequently used features.

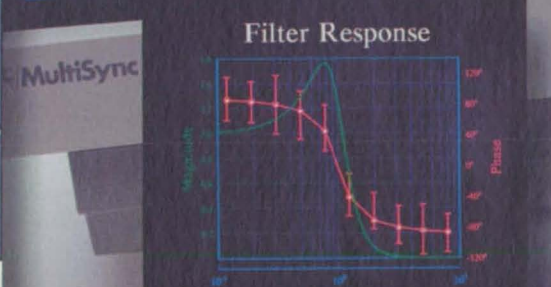

Automate customized graph creation with pre-recorded macro & batch files.

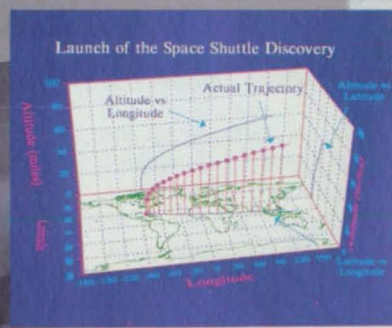

Integrate 2-D and 3-D data on a single graph to add meaning and impact.

## Presentation graphics and analysis for scientific users.

Your technical data requires more muscle and sophistication than basic business graphics and plotting packages can provide. It's simply a matter of using the right tool for the job. In addition to publication-quality graphics, you need powerful analysis tools and capabilities such as Graftool's ■ Intelligent Data Cursor™ to read out data points on curves & surfaces ■ Linear & non-linear curve-fitting ■ Unlimited zoom & rotation ■ Multiple axes in linear, log, or probability scales ■ Advanced data handling, allowing over 268,000,000 data points ■ Powerful scientific spreadsheet which can directly read your Lotus or ASCII files

- Unrestricted placement of graphs & text
- Direct compatibility with Microsoft Word & WordPerfect.

With Graftool, all this power and flexibility purr quietly under the hood, while pop-up menus and push-buttons bring an ease of use previously unheard of in scientific software. Just “point & process” with increased productivity and greater understanding.

GRAFTOOL — the right tool for your technical solutions.

GRAFTOOL \$495.

- Interactive demo available
- Academic discounts.



**3D VISIONS**

412 S. Pacific Coast Highway, Second Floor  
Redondo Beach, CA 90277  
Call: 1 (800) 729-4723, 1 (213) 540-8818  
FAX: 1 (213) 540-3492

Circle Reader Action No. 669

# LEWIS RESEARCH CENTER 1941-1991

## A HALF-CENTURY OF TECHNOLOGY LEADERSHIP

**O**n January 23, 1941, a group of dignitaries gathered in a muddy field adjacent to Cleveland Airport to break ground for a new airplane engine research laboratory. George W. Lewis, director of aeronautical research for the National Advisory Committee for Aeronautics, NASA's predecessor, drove a nickel-plated pick into the soil, marking the beginning of a major national resource that would one day bear his name.

Born amidst the urgency of impending war, the Lewis Center would evolve into a multifaceted, world-class research facility. By the end of World War II, Lewis was already deeply involved in testing the turbojet engine, a revolutionary form of aircraft propulsion which set the stage for advancements in rocketry and space technology. During the 1960s, Lewis developed the Centaur rocket, an upper-stage launch vehicle fueled by liquid hydrogen. Lewis' success with this dangerous propellant led to more than 100 Centaur flights and helped make the lunar landings a reality. With the energy crisis in the 1970s, the center expanded its work to include studies of wind and solar power, and new fuel-saving engine de-

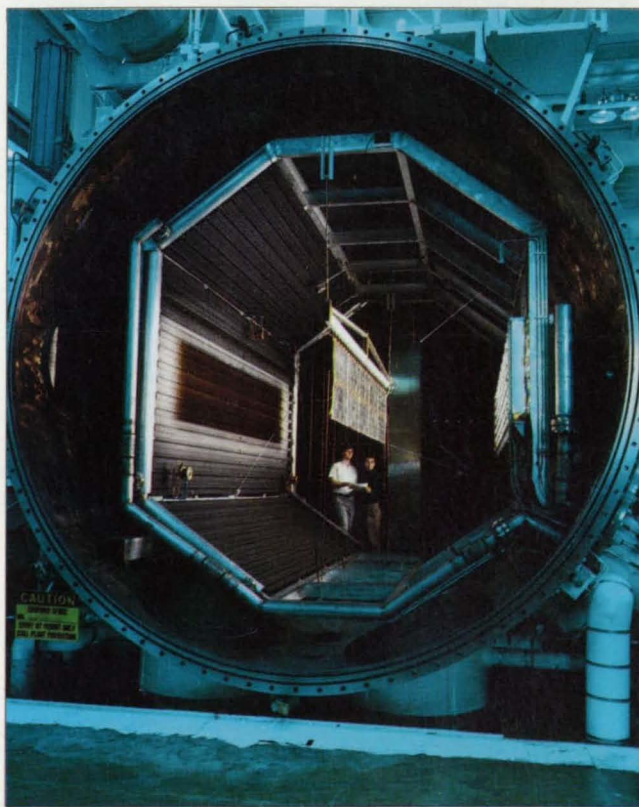


Photo courtesy Lewis Research Center

*Powering Freedom: Lewis engineers make final checks prior to plasma interaction tests with space station Freedom solar array panels.*

signs. In the 1980s, Lewis received two prestigious awards — the Collier Trophy and the Emmy — for outstanding achievements in propulsion and communications. Lewis' Icing Research Tunnel, the oldest and largest facility of its kind in the world, was declared an international historic mechanical engineering landmark in 1987.

Today, the Lewis Center continues its leadership in aerospace research and development. Lewis manages the design and development of space station Freedom's electrical power system, as well as the Advanced Communications Technology Satellite (ACTS), a joint NASA-industry project which promises to revolutionize telecommunications. With plans under way for numerous manned and unmanned space flights, Lewis researchers are studying the effects of low gravity on combustion, materials, and fluids. Moreover, the center is working to reduce the noise and emissions of future high-speed civil aircraft, and is involved in many fundamental research projects offering potential commercial applications in the communications, computer, automotive, and biomedical fields. Some of Lewis' current R&D efforts include:

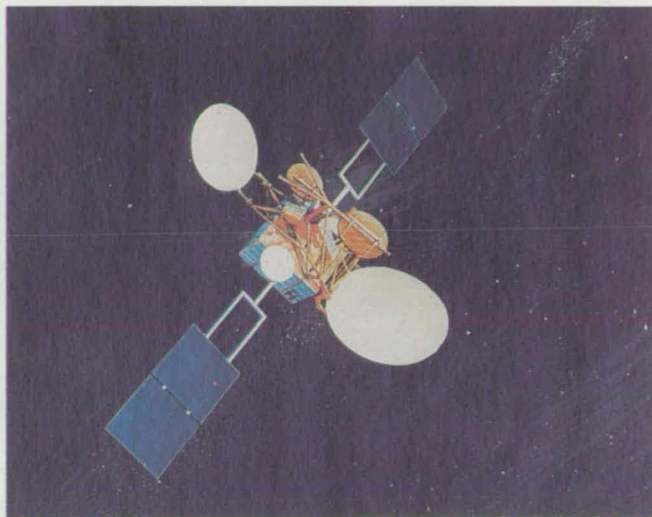


Photo courtesy Lewis

**Arcjet Development.** Lewis has the lead role in developing the arcjet thruster technology recently selected for stationkeeping on AT&T's Telstar 4 communications satellites. Arcjets are electrically-heated devices that produce thrust by expanding a hot gas in a nozzle to a high velocity. Low-power arcjets have captured the interest of satellite manufacturers because they are up to two times more fuel-efficient than present chemical engines and resistojet technology. The savings realized can be used to increase a satellite's on-orbit lifetime or payload mass. Alternatively, launch mass can be decreased to allow use of a smaller rocket booster.

**Computational Materials Processing.** A new laboratory at NASA Lewis applies computational techniques to materials science in order to improve processes, understand complex interactions, and produce more reliable materials. The laboratory employs advanced graphics workstations and is connected to supercomputers at Lewis and elsewhere. Work focuses on modifying programs developed for computational fluid dynamics or structural calculations to solve unique materials processing problems. The facility specializes in predicting the effects of gravitationally-driven convection on crystal growth from the liquid and the vapor. In one project, researchers modeled the fluid flow effects during growth of gal-

lium arsenide semiconductors in space. **NASP Propulsion.** For the National Aero-Space Plane (NASP) program — which seeks to build a hypersonic vehicle capable of taking off and landing horizontally like an airplane — Lewis conducts research in propulsion, high-temperature materials and structures, computational fluid dynamics, and cryogenics. Lewis leads the effort to develop "slush" hydrogen, a high-energy hydrogen slurry that will fuel the experimental vehicle. It is denser than liquid hydrogen and may result in smaller, lighter fuel tanks that could reduce NASP's takeoff weight by up to 30 percent. Lewis has modified a cryogenic facility to manufacture the slush hydrogen in 800-gallon batches, allowing researchers to explore production, trans-

fer, and storage questions.

**Stirling Engine Research.** Under NASA's Civil Space Technology Initiative, Lewis is developing free-piston Stirling engines as a candidate power source for future space missions. This external combustion engine offers high reliability and long operating life because it has few moving parts, noncontacting gas bearings, and can be hermetically sealed. These attributes also make it attractive for terrestrial applications. Two industry teams are designing Advanced Stirling Conversion Systems for worldwide remote power applications. When coupled with a parabolic mirror to collect solar energy, the systems will deliver 25 kw of electricity to a power grid. **Structural Mechanics Applications.** Lewis scientists are working with medical specialists from Case Western Reserve University to improve the performance of artificial knee joints. The project involves modifying aerospace computer codes for use in custom-designing prosthetic joint implants. With an optimally-designed fit, the patient's weight and joint movements would be evenly distributed on the supporting bone, eliminating the current problems of prosthesis loosening and bone deterioration. In the future, the codes not only will tell researchers what the optimum shape for the implant would be, but also which materials would be least

fer, and storage questions.

**Stirling Engine Research.** Under NASA's Civil Space Technology Initiative, Lewis is developing free-piston Stirling engines as a candidate power source for future space missions. This external combustion engine offers high reliability and long operating life because it has few moving parts, noncontacting gas bearings, and can be hermetically sealed. These attributes also make it attractive for terrestrial applications. Two industry teams are designing Advanced Stirling Conversion Systems for worldwide remote power applications. When coupled with a parabolic mirror to collect solar energy, the systems will deliver 25 kw of electricity to a power grid.

**Structural Mechanics Applications.** Lewis scientists are working with medical specialists from Case Western Reserve University to improve the performance of artificial knee joints. The project involves modifying aerospace computer codes for use in custom-designing prosthetic joint implants. With an optimally-designed fit, the patient's weight and joint movements would be evenly distributed on the supporting bone, eliminating the current problems of prosthesis loosening and bone deterioration. In the future, the codes not only will tell researchers what the optimum shape for the implant would be, but also which materials would be least

likely to be rejected by the human body.

#### **Superconductivity Studies.**

Over the past three years, the Lewis Center has investigated the application of new high-critical-temperature superconductors to electronic circuits for communications systems. Using thin films of yttrium barium copper oxide, Lewis researchers produced the first circuits able to operate at 33 to 37 GHz, a frequency range more than three times higher than attainable with previous circuits. Higher frequencies will allow satellites to process data at much faster rates, increasing the number of communications linkups they can handle.

In partnership with Argonne Na-

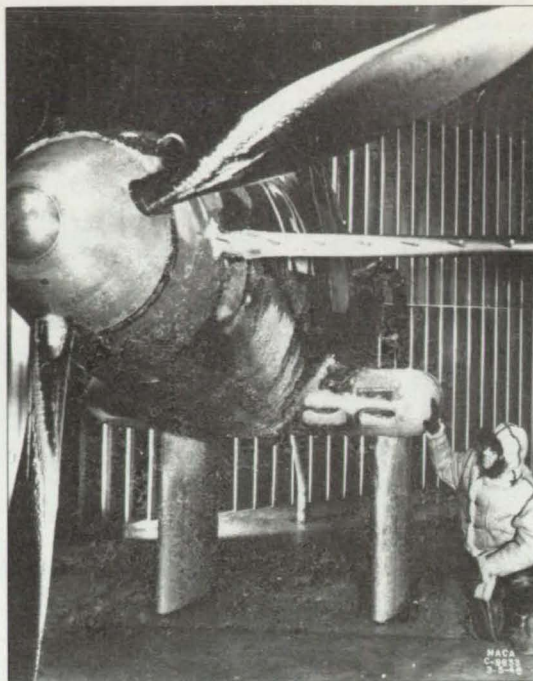


Photo courtesy Lewis

This 1945 photo shows the fuselage of a B-39 airplane mounted in Lewis' Icing Research Tunnel for the study of ice formation on rotating propellers. In 1987, the American Society of Mechanical Engineers designated the tunnel an international historic landmark.

tional Laboratory, Lewis is developing large-scale superconducting systems for aerospace propulsion and power applications, including power transmission, superconducting magnetic energy storage, and electromagnetic propulsion. To support these applications, research is under way to determine and improve the characteristics of superconducting materials in the space environment. □


*For more information on the Lewis Center and its technology development programs, contact Anthony Ratajczak, Lewis Research Center Technology Utilization Office, Mail Stop 7-3, 21000 Brookpark Road, Cleveland, OH 44135.*

## **Where do you need to measure temperature?**

**Tell YSI. We'll analyze your application, then design and build probes that work. These are some of the applications we've handled for others.**

- *Chicken incubators & hatchers* • *Food transport containers*
- *Natural gas pipelines* • *Hydroelectric plant effluent*
- *Liquid-cooled mainframe computers* • *Heart-lung machines*
- *Thermal vents 3,000 meters under the sea* • *The Voyager satellite*

**In fact, since 1955 we've designed over 4,000 different temperature probes. So call us with your application at 800 343-4357. In Ohio, call 513 767-7241.**

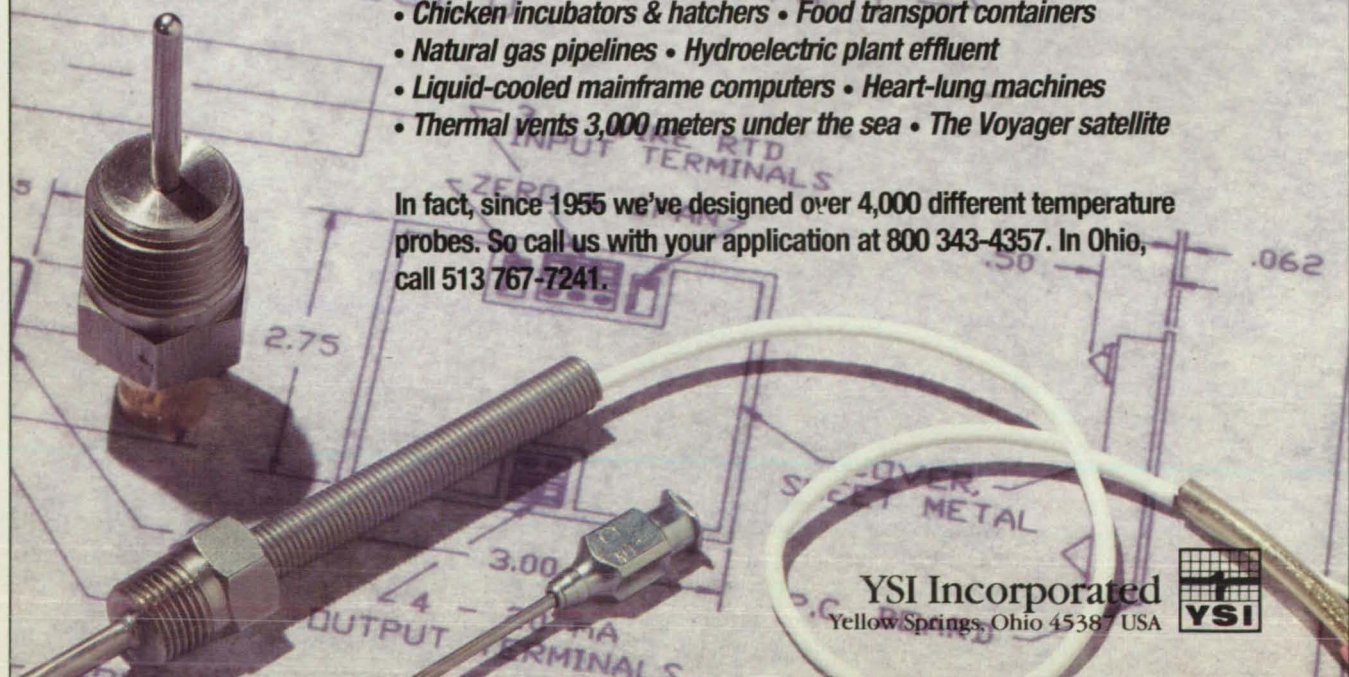

**YSI Incorporated**  
Yellow Springs, Ohio 45387 USA





# **Congratulations NASA Lewis For 50 Years Of Scientific And Technical Excellence**

We salute you on the occasion of your 50th anniversary and are proud to be part of your continuing leadership in aircraft and spacecraft propulsion, space power, and satellite communications technology. We look forward to extending our partnership with you into the next century, to ensure the nation achieves its future aeronautics and space goals.

**GENERAL DYNAMICS**

*Space Systems Division*

**MARTIN MARIETTA**

**SPECTROLAB, INC.**

AiResearch

Bendix

Bendix/King

Garrett

---

 **Allied  
Signal Aerospace**



## New Product Ideas

New Product Ideas are just a few of the many innovations described in this issue of *NASA Tech Briefs* and having promising commercial applications. Each is discussed further on the referenced page in the

appropriate section in this issue. If you are interested in developing a product from these or other NASA innovations, you can receive further technical information by requesting the TSP referenced

at the end of the full-length article or by writing the Technology Utilization Office of the sponsoring NASA center (see page 18). NASA's patent-licensing program to encourage commercial development is described on page 18.

### Segmented Arm for Positioning and Assembly

A proposed segmented robotic arm for positioning and assembly of components of large structures would contain motor-

and-flywheel angular-momentum devices in each arm segment. The arm would be about 300 ft (90 m) long and could manipulate objects of up to about 1 million pounds (455 t). (See page 58)

### Mixed-Gas Sorption Joule-Thomson Refrigerator

A proposed mixed-gas Joule-Thomson refrigerator would include only one stage and no mechanical compressor. Compared with its predecessors, the refrigerator would be simpler, operate without vibrating, and consume less power in producing the same amount of cooling down to 70 K. (See page 38)

### High-Power Liquid-Metal Heat-Transfer Loop

A proposed closed-loop system for the transfer of thermal power would operate at relatively high differential pressure between the vapor and liquid phases of a liquid-metal working fluid. Because the system would contain no moving parts, it should be highly reliable and suited to long-term unattended operation. (See page 36)

### Higher-Performance Ambient-Temperature Heat Pipe


A porous wick added to the liquid channel improves the thermal performance of a heat pipe. Sintered aluminum powder now lines the liquid channel. (See page 57)

### Improved Planar Schottky Diode

Modified design and fabrication of a surface-channel planar Schottky diode reduce the parasitic capacitances to the theoretical minimum, eliminate the buried layer of conductive material between the anode contact and the semi-insulating substrate, and reduce the thickness of the diode chip. (See page 24)

### Tool for Robotic Resistive Roll Welding

Resistance-welding current starts and stops automatically according to force exerted against the workpiece, thanks to a roll-welding attachment for a robot. This simple, inexpensive attachment incorporates a modified commercial resistance-welding gun. (See page 62)

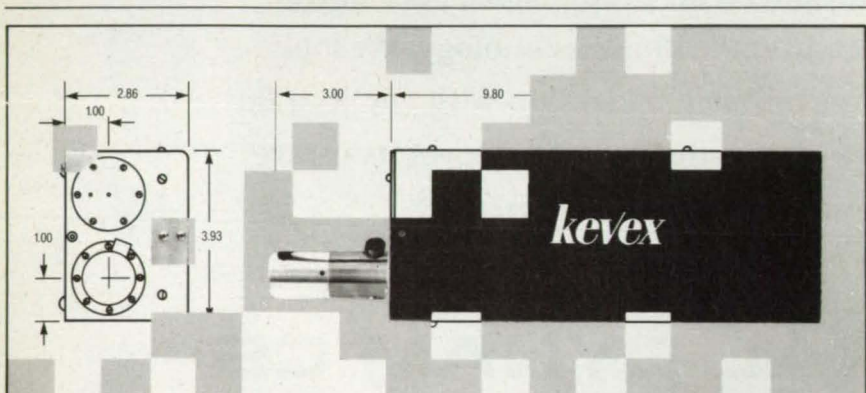

# RADIOGRAPHY

Radiography is just one of the many applications possible with KeveX X-RAY's patented portable X-ray source, the PXS.

The PXS can create new market opportunities for your products. The design eliminates the bulk associated with conventional X-ray systems allowing your products to be portable, lightweight and compact.

Some new products to date include:

- A portable real-time imaging system for detection of tampered products in the field
- A radically different altimeter for the next generation of aircraft
- An on-line thickness gauge used in 100°C environments
- A compact X-ray fluorescence system
- A tabletop double crystal diffractometer
- An airborne meteorological device for measuring particle distribution

All possible because of the self-contained compact X-ray energy source, the PXS.




KeveX X-RAY integrated a miniature X-ray tube and a high voltage power supply into one compact, 5 lb. package. Operational from a 12 volt DC battery, this highly regulated, highly stable source has all the high voltage components molded internally. As a result there are no high voltage cables or connectors to work around.

Designed, manufactured, and sold only by KeveX X-RAY. Call or write KeveX X-RAY today for information on our complete line of portable sources including the 10 micron focal spot PXS.

**keveX** X-RAY

P.O. Box 66860  
Scotts Valley, CA 95066 408-438-5940

◆ A VG Instruments Group Company

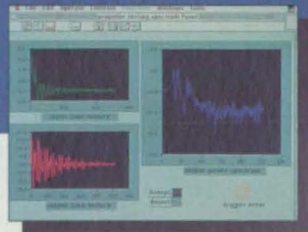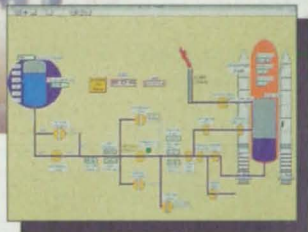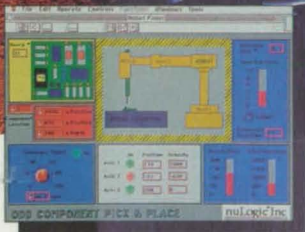

## LabVIEW<sup>®</sup> 2 Where The Only Barrier Is Your Imagination.



By now, you are probably familiar with LabVIEW 2, the most celebrated application software for data acquisition and instrument control on the Macintosh. It recently won the *MacUser* magazine Editors' Choice award. Five years ago, LabVIEW introduced the combination of front panel interfaces and graphical programming. Today, engineers and scientists around the world are using LabVIEW 2 in a broad spectrum of applications.

Unlike other graphical packages, LabVIEW 2 does not sacrifice power and flexibility for ease of use. With LabVIEW 2, you quickly build block diagram programs and

add your own blocks to expand upon our libraries. You also create front panel user interfaces and import pictures to customize the panels. Yet LabVIEW 2 virtual instruments run as quickly as compiled C programs.

If you thought LabVIEW 2 was just for test and measurement, call us to find out what LabVIEW 2 is really about.

For a free LabVIEW 2 Demo disk call:  
(512) 794-0100 or  
(800) 433-3488  
(U.S. and Canada)



6504 Bridge Point Parkway  
Austin, TX 78730-5039



## HOW YOU CAN BENEFIT FROM NASA'S TECHNOLOGY UTILIZATION SERVICES

If you're a regular reader of TECH BRIEFS, then you're already making use of one of the low-and no-cost services provided by NASA's Technology Utilization (TU) Network. But a TECH BRIEFS subscription represents only a fraction of the technical information and applications/engineering services offered by the TU Network as a whole. In fact, when all of the components of NASA's Technology Utilization Network are considered, TECH BRIEFS represents the proverbial tip of the iceberg.

We've outlined below NASA's TU Network—named the participants, described their services, and listed the individuals you can contact for more information relating to your specific needs. We encourage you to make use of the information, access, and applications services offered by NASA's Technology Utilization Network.

### How You Can Utilize NASA's Industrial Applications Centers—A nationwide network offering a broad range of technical services, including computerized access to over 100 million documents worldwide.

You can contact NASA's network of Industrial Applications Centers (IACs) for assistance in solving a specific technical problem or meeting your information needs. The "user friendly" IACs are staffed by technology transfer experts who provide computerized information retrieval from one of the world's largest banks of technical data. Nearly 500 computerized data bases, ranging from NASA's own data base to Chemical Abstracts and INSPEC, are accessible through the ten IACs located throughout the nation. The IACs also offer technical consultation services and/or linkage with other experts in the field. You can obtain more information about these services by calling or writing the nearest IAC. User fees are charged for IAC information services.

#### **Aerospace Research Center (ARAC)**

Indianapolis Center for Advanced Research

611 N. Capitol Avenue  
Indianapolis, IN 46204  
Dr. F. Timothy Janis, Director  
(317) 262-5036

#### **Central Industrial Applications Center/NASA (CIAC)**

##### **Rural Enterprises, Inc.**

Post Office Box 1335  
Durant, OK 74702  
Dr. Dickie Deal, Director  
(405) 924-5094  
(800) 658-2823 (toll-free U.S.)

#### **Science and Technology Research Center (STRC)**

Post Office Box 12235

Research Triangle Park,  
NC 27709-2235  
H.L. (Lynn) Reese, Director  
(919) 549-0671

#### **NASA Industrial Applications**

##### **Ctr. 823 William Pitt Union**

University of Pittsburgh  
Pittsburgh, PA 15260  
Lani Hummel  
Executive Director  
(412) 648-7000  
**Southern Technology Applications Center (STAC)**  
Post Office Box 24  
Progress Ctr., One Progress Blvd.  
Alachua, FL 32615  
J. Ronald Thornton, Director  
(904) 462-3913  
(800) 354-4832 (FL only)  
(800) 225-0308 (toll-free US)

#### **NASA/UK Technology Technology Applications Center**

University of Kentucky  
109 Kinkead Hall  
Lexington, KY 40506-0057  
William R. Strong, Director  
(606) 257-6322

#### **NERAC, Inc.**

One Technology Drive  
Tolland, CT 06084  
Dr. Daniel U. Wilde, President  
(203) 872-7000

#### **Technology Application Center (TAC)**

University of New Mexico  
Albuquerque, NM 87131  
Dr. Stanley A. Morain, Director  
(505) 277-3622

#### **NASA Industrial Applications Center**

University of Southern California  
Research Annex  
3716 South Hope Street  
Los Angeles, CA 90007-4344  
Robert Stark, Director  
(213) 743-6132  
(800) 642-2872 (CA only)  
(800) 872-7477 (toll-free US)

#### **NASA/SU Industrial Applications Center**

Southern University Department of Computer Science  
Post Office Box 9737  
Baton Rouge, LA 70813-9737  
Dr. John Hubbell, Director  
(504) 771-6272  
(504) 771-4950

If you represent a public sector organization with a particular need, you can contact NASA's Application Team for technology matching and problem solving assistance. Staffed by professional engineers from a variety of disciplines, the Application Team works with public sector organizations to identify and solve critical problems with existing NASA technology. **Technology Application Team, Research Triangle Institute, P.O. Box 12194, Research Triangle Park, NC 27709; Dr. Doris Rouse, Director, (919) 541-6980**

### How You Can Access Technology Transfer Services At NASA Field Centers:

#### **Technology Utilization Officers & Patent Counsels**—Each NASA Field Center has a Technology Utilization Officer (TUO) and a Patent Counsel to facilitate technology transfer between NASA and the private sector.

If you need further information about new technologies presented in NASA Tech Briefs, request the Technical Support Package (TSP). If a TSP is not available, you can contact the Technology Utilization Officer at the NASA Field Center that sponsored the research. He can arrange for assistance in applying the technology by putting you in touch with the people who developed it. If you want information about the patent status of a technology or are interested in licensing a NASA invention, contact the Patent Counsel at the NASA Field Center that sponsored the research. Refer to the NASA reference number at the end of the Tech Brief.

#### **Ames Research Ctr.**

Technology Utilization  
Officer: Geoffrey S. Lee  
Mail Code 223-3  
Moffett Field, CA 94035  
(415) 604-4044  
Patent Counsel:  
Darrell G. Brekke  
Mail Code 200-11  
Moffett Field, CA 94035  
(415) 604-5104  
**Lewis Research Center**  
Technology Utilization  
Officer: Anthony F.  
Ratajczak  
Mail Stop 7-3  
21000 Brookpark Road  
Cleveland, OH 44135  
(216) 433-2225  
Patent Counsel:  
Gene E. Shook  
Mail Code LE-LAW  
21000 Brookpark Road  
Cleveland, OH 44135  
(216) 433-5753

#### **John C. Stennis**

**Space Center**  
Technology Utilization  
Officer: Richard A.  
Galle (acting)  
Code HA-32  
Stennis Space Center,  
MS 39529  
(601) 688-1929  
**John F. Kennedy**  
**Space Center**  
Technology Utilization  
Officer: Thomas M.  
Hammond  
Mail Stop PT-PMO-A  
Kennedy Space  
Center, FL 32899  
(407) 867-3017  
Patent Counsel:  
Bill Sheehan  
Mail Code PT-PAT  
Kennedy Space  
Center, FL 32899  
(407) 867-2544

#### **Langley Research Ctr.**

Technology Utilization  
Officer: Joseph J. Mathis Jr.  
Deputy Head, TU Office  
Mail Stop 139A  
Hampton, VA 23665  
(804) 864-2484  
Patent Counsel:  
George F. Helfrich  
Mail Code 279  
Hampton, VA 23665  
(804) 864-3523  
**Goddard Space Flight Center**  
Technology Utilization  
Officer: Donald S.  
Friedman  
Mail Code 702.1  
Greenbelt, MD 20771  
(301) 286-6242  
Patent Counsel:  
R. Dennis Marchant  
Mail Code 204  
Greenbelt, MD 20771  
(301) 286-7351

#### **Jet Propulsion Lab.**

NASA Resident Office  
Technology Utilization  
Officer: Arif Husain  
Mail Stop 180-801  
4800 Oak Grove Drive  
Pasadena, CA 91109  
(818) 354-4862  
Patent Counsel:  
Thomas H. Jones  
Mail Code 180-801  
4800 Oak Grove Drive  
Pasadena, CA 91109  
(818) 354-5179  
Technology Utilization  
Mgr. for JPL: Dr. Norman L. Chaffin  
Mail Stop 156-211  
4800 Oak Grove Drive  
Pasadena, CA 91109  
(818) 354-2240

#### **George C. Marshall**

**Space Flight Center**  
Technology Utilization  
Officer: Ismail Akbay  
Code AT01  
Marshall Space Flight  
Center,  
AL 35812  
(205) 544-2223  
Fax (205) 544-3151  
Patent Attorney:  
Jerry L. Seemann  
Mail Code CC01  
Marshall Space Flight  
Center,  
AL 35812  
(205) 544-0021

#### **Lyndon B. Johnson**


**Space Center**  
Technology Utilization  
Officer: Dean C. Glenn  
Mail Code IC-4  
Houston, TX 77058  
(713) 483-3809  
Patent Counsel:  
Edward K. Fein  
Mail Code AL3  
Houston, TX 77058  
(713) 483-4871  
**NASA Headquarters**  
Technology Utilization  
Officer: Leonard A. Ault  
Code CU  
Washington, DC 20546  
(202) 557-5598  
Assistant General  
Counsel for Patent  
Matters: Robert F.  
Kempf, Code GP  
Washington, DC 20546  
(703) 557-5598

**A Shortcut To Software: COSMIC**—For software developed with NASA funding, contact COSMIC, NASA's Computer Software Management and Information Center. New and updated programs are announced in the Computer Programs section. COSMIC publishes an annual software catalog. For more information call or write: **COSMIC**, 382 East Broad Street, Athens, GA 30602. *John A. Gibson, Dir., (404) 542-3265.*

**If You Have a Question..NASA Scientific & Technical Information Facility** can answer questions about NASA's Technology Utilization Network and its services and documents. The STI staff supplies documents and provides referrals. Call, write or use the feedback card in this issue to contact: **NASA Scientific and Technical Information Facility**, Technology Utilization Office, P.O. Box 8757, Baltimore, MD 21240-0757. *Walter M. Heiland, Manager, (301) 859-5300, Ext. 245.*

**ANOTHER ASTRO-MED FIRST  
IN 8-CHANNEL RECORDERS**

# LASER PRINTER RESOLUTION!

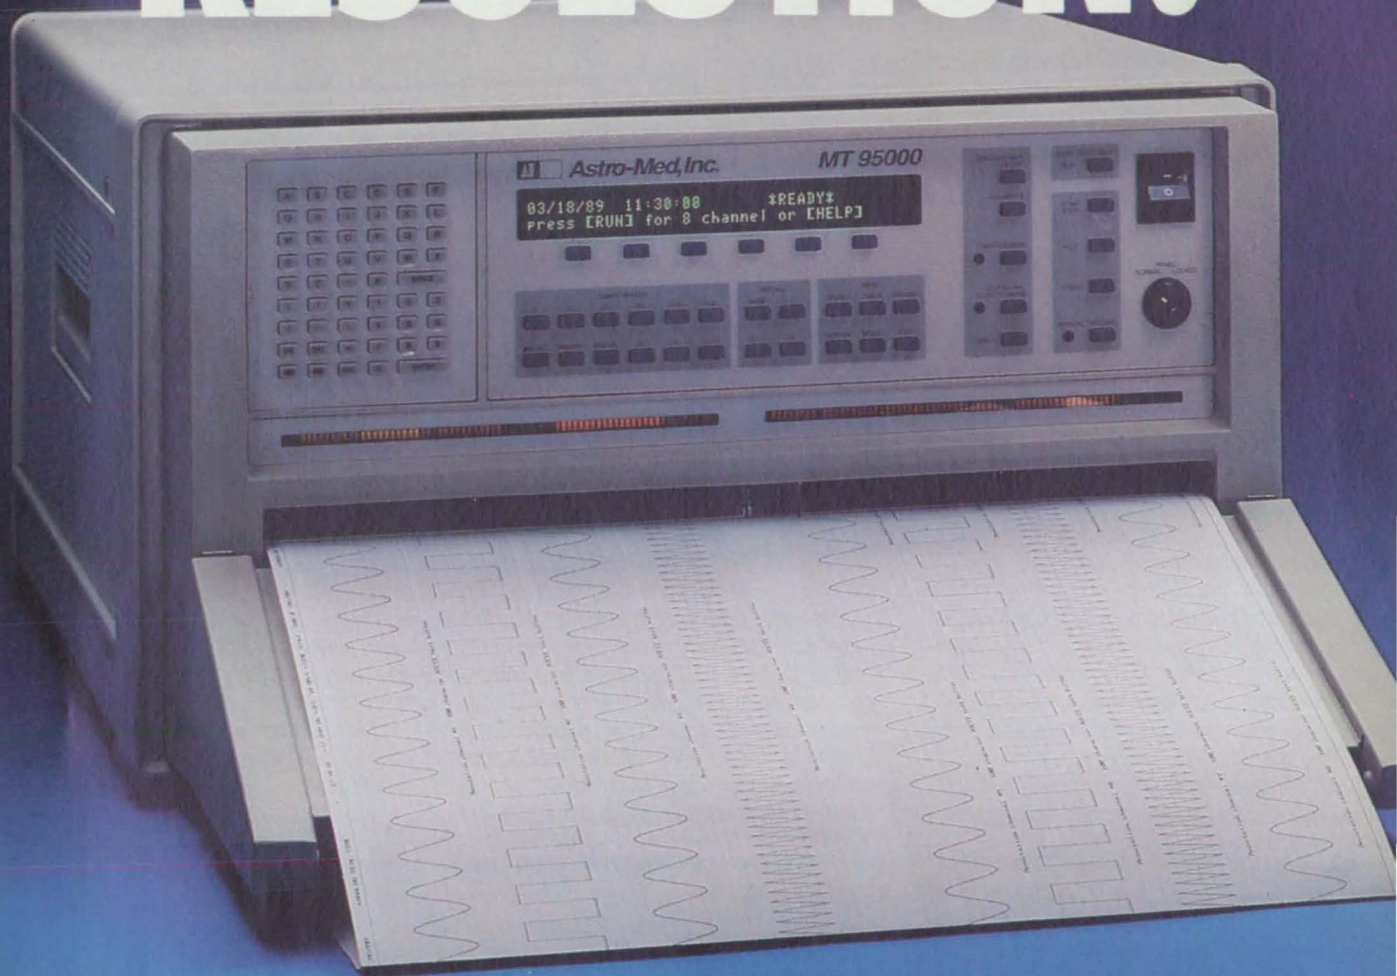

- Laser Quality Writing—300 dpi
- 20 kHz Frequency Response
- Automatic Self-Calibration—Traceable to NBS
- Expandable to 16 Channels
- Data Capture with 200 kHz Sample Rate Per Channel
- Built-In Programmable Signal Conditioners


From its laser-sharp charts to its unparalleled frequency response, this remarkable new 8-channel recorder brings you the technology of the Twenty-First Century today! It outperforms even Astro-Med's MT-9500, which in 1987 was heralded as the first breakthrough in 8-channel recorders in 20 years. It has 50% more reso-

lution, 4 times higher frequency response, and 8 times more memory than the MT-9500. With automatic self-calibration traceable to NBS, expandability to 16 channels, and a host of other important features. We call it the MT-95000, a product so unique that it is protected by U.S. Patent No. 4,739,344.

Phone, Fax or Write for details!

 **Astro-Med, Inc.**

Astro-Med Industrial Park, West Warwick Rhode Island 02893  
Telephone (401) 828-4000 • Toll Free 800-343-4039  
Telex No. 710-382-6409 • Fax (401) 822-2430

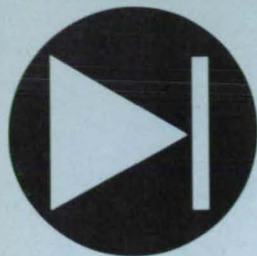

# Electronic Components and Circuits

## Hardware, Techniques, and Processes

20 Flange Correction for Metal-to-Metal Contacts  
20 Thin, Lightweight Solar Cell

22 Doping To Reduce Base Resistances of Bipolar Transistors  
24 Improved Planar Schottky Diode

26 Phototransistors for Long-Wavelength Infrared

## Flange Correction for Metal-to-Metal Contacts


Interfacial resistances can be extracted more accurately from four-terminal measurements.

NASA's Jet Propulsion Laboratory, Pasadena, California

An improved mathematical model provides a correction for the flange effect in estimating the resistance of a square contact between two metal layers from standard four-terminal measurements. The model is an extended version of one developed previously for a contact between a metal layer and a semiconductor layer, wherein the flange effect is important in the semiconductor layer only. Here the flange effect in both metal layers is significant.

As its name suggests, the flange effect occurs in the flanges — the regions of the metal layers in the vicinity of the contact — and is caused by the lateral flow of electrical current in these regions. In the one-flange (semiconductor/metal contact) model, the metal layer is represented by an equipotential plane, the contact zone is shrunken slightly from its true dimensions to a smaller equipotential core embedded in the semiconducting layer modeled as a two-dimensional resistive sheet, and a lumped resistor represents the interfacial resistance. The shrinkage of the core from the original contact zone is given by effective lengths of current flow under the contact derived from a one-dimensional-transmission-line model.

The two-flange (metal/metal contact)

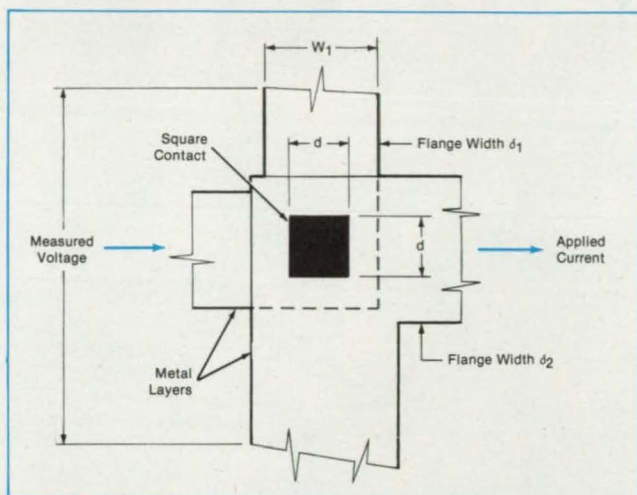

The **Four-Terminal Method** is a standard method for measuring the resistance of a contact like this one between the two metal layers. The resistance of the contact is determined by applying a current and measuring the voltage as shown, then making a correction for the geometry.

model is obtained by piecing together two one-flange models, one for each metal layer. Mathematically, this alters the effective lengths and implicitly distributes the interfacial resistance between two one-flange problems. The two-flange model has been tested by comparison with numerical simulations and with experiments. The resistances predicted by the model were found to agree with those of the simulations at contact sizes of 1 and 4  $\mu\text{m}$

but to disagree somewhat with those of the simulations at intermediate sizes. However, the predictions of the model agreed with measurements in the same size range.

This work was done by Udo Lieneweg and David J. Hannaman of Caltech for NASA's Jet Propulsion Laboratory. For further information, Circle 8 on the TSP Request Card.  
NPO-18052

## Thin, Lightweight Solar Cell

Features include enhanced resistance to ultraviolet light and to energetic charged particles.

Lewis Research Center, Cleveland, Ohio

An improved design for thin, lightweight solar photovoltaic cells with front contacts reduces the degradation of electrical output under exposure to energetic charged particles (protons and electrons). The design also increases the ability of the cells to maintain structural integrity under exposure to ultraviolet radiation by eliminating the ultraviolet-degradable adhesives that have been used to retain cover glasses in some prior designs.

The front (illuminated) surface of the semiconductor substrate of a cell contains rec-

tangular grooves in which the back halves of interdigitated metal contact lines are embedded. The cell junctions lie on the surface, surrounding the metal contacts (see figure). The placement of all the junctions and contacts at the front (rather than placing some contacts at the back as in prior designs) provides shorter paths for the charge carriers generated by incident photons to travel to the junctions and contacts. The shortening of the paths decreases the probability of trapping of charge carriers by defects. Trapping degrades output, and the

defects that cause trapping include those induced by energetic charged particles. Thus, this simple change of configuration helps to maintain output after exposure.

The front half of each contact line is formed in a mating rectangular groove in the back surface of the cover glass. The front surface of the cover glass contains triangular grooves aligned with the metal contacts. The triangular grooves refract the light incident on them away from the contacts and into the cell; without these grooves, the affected portion of the light would fall on the


# Versatile multi-channel digital waveform acquisition and complex analysis.

## Made simple.

Sometimes the most complicated problems are best handled by the simplest of solutions. Like the Nicolet System 500.

This is the most advanced instrument we've ever designed for complex multi-channel waveform acquisition and analysis. Yet with the System 500's unique operating software, it's incredibly easy to use. Software so simple that the System 500 is ready to roll minutes after you lift it out of the box. No pouring over thick manuals. No tedious programming. Just hook it up and turn it on.

And if the software doesn't already fit you like a glove, we've included a

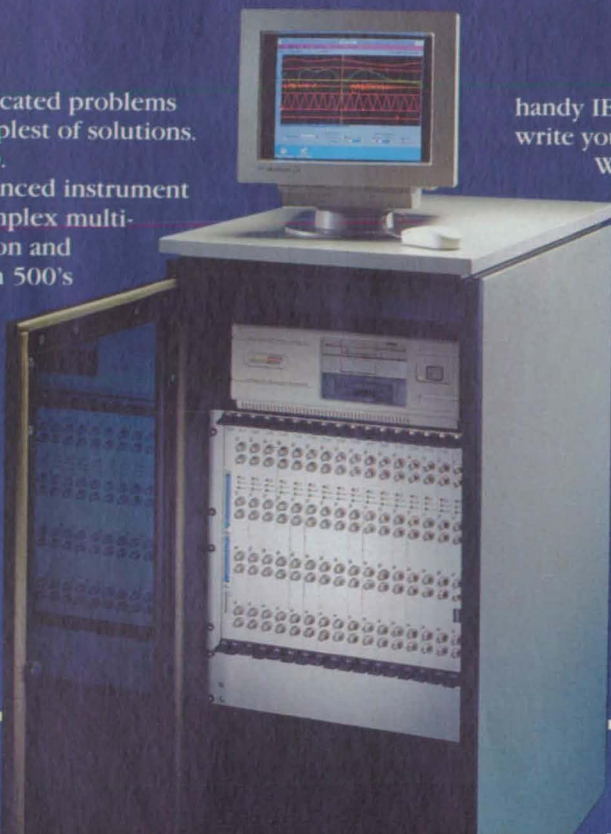

handy IEEE-488.2 command set so you can write your own or have Nicolet do it for you.

With intuitive pull-down menus, mouse and keyboard shortcuts, and easily understood displays, the 500 handles complex procedures with ease. With surprising quickness, you'll process incoming data through hundreds of independent input channels at 12 bit resolution, compile the longest data records (up to one Megaword), and turn even the most detailed acquisitions and analyses into mere child's play.

Need more information? We've made that simple, too. Just give us a call at 1-800-356-3090.

*Nicolet Test Instruments Division*

5225 Verona Rd.,  
Madison, WI 53711-4495  
608/273-5008 or 800/356-3090


**Nicolet**  
INSTRUMENTS OF DISCOVERY

Circle Reader Action No. 697

metal contacts, where it would not generate charge carriers.

If the cells are made of semiconductors from groups III and V of the periodic table (e.g., GaAs or InP), they should be 5 to 10  $\mu\text{m}$  thick. Single-crystal layers of such thicknesses can be made by a peeled-film technique. If the cells are made of silicon, they should be at least 30  $\mu\text{m}$  thick. A typical cell is fabricated by the following sequence of steps:

1. The  $n^+$  and  $p^+$  regions of the semiconductor substrate are produced by diffusion of the dopants into the semiconductor, using photolithographic masking techniques to form the regions on the front surface.
2. An antireflection coat is deposited on the front surface of the semiconductor.
3. The grooves for the contacts are etched or laser-scribed into the front surface with the help of appropriate masks.
4. The metal contact material is deposited into these grooves and made flush with the top of the antireflection coating.
5. The aligned triangular and rectangular grooves are made in the upper and lower surfaces, respectively, of the cover glass.
6. By use of an appropriate masking tech-

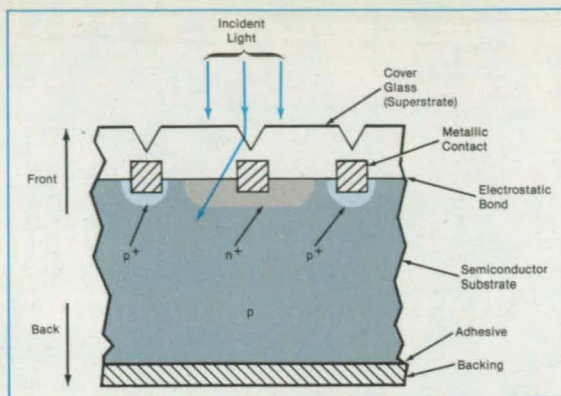

**Interdigitated Front Contacts** and front junctions are formed on the semiconductor substrate. Mating contacts are formed on the back surface of the cover glass. The cover glass and substrate are electrostatically bonded together.

nique in conjunction with plating, evaporation or other means, contact metal is deposited in the rectangular grooves, flush with the surface of the glass.

7. The cover glass and the semiconductor substrate are aligned so that their metal contacts coincide, then are joined by electrostatic bonding.
8. Multiple cells can be attached to a single large-area cover glass and interconnected with an appropriate pattern in the glass.
9. A backing layer, typically of Kapton (or equivalent) polyimide is attached to the

back surface of the cell(s) by a silicone adhesive.

This work was done by Henry W. Brandhorst, Jr., and Irving Weinberg of the Lewis Research Center. For further information, Circle 159 on the TSP Request Card.

This invention is owned by NASA, and a patent application has been filed. Inquiries concerning nonexclusive or exclusive license for its commercial development should be addressed to the Patent Counsel, Lewis Research Center [see page 18]. Refer to LEW-14959.

## Doping To Reduce Base Resistances of Bipolar Transistors


A  $p/p^+$  base-doping profile would reduce base resistance without reducing current gain.

NASA's Jet Propulsion Laboratory, Pasadena, California

A modified doping profile has been proposed to reduce the base resistances of bipolar transistors. Low base resistances are desirable for high-speed applications. Decreases in base resistances can also result in decreases in voltage drops along emitter/base junctions, with consequent decreases in the undesired crowding of emitter currents.

When base resistances are reduced by increasing the concentrations of dopants in the bases of bipolar transistors in the conventional manner, emitter efficiencies and current gains are reduced. The proposed base structure would reduce the base resistance without degrading the current gain. As shown in the figure, it would involve the placement of a  $p$  (or  $n$ ) layer near the emitter and a  $p^+$  (or  $n^+$ ) layer near the collector in the case of an npn (or a pnp, respectively) transistor. The  $p$  (or  $n$ ) layer near the emitter ensures a high emitter efficiency, and the resistance would be reduced by the incorporation of the  $p^+$  or  $n^+$  layer.

For example, the concentration of the dopant in, and the thickness of, the base of a typical npn bipolar transistor are  $1 \times 10^{18} \text{ cm}^{-3}$  and 0.5  $\mu\text{m}$ , respectively, and cause the sheet resistance of the base to be 200 ohms per square. The proposed

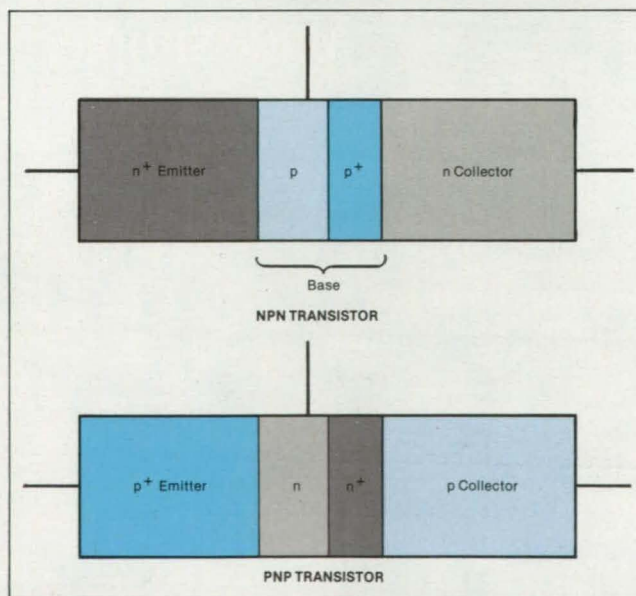

The **Proposed Low/High Doping Profile** would reduce the resistance of the base without reducing the current gain.

low/high base profile of  $1 \times 10^{18}$  and  $1 \times 10^{20} \text{ cm}^{-3}$  and thicknesses of 0.2 and 0.3  $\mu\text{m}$  for the  $p$  and  $p^+$  layers, respectively, would reduce the sheet resistance of the base to less than 30 ohms per square.

The proposed low/high base-doping profile could be realized by such low-temperature deposition techniques as molecular-beam epitaxy, ultra-high-vacuum

chemical-vapor deposition, and limited-reaction epitaxy. These techniques can produce the desired doping profiles without excessive diffusion of dopant.

This work was done by True-Lon Lin of Caltech for NASA's Jet Propulsion Laboratory. For further information, Circle 102 on the TSP Request Card. NPO-17948



# We've Opened Minds To Ada



In just a few short months, Meridian has opened over 5000 minds to Ada.

Programmers who'd shied away from Ada, due to high prices and lengthy learning curves, have been quick to recognize the revolution Meridian's latest complete Ada development system, OpenAda, has set in motion.

At last, an Ada product that rivals the likes of TurboPascal® and C++.

**"Meridian Software Systems slashed the price and raised the standard for PC based Ada development." -PC Week**

OpenAda sets a new standard with an affordable, quick-start Ada development environment for the Macintosh® or PC. With hyper-text on-line help and

a windowed editor, you'll quickly discover why Ada's not just for defense projects any more.

And for \$299 or less you can't afford to pass up this opportunity to explore the industry's fastest growing language on a top quality development system.

**"If you want to know what this language is all about, get OpenAda.**

**It's the best low-cost Ada compiler around." -IEEE Computer**

In an effort to prepare programmers for a transition to Ada, both corporate training programs and universities have added Ada to their curriculums, using OpenAda as the training vehicle.

It's the perfect choice. Even at this exceptional value, it's complete. For both

training and development. It includes:

- compiler/linker ■ debugger
- optimizer ■ graphic interface ■ Amake ■ utility and Environment library
- Ada syntax-directed editor ■ graphics/math library ■ on-line LRM

To remain at the forefront of an evolving industry, you've got to know Ada. And OpenAda makes it easy for you to invest in your future.

You can trade-up to a full line of Ada development products, including PC (DOS AND UNIX), MACINTOSH, SUN, AND DIGITAL EQUIPMENT CORP. platforms. And you'll receive full value for your OpenAda purchase for two years. Meridian's renowned customer support is also available.

Order now. Call **1(800)221-2522**. If you wait, it will cost \$495 to open your mind to Ada.



Meridian Software Systems, Inc., 10 Pasteur St., Irvine, CA 92718. OpenAda is a registered trademark of Meridian Software Systems, Inc. All product names are registered trademarks of their respective manufacturers.

Circle Reader Action No. 496

*Open*  
**Ada**

# Improved Planar Schottky Diode

Changes in the epitaxial layer structure and additional fabrication steps reduce conversion loss in millimeter and submillimeter mixers.


Goddard Space Flight Center, Greenbelt, Maryland

Modifications of the design and fabrication of a surface-channel planar Schottky diode (*NASA Tech Briefs*, Vol. 12, No. 7, pp. 22-23) reduce the parasitic capacitances to the theoretical minimum, eliminate the buried layer of conductive material between the anode contact and the semi-insulating substrate, and reduce the thickness of the diode chip. These im-

provements combine to reduce the conversion loss and noise of the diode in high-frequency mixer applications.

A thin layer of AlGaAs is added to the standard initial epitaxial-layer structure, as shown in part 1 of the figure. This layer acts as an etch stop during a later fabrication step.


After the surface-channel diode fabrica-

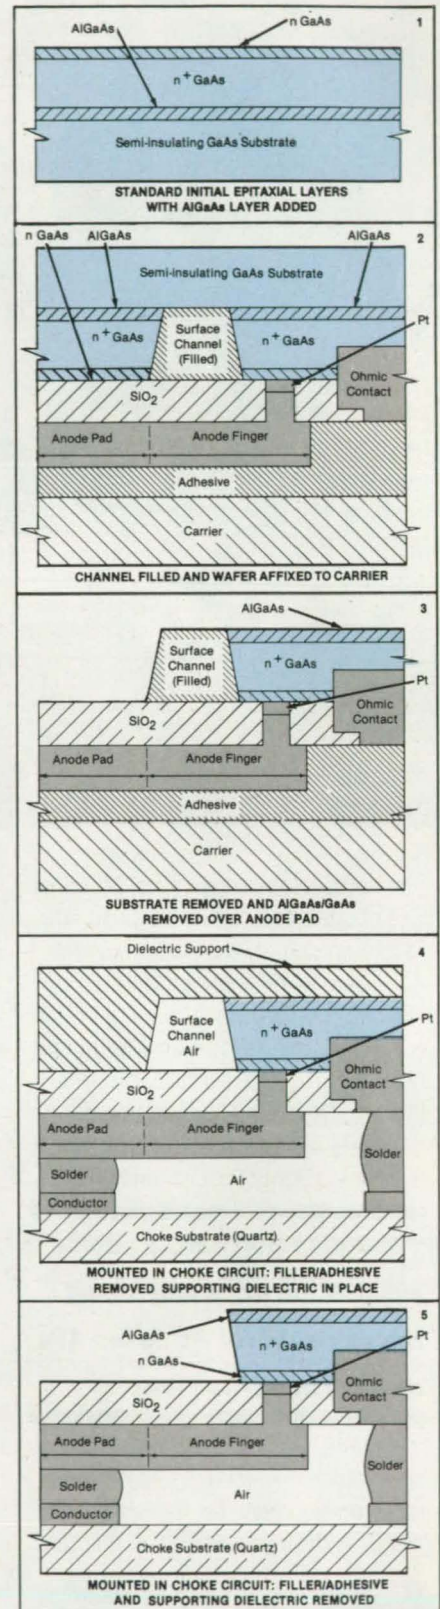

The Modified Planar Schottky Diode is shown at various stages in its fabrication.

tion but before dicing, a polymer filler is injected into the etched surface channel on the wafer. This filler preserves the channel during subsequent fabrication steps by

## BUILD TO SUIT.

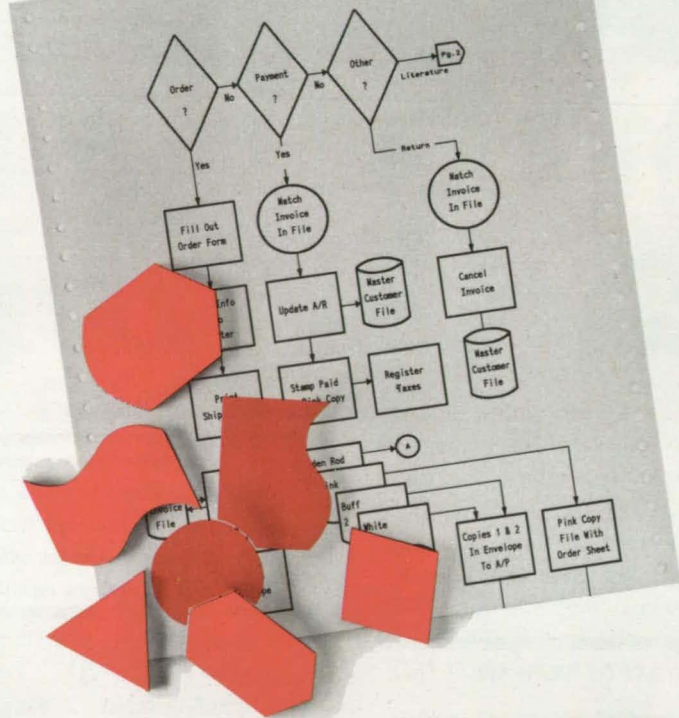

Now, you can create, update and print presentation-perfect flowcharts to your specifications — in no time!

Quick to master and a snap to use, Patton & Patton's flowcharting software is the standard of both large and small businesses around the world — and is available through all major software dealers.

See your dealer today! Or, for a "live," interactive demo disk, call: **800-525-0082, ext. 2805.** International: 408-778-6557, ext. 2805.




**PATTON & PATTON**  
Software Corporation

Excellence in charting the flow of ideas!

Works on IBM & 100% compatible PC's, supports CGA/EGA/VGA and over 150 dot matrix and laser printers, with multiple print densities and 10 font sizes. **Creates multi-page charts, portrait or landscape, on most standard paper sizes.** Mouse or keyboard controlled. Supports International Characters.

IBM is a registered trademark of International Business Machines Corporation.

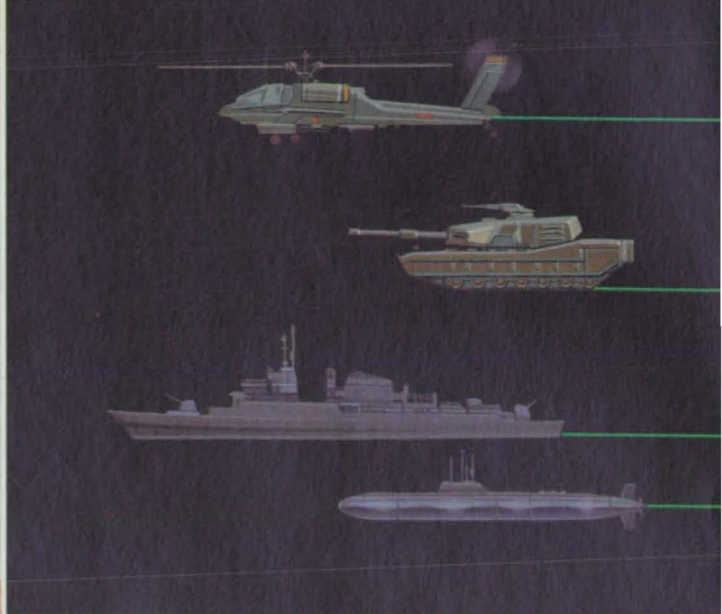

# The programmable display system:

## Design applications for land, sea or air.

Vivisun Series 2000, now the leading programmable display pushbutton system, interfaces the operator with the host computer. The user-friendly LED dot-matrix displays can display any graphics or alpha-numerics and are available in green, red or amber. They can efficiently guide the operator through any complex sequence with no errors and no wasted time.

They also simplify operator training as well as control panel design. One Vivisun Series 2000

programmable display system can do the work of 50 or more dedicated switches. In short, Vivisun Series 2000 gives the design engineer more control over the design.


Contact us today.



### AEROSPACE OPTICS INC.

3201 Sandy Lane, Fort Worth, Texas 76112  
(817) 451-1141 • Telex 75-8461 • Fax (817) 654-3405

*Vivisun Series 2000  
programmable displays. The intelligent  
communications system.*

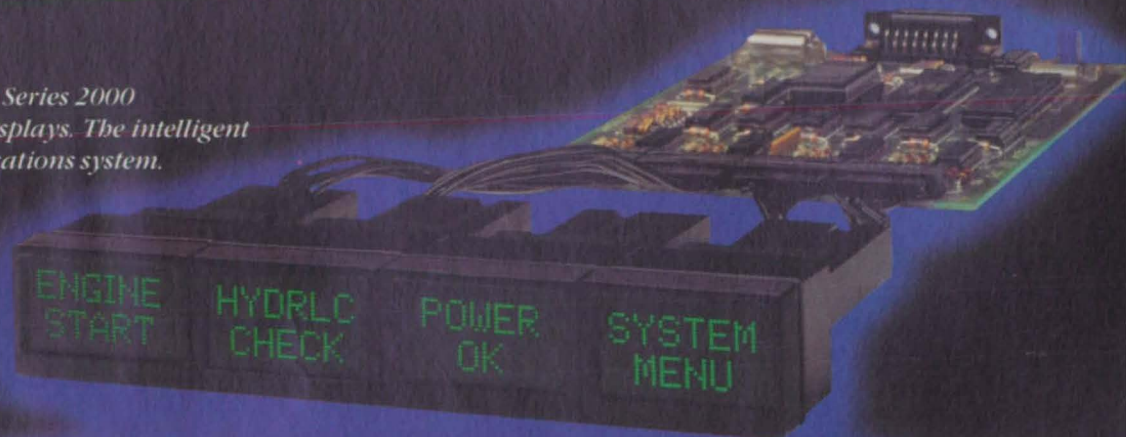

SERIES

# VIVISUN 2000™

protecting it from other etchants. The filler may be the same material used as a temporary adhesive when the wafer is inverted and bonded to a carrier, as shown in part 2 of the figure, and may be injected at the same time. This filler/adhesive must be unaffected by photoresist and photoresist solvents but must be easily removed by other chemicals at the end of fabrication.

Once the wafer is bonded to the carrier, the semi-insulating substrate is etched away to the AlGaAs etch stop. The wafer is patterned with photoresist while still on the carrier, and the AlGaAs and GaAs above the anode contact pad are removed, as

shown in part 3 of the figure. Because of the large size of the surface channel, this backside patterning is not critical in terms of alignment.

A thin [1- to 2-mil (25- to 50- $\mu\text{m}$ )] layer of low dielectric-constant material, such as a polymer, spin-on glass, or quartz with adhesive, is applied to the wafer to provide support. The wafer is diced into individual chips while still bonded to the carrier. After removing the chips from the carrier and removing the surface channel filler, single chips are soldered or bonded to a choke structure in a "flip-chip" configuration. The diode chip may be used with the new sup-

port dielectric in place (see part 4 of figure) or, for absolute minimum parasitic capacitance and thickness, the support dielectric may be etched or dissolved away (see part 5 of figure).

This work was done by William Bishop and Robert Mattauch of the University of Virginia for Goddard Space Flight Center. For further information, Circle 21 on the TSP Request Card.

Inquiries concerning rights for the commercial use of this invention should be addressed to the Patent Counsel, Goddard Space Flight Center [see page 18]. Refer to GSC-13205.

## Phototransistors for Long-Wavelength Infrared

Detection would be based on impurity-to-continuum transitions.

NASA's Jet Propulsion Laboratory, Pasadena, California

Phototransistors of a proposed new type would be used to detect photons that have wavelengths of 8 to 150  $\mu\text{m}$ . Integrated-circuit imaging arrays of such phototransistors would be useful in infrared remote sensing.


A device of this type would be a silicon, germanium, or silicon/germanium phototransistor in which the junction between the collector and the base is lightly doped with impurities. In the case of the npn Si/Ge/Si phototransistor shown in the figure, the dopant would be one or more electron-donor material(s) in which the electron-energy states lie slightly below the bottom of the conduction band of silicon.

Photons of energy equal to or greater than the gap between these states and the conduction band would excite electrons from the donor states to the continuum of energy states in the conduction band. The electric field that arises from the application of the customary reverse bias to the collector/base junction would sweep these photoexcited electrons toward the collector.

The positive donor ions left by the photoexcitation would increase the forward bias across the emitter/base junction; this would cause electrons to be injected from the emitter to the base. If the lifetimes of the injected electrons exceeded the times of transit across the base, then most of this injected-electron current would be amplified by normal transistor action.

Although a phototransistor of this type could have a Ge or Si homostructure, a heterostructure containing both Si and Ge is preferred because it blocks the transport of holes and thereby contributes to the current gain. Blocking the hole current also decreases the dark current and its contribution to noise.

Another alternative configuration would include a blocked-impurity-band structure, which makes it possible to take advantage of concentrated doping without incurring

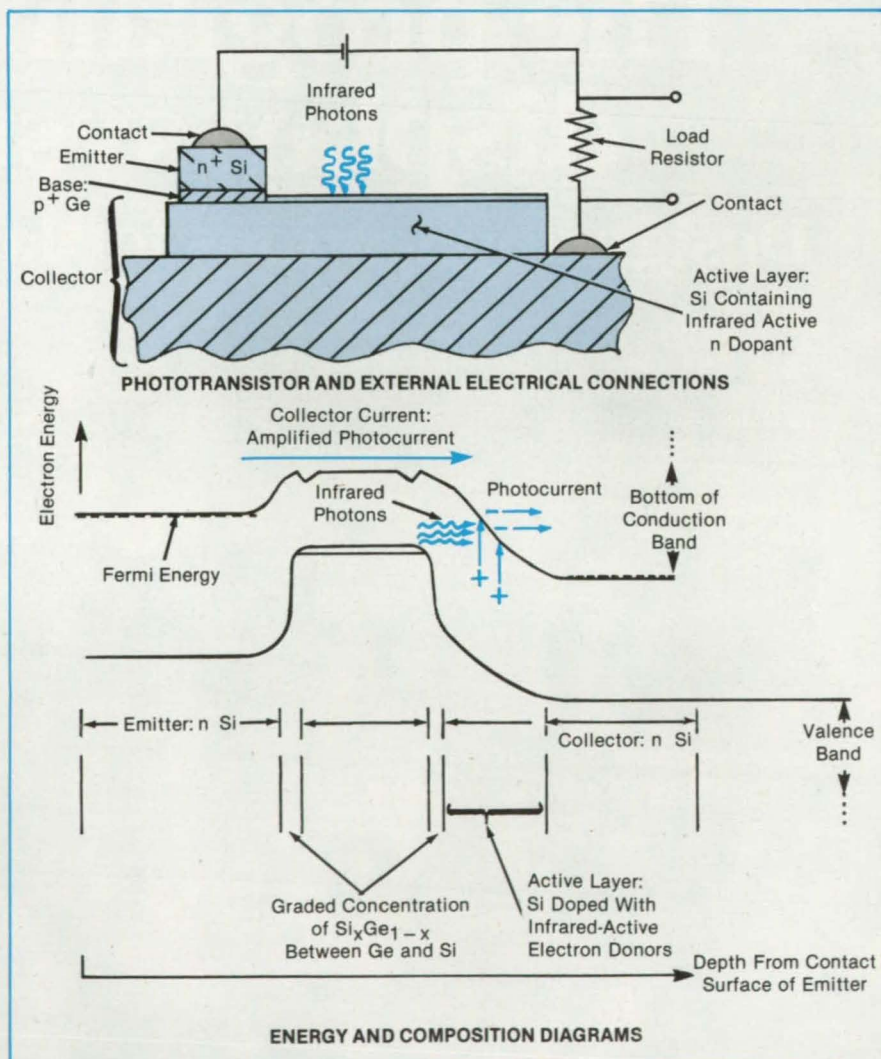

An npn Phototransistor, of several versions of a proposed new type, would include infrared-active electron-donor dopant in a thin layer at the collector/base junction.

the disadvantage of large leakage of current by conduction through the impurity band. In this case, the blocking layer (in which charges cannot travel in the impurity band) would be a thin, undoped layer grown on the collector side of the heavily

doped active layer.

This work was done by Shmuel I. Borenstain of Caltech for NASA's Jet Propulsion Laboratory. For further information, Circle 138 on the TSP Request Card. NPO-18029

# Introducing the most *accurate* direct drive *optical* *mount* available today.



Superior speed and motion control capability make the UNIDEX<sup>®</sup> 21 the ideal controller for the AOM360 mounts.

Aerotech's AOM360 series optical mounts provide the most precise azimuth/elevation positioning available today. Here's why:

- **You can have accuracies up to 1 arc second** depending upon the transducer selected — choose from encoders, Inductosyn and resolvers.
- **Velocity to 60°/sec is standard.**
- **Wobble to 1 arc second and orthogonality to 5 arc seconds are guaranteed.**
- **Resolution and bi-directional repeatability to 0.1 arc second are available.**
- **Backlash and hysteresis are eliminated** due to the use of direct-drive samarium-cobalt DC motors and the absence of any gear trains.
- **Highly accurate rate control is achievable** with optional low ripple tachometers.

- **Thermal stability is better than 2 micro-radians/°C.**

With their high accuracy capability, the AOM360 series mounts are ideal for automatic testing of precise components such as sensors, wafers and optics; laser beam steering; target acquisition; and telescope alignment.

And that's not all! For details on this exciting new product, send for your AOM360 series brochure today.

**AEROTECH, INC.**  
101 Zeta Drive  
Pittsburgh, PA 15238  
Phone (412) 963-7470  
Fax (412) 963-7459

**Circle Reader Action No. 375**





# Electronic Systems

Hardware, Techniques,  
and Processes

- 28 Computer Processing of Tunable-Diode-Laser Spectra
- 30 Twin-Mirrored-Galvanometer Laser-Light-Sheet Generator

- 30 Associative-Memory Array of Optical Logic Gates
- 32 Deep FIFO Surge Buffer

## Books and Reports

- 33 Precise Autohover Control for a Helicopter

## Computer Processing of Tunable-Diode-Laser Spectra

Measurements in three channels are processed into spectra.

NASA's Jet Propulsion Laboratory, Pasadena, California

A tunable-diode-laser spectrometer that measures the transmission spectrum of a gas operates under the control of a computer, which also processes the measurement data. The laser beam is split into parts along three different paths: one through a germanium etalon, one through an absorption cell filled with a reference gas at low pressure, and one through an absorption cell filled with the specimen gas, the absorption or transmission spectrum of which one seeks to determine (see Figure 1). The computer tunes the laser in small increments of wavelength by increasing or decreasing the laser current in small steps. At each increment, three photodetectors measure the laser-beam powers that reach the ends of the paths.

These measurements are digitized, then processed as illustrated schematically in Figure 2. The measurement data represent raw transmission spectra that include the effects of instrumental distortion. The raw transmission spectrum of the etalon represents the interference-fringe pattern of the etalon, which defines a relative-wavenumber scale and is used to linearize the wave-number scale via a polynomial interpolation procedure. An absolute-wavenumber scale is derived from the spectrum of the reference gas, which is also used to determine the laser linewidth and to confirm the free spectral range of the etalon.

The spectrum of the specimen gas is normalized to a 100-percent-transmission baseline through polynomial fitting in the portions of the spectrum in which the density of absorption lines is low and, consequently, the 100-percent-transmission level is easily identified. To obtain this normalization in the portions of the spectrum in which the continuum absorption is high because the pressure of the specimen gas is high or because the spectral lines of the specimen gas are congested, a scan is performed with the specimen-gas absorption cell evacuated.

The spectral positions of spectral lines and maximums of the etalon fringes are obtained approximately via first- and second-derivative locating procedures and,

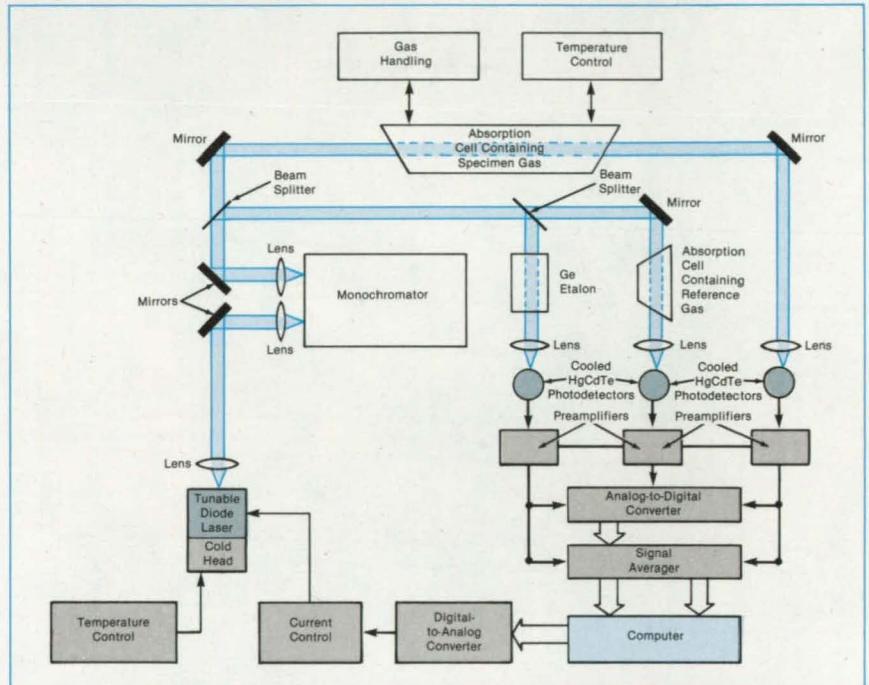


Figure 1. The **Computer Controls the Current** supplied to the tunable diode laser, thereby stepping it through small increments of wavelength while processing the spectral measurements at each step.

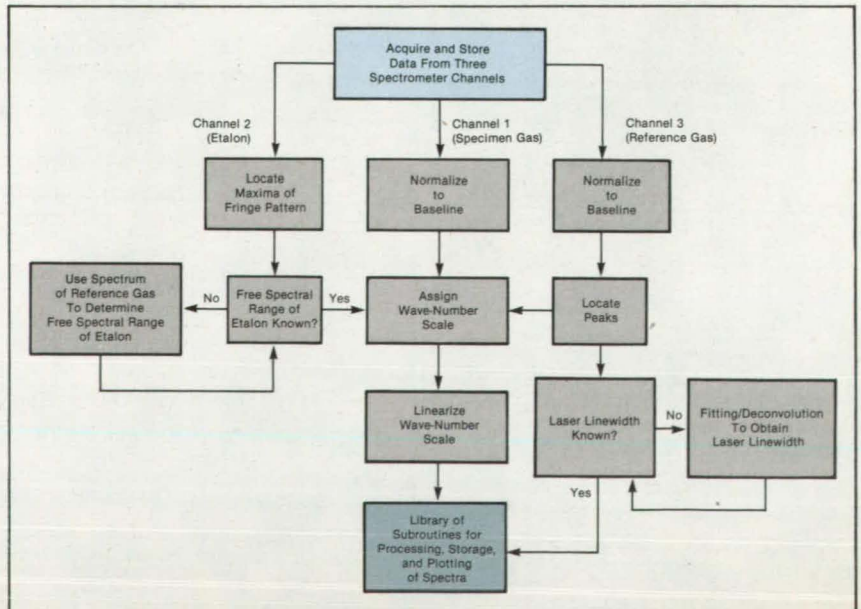


Figure 2. This **Flow Chart** illustrates the steps in the analysis of the raw spectral data.



In a nutshell,  
it's the world's most advanced  
microminiature camera.

As you can see, Toshiba's new microminiature color camera actually fits inside a peanut shell. But what's more incredible is what fits inside the camera.

It has the first and only  $\frac{1}{2}$ " CCD that delivers 420,000 pixels for over 460 lines of horizontal resolution. It also has the only electronic shutter with 8 settings from 1/60 to 1/10,000 sec. Not to mention Y/C and composite video outputs and choice of 6 cable lengths from 2 to 30 meters. Also available are 5 lenses from super wideangle to telephoto. And C-mount adaptor.

So call 1-800-537-7045 [N.J., 201-628-8000, ext.3750] for more information on Toshiba's IK-M40A. You'll find out why buying any other microminiature camera would be nuts.



In Touch with Tomorrow  
**TOSHIBA**

Toshiba Video Systems, 82 Totowa Road, Wayne NJ 07470

**Circle Reader Action No. 393**

when necessary, with the help of graphical input by the user. More accurate values for these positions are obtained via least-squares fitting procedures. A wave-number scale is assigned by using the known wavelengths or wave numbers of the spectral lines of the reference gas along with the free spectral range of the etalon. Non-

linearities in the wave-number scale are identified by observing irregularities in the numbers of data points that separate the etalon-fringe peaks. The computer program includes a library of routines for the general manipulation and plotting of spectra, least-squares fitting of direct-transmission and harmonic-absorption spectra, and

deconvolution for determination of the laser linewidth and for removal of instrumental broadening of spectral lines.

This work was done by Randy D. May of Caltech for NASA's Jet Propulsion Laboratory. For further information, Circle 123 on the TSP Request Card. NPO-18019

## Twin-Mirrored-Galvanometer Laser-Light-Sheet Generator

Multiple, rotating laser-light sheets are generated to illuminate flows in wind tunnels.


Langley Research Center, Hampton, Virginia

Light sheets generated with either laser or noncoherent light sources have found many applications in the visualization of flows. However, previous systems were usually dedicated to specific viewing geometries. A new system was designed and developed to provide flexibility and adaptability to a wide range of applications. The design includes the capability to control the size and location of the laser-light sheet in real time, to generate horizontal or vertical sheets, to sweep the sheet repeatedly through a volume, to generate multiple sheets with controllable separation, and to rotate single or multiple laser-light sheets.

The galvanometer-mirror-based laser-light-sheet system (see figure) was developed for use in the Basic Aerodynamics Research Tunnel (BART) at NASA Langley Research Center. The system generates and positions single or multiple light sheets over aeronautical research models being tested in the low-speed tunnel.

The laser-light-sheet system is evolving. Initially, the system was configured to generate single horizontal or vertical laser-light sheets. The capability to generate multiple laser-light sheets or sweep the position of a single sheet was added next. The capability to rotate a single laser-light sheet by use of a sine/cosine potentiometer was then added. The capability to rotate multiple laser-light sheets was added by incorporating a rotation output in the multiple-sheet generator. The latest addition is a Bragg cell to remove spurious lines between the sheets.

The addition of each new capability was accomplished without compromising existing capabilities. The system is capable of producing up to 12 sheets of laser light at an angular divergence of  $\pm 20^\circ$ . The maximum rate of scanning for any line is

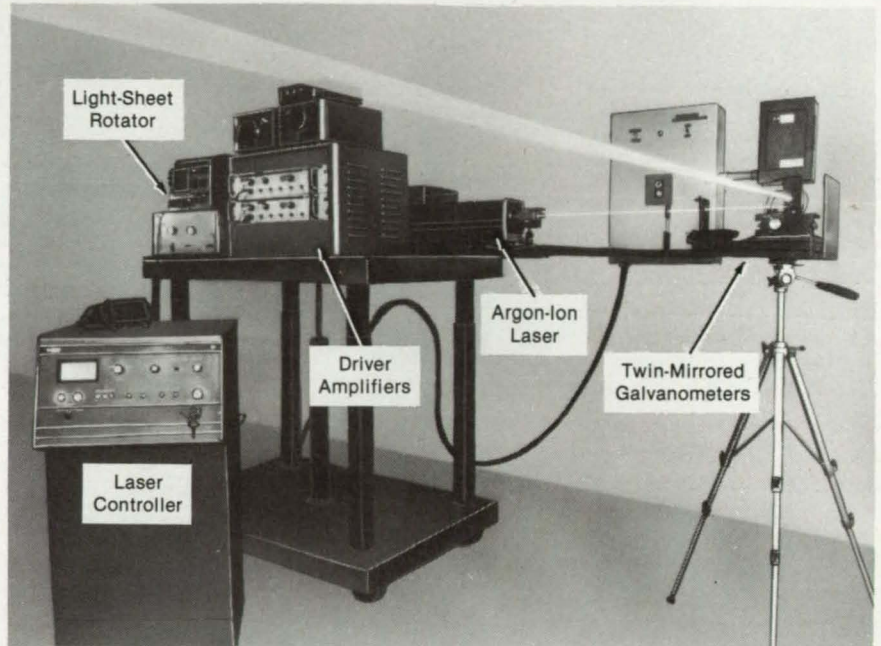

The **Light-Sheet System** includes electronic equipment and a laser mounted on an adjustable-height platform. The twin-mirrored galvanometer unit is supported by a tripod to reduce vibration.

approximately 500 Hz. The rate of scanning of the generated line along the orthogonal axis is also controlled. The time-averaged line can be rotated to any desired degree.

When this system is used to illuminate smoke entrained in the flow over a delta-wing model, it reveals the vortical flow produced by the separation of the flow at the leading edge of the model. The light-sheet system has proved to be very adaptable and easy to use in sizing and positioning light sheets in wind-tunnel applications. Other possible applications include use in the construction industry to align beams of a building. Artistic or display applications

are also possible.

This work was done by David B. Rhodes, John M. Franke, Stephen B. Jones, and Bradley D. Leighty of Langley Research Center. Further information may be found in NASA TM-100587 [N88-25901], "A Twin-Mirrored Galvanometer Laser Light Sheet Generator."

Copies may be purchased [prepayment required] from the National Technical Information Service, Springfield, Virginia 22161, Telephone No. (703) 487-4650. Rush orders may be placed for an extra fee by calling (800) 336-4700.

LAR-14248

## Associative-Memory Array of Optical Logic Gates

Differences between binary input and memory images are measured in terms of Hamming distances.

NASA's Jet Propulsion Laboratory, Pasadena, California

An experimental optical associative-memory apparatus measures the similarity or dissimilarity between an input binary image and each of  $M$  binary images in mem-

ory. Using the Hamming distance as the measure of dissimilarity, it determines which (if any) of the memory images closely or most closely resembles the input im-

age. It indicates this match by displaying an image (e.g., the recognized image or a symbol, word, number, or other substitute image) in real time on an output plane.



The apparatus contains a two-dimensional array of optical exclusive-OR gates, which are used to determine the Hamming distance between the input and memory images. Figure 1 illustrates the exclusive-OR function of a simplified (one-dimensional) array in which the input and memory images are binary column vectors. The array is illuminated from the input side with horizontally polarized light and the input and binary images, each of which is impressed on a spatial light modulator. The portions of each modulator wherein the intensity of the image represents binary "one" rotate the polarization by 90°, while those wherein the intensity represents binary "zero" do not change the polarization.

The light emerging from the memory-image spatial light modulator passes through an analyzer oriented for vertical polarization. In the spots where the input and memory images are both "zero" or both "one" (where they match), the output of the analyzer is dark and the contribution to the Hamming distance is zero. In the spots where the input and memory images differ (one of them is "zero" while the other is "one"), the output of the analyzer is bright and the contribution to the Hamming distance is 1.

Figure 2 illustrates the full two-dimensional apparatus. The input image is electronically made into  $M$  replicas that are impressed on the first spatial light modulator. Each of the  $M$  different memory images is impressed on the second spatial light modulator in a position corresponding to that of one of the replicas of the input image. An integrating lens (or, alternatively, an array of lenslets) focuses the exclusive-OR output image from each of the  $M$  pairs of input and memory images onto one of  $M$  photodetectors. The output of each photodetector is proportional to the Hamming distance between the images in the pair; an electronic circuit determines which one represents the shortest Hamming distance and signals an associative-recall module to display the corresponding output image.

This work was done by Tien-Hsin Chao of Caltech for NASA's Jet Propulsion Laboratory. For further information, Circle 129 on the TSP Request Card.

This invention is owned by NASA, and a patent application has been filed. Inquiries concerning nonexclusive or exclusive license for its commercial development should be addressed to the Patent Counsel, NASA Resident Office-JPL [see page 18]. Refer to NPO-17997.

Figure 2. The **Optical Associative-Memory Apparatus**, operating on the principle illustrated in simplified form in Figure 1, finds which (if any) of  $M$  memory images resembles or most closely resembles the input image.

# FOR A TOUGH CASE GET HARDIGG™

**Rotational molding.**  
Corners and edges are 10% to 20% thicker than flat walls, providing strength where you need it most. One piece stress-free molded lid and base.

**Molded-in tongue-in-groove gasketed parting line.**  
Resilient polyethylene shell returns to original configuration after impact.

**Low-profile cam-action wing-turn catches attached to molded-in metal inserts.**  
High strength, lightweight hardware. Replacement will not penetrate container shell.

**Recessed hardware.**  
Fully protected from damage.

**Positive anti-shear locks.**  
Prevents lid separation from base on impact. Minimizes stress on hardware.



**Lightweight, MIL-SPEC off-the-shelf protection against shock, vibration, moisture, temperature extremes.**

**HARDIGG™ CASES**

A Division of Hardigg Industries, Inc.  
393 No. Main Street, P.O. Box 201, South Deerfield, MA 01373 (413) 665-2163 FAX: (413) 665-8061

**Circle Reader Action No. 492**

Figure 1. This **Column of Optical Exclusive-OR Gates** produces an output image that is dark where the input and memory images match and bright where they do not match. Thus, each segment of the output image represents a "zero" or "one" contribution to the Hamming distance between the input and memory images.

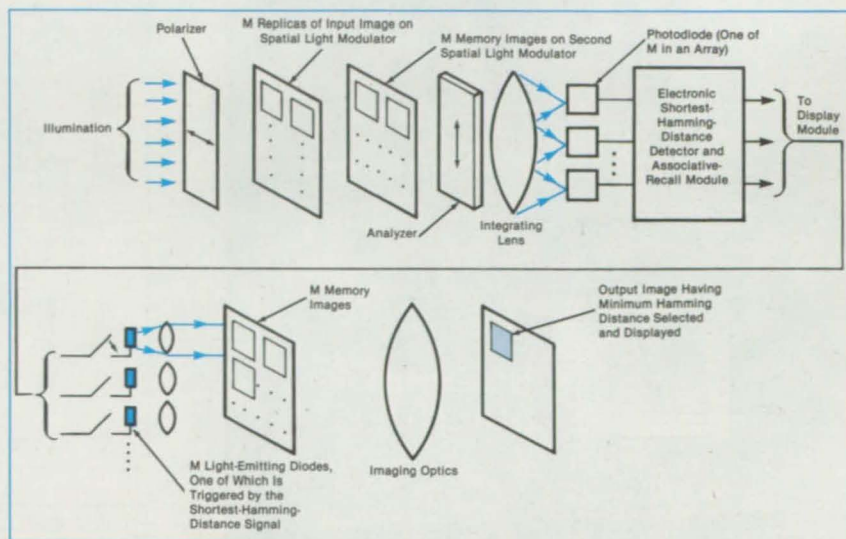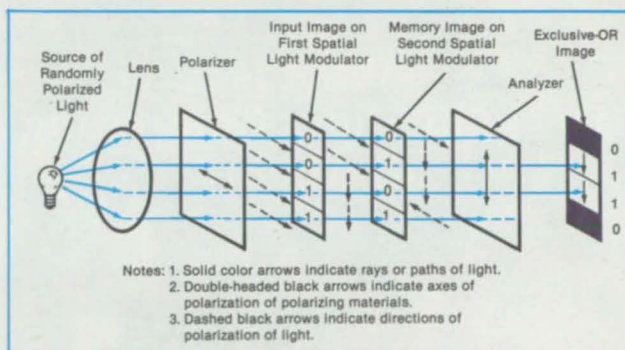

# Deep FIFO Surge Buffer

A data-acquisition system temporarily accepts data at a higher rate.

Ames Research Center, Moffett Field, California

A first-in/first-out (FIFO) buffer temporarily stores short surges of data generated by a data-acquisition system at an excessively high rate and releases the data at a lower rate suitable for processing by a computer. The size and complexity of the FIFO buffer are reduced while its capacity is enhanced by the use of newly developed, sophisticated integrated circuits and by a "byte-folding" scheme that doubles the effective depth and data rate.

The system (see Figure 1) allows for tradeoff between the number of data channels (up to 64) and the sampling rate in each channel, each of which is equipped with its own sample-and-hold and 16-bit analog-to-digital converter circuits. The computer can accept 16-bit data at a maximum rate of only 500,000 pulses per second, whereas the 64 channels of the data-acquisition system operating at full capacity can generate data at 2,839,040 pulses per second. The FIFO buffer must be capable of storing the difference (2,339,040 pulses per second) during a burst 2.95 seconds long.

Each channel is equipped with a unit of FIFO memory that includes a FIFO ran-

dom-access-memory (RAM) controller, two memory arrays, each containing four  $8 \times 32$  K static RAM integrated circuits, and latching registers (see Figure 2). Peripheral programmable-array-logic integrated circuits are used to route clock signals to and from the FIFO RAM controller, the input and output latching registers, and the static RAM memory array.

The principle of operation is as follows: At the end of each analog-to-digital conversion, an "end-of-conversion" pulse triggers a flip-flop and sends a "write" request to

the FIFO RAM controller. This toggles "write" data into the latching registers and enables double-speed operation of the writing port. The data are strobed in and out sequentially to make one 16-bit  $\times$  128 Kbyte writing/reading cycle. The FIFO RAM controller reads data from the memory array when it receives a "read request" in the form of an "output enable" signal from the computer.

This work was done by Gerald Temple, Marc Siegel, and Zwi Amitai of Ames Research Center. For further information, Circle 71 on the TSP Request Card. ARC-12159

Figure 1. The Data-Acquisition System includes a unit of FIFO memory in each channel of incoming data. The FIFO buffer, consisting mostly of the collection of these FIFO memory units, stores large surges of incoming data and releases them to the computer at a lower rate that it can handle.


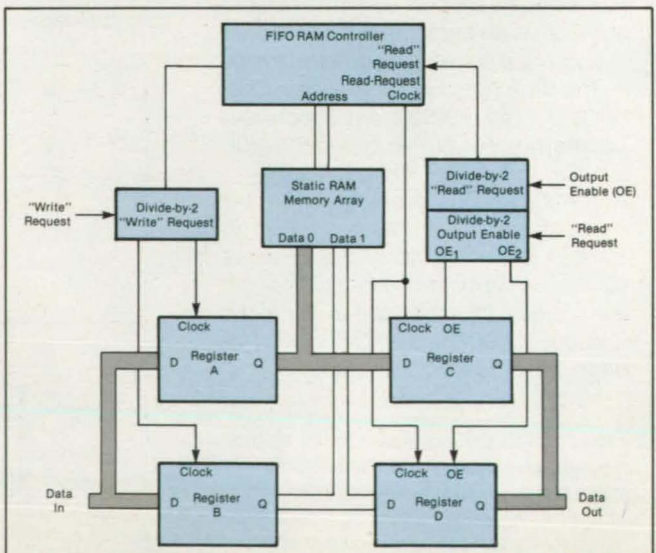


Figure 2. Each Unit of FIFO Memory includes ancillary circuitry that executes a 2 x byte-folding scheme.

## What is Desktop Super Computing all About?

- 25 to 450 MFLOPs and Beyond
- 1.6 G bytes/sec system bandwidth
- Up to 144 Mbytes memory
- Macintosh®, IBM® & SUN® hosts
- Complete software development environment

It's About Time.

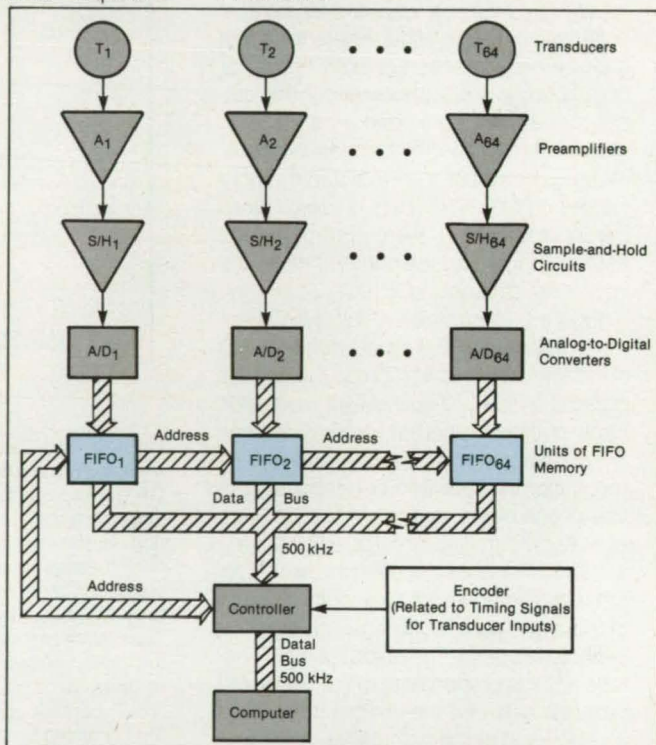

**DOLPHIN SCIENTIFIC**

2698 Junipero Ave, Suite 104 Long Beach, CA 90806-2124  
voice (213)988-8930 fax (213)988-8935

©1990 Dolphin Scientific, Inc. All Rights Reserved.  
All other trademarks mentioned are held by their respective companies.

# FINALLY! TELEDYNE RELAY QUALITY FOR JUST

**\$6.00\***



ACTUAL SIZE


**W**e're pleased to introduce optimum price/performance in a DPDT relay designed for very dense packaging in cost-conscious commercial applications.

Our 172 Centigrad<sup>®</sup> uses TO-5 relay technology to provide high overall reliability and excellent resistance to environmental extremes. It's available at an unusually affordable quantity/price, thanks to vertical integration and automation in our manufacturing operations. Three models are offered in a basic DPDT configuration.

Applications include telecommunications, test instruments, mobile

#### DETAILED ELECTRICAL SPECIFICATIONS (@ 25°C)

GENERIC PART NUMBERS		172-5	172-12	172-26
Coil Voltage (VDC)	Nom.	5.0	12.0	26.5
	Max.	5.8	16.0	32.0
Coil Resistance (ohms $\pm 20\%$ )		64	400	1600
Pick-up Voltage (VDC, Max.) Pulse Operation		3.8	9.0	18.0
Coil Operating Power at Nominal Voltage (Milliwatts)		405	360	440
Contact Load Ratings (DC)	Resistive: 1 Amp/28VDC Inductive: 200 mA/28VDC (320mH) Lamp: 100 mA/28VDC			
Contact Load Ratings (AC)	Resistive: 600 mA/115VAC, 400 Hz (Case ungrounded); 400 mA/115VAC, 60 Hz (Case ungrounded) 200 mA/115VAC, 60 and 400 Hz, (Case grounded)			

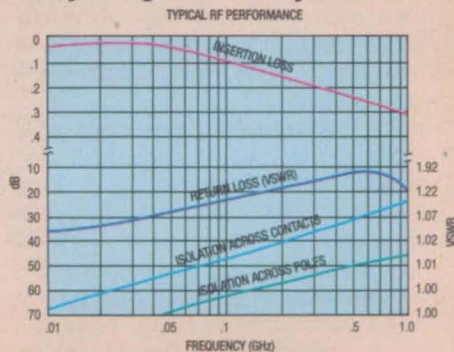

communications, aeronautical electronics, attenuators and automatic test equipment.

Inherently low intercontact capacitance and contact circuit losses make

the 172 Series an excellent RF switch for frequencies well into the UHF spectrum as shown above.


For complete technical information, application assistance and quantity pricing, call us at 1-800-284-7007 or FAX us at 213-779-9161 today.

**TELEDYNE RELAYS**  
Innovations In Switching Technology

TELEDYNE RELAYS, 12525 Daphne Avenue, Hawthorne, California 90250

Circle Reader Action No. 537

\*Priced at \$6.00 - \$7.00 in quantities of 5,000 or more, depending upon specific model purchased. And, still very affordable in smaller quantities.

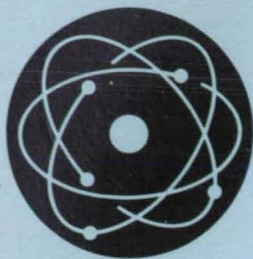

# Physical Sciences

## Hardware, Techniques, and Processes

- 34 Microwave Brightness of Land Surfaces From Outer Space
- 36 High-Power Liquid-Metal Heat-Transfer Loop

- 38 Mixed-Gas Sorption Joule-Thomson Refrigerator
- 40 Accounting for Nonlinearity in a Microwave Radiometer

## Books and Reports

- 43 Laser Spectroscopic Measurement of Temperature and Density

## Microwave Brightness of Land Surfaces From Outer Space

Effects of roughness of surface, moisture in soil, and vegetation are included.

NASA's Jet Propulsion Laboratory, Pasadena, California

A mathematical model approximates the microwave radiation emitted by land surfaces that travels to a microwave radiometer in outer space. This is one of a number of such models developed in recent years for the interpretation of microwave imagery of the Earth to obtain the distributions of various chemical, physical, and biological characteristics across its surface. In this case, the model is intended primarily for use in mapping the moisture content of soil and the fraction of the Earth covered by vegetation.

The theoretical basis of this development is a general mathematical model of microwave brightness temperatures over land. The general model takes account of the altitude and viewing angle of the radiometer; the polarization and frequency of the radiation; the upwelling and downwelling radiation that originates in the atmosphere; the downwelling background radiation from outer space; and the attenuation and scattering in the atmosphere, including the effects of water vapor, clouds, and precipitation (see figure). The general model includes submodels that characterize the microwave appearance of the soil surface as a function of its moisture, roughness, and temperature. Other submodels characterize the vegetative land cover as a function of its temperature, moisture content, a single scattering albedo, structure, and the percentage of surface covered.

The general mathematical model is changed to express the brightness temperatures in terms of the ratios between the power densities received in vertical and horizontal polarizations in the various radiometric frequency bands. These polarization ratios depend primarily on the moisture content and percentage of vegetative cover, which one seeks to map, and upon the surface roughness, which one does not seek to map. That is to say, the use of these polarization ratios reduces the influence of the surface-temperature and atmospheric effects that are undesired in this mapping problem, leaving only the roughness of the surface as the major undesired feature. The surface-roughness submodel includes an approximate equation for the


microwave reflectivity as a function of the microwave frequency, the root-mean-square roughness height, and the spatial frequency of the roughness. Because of this equation, one can use spatial-frequency effects in the observed polarization ratios to separate, at least partially, the surface-roughness effects from the soil-moisture effects.

The model was applied to measurements made by the Scanning Multichannel Microwave Radiometer (SMMR) aboard the Nimbus 7 satellite at five frequencies from 6.6 to 37 GHz and in both polarizations. The model was found to be useful in evaluating the effects of atmospheric water vapor and clouds at the SMMR frequencies, and in showing that microwave radiometry can be a very efficient technique for monitoring changes in soil moisture and vegetation, at least in semi-arid areas.

A remaining problem is to find a suitable and reliable way of combining measurements made at different frequencies, to isolate the different parameters through their varying influences as functions of the microwave frequency. The model shows that


the lower frequencies are best adapted to the monitoring of soil-moisture and canopy-water contents. The higher microwave frequencies are useful for monitoring the water content of vegetation only where the vegetative cover is very sparse. However, the higher spatial resolutions available at the higher microwave frequencies are desirable. The Advanced Very-High-Resolution Radiometer (AVHRR) of the National Oceanic and Atmospheric Administration could provide additional information on vegetative cover, thereby making possible the retrieval of soil-moisture values from the SMMR measurements. Moreover, the joint use of SMMR and AVHRR data will probably make it possible to monitor changes of the land surface during intervals of 5 to 10 years, providing significant data for mathematical models of the evolution of the climate.

This work was done by Yann H. Kerr and Eni G. Njoku of Caltech for NASA's Jet Propulsion Laboratory. For further information, Circle 45 on the TSP Request Card. NPO-17739

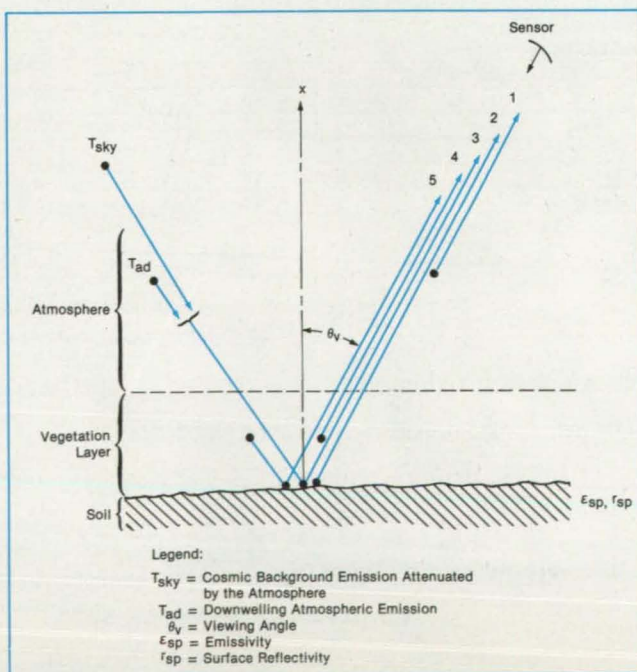

The **Microwave Brightness Temperature** is computed by accounting for the emission, scattering, and attenuation of radiation in the atmosphere, in vegetation, and on the ground.

# In college, you would have killed for MathCAD. So why aren't you calculating with it now?

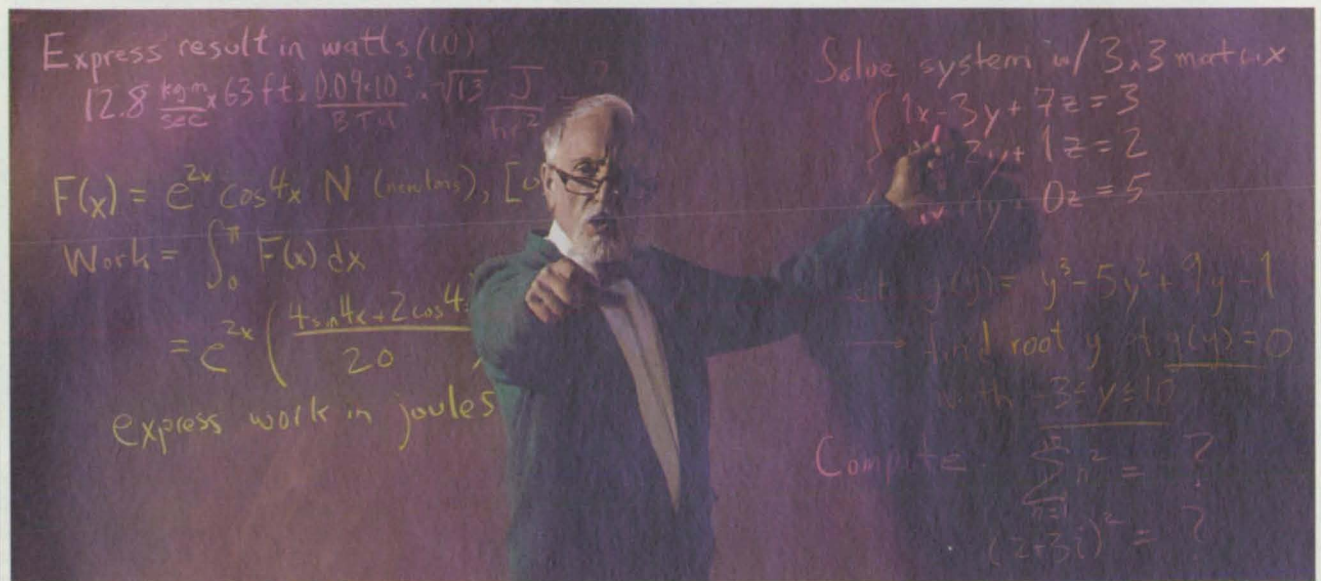

100,000 engineers and scientists already let MathCAD do their calculations for them.

Now that college is far behind you, perhaps it's time you graduated from spreadsheets, calculators and programming.

Because in today's working world of engineering and science, there's no time for anything less than MathCAD. The software that lets you perform engineering and scientific calculations in a way that's faster, more natural, and less error-prone than any calculator, spreadsheet, or program you could

write yourself.

Thanks to MathCAD's live document interface,<sup>™</sup> you can enter equations anywhere on the screen, add text to support your work, and graph the results.



March 14, 1989 issue. Best of '88 Best of '87

It also comes complete with over 120 commonly used functions built right in. Perfect for creating complex equations and

formulas, as well as exponentials, differentials, cubic splines, FFTs and matrices.

You get three-dimensional plotting, vivid graphing, and the ability to import HPGL files from most popular CAD programs, including AutoCAD.<sup>®</sup>

Done calculating? MathCAD prints *all* your analyses in presentation-quality documents, even on PostScript<sup>®</sup> compatible printers.

All of which has made MathCAD far and away the best-selling math software in the world. In fact, it's used by over 100,000 engineers and scientists — just like you.

There's MathCAD for the PC. MathCAD for the Mac, written to

take full advantage of the Macintosh<sup>®</sup> interface. And a Unix<sup>®</sup> version that utilizes the speed and unlimited memory of your Unix workstation.

We also have Applications Packs for Advanced Math, Statistics, Mechanical, Chemical, and Electrical Engineering. Each is a collection of adaptable mathematical models, designed to let you start solving your real world problems right away.




For a free MathCAD demo disk, or upgrade information, dial 1-800-MATHCAD (in MA, 617-577-1017). Or see your software dealer.

Available for IBM<sup>®</sup> compatibles, Macintosh computers, and Unix workstations. TM and ® signify manufacturer's trademark or registered trademark, respectively.

1-800-MATHCAD

# MathCAD<sup>®</sup>

MathSoft, Inc., 201 Broadway, Cambridge, MA 02139

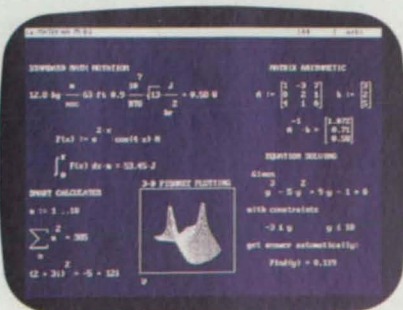


MathCAD 2.5 includes 3-D plotting, HPGL sketch imports, and PostScript output.

# High-Power Liquid-Metal Heat-Transfer Loop

A permselective barrier would sustain a high differential pressure and a consequent high rate of pumping.

NASA's Jet Propulsion Laboratory,  
Pasadena, California

A proposed closed-loop system for the transfer of thermal power would operate at relatively high differential pressure between the vapor and liquid phases of a liquid-metal working fluid. The higher dif-

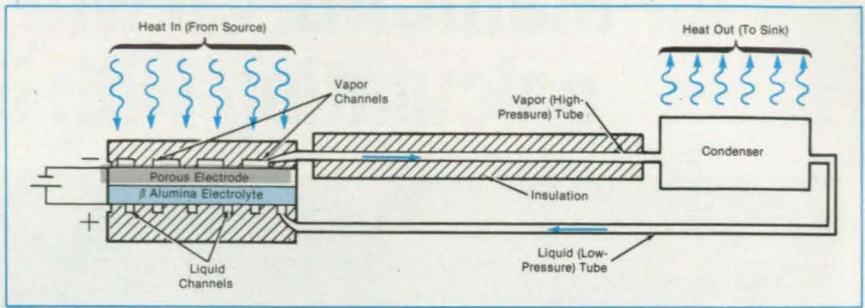

The High-Power Liquid-Metal Heat-Transfer Loop would resemble a "capillary-pumped" liquid-metal heat-transfer loop except that the electric field across a permselective barrier of  $\beta$  alumina (instead of the capillary force in a wick) would keep the liquid and vapor separate at the heat-input end.

ferential pressure could be used to pump the fluid at a higher rate, thereby increasing the output thermal power. Inasmuch as the system would contain no moving parts, it should be highly reliable and well suited to long-term unattended operation.

The system is based partly on the same principle that underlies the operation of heat pipes and capillary pumped loops. All such heat-transfer loops are essentially heat engines in which the sources are slightly hotter than the sinks are, and the power produced by the expansion of the working fluid upon vaporization at a source is consumed in pumping the fluid around the loop. The term "capillary pumped loop" is misleading in that the capillary force does not pump the fluid; instead, it acts within a wick to provide a meniscus that serves as a barrier between the liquid and vapor. One major disadvantage of a capillary-type device is that the maximum differential pressure it can sustain is determined by the capillary force, and any attempt to increase it is inhibited by the practical difficulty of making smaller pores and by the tendency of small pores to become clogged over a long time.

In the proposed loop, the wick would be replaced by the combination of a porous electrode and a permselective barrier. In the version shown in the figure, the fluid would be sodium, and the barrier material would be  $\beta$  alumina solid electrolyte, which conducts sodium ions (but not neutral atoms) preferentially to electrons. The liquid zone would be the low-pressure zone, the vapor zone would be the high-pressure zone, and heat from the source would be transferred into the high-pressure zone near the porous electrode.

A positive electric potential (with respect to the porous electrode) would be applied to the liquid side of the  $\beta$  alumina electrolyte, giving rise to an electric field in the electrolyte that would tend to force sodium

## AMCOBILITY reinvents quality at a price.

For nearly 50 years, Amco has been building a reputation for quality at its best. Our new line – The Frugal Frame – continues our tradition of quality. But this time, at entry level prices.

It's the same Amco quality – simplified and standardized.

Frugal Frame accepts almost all Amco standard accessories from cooling devices to writing surfaces and everything in between. Cabinets are shipped pre-assembled in single or multi-bay configurations.

Frugal Frame – the perfect balance of our highest ideals and your sound economic judgement.

Call for our catalog and see why it's the logical selection for companies on a budget, who still demand the best.



**AMCO Engineering Co.**

3801 North Rose Street  
Schiller Park, IL 60176-2190  
Illinois: 708-671-6670  
FAX: 708-671-9469  
Call Toll Free: 1-800-833-3156

See Us At Comdex Atlanta, GA 5/20 - 5/23 Booth #2136A

Circle Reader Action No. 500

# High Performance Without The Heavy Cost.

Now you can improve on the stiffness and weight advantages of beryllium — and save cost, too. With advanced CERAFORM® silicon carbide mirrors from United Technologies Optical Systems.

CERAFORM® silicon carbide mirrors offer significantly reduced thermal distortion and a superior package of optical and performance properties:

Properties	Be	SiC <sup>(*)</sup>	Al	ULE <sup>™</sup>
<b>Physical</b>				
Density (g cm <sup>-3</sup> )	1.85	2.92	2.73	2.21
<b>Mechanical</b>				
Young's Modulus (GPa)	303	311	71	68
Microyield Stress (MPa)	35	(**)	98	24
<b>Thermal</b>				
CTE (10 <sup>-6</sup> K <sup>-1</sup> )	11.4	2.57	24.0	0.03
Diffusivity (cm <sup>2</sup> s <sup>-1</sup> )	0.52	0.80	0.96	0.008
Specific Heat (J kg <sup>-1</sup> K <sup>-1</sup> )	1,880	670	900	766
Conductivity (W m <sup>-1</sup> K <sup>-1</sup> )	180	156	237	1.3
<b>Figures of Merit<sup>(****)</sup></b>				
<b>Structural (higher is better)</b>				
Specific Stiffness (E/ρ)	164	107	26	31
<b>Thermal (lower is better)</b>				
1st Order Distortion (CTE/k)	0.063	0.017	0.101	0.023
Thermal Distortion (CTE/D)	22.2	3.26	25.0	3.92
Dim. Change (CTE • ρ/k)	118	48.1	276	51.0

(\*) Values shown are for CERAFORM®.

(\*\*) None detected prior to Fracture. (\*\*\*\*) For equal geometries.

Optical system engineers will also appreciate how efficiently complex, lightweight structures can be produced using our unique Precision Forming Process.

CERAFORM® silicon carbide mirror technology. *Weight* till you see what it can do for you.

For more information, contact Rich Drake, Program Development Manager, at 407-775-4500. P.O. Box 109660, West Palm Beach, Florida 33410-9660.



Circle Reader Action No. 331

ions from the liquid toward the vapor zone. This effect would oppose the differential pressure, which would otherwise force ions from the vapor zone back toward the liquid zone. Thus, if a suitable voltage were applied, the electrolyte-and-electrode combination would keep the liquid and vapor apart, playing the same role as that of the meniscus in a capillary device. In this device, however, the maximum sustainable differential pressure would be limited only by the strength of the electrode and solid electrolyte, and these parts could be made

as thick as necessary to withstand the differential pressure required for pumping at the desired rate.

In addition, the electric potential could be varied to control the rate of pumping; a larger potential would produce a larger rate. If the applied potential were larger than required for the pressure balance at a given combination of input and output temperatures and rate of flow, then the extra potential would exert an extra pumping effect that would increase the rate of flow until a new pressure balance was

reached.

*This work was done by Pradeep Bhandari and Toshio Fujita of Caltech for NASA's Jet Propulsion Laboratory. For further information, Circle 11 on the TSP Request Card.*

*This invention is owned by NASA, and a patent application has been filed. Inquiries concerning nonexclusive or exclusive license for its commercial development should be addressed to the Patent Counsel, NASA Resident Office-JPL [see page 18]. Refer to NPO-18034.*

## Mixed-Gas Sorption Joule-Thomson Refrigerator

Features would include relative simplicity, less required power, and no vibration.

NASA's Jet Propulsion Laboratory, Pasadena, California

A proposed mixed-gas sorption Joule-Thomson refrigerator would provide cooling down to a temperature of 70 K. A typical prior Joule-Thomson refrigerator included multiple stages of chemisorption and/or physisorption, each containing a single gas. The proposed mixed-gas Joule-Thomson refrigerator would include only one stage and no mechanical compressor. Thus, the new refrigerator would be simpler, would operate without vibrating, and would consume less power in producing the same amount of cooling.

The concept of using a single stage and

mixed gases to obtain the amount and degree of cooling that would otherwise require multiple stages of single-gas sorption and Joule-Thomson expansion is based on prior research in the enhanced Joule-Thomson effect in some dual-gas mixtures. For example, as described in a British patent published in 1973, the addition of hydrocarbons to nitrogen increases the Joule-Thomson cooling tenfold.

In the proposed refrigerator, the working fluid — a mixture of propane, methane, ethane, nitrogen, and neon gases — would be circulated by two physisorption com-

pressors that would be alternately heated and cooled between temperatures of 275 and 500 K. At the stage of operation illustrated in the figure, the hydrocarbon gases would be preferentially adsorbed from the gas mixture entering the left physisorption compressor, while the less-adsorbable nitrogen and neon would mostly pass through the sorbent to the void space in this unit. At the same time, heating would drive the hydrocarbon gases out of the sorbent in the right physisorption compressor. The hydrocarbon gases would push the nitrogen and neon, and then some of itself out of the void space in this unit and into a surge-volume chamber, in which the gases would be remixed.

From the surge volume, the mixture would flow through two heat exchangers, in which it would be cooled by the gas mixture returning from the cold stage. Between the two heat exchangers, the gas mixture flowing toward the cold stage would be cooled further by a thermoelectric device, causing the hydrocarbon gases to begin to liquefy. The mixture would then pass through the Joule-Thomson valve, causing further cooling and liquefaction. The boiling of the liquid would provide cooling at 70 K in the cold stage, and the evaporated mixture would return through the heat exchangers and a low-pressure surge volume to the cooler sorption compressor. The combination of fluids remains as a liquid even though the hydrocarbons would individually freeze out if not in the mixture.

The same sorption principle of operation may be applicable in a compressor that would chemisorb oxygen or hydrogen from a mixture with helium, neon, and/or other nonreactive gases.

*This work was done by Jack A. Jones, S. Walter Petrick, and Steven Bard of Caltech for NASA's Jet Propulsion Laboratory. For further information, Circle 10 on the TSP Request Card.*

*This invention is owned by NASA, and*



**FILL THE GAPS IN YOUR OEM DESIGN WITH SMOOTH-ON EPOXIES**

With Smooth-On industrial epoxies you can fill in cracks or gaps and even bond unlike surfaces to eliminate minor alignment and vibration problems.

For your OEM design applications you need the secure Smooth-On bond to be certain of the long-lasting durable hold you need to resist a variety of complex wear factors.

Our extensive line of industrial epoxy resin adhesives ensures that Smooth-On has the right epoxy to match your particular OEM design needs.

Call or write today and we'll send you our free guide to choosing the right adhesive along with the name of the Smooth-On distributor in your area.

**Smooth-On, Inc.**


1000 Valley Rd., Gillette, NJ 07933 (201) 647-5800 FAX: (201) 604-2224



# When you add it all up

## Fast 2-D and 3-D Graphics

- ✓ Strip charts
- ✓ Multiple curves
- ✓ Postscript, EPS, HPGL output
- ✓ Extensive annotation
- ✓ Zoom, pan, move, rotate
- ✓ Perspective, light source

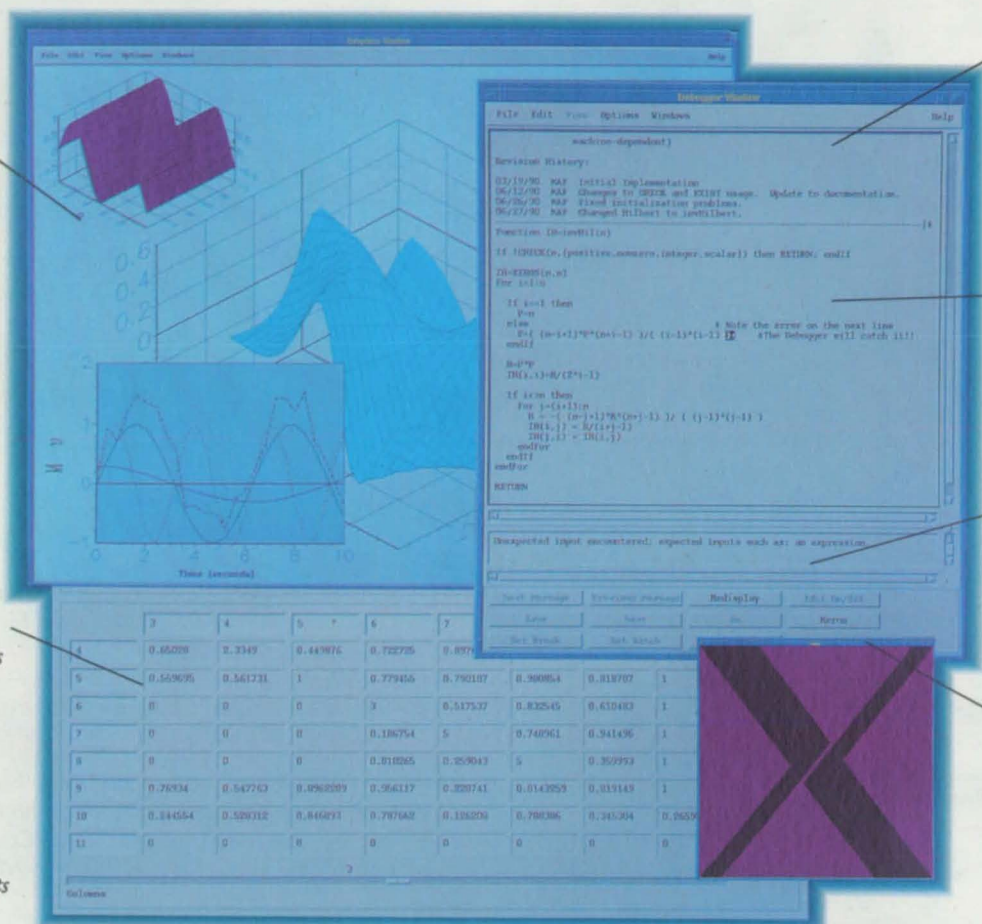

## Matrix Spreadsheet

- ✓ Edit matrices
- ✓ Cell by cell operations
- ✓ Access math functions
- ✓ Scrollable window
- ✓ Cut, copy, paste data sets

## Object-Oriented Mathematics

- ✓ Algorithms optimized for data types
- ✓ 3-D matrices
- ✓ Strings, tables, lists
- ✓ 200+ built-in math functions

## Open Architecture

- ✓ Include your C or Fortran
- ✓ Import your data
- ✓ Use ISI's MathScript to add functions

## Interactive Script Debugger

- ✓ Source level debugger
- ✓ Single step
- ✓ Break points
- ✓ Variable watch

## X-Windows User Interface

- ✓ Industry standard
- ✓ Pull-down menus
- ✓ Hypertext HELP
- ✓ Mouse clicks
- ✓ Pop-up forms
- ✓ Multiple windows
- ✓ Data dictionary

# math is the Answer

Manipulate your data with 100's of built-in functions. Develop new algorithms to find the answers you really need. Plot your results to show the world what you've done. All without a single line of Fortran or C.

Writers have word processors, financial analysts have spreadsheets, and now engineers and scientists have Xmath™ — the only object-oriented, mathematical analysis and scripting environment designed specifically for X-windows workstations. Xmath is the fastest math engine available today. Math functions, WYSIWYG 2-D and 3-D graphics, numerical programming, and a Motif interface are combined into an integrated engineering/scientific workbench. In one environment, you can interactively load, graph, and manipulate your data without writing a single line of code.

Xmath was designed to let you develop your own function libraries. With the built-in MathScript™ language, you can develop and debug numerical algorithms 10 to 100 times faster than with Fortran or C. The object-oriented nature of MathScript lets you capture 100's of lines of Fortran in a single command! And the friendly Motif user interface allows you to work with Xmath through pull-down menus, pop-up forms, and mouse clicks. Advanced function libraries written in MathScript are available for control design and signal processing.

Instead of spending your valuable time hacking out Fortran code, give us a call at 1-800-675-MATH and we'll send you a FREE Xmath Demo Diskette for workstations. The diskette will convince you that Xmath is the best mathematical computation and graphics tool available.



3260 Jay Street  
 Santa Clara, California 95054  
 Tel: (408) 980-1500 ■ Fax: (408) 980-0400  
**Circle Reader Action No. 567**



### Technical Seminar: Applications of Xmath

May . . . . .	June . . . . .	July . . . . .
14 Dayton, OH	4 Minneapolis, MN	16 Warren, MI
15 Atlanta, GA	5 Houston, TX	19 Dearborn, MI
17 Huntsville, AL	7 Orlando, FL	<b>August . . . . .</b>
Contact Juli at ISI to sign up. Attendance is free of charge!	18 Toronto, ONT	13 Phoenix, AZ
	21 Montreal, QUE	15 Los Angeles, CA

# Questions about Pressure Control?



Talk to the problem solvers for a wide range of pressure regulators and valves—for gas and liquid control from subatmospheric to 15,000 PSIG!


## Over 50 standard models + options

Choices include materials, pressure ranges, port types and flow capacities ( $C_v = .01$  to 15). Pressure reducing, back pressure, dome loaded, two-stage and electronically controlled styles do the job in high purity, hydraulic, high pressure, vacuum and vaporizing applications.



12616 Industrial Blvd.  
Elk River, MN 55330  
Tel. (612) 441-6330

Circle Reader Action No. 545

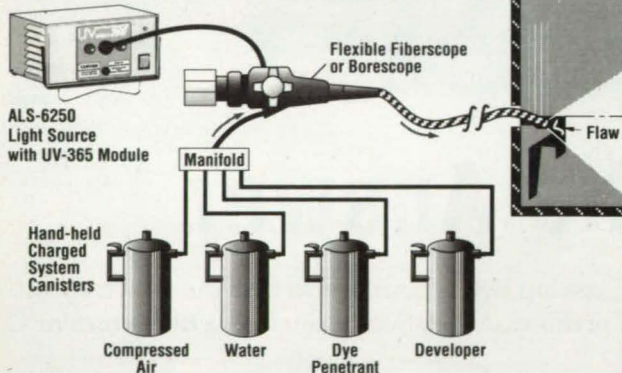

## New fiberoptic solutions to... Fluorescent penetration inspection in tight places


**Problem:** Finding hairline cracks inside machinery such as turbines or in inaccessible places where standard UV light systems cannot penetrate.

**Solution:** An Olympus FP-RVI system which delivers fluorescent penetrant and powerful ultraviolet light through a special UV fiberscope to the worksite. A new (patent pending) simple canister delivery system shoots penetrant, cleaner, developer, air, etc through a working channel in the scope.

A new light source switches from white light to intense ultraviolet. Most powerful of its type. Now you can perform FP inspection in places you couldn't reach before.

For more information call or write:  
Olympus Corporation  
Industrial Fiberoptics Division  
4 Nevada Drive  
Lake Success, NY 11042-1179  
800-446-5260, FAX: 516-488-3973

**OLYMPUS**  
INDUSTRIAL

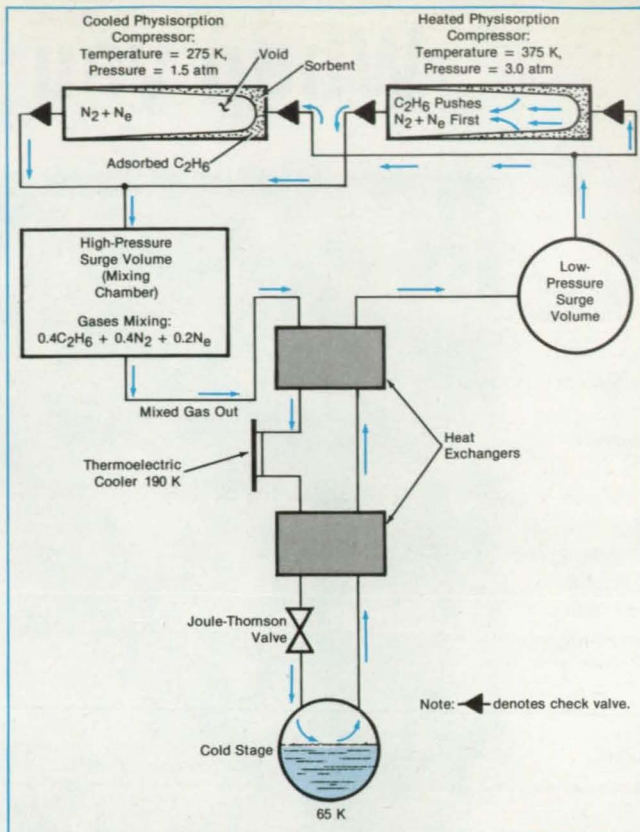

The **Mixed-Gas Joule-Thomson Refrigerator** would have only one two-compressor stage of physisorption and no mechanical compressor.


a patent application has been filed. Inquiries concerning nonexclusive or exclusive license for its commercial development should be addressed to the Patent Counsel, NASA Resident Office-JPL [see page 18]. Refer to NPO-17569.

## Accounting for Nonlinearity in a Microwave Radiometer


Temperature is assumed to vary quadratically with the reading.

NASA's Jet Propulsion Laboratory,  
Pasadena, California

A simple mathematical technique has been found to account adequately for the nonlinear component of the response of a microwave radiometer. The underlying mathematical concept is not limited to this radiometric application; it is applicable to other measuring systems in which the re-

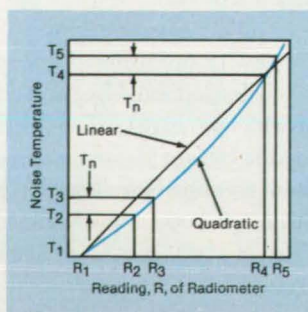

**Five Prescribed Temperatures Are Measured** to obtain the quadratic calibration curve for a radiometer. Two of the temperatures ( $T_1$  and  $T_4$ ) are those that would normally be used to obtain the less-accurate linear calibration curve. One of the temperatures ( $T_2$ ) is the unknown that one seeks to measure.  $T_3$  and  $T_5$  represent measurements of  $T_2$  and  $T_4$ , respectively, with added input from a noise diode at unknown temperature  $T_n$ .

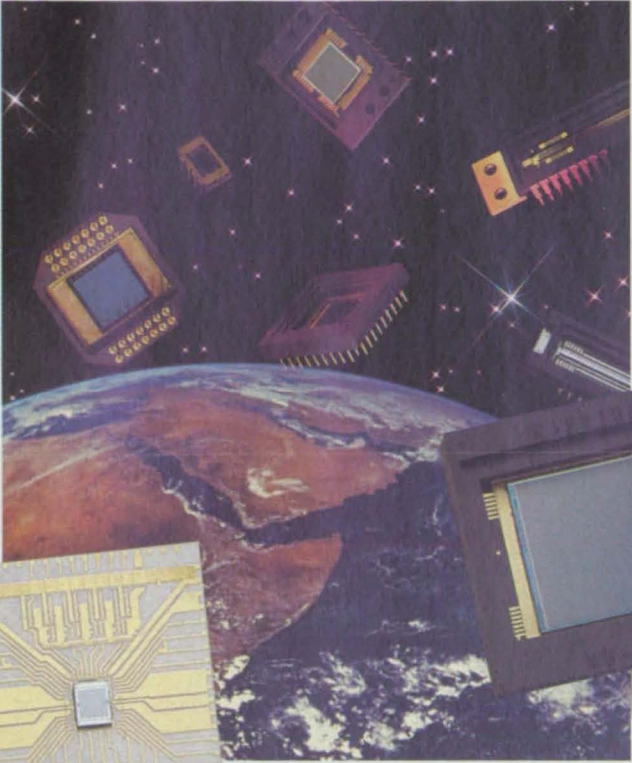


**The first name in imaging is the first name in high performance solid state imagers, as well.**

Kodak full frame imagers deliver. Resolution up to 4.2 megapixels, defect free if required. Ultra-low dark current of only 10 pA/cm<sup>2</sup>. Anti-blooming protection and up to 20 MHz per channel operation. Even a 1.4 million pixel full frame imager in a two-thirds-inch format!

We also have a variety of other chips including video, infrared, and linear image sensors such as our 8,000 pixel tricolor array.

Whether your application is electronic still, scanning, or thermal imaging, remember Kodak. Our name can make a world of difference in your product's performance.

For more information, call  
(716) 722-4385, extension 120.



**IN SOLID STATE  
IMAGE SENSORS,  
ONE NAME  
MAKES A WORLD  
OF DIFFERENCE.**

**KODAK**

*Creating new dimensions in imaging*



# MAGNETIC SHIELDING

## ALLOYS

- CO-NETIC AA Alloy  
High Permeability  
.002" to .100" thick  
Stress Annealed or  
**EXCLUSIVE**  
Perfection Annealed — No further  
anneal required if severe forming is avoided.
- NETIC S3-6 Alloy — High Saturation Induction.  
.004" to .095" thick
- Immediate Shipment from Stock



**MAGNETIC SHIELD CORP.**  
PERFECTION MICA CO.  
740 North Thomas Drive  
Bensenville, IL 60106, USA  
Phone 708-766-7800  
TWX 910-256-4815  
FAX 708-766-2813

SEND FOR NEW MG-5  
Material, Application  
and Fabrication Guide.

*Complimentary Foil  
Samples Included.*

Circle Reader Action No. 370

One stop shopping  
for all your plastic case needs.  
For your copy, call (413) 267-5561


Here, in one catalog from Zero Plastics, is the broadest and most diverse selection of plastic cases for protection, transport and storage. Order your catalog and representative listing today—and make an appointment with one of our 127 case experts located nationwide who will visit you and help you select, modify or custom design the best case at the right price for you at your facility.

Zero—the case technology experts for over 39 years. We know how and when to use plastics for maximum utility.

**ZERO PLASTICS**  
UNIT OF ZERO CORPORATION

672 Fuller Road, Chicopee, MA 01020

FAX: (413) 592-5018

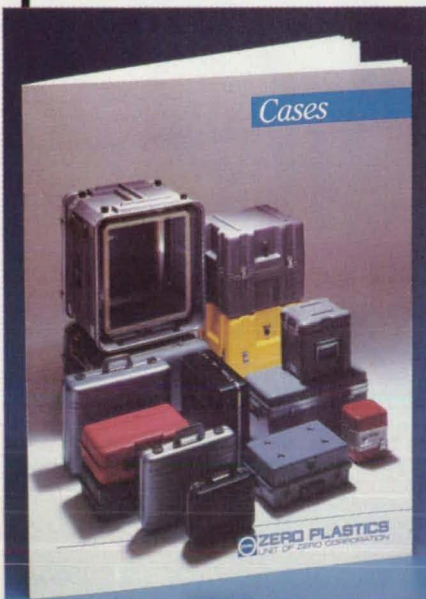

relationships between the quantities to be determined and the readings of the instruments differ slightly from linearity.

The nominal linear relationship between the microwave temperature  $T$  (which is the quantity to be determined) and the reading  $R$  of the radiometer is  $T = A + BR$ , where  $A$  and  $B$  are calibration constants that can be determined by taking readings of calibration sources at two known temperatures. To account for the slight nonlinearity that is encountered in practice, it is assumed that the temperature varies quadratically with the reading:

$$T = A + BR + CR^2$$

Here,  $A$  and  $B$  have values slightly different from the values that they would have if the linear equation were used, and  $C$  is a new calibration constant that must be obtained from additional readings.

The following five-reading calibrating-and-temperature-measuring procedure based on the quadratic equation enables one to determine  $A$ ,  $B$ ,  $C$ , the temperature  $T_2$  of the body under observation, and the temperature  $T_n$  of a diode noise source in the radiometer (see figure):

1. With the noise diode turned off, obtain reading  $R_1$  by using the radiometer to measure the temperature of a calibration source at known temperature  $T_1$ .
2. With the noise diode off, aim the radiometer at the body under observation, obtaining reading  $R_2$  for unknown temperature  $T_2$ .
3. Turn the noise diode on and again aim the radiometer at the body under observation, this time obtaining reading  $R_3$  for unknown temperature  $T_3 = T_2 + T_n$ .
4. Turn the noise diode off and obtain reading  $R_4$  from a second calibration source at known temperature  $T_4$ .
5. Still using the second calibration source, turn the noise diode on and obtain reading  $R_5$  at temperature  $T_5 = T_4 + T_n$ .

The solution of the quadratic equations for the five readings yields the following equations for the desired quantities:

$$D = \frac{R_5^2 - R_4^2 - R_3^2 + R_2^2}{R_5 - R_4 - R_3 + R_2}$$

$$C = \frac{T_4 - T_1}{R_4^2 - R_1^2 - (R_4 - R_1)D}$$

$$B = -CD$$

$$A = T_1 - BR_1 - CR_1^2$$

$$T_2 = A + BR_2 + BR_2^2$$

$$T_n = A + BR_3 + CR_3^2 - T_2$$

This work was done by Charles T. Stelzried of Caltech for NASA's Jet Propulsion Laboratory. For further information, Circle 143 on the TSP Request Card. NPO-17451

## Books and Reports

These reports, studies, handbooks are available from NASA as Technical Support Packages (TSP's) when a Request Card number is cited; otherwise they are available from the National Technical Information Service.

### Laser Spectroscopic Measurement of Temperature and Density

Development of techniques for measuring fluctuations in turbulent flows of air is reported.

A report discusses research on the use of laser-induced fluorescence in oxygen and Raman scattering in air for the simultaneous measurement of the temperature and density of air. The major intended application of these laser spectroscopic techniques is measurement of fluctuations of temperature and density in hypersonic flows in wind tunnels.

In the laser-induced-fluorescence technique, a pulsed ArF laser operating at a wavelength of 193 nm selectively excites one or more rotational spectral lines of  $O_2$ . The resulting fluorescence energy is proportional to the relative population of the selected initial energy state of the molecules (which population depends on temperature) and to the density of the air. The fluorescence takes place within a few picoseconds. The same laser beam used to excite the fluorescence gives rise to Raman scattering proportional to the density. Thus, the intensity of the Raman-scattered light indicates the density, while the ratio between the intensities of the fluorescence and the Raman-scattered light indicates the temperature.

The development of the laser-induced-fluorescence technique included the following steps:

1. Comparison of laser-induced fluorescence  $O_2$  with other radiative processes excited in air by a broadband ArF laser;
2. Evaluation of the conditions that reduce the interferences of these processes with the measurement of temperature;
3. Development of a theoretical model of laser-induced-fluorescence, to be used in deducing the temperature from the fluorescence signal following each laser pulse;
4. Comparison of the predicted and experimentally determined dependence of the fluorescence signal upon temperature;
5. Assessment of the uncertainty associated with this technique under realistic conditions of hypersonic flow; and
6. The demonstration of the technique in slow, low-pressure, flows of cold air.

The development of the Raman technique included the investigation of the ef-

fect of tuning the narrow-band laser while monitoring the intensity of the Raman signal to detect resonances, estimation of the Raman intensity under realistic flow conditions, and the selection of the detection system to be used in these measurements.


The results of the research show that if detection is limited by photon-statistical noise, then at temperatures greater than 60 K and densities greater than 0.01 amagat, the uncertainties in the measurements of temperature and density can be less than 2 and 3 percent, respectively. The results also show that under the conditions that

prevail in hypersonic wind tunnels, the measurements are unaffected by the heating of the air by the laser, collisional quenching, and (if the laser fluence is kept below  $1.5 \text{ J/cm}^2$ ) nonlinear effects associated with multiphoton processes in  $O_2$  and  $CO_2$ .

This work was done by Robert L. McKenzie of Ames Research Center and Gabriel Laufer of Analatom Inc. To obtain a copy of the report, "Research and Development of a Laser Spectroscopic Technique To Measure Temperature and Density in Turbulent Air Flows," Circle 57 on the TSP Request Card. ARC-12719

# AdaMAT™

## REDUCE THE LIFE CYCLE COST OF YOUR Ada PROJECTS.

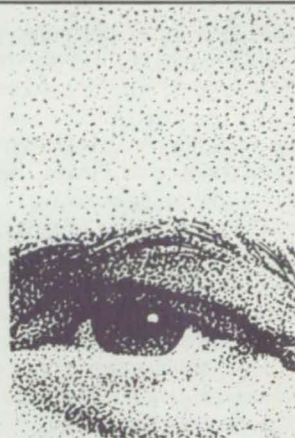

### AdaMAT DELIVERS VISIBILITY INTO THE QUALITY OF Ada SOURCE CODE.

AdaMAT automates the collection, analysis, and reporting of metrics for compilable Ada source code, including Ada as a Program Design Language (PDL). Therefore, the benefit of measurement is not out-weighted by the cost of collection. Quantitative reports assist you in detecting, isolating, and correcting quality problems that impact the reliability, maintainability, and portability of your Ada source code.

AdaMAT will help to minimize schedule slips and cost overruns resulting from poor quality software by identifying the kinds of problems your Ada code is likely to present during execution, maintenance, and porting.

AdaMAT has enjoyed wide use among all branches of the military. More and more, AdaMAT is being specified by name to address quality requirements of the DoD. Throughout the project life cycle — from design to deployment and beyond, AdaMAT is the QUALITY ANALYSIS TOOL OF CHOICE.


800-522-7321

*Build Quality Into Your Ada Development.*



Dynamics Research Corporation, 60 Frontage Road, Andover, MA 01810

Circle Reader Action No. 601

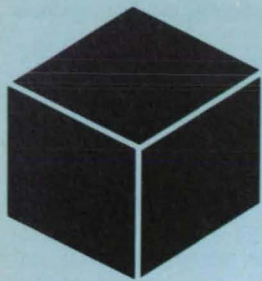

# Materials

## Hardware, Techniques, and Processes

- 44 Making Solid Aromatic Polyimide Fibers
- 44 Fast-Acting Rubber-to-Coated-Aluminum Adhesive

- 46 Tough, High-Performance, Thermoplastic Addition Polymers
- 48 Polyamide-Imides Made From BTDA

## Making Solid Aromatic Polyimide Fibers

Under proper spinning conditions, voids are eliminated.

*Langley Research Center, Hampton, Virginia*

An improved wet-spinning process makes aromatic polyamic acid fibers that contain no voids and can be converted to polyimide fibers that are also free of voids. When made by prior wet-spinning processes, such fibers contain voids. The elimination of voids has been found to improve tensile strength and other tensile properties. The improved polyimide fibers should prove useful in protective clothing, sealing materials, filters for harsh chemical and/or thermal environments, and other applications that take advantage of their excellent chemical resistance, high thermal stability, and good tensile properties.

The polyamic acid is derived from 3,3', 4,4'-benzophenone-tetracarboxylic dianhydride (BTDA) and 4,4'-oxydianiline (ODA). This polyamic acid is dissolved in dimethyl acetamide to make the spinning resin. In wet spinning, the resin is poured into a stainless-steel cylinder/piston assembly

and extruded through a spinneret into a coagulation liquid. The solidifying polyamic acid filament, in what is called "wet gel" form, is drawn through the coagulation liquid onto a first set of cluster rolls, through a water bath, over a second set of cluster rolls, and onto a glass or stainless-steel spool. The spooled wet gel filament is dried in a forced-air or vacuum oven, then converted to polyimide fiber by further heating in a forced-air oven.

The major difference between the improved process and older processes lies in the choice of the compositions and concentration of the coagulation liquid, the inherent viscosity of the resin, the percent of solids in the resin, and the diameter of the filament to obtain a wet gel without voids. Coagulation-liquid and water-bath temperatures and drying oven conditions, chosen to assure good collapse of the wet gel into fiber form, affect the production of solid

fibers to a lesser extent. Experiments have shown that to produce solid (that is, void-free) fibers in the coagulation bath, it is necessary to provide the following conditions:

- The resin should have a minimum inherent viscosity of at least 1.6 dl/g and at least 15 percent solids.
- The coagulation liquid should be an aqueous solution of either 70 to 75 percent of ethylene glycol or 70 to 80 percent of ethanol at a temperature of 20 °C.
- Filament diameters should generally be kept below 50  $\mu\text{m}$ .

*This work was done by Anne K. St. Clair and Robert M. Ely of Langley Research Center and William E. Dorogy, Jr., of PRC. For further information, Circle 64 on the TSP Request Card.*

*This invention is owned by NASA, and a patent application has been filed. Inquiries concerning nonexclusive or exclusive license for its commercial development should be addressed to the Patent Counsel, Langley Research Center [see page 18]. Refer to LAR-14162.*

## Fast-Acting Rubber-to-Coated-Aluminum Adhesive

This strong adhesive makes clamping unnecessary.

*Marshall Space Flight Center, Alabama*

A cyanoacrylate adhesive used to join rubber to coated aluminum is easier to apply and more effective than was the neoprene-based adhesive used previously. The neoprene-based adhesive had to be mixed from two components, allowed to set, then mixed frequently while it was applied. Two coats were needed, and the final coat had to dry for several hours before the mating parts were put together. The parts were then clamped together for 1 to 2 h. The old adhesive bonded well in the laboratory but failed repeatedly when used in a production environment. Many times, the entire length of the rubber fell off and had to be rebonded.

The cyanoacrylate adhesive, in contrast, is a one-part material that can be applied in a single coat to aluminum that has been treated previously with an epoxy primer and a top coat. The parts can be mated as soon

as the adhesive has been applied; no drying is necessary. The adhesive sets in 5 min. Optionally, an accelerator can be brushed onto the aluminum to reduce the setting time to 30 s. Clamping the parts together then becomes unnecessary.

Specimens of rubber bonded to aluminum with the new adhesive were tested for strength after exposure to room temperature, high temperature and high humidity, subzero temperature, methyl ethyl ketone vapor, and water. Peel-test specimens failed in the rubber, showing that the bond was stronger than the rubber itself was. In lap shear tests, specimens failed in the primer, showing that the bond was also stronger than the primer and top coat were.

The adhesive comes in four formulations, all based on ethyl cyanoacrylate with various amounts of ethylene copolymer rubber, poly(methyl methacrylate), silicon dioxide,

hydroquinone, and phthalic anhydride:

- Type I — toughened, medium viscosity, black;
- Type II — toughened, low to medium viscosity, black;
- Type III — toughened, low viscosity, white; and
- Type IV — toughened, high viscosity, clear to slightly cloudy.

*This work was done by Dawn A. Comer, Howard Novak, and Mark Vazquez of United Technologies for Marshall Space Flight Center. For further information, Circle 136 on the TSP Request Card.*

*Inquiries concerning rights for the commercial use of this invention should be addressed to the Patent Counsel, Marshall Space Flight Center [see page 18]. Refer to MFS-28434.*



# **MORE HIGH-PERFORMANCE ALLOYS IN MORE FORMS. BECAUSE YOU KEEP FINDING MORE JOBS FOR THEM.**

At Inco Alloys International, you'll find the world's widest selection of high-nickel alloys in the widest range of forms and sizes. Rod, bar, plate, sheet, strip, section, pipe, tubing, wire, and companion welding products. All from one full-line manufacturer, all available through a worldwide network of sales offices and distributor warehouses.

As the pioneers of nickel alloy technology, our scientists invented the alloys whose trademarks are synonymous with quality and performance — MONEL, INCONEL, INCOLOY, INCO, NIMONIC, BRIGHTRAY, and NILO.

These alloys offer superior corrosion resistance, high-temperature strength and other special properties for your most demanding applications, prolonging equipment life and preventing costly repair, replacement and downtime.

A single source for the properties and performance you need, in the forms you need, with the quality assurance and traceability you need, delivered where and when you need them. Inco Alloys International is the only name you need to know.

Write for a free copy of our "Quick Reference Guide." Inco Alloys International, Inc.,

Huntington, West Virginia 25720. Or, for a quicker reply, FAX us at (304) 526-5441.

MONEL, INCONEL, INCOLOY, INCO, NIMONIC, BRIGHTRAY and NILO are trademarks of the Inco family of companies.



**INCO ALLOYS  
INTERNATIONAL**  
Circle Reader Action No. 569

# High Performance in a simple low cost design

*NUPRO Plug Valves give you the leak-free service and extra benefits you'd expect from more complex and expensive valve designs.*

- Quick, 1/4 turn to full on or off
- Fast, easy maintenance with replaceable plug
- Wide temperature tolerance from -10° to 400°F
- Pressures to 3000 psi

## Plus Flexibility to Meet System Needs

- Choice of SWAGELOK Tube Fitting or NPT end connections
- 1/8" to 1/2", 6mm to 12mm
- Downstream venting
- Brass, 316 stainless steel, carbon steel and a variety of other machineable materials
- Choice of O-Rings for system compatibility
- Throttling capability
- Flow directional handles
- TFE coated plug

Stocked and immediately available from Authorized Sales & Service Representatives



**NUPRO COMPANY**  
4800 East 345th Street  
Willoughby, OH 44094

SWAGELOK - TM Crawford Fitting Company



## Tough, High-Performance, Thermoplastic Addition Polymers



A series of addition-type thermoplastics exhibit useful properties.

*Langley Research Center,  
Hampton, Virginia*

The development of such toughened high-performance thermosetting polymers as toughened epoxies, bismaleimides (BMI's), PMR polyimides, and acetylene-terminated resins dominates the present approach to the preparation of new polymer composites. Of several possible toughening methods, the synthesis of addition-type thermoplastics (ATT's) is considered to be a very attractive approach.

An ATT is a polymer that has an addition-curing reaction that leads to a linear molecular structure. It is nonclassical in that it has similarities to two major classical categories: thermosets (addition curing with crosslinked structures) and thermoplastics (condensation-reaction curing with linear structures). Because of their addition curing and linear structure, ATT polymers can have toughness, like thermoplastics, and can be easily processed, like thermosets. Work was therefore undertaken to develop a chemical reaction that forms stable aromatic rings in the backbone of an ATT polymer, thereby combining high-temperature performance and thermo-oxidative stability with toughness and easy processibility, and minimizing or eliminating the necessity for the tradeoffs among properties often observed in conventional polymer syntheses.

Tough, high-performance polyimides were made by reacting triple bonds conjugated with an aromatic ring in bisethynyl compounds with the active double bonds in compounds that contained double bonds activated toward the formation of Diels-Alder type adducts, especially bismaleimides, biscitraconimides, benzoquinones, and mixtures thereof. (Addition curing of these products produced highly linear polymeric structures, and heat treatment of the highly linear polymeric structures produced thermally stable aromatic addition-type thermoplastic polyimides.)

**Are you reading someone else's copy?**

Get your own copy by filling in the qualification form bound into this issue.



*Car owners!  
Here's how to*

# BABY YOUR CAR'S ENGINE

"TUFOIL®  
SLIPPERIER  
THAN  
TEFLON®"

"INVENTOR OF THE YEAR" AWARD  
AND INDUCTION INTO  
"N.J. INVENTORS HALL OF FAME"  
GOES TO INVENTOR OF TUFOIL

New cars are expensive ... so is gas!  
Let Tufoil® be your key to survival!

## WHY BUY A NEW CAR?

A new car is one of life's biggest investments. Why not put off such a big expense as long as possible and at the same time, spend less to run the car you now own? The money you save is money in your pocket.

Tens of thousands of drivers are already using Tufoil to "beat the system". Here's how it's done ... it's simple!

## ENGINES LAST & LAST

The normal life of an engine is usually about 100,000 miles, give or take a few miles either way. This is no longer the case. By adding 4 ounces of Tufoil with each oil change, together with an effective maintenance program, 200,000 miles and more are not uncommon. But that's not all!

Together with this extended engine life are numerous benefits. For instance, quick acceleration. One user writes that his car "Takes off like a scared rabbit!"

## SILKY SMOOTH OPERATION

That's just the beginning! Easy starts and better gas mileage are soon apparent due to the reduction in friction. Your engine is now free to run smooooothly.



One of our customers put it nicely when he said, "You can hear it, you can feel it," with Tufoil in the engine.

## PROVEN EFFECTIVE

Our files bulge with testimonials. Customers not only call, but write to us about their fantastic results! They're telling friends and relatives. As a matter of fact they're spreading

the news about Tufoil all over the world.


It stands to reason, though. Tufoil is so unique that even the United States and Canadian governments have confirmed it's effectiveness. One report shows that Tufoil is actually slipperier than Teflon™!

## NO TIME LIKE THE PRESENT

There's never been a better time to try Tufoil and prove to yourself and your car that what everyone's been saying is really true! We think you'll find it's one of the smartest decisions you've made. In fact we're so sure, we guarantee it'll work. If you don't agree, we'll gladly refund your \$14.25, the cost of your initial 8 ounce treatment.

So why wait any longer? The sooner you start, the better! If your car has over 5-10,000 miles on it, now's the time to start! Use the order form below to baby your car (and your checkbook). You'll be glad you did!

## ORDER TODAY

1-800-922-0075 

*The Alternative to expensive driving!*

FREE ... Products based on TUFOIL technology. Check one with each order of 2 bottles or a quart. Check 2 for each gallon order. Values range from \$3.98 to \$9.95.

- TUFOIL Gun-Coat — Super rust inhibited, smooth action
- TUFOIL Compu-Lube — Low viscosity for computer mechanisms
- TUFOIL Lightning Grease — Easily sheared grease for instruments
- TUFOIL Lubit-8 — General purpose, household use lubricant

FREE brochures ...  
 30 Questions/Answers about TUFOIL

FLUON® is reg. T.M. of ICI Americas Inc.  
TEFLON® is reg. T.M. of DuPont®  
TUFOIL® is reg. T.M. of Fluoramics  
U.S. Patent No. 4,284,518  
U.S. Patent No. 4,224,173  
U.S. Patent No. 3,933,656  
Other U.S. Patents issued and pending.

When  
POPULAR MECHANICS  
tested TUFOIL, it reported  
"TUFOIL is absolutely  
spectacular!"

**YES** rush my TUFOIL order:

- ONE 8 oz. bottle ... treat one car for \$14.25 (plus \$3.50 shipping and handling). See money back guarantee.
- TWO 8 oz. bottles ... treat two cars for \$25.00 (plus \$4.00 shipping and handling) **SAVE \$6.00**
- ONE Quart bottle ... treat 4 cars for \$34.95 (plus \$4.00 shipping and handling)
- ONE GALLON ... treat 16 cars for \$125.00 (plus \$6.00 shipping and handling.)

We ship within days!

MONEY BACK GUARANTEE ON 8-OZ.

**Fluoramics, Inc.** NTB591  
18 Industrial Avenue  
Mahwah, NJ 07430

My check or money order for \$ \_\_\_\_\_ is enclosed.  
Charge my credit card:

Am. Express  Master Card  Visa

Card No. \_\_\_\_\_

Exp. Date \_\_\_\_\_

Phone No. \_\_\_\_\_

Name \_\_\_\_\_

Address UPS Shipping Address \_\_\_\_\_

City \_\_\_\_\_

State \_\_\_\_\_ Zip \_\_\_\_\_

(N.J. residents please add 7% sales tax).

Canadian Distributor: 1-800-363-7753

By varying the types and ratios of the reagents, an entire series of thermoplastic polyimides and composites (see table) were produced.

A variety of tests and comparisons were conducted, using the new resins and composites made with them. Single lap-shear bond specimens were prepared and tested, using titanium adherends. LaRC-RP80, for example, showed significantly higher adhesive properties than did state-of-the-art bismaleimides. It was found to be significantly tougher than the constituent polymers are, and it ranked highest in toughness among those bismaleimides that have comparable glass-transition temperatures. The neat LaRC-RP80 resin loses only 5 percent of its weight at a temperature of 514 °C, representing the highest thermo-oxidative stability of bismaleimides observed to date. LaRC-RP80 also exhibited outstanding resistance to moisture. Typical bismaleimides have equilibrium moisture absorptions that range from 4 to 6 percent. A value of 2.6 percent was obtained for LaRC-RP80.

Composite	Glass-Transition Temperature, °C Dry Wet	Uptake of Moisture at 25 °C for 2 Weeks, Weight Percent	Thermo-oxidative Stability	
			(isothermal) Percent Loss of Weight after 500 Hours at 232 °C in Air	Temperature, °C, at 5 Percent Loss of Weight in Air by Thermogravimetric Analysis
AS-4/LaRC-RP80	282 258	0.6	0	540
AS-4/LaRC-RP83	275 266	0.5	0	520
AS-4/LaRC-RP57	312 280	0.8	0	560
AS-4/LaRC-RP56	275 272	0.5	0	500
AS-4/LaRC-RP98	287 285	0.9	0	536
AS-4/LaRC-RP99	285 259	0.4	0.5	514
AS-4/LaRC-RP101	310 289	0.9	0.2	585
AS-4/LaRC-RP100	305 190	2.6	0.4	500

Selected Graphite-Fiber/Polymer Composites show desirable combinations of properties.

Prepregs were prepared by winding AS-4 unsized graphite yarn on a drum, then brushing on the resin. The quantity of the resin solution was calculated to yield finished composites containing 60 volume percent fiber. Ten composites were made by this procedure, using various resins. The table gives the properties of the composites. These resins are expected to find utility in a wide variety of aerospace and industrial applications, including the preparation of molding compounds, adhesive compositions, and polymer-matrix composites.

This work was done by Ruth H. Pater, K. Mason Proctor, and John Gleason of Langley Research Center, Cassandra Morgan of PRC-Kentron, and Richard Partos of Analytical Services and Materials, Inc. For further information, Circle 67 on the TSP Request Card.

This invention is owned by NASA, and a patent application has been filed. Inquiries concerning nonexclusive or exclusive license for its commercial development should be addressed to the Patent Counsel, Langley Research Center [see page 18]. Refer to LAR-10000.

## Polyamide-Imides Made From BTDA

Mechanical properties are better than those of the LARC-TPI polyimide.

Langley Research Center, Hampton, Virginia

A new synthesis results in an improved class of tough, thermally stable polyimides containing amide linkages. The new polyamide-imides are potentially useful as matrix resins in graphite-reinforced structures, and as fibers or coating films that can withstand high temperatures.

The synthesis of a polyamide-imide of the new type (see figure) begins with the reaction of isomers of diaminobenzanilide (DABA) with 3,3',4,4'-benzophenonetetracarboxylic dianhydride (BTDA). The resulting polyamide-acid is then thermally converted to the polyamide-imide. In experiments, the initial reactions were carried out in a closed vessel at room temperature at 15 to 20 percent solids content in N,N-dimethyl acetamide (DMAc). The polyamide-acid solutions were stored in a refrigerator until thermal conversion to the final polymers. For comparison, the polyimide LARC-TPI was synthesized by the same procedure from 3,3',4,4'-BTDA and 3,3'-diaminobenzophenone. (LARC-TPI was chosen as a standard of comparison because it has a similar molecular structure and is already well known.)

Film specimens of the experimental polyamide-acids were cast from solution. Other specimens were prepared as powders, which were then molded and cut into specimens for tension and fracture-toughness tests. The film and molding specimens were heated to convert them to the


final polyamide-imides. Chemical, thermal, and mechanical properties of the specimens were then measured.

The new polymers were found to have high glass-transition temperatures, high thermal and oxidative stability, and high resistance to organic solvents (other than DMAc) and water. Polymers based on unsubstituted amide diamines were also observed to exhibit high inherent viscosities, and were easily made into tough, flexible films. However, films of N-methyl substituted amide-imides were brittle, and one of

them even exhibited signs of solubility.

Overall, the thermomechanical properties of the experimental polyamide-imides were similar or superior to those of LARC-TPI. A notable exception was the one synthesized from 4,4'-DABA/BTDA, which exhibited a very high tensile modulus and evidence of being semicrystalline.

This work was done by James F. Dezern of Langley Research Center. For further information, Circle 59 on the TSP Request Card. LAR-13942

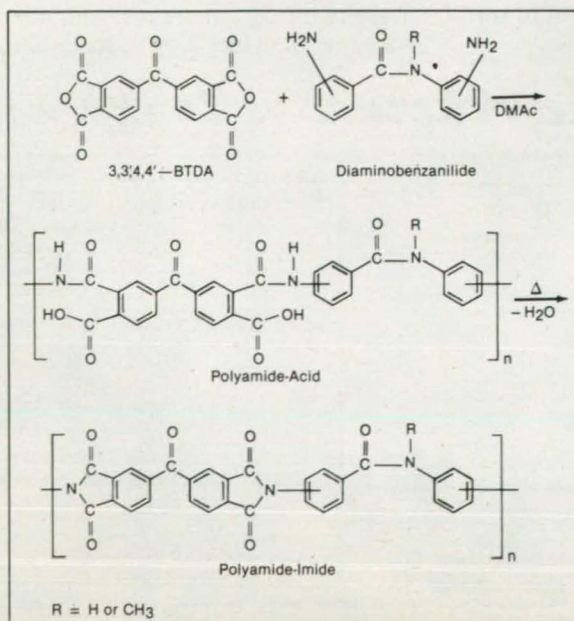

**Linear, Aromatic, Polyimide/Amides** are synthesized from isomers of DABA with 3,3',4,4'-BTDA. The new polymers have thermal and mechanical properties similar to those of the more familiar polyimide LARC-TPI, which has a similar molecular structure, except that it does not have the amide linkages.



# Computer Programs

- 49 Surface-Shading Program
- 50 Ada Namelist Package

## COSMIC: Transferring NASA Software

COSMIC, NASA's Computer Software Management and Information Center, distributes software developed with NASA funding to industry, other government agencies and academia.

COSMIC's inventory is updated regularly; new programs are reported in *Tech Briefs*. For additional information on any of the programs described here, circle the appropriate TSP number.

If you don't find a program in this issue that meets your needs, call COSMIC directly for a free

review of programs in your area of interest. You can also purchase the annual *COSMIC Software Catalog*, containing descriptions and ordering information for available software.

COSMIC is part of NASA's Technology Utilization Network


**COSMIC®** — John A. Gibson, Director,  
(404) 542-3265  
The University of Georgia, 382 East Broad Street,  
Athens, Georgia 30602

Although not meant as a substitute for Ames PLOT3D, SURF accepts the PLOT3D input files and provides interactive, mouse-driven manipulation of the resulting graphical images. The mouse-driven menu interface in SURF enables the user to create models that consist of mixtures of different types of parts (including gouraud and smoothly shaded function-mapped parts) that can be interactively viewed, deleted, or put out to ARCGRAPH files.

The color and the specular highlights of gouraud-shaded parts can be adjusted interactively. Shaded parts are created based on sources of light, points of view, and levels

## Computer Programs

These programs may be obtained at a very reasonable cost from COSMIC, a facility sponsored by NASA to make computer programs available to the public. For information on program price, size, and availability, circle the reference number on the TSP and COSMIC Request Card in this issue.





## Mathematics and Information Sciences

### Surface-Shading Program

Wire-frame, shaded, and function-mapped parts can be created interactively.

The Surface Shading computer program, SURF, was developed in support of the work of Computational Fluid Dynamics (CFD) scientists at NASA Ames Research Center. SURF is part of the CFD graphics software. SURF accepts input in the form of grid and solution files that would otherwise normally be fed to Ames Research Center's version of the PLOT3D software from "flow solver" programs. SURF interactively creates wire-frame, shaded, and function-map parts that can be viewed and then transferred to Ames Research Graphic (ARCGRAPH) standard files, which can be animated with GAS (COSMIC Program ARC-12379).

Such "flow solver" programs as INS3D (COSMIC Program ARC-11794) solve the equations of higher order that govern the characteristics of flight according to the "grid" specifications of the test geometry (e.g., forward swept wing model with surrounding airspace) and simulation conditions (e.g., angle of attack, mach number, and Reynolds number). The numerical solution data thus generated are collected and converted to graphical images of flows, pressure distributions, shock waves, and particle traces via the Ames PLOT3D graphics package.

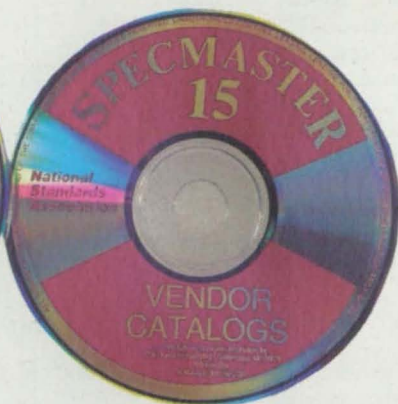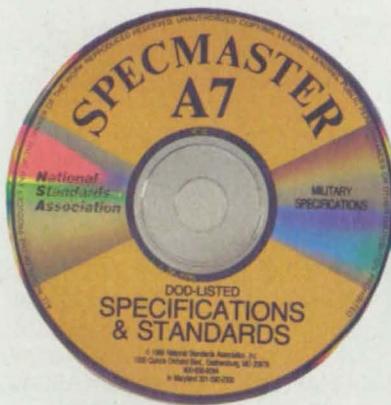

## Only Specmaster gives you full-text Mil-Specs, NAS, SAE and ASTM standards plus vendor catalogs on CD-ROM.

- Now you can search, retrieve, review and print government and industry standards and vendor catalogs with computer speed and ease.
- DOD-listed file is **UPDATED WEEKLY!** (50,000 military and federal specifications, standards, QPLs, DIDs, handbooks, etc.)
- Specmaster can be **NETWORKED** on a NETBIOS-compatible PC-LAN.
- Call **800-638-8094** for a demonstration or additional information. In MD 301-590-2300.

**National Standards Association**

1200 Quince Orchard Blvd., Gaithersburg, MD 20878

Circle Reader Action No. 415



#1

in a series of hard-nosed questions about software for signal analysis.

# HOW FAST

# ?

TurboLab is a new menu-driven modular software system for signal analysis that's faster than anything on the market today: perform a power spectrum (FFT, Magnitude) with 4K input samples in 1.5 seconds using a 386/33 with coprocessor! TurboLab is also better and less expensive than competitive software systems! Check it out!

Call or FAX today for a free trial disk and more information.

**SCENTECH**

800 West Cummings Park • Woburn, MA 01801  
VOICE: (617) 935-1770 • FAX: (617) 935-3054

Circle Reader Action No. 595

of ambient light specified by the user. In addition, the color spectra of function-mapped parts can be adjusted interactively. Legends can be created to show correlations of color and normalized values of functions (i.e., pressure, density, temperature, and mach numbers). Function-mapped parts can be "clipped" in such a way that they show only contours within specified ranges of values. Other features of SURF include the ability to work with several grids and solutions, deletion of grids and/or solutions, support of multigrid files, blanking out the pictures at specified grid points, reading of "planes" or "whole" format files, screen-dump input and output of picture-element files, displays of current grid and part-attribute data, and escape to or from a UNIX software shell.

SURF was developed for the Silicon Graphics IRIS 2000/3000-series workstations running UNIX. The workstation should have at least 4 MBytes of memory, 32 bit planes, z-buffering and z-clipping, and floating-point-hardware support. SURF was written in the C programming language and requires the Silicon Graphics "include" files (e.g., stdio.h, gl.h). SURF can be purchased separately or in a package (COSMIC Program COS-10020) also containing GAS and Ames Research Graphics Systems ARC-CGRAPH (COSMIC program ARC-12350). SURF was developed in 1988.

This program was written by Todd Plessel of Sterling Software for Ames Research Center. For further information, Circle 42 on the TSP Request Card. ARC-12381

## Ada Namelist Package

This program accommodates different kinds of variables and mismatches between lists.

The Ada Namelist Package, developed for the Ada programming language, enables a calling program to read and write FORTRAN-style namelist files. A namelist file consists of any number of assignment statements in any order. Features of the Ada Namelist Package are as follows: the handling of any combination of types defined by the user; the ability to read vectors, matrices, and slices of vectors and matrices; the handling of mismatches between variables in the namelist file and those in the programmed list of namelist variables; and the ability to avoid searching the entire input file for each variable.


The principal benefits derived by the user from this software are the following: the ability to read and write namelist-readable files, the ability to detect most file errors in the initialization phase, and an organization that keeps the number of instantiated units to a few packages rather than to many subprograms.

The Ada Namelist Package program is organized similarly to the TEXT\_IO program. The package itself is nongeneric. The nongeneric opening portion declares a variety of constants accessible to the user, variables, and subprograms for initializing a namelist, reading and writing strings, and diagnosing errors. Following the opening portion are a group of nested generic packages for reading and writing (1) variables of types defined by the user, including integer, floating-point, fixed-point, and enumeration; and (2) arrays including vectors, matrices, and slices of vectors and matrices.

The source code is available as ASCII text files on a 360K, 5.25-in. (13.3-cm) floppy disk written on an IBM/AT personal computer running under PC DOS, v. 3.1. The size of the largest file is 91,551 bytes. The software was developed using VAX Ada, v. 1.5 under DEC VMS, v. 4.5. It should be portable to any validated Ada compiler, and it should be executable either interactively or in batch. The software was developed in 1989.

This program was written by Allan R. Klumpp of Caltech for NASA's Jet Propulsion Laboratory. For further information, Circle 141 on the TSP Request Card. NPO-17984

# Drive Your Designs Through JPS

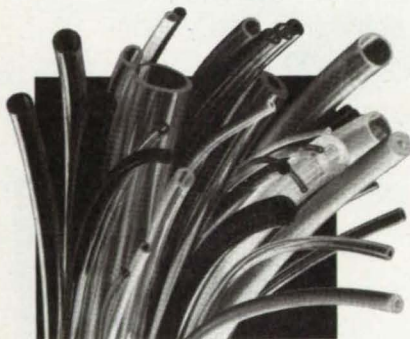


Urethane Tubing from JPS Elastomerics delivers the performance and the aesthetics to enhance any design. It's kink resistant, flexible to -65°F., with twice the bursting strength of vinyl!

Just compare these features:

- Flexibility
- Chemical and Temperature Resistance
- Variety of Durometers
- Range of Colors
- Heat Resistance

STEVENS  
*Urethane Tubing*

For more information, write:  
JPS Elastomerics Corp., Industrial Products Division  
Northampton, MA 01061-0658 413-586-8750

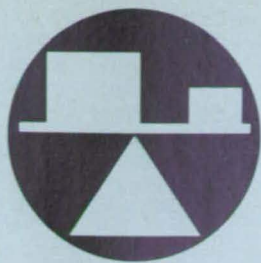

## Mechanics

### Hardware, Techniques, and Processes

- |  |  |   |
|--|--|---|
| 51 Calculation of Aeroelastic Transients Using Euler Equations | 52 Computing Gravitational Bumps From Repeating-Orbit Data   | 55 Calculating Flow Through a Helicopter Rotor      |
| 51 Estimating Liquid and Gas Contents in a Tank                | 53 Jig for Compression-Relaxation Tests of Plastics          | 56 Jacobi-Integral Method for Two-Body Problem      |
|  | 54 Calculating Transient Vibrations of Coupled Substructures | 57 Higher-Performance Ambient-Temperature Heat Pipe |
|  |  | 57 Thermally Actuated Unlatching Mechanism          |


## Calculation of Aeroelastic Transients Using Euler Equations

Conforming grids facilitate calculations of flows about changing shapes.

Ames Research Center, Moffett Field, California

A method for the calculation of transient aeroelastic effects on airplane wings is based on the Euler equations of flow. Aeroelasticity plays an increasingly important role in the design of modern aircraft, which tend to be flexible for high maneuverability. Because wind-tunnel experiments in aeroelasticity are much more expensive than are experiments that involve only flows about rigid models, the advancement of the capability to compute aeroelastic effects can reduce considerably the cost of developing an aircraft.

In establishing the mathematical foundation for the new method, the Euler equations of flow are formulated in strong-conservation-law form to provide for the numerical capturing of shocks. To enhance numerical accuracy and handle boundary conditions more easily, the Euler equations are transformed to general curvilinear coordinates. The governing equations of aeroelastic motion of a flexible wing are obtained via the Rayleigh-Ritz method, in which the aeroelastic displacements are approximated by a finite set of assumed modes. The contribution of each mode to the total motion is derived by Lagrange's equation. Furthermore, it is assumed that the deformation of the continuous wing structure can be represented by deflections at a set of discrete points. This assumption facilitates the use of discrete structural data, such as the modal

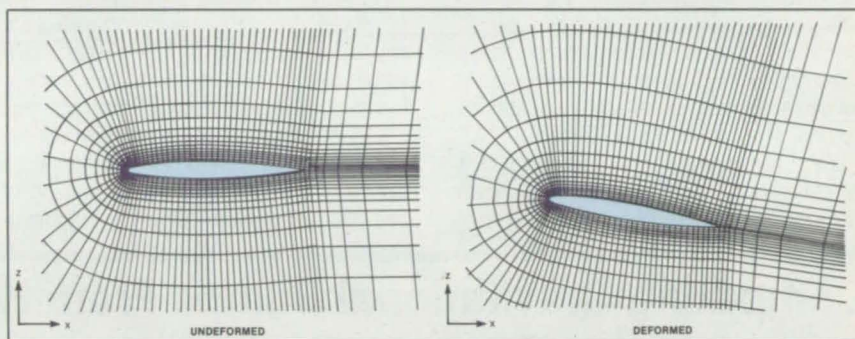

The **Computational Grid** changes to conform to the surface of the wing as the wing deforms in a pitching motion, as shown in this cross section viewed along a wing.

stiffness matrix and the modal mass matrix. These data can be generated by a finite-element analysis or from experimental influence-coefficient measurements.

The procedure for the solution of the equations of flow is based on the implicit diagonal algorithm, which in turn is based on a finite-difference scheme suitable for time-accurate computations on dynamic grids. The coupled flow and modal structural equations of motion are solved by use of a simultaneous-integration technique based on the linear-acceleration technique. Dynamic grids that adapt to the deforming shapes of the wing (see figure) are generated by an algebraic grid-generation scheme.

The method was used to predict the unsteady flows about a semi-infinite rectan-

gular wing oscillating in a pitching mode and about a wall-mounted cantilever rectangular wing oscillating in the first bending mode. Aeroelastic responses were computed by use of modal data generated by the finite-element method. The predictions agreed well with experimental data.

*This work was done by Guru P. Guruswamy for Ames Research Center. Further information may be found in AIAA paper A88-33775, "Time-Accurate Unsteady Aerodynamic and Aeroelastic Calculations of Wings Using Euler Equations."*

*Copies may be purchased [prepayment required] from AIAA Technical Information Services Library, 555 West 57th Street, New York, New York 10019, Telephone No. (212) 247-6500. ARC-12351*

## Estimating Liquid and Gas Contents in a Tank

Quantities would be inferred from temperatures and pressure changes.

Lyndon B. Johnson Space Center, Houston, Texas

A general approach to the estimation of the amounts of liquid and gas in a tank is based on measurements of pressure perturbations and temperatures and the use of the thermodynamic relationships among pressures, temperatures, and volumes. Although this approach is approximate and indirect, it is advantageous where such di-

rect and precise methods as the observation of a stationary liquid/gas interface in a gravitational field cannot be used. The thermodynamic approach can be used in the presence or absence of gravitation or acceleration, and regardless of the numbers, shapes, and movements of liquid/gas interfaces in the tank. It could also be useful

where the liquid may be stationary but too hazardous to permit direct observation.


Usually, the quantity that one seeks to determine is the volume of liquid in the tank. In this approach, one determines the volume of gas, then subtracts it from the known total volume of the tank to obtain the volume of liquid. To measure the volume of

gas, one induces perturbations  $\Delta V$  in the total volume  $V$ , thereby inducing perturbations  $\Delta P$  in the total pressure  $P$ . Then the volume of gas can be computed from

$$V_{\text{gas}} = -nP\Delta V/\Delta P$$

where  $n$  depends on the amount of heat transferred between the gas and its surroundings during the compression and expansion phases of  $\Delta P$  and  $\Delta V$ . The value of  $n$  can range from a low of 1 (as in isothermal compression and expansion) at small  $\Delta V$  to a high equal to the ratio of specific heats of the gas (as in adiabatic compression and expansion — a typical high value of 1.2 to 1.6).

The volume displacement or perturbation  $\Delta V$  and its rate must be large enough to yield useful  $\Delta P$  readings in the face of environmental effects, but not so large that the readings are degraded by acoustical noise and limitations of the sensors. A practical choice would lie between these extremes and would result in a value of  $n$  between the isothermal and adiabatic extremes. The relationships among  $\Delta P$ ,  $\Delta V$ , and  $V_{\text{gas}}$  could be determined theoretically, by calibration measurements on known volumes of liquid and gas, or both.

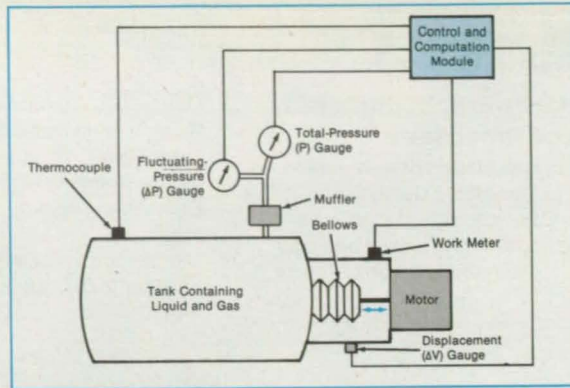

The general method can be implemented in a variety of ways, depending on the type of liquid and the conditions of operation and design of the tank system. For example, as shown in the figure, the volume perturbations could be produced by a small bellows alternately compressed and expanded by a motor. The displacement would be  $\lesssim 1/1000$  of the total volume of the tank. The frequency of displacement could be several cycles per second, but could range several orders of magnitude above or below this value, depending on the type and sophistication of the in-

struments in the system.

This work was done by Richard T. Walter of **Johnson Space Center** and Paul Van Buskirk, William Weber, and Richard Froebel of Lockheed Engineering and Sciences Co. For further information, Circle 116 on the TSP Request Card.

This invention is owned by NASA, and a patent application has been filed. Inquiries concerning nonexclusive or exclusive license for its commercial development should be addressed to the Patent Counsel, Johnson Space Center [see page 18]. Refer to MSC-21500.

## Computing Gravitational Bumps From Repeating-Orbit Data

An iterative algorithm exploits sparse-matrix techniques.

NASA's Jet Propulsion Laboratory, Pasadena, California

An iterative, least-squares algorithm efficiently computes estimates of both position errors indicative of the irregularities in the gravitational field of the Earth and the trajectory of a satellite in an orbit that repeats along the same ground track. Such estimates are useful in surveying, navigation, and geophysical research. The algorithm is particularly useful for processing data on the trajectory of a satellite in a low orbit that is tracked via the Global Positioning System (GPS).

The method is based on the repeat orbit technique in which the position of a low Earth orbiter as a function of time is described as the sum of two parts: the first part being an adjustment to the epoch state mapped to current time, the second part being a correction to the position to account for gravity mismodeling. Let  $r(t)$  be the adjustment to the current position; we have

$$r(t) = \frac{\partial r}{\partial r_0} r_0 + \frac{\partial r}{\partial v_0} v_0 + \delta(t)$$

where  $r_0$  is the adjustment to the epoch position,  $v_0$  is the adjustment to the epoch velocity, and  $\delta(t)$  is the term representing the gravity perturbation. At discrete measurement times, this correction will be called the "Gravity Bin" parameters. The epoch time is using the nominal force model.


The algorithm is intended for use in calculating the gravity-bin parameters from measurements of the positions of a satellite

The **Measurement Matrix** for multiple long arcs divided into subarcs has a block structure. For clarity, only two arcs of two subarcs each are shown here. The general case involves arcs ranging in number from 10 to 100. The number of subarcs in each arc ranges from 10 to 127. The matrix is, therefore, very sparse. With proper care, an algorithm can take advantage of this sparseness to reduce the amount of calculation.

along multiple long arcs (typically, representing time spans of 10 days) that are divided into subarcs. The algorithm exploits the sparse block structure of the measurement matrix (see figure). First, it sets the gravity-bin parameters equal to zero and estimates such arc-dependent parameters as those of the epoch states. This is done arc by arc and typically involves the estimation of a few hundred parameters. The solution is then subtracted from the observed values to get a new set of measurement residuals. The residuals from multiple arcs

are combined, and the gravity-bin parameters are estimated. In this step, the arc-dependent parameters are fixed. The number of parameters estimated at one time is typically a few hundred, assuming that the long arc is partitioned into subarcs of time spans of about 2 h.

Once the gravity-bin parameters are estimated, they are subtracted from the measurement residuals. Then the steps are iterated by fixing the gravity-bin parameters and reestimating the arc-dependent parameters, subtracting the solution from the

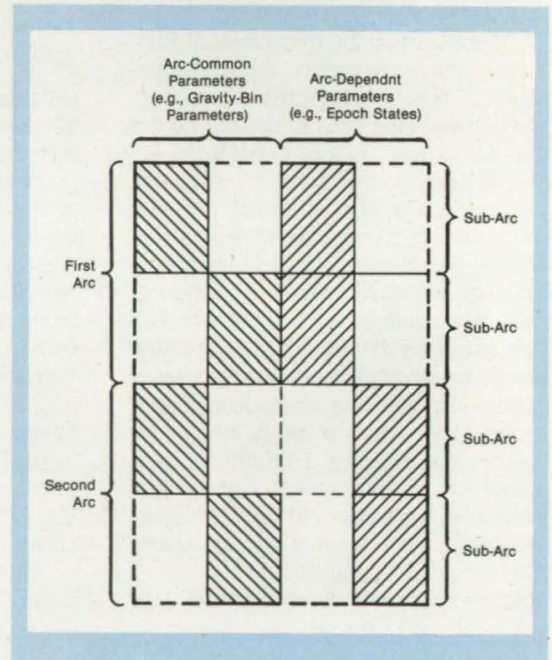

residual, fixing the arc-dependent parameters and reestimating the gravity-bin parameters, and subtracting the solution from the residual. This completes the second round of computations. The iteration is re-

peated until convergence is achieved. At that time, the residuals consist mostly of data noise and any systematic errors not represented in the mathematical model.

*This work was done by Jiun-tsong Wu,*

*Sien-Chong Wu, and William I. Bertiger of Caltech for NASA's Jet Propulsion Laboratory. For further information, Circle 26 on the TSP Request Card. NPO-17925*

## Jig for Compression-Relaxation Tests of Plastics

Specimens can be tested in immersion or otherwise manipulated away from the compression tester.


*Lyndon B. Johnson Space Center, Houston, Texas*

An improved jig facilitates tests of the long-term compression-relaxation properties of plastics. Such tests are useful in quantifying some of the time-dependent properties of polymers, in investigations of the effects of aging, and in ascertaining the service lifetimes of polymeric components.

The jig is designed to accommodate the high moduli of elasticity of some plastics; it is intended in part to replace prior equipment that is unusable because it was designed for testing rubbers, which have low moduli of elasticity. Unlike other equipment designed for long-term tests of plastics, the jig can be removed from a compression-testing machine during a test and immersed in a test fluid. This feature is particularly desirable in testing a polymer that is to be made into compression seals in contact with the fluid. The load on the specimen can be measured at intervals by removing the jig from the fluid, placing it in the compression-testing machine, and obtaining a force-versus-time trace.

The procedure for use of the jig is the following:

1. Choose the dimensions of the unclamped, uncompressed specimen in conjunction with those of the jig and the top and bottom plates in it (see figure) so that when the specimen is subsequently fully clamped in the jig, with the thrust plate resting on the housing, the specimen will be compressed to the desired degree.
2. Cut the specimen to the chosen length, and place it in the jig between the top and bottom plates, without compressing or clamping.
3. Install the removable linear variable-differential displacement transducers, and place the jig in the compression-testing machine, with the plunger mounted in place to compress the specimen.
4. Set the compression-testing machine to compress the specimen at a rate of about 1 mm per minute, and activate the machine, taking a force-versus-time trace.
5. As soon as the thrust plate comes to rest on the housing and the displacement transducers indicate that the top plate is beginning to separate downward from the thrust plate, stop the compression-testing machine at that position, measure the compression force, and install the bolts that clamp the thrust plate on the hous-

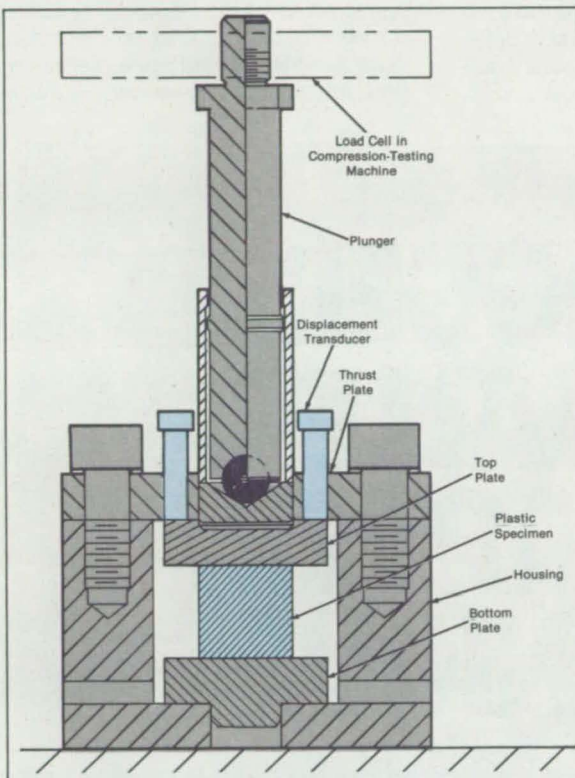

ing. The clamped thrust plate will maintain the compression force on the specimen after the machine is backed off.

6. Remove the jig from the compression-testing machine, remove the displacement transducers from the jig, and immerse the jig in the test fluid (if any) during the specified testing time.
7. To monitor the relaxation of force as a function of time during the test, remove the jig from the fluid at intervals, place it in the machine (keeping the specimen clamped), and compress while taking a force-versus-time trace as before. This time, there should be a "knee" in the force-versus-time curve at the point where the specimen starts to be compressed farther and the top plate separates from the thrust plate measured by the pressure transducers. When the knee and separation are reached, stop the machine at this position, measure the force, then remove the jig as before and put it back into the fluid, to remain there until the next measurement. Typically, the relaxed compression force, measured at a given interval is reported as the ratio between that measurement and either the initial meas-

urement or else the measurement at a reference time of, say, one-half hour.

Because the displacement transducers are removed before immersion, this testing technique can be used with electrically conductive as well as nonconductive test fluids. In that the jig does not have to remain in the compression-testing machine throughout the test, this testing technique differs from a standard technique of the American Society for Testing and Materials. This feature offers two advantages in addition to those already mentioned: one is that it is possible to recalibrate the load cell in the compression-testing machine during long tests; the other is that by use of multiple jigs, one can perform simultaneous long-term compression-relaxation tests on multiple specimens with a single compression-testing machine.

*This work was done by Richard M. Shelley, James A. Daniel, and Ralph M. Tapphorn of Lockheed Engineering & Sciences for Johnson Space Center. No further documentation is available. MSC-21674*

# Calculating Transient Vibrations of Coupled Substructures


Equations of motion of each substructure are solved independently.

Marshall Space Flight Center, Alabama

A finite-element, numerical-integration method for estimating the transient vibrational response of a structure composed of coupled substructures entails less computation than has been needed in previous methods. The method is applicable to any number and configuration of linearly responding substructures and to both determinate and indeterminate boundary conditions at interfaces between substructures.

With little or no additional difficulty, the method is also applicable to changing interface boundary conditions.

In a typical vibrational-response problem, a structure can have several thousand degrees of freedom, and it is impractical to solve the thousands of equations of motion by direct numerical integration. Heretofore, the standard procedure to overcome this obstacle has involved the follow-

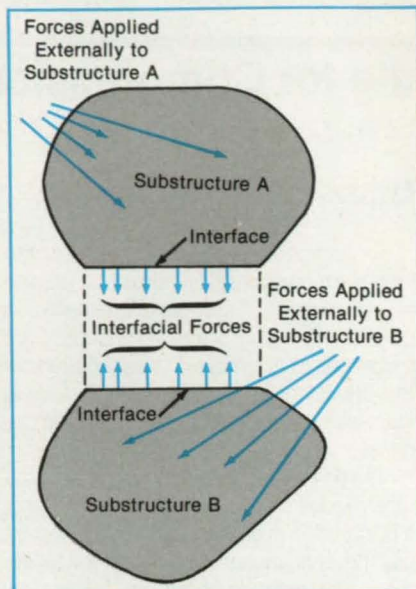

The Responses of Substructures to external forces and to the forces of interaction between substructures are computed in the present vibration-analysis method. In previous methods, the response of the entire structure (requiring many more equations) was computed.

ing procedure: First, one computes the vibrational modes and frequencies of the entire structure by solving an eigenvalue problem (this is still a major problem). The modes are then used to transform from the original discrete physical coordinates to new modal coordinates. Next, in an approximation, the number of equations is reduced by truncating the modal coordinates of higher frequency without significantly reducing the accuracy of the results. One can then make a transformation to a set of uncoupled equations that can be solved easily on present computers.

In the present method, one does not attempt to solve the complete set of coupled equations for the entire structure. Instead, among other things, one solves the equations of motion for each substructure independently. The interface forces between the substructures are approximated by third-order power series in time. At each time step of the numerical integration, the solution to the equations of motion of each substructure is calculated with all externally applied forces, including the interface forces (see figure), which involve the initially unknown coefficients of the third-order power series in time. These coefficients are evaluated at the end of each time step by enforcing the compatibility of displacements, velocities, and accelerations at the interfaces; this can be done by simple matrix multiplication and is easily accomplished on a computer. Once the

# BIGGER, SMALLER, SHARPER, UNIQUE



## The Friendliest Transducer Amplifier/Filter System Ever

Low drift and high CMRR. Programmable excitation and auto balance. Then came Precision innovation.

Up to 32 channels. Calibration and monitoring. All in a 7" case. Twice the density. Bigger capability in smaller space.

## Sharper Performance

True anti-alias elliptics, 80 dB/octave. Time delays superior to Bessel. To 204.6 kHz. 1° and 0.1 dB match. All to minimize sampling, maximize A/D throughput.

## Calibration

Go/no-go self test with diagnostics. Programmable source for end-to-end cal. 10 wire bridge for accurate shunt cal.


## Versatile, too

Exclusive auto gain ranging. Overload detection. Zero suppression using voltage insertion.

Controllable from front panel or computer interface.

## Call. Fax. Or write.

Meet us on the new frontiers of Precision.

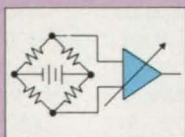

**PRECISION FILTERS, INC.**

240 Cherry Street, Ithaca, New York 14850  
607-277-3550 Fax: 607-277-4466



coefficients are known, the interface forces and the vibrational response at the end of each time step can be computed.

The procedure is repeated for as many time steps as necessary to span the time of interest. The method is approximate in that interfacial compatibility is enforced only at the ends of the time steps rather than continuously. Therefore, as in most numerical-integration methods, smaller time steps yield more-accurate results.

Because the interfacial compatibility is maintained by use of an interface-compatibility-coefficient matrix, the method is especially suited for use where interface

boundary conditions change with time: the matrix is simply changed or regenerated to reflect changes in the boundary conditions between substructures or a change in the size of the time step. Conversely, when no such change is required, there is no need to recompute this matrix. One example of changing boundary conditions is provided by slip/stick motion caused by friction at an interface between substructures. In this case, one would have to monitor the interface forces to determine whether the interface is slipping or sticking and modify the interface-compatibility-coefficient matrix to reflect the new

conditions whenever one detected a transition between sticking and slipping.

*This work was done by J. R. Admiré and J. A. Brunty of Marshall Space Flight Center. Further information may be found in NASA TP-2926 [N90-13444], "A Transient Response Method for Linear Coupled Substructures."*

*Copies may be purchased [prepayment required] from the National Technical Information Service, Springfield, Virginia 22161, Telephone No. (703) 487-4650. Rush orders may be placed for an extra fee by calling (800) 336-4700. MFS-28477*

## Calculating Flow Through a Helicopter Rotor

The calculated flow is fully coupled with deformations of the rotor blades.

*Ames Research Center, Moffett Field, California*


A new method for calculating the flow of air through and around a helicopter rotor is incorporated into the General Rotorcraft Aeromechanical Stability Program (GRASP) (a computer program for aeroelastic analysis). The flow induced by the rotor has an important effect on the aeroelastic properties of the helicopter. Because of the combined finite-element/multibody methodology used as the basis for GRASP and because of the need to preserve its modeling flexibility and generality, it was necessary to depart from traditional methods of computing the induced velocity and to develop the new method.

The rotor is treated as an actuator disk, and the flow field as a cylindrical region surrounding the disk (see figure). The axisymmetric flow field in hover or purely vertical ascent or descent is represented by an airmass element. The generalized coordinates of the inflow associated with this element are included in the state vectors of

the steady-state and dynamical mathematical models. This means that the steady-state inflow velocity field is calculated in parallel with the deformations of the structure and that this velocity field is fully coupled to the deformed state of the rotor blades. The generalized coordinates of the inflow are introduced into the model in a manner similar to that used to introduce the degrees of freedom of the structure. That is, an air node is introduced to repre-

sent the flow field at a point on the axis of symmetry of the flow field.

A rotor blade is represented by an aeroelastic beam element — the primary structural element in GRASP. The calculations of the momentum contributions from the actuator disk are separated from those for the blade element. The airmass element represents only the aerodynamics of the flow field, while the aerodynamics of the blade element are isolated in the aeroelastic beam element. The aerodynamic forces exerted by the flow field on the rotor

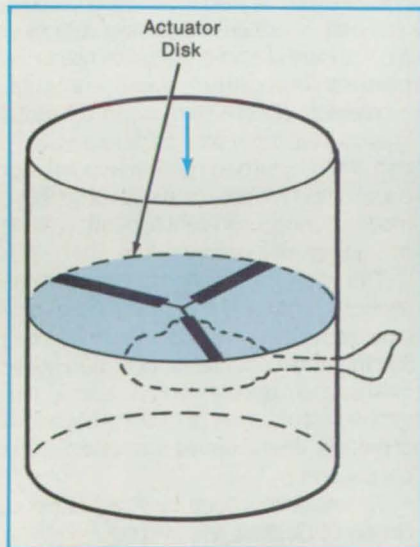

The Flow About a Helicopter Rotor is represented by an axisymmetric flow field in a cylindrical region with an actuator disk as the source of the flow.

# Does It Move?

If your product or system involves motion, and you need accurate loads, displacements, velocities, accelerations, forces or motion path information...you need ADAMS®.

The World's First Choice for Multibody System Analysis

## ADAMS

Mechanical Dynamics, Inc. ▲ 2301 Commonwealth ▲ Ann Arbor, MI 48105 ▲ 313-994-3800

are calculated for individual subelements within the aeroelastic beam element.

This work was done by Donald L. Kunz of Ames Research Center and Dewey H. Hodges of Georgia Institute of Technology.

Further information may be found in NASA TM-100026 [N88-10777], "Analytical Modeling of Helicopter Static and Dynamic Induced Velocity in GRASP."

Copies may be purchased [prepayment

required] from the National Technical Information Service, Springfield, Virginia 22161, Telephone No. (703) 487-4650. Rush orders may be placed for an extra fee by calling (800) 336-4700. ARC-12202

## Jacobi-Integral Method for Two-Body Problem

Trajectories can be computed more precisely, in fewer steps.

Lyndon B. Johnson Space Center, Houston, Texas

The Jacobi-integral method enables the efficient, accurate computation of the trajectory of a natural satellite or spacecraft perturbed by a component of gravitational

potential that depends explicitly on both position and time. In this method, the equations of motion are reformulated to reflect the fact that the total energy is no longer a

constant of motion (as it is in prior formulations in which the gravitational potential does not depend explicitly on time).

Instead of the total energy, the Jacobi integral, which is an energylike constant of the motion in this case, is embedded in the Newtonian differential equations of motion. The resulting simplification of the equations makes it possible to compute trajectories more precisely, with fewer numerical steps. With modifications, the Jacobi-integral approach might also be applicable to such terrestrial problems as the motions of rotors and of beams of electrically charged particles in changing electrical and magnetic fields.

Following the path taken in previous research on this topic, the derivation of the modified equations of motion begins with the introduction of the fictitious time variable,  $s$ , via the equation

$$\frac{dt}{ds} = t' = r$$

where  $t$  = time and  $r$  = the radius from the planet (or other source of gravitational potential) to the other object in motion. The substitution of  $s$  for  $t$  in the basic equations of motion removes singularities. The equations of motion are then linearized to a perturbed-harmonic-oscillator form in which the Laplace vector and the Keplerian energy element are embedded.

The Jacobi integral can be shown, in one example, to yield the Jacobi constant,  $J = \omega c h$ , where  $\omega$  is the angular velocity of a nonspherical planet that gives rise to the perturbing potential,  $c$  is the angular momentum of the system, and  $h$  is the total energy (Keplerian plus perturbing potential). The perturbed-harmonic-oscillator equations of motion are modified so that a modified Jacobi constant appears in place of the Keplerian energy element.

The price for the incorporation of the Jacobi constant is the introduction of a new element — the axial element — and its differential equations. Fortunately, the axial element appears only as a small perturbation term in the differential equations of motion. This facilitates a precise numerical solution.

This work was done by Victor R. Bond, Robert G. Gottlieb, and Michael F. Fraietta of McDonnell Douglas Corp. for Johnson Space Center. For further information, Circle 12 on the TSP Request Card. MSC-21623

# COSMOS/M

C A S E B O O K

## The Case for P-Method Analysis

Engineers have long thought that complex meshes produce more accurate results.

However, with recent technology advances, the P-Method of using higher-order polynomials to describe the deflection of elements offers a simpler solution.


Now Structural Research makes P-Method analysis available to complement the H/P-Method and adaptive meshing analysis techniques for which COSMOS/M is famous.

Using the COSMOS/M P-Method, far fewer elements are required to achieve convergence and accurate results. The P-Method also offers significant advantages in ease of use, and CPU speed to reach a design solution.

Used with the COSMOS/M STAR module, the P-Method can be combined with adaptive meshing to determine nodal displacements and element stresses. Even coarse meshes developed in CAD programs can be used with COSMOS/M to yield accurate solutions by simply increasing the value of  $P$  for the element.

To appreciate the speed and simplicity of the COSMOS/M P-Method, study the chart below. To appreciate its ease of use and application to your own engineering problems, contact Structural Research for more information.

### Beam with two circular notches under a concentrated tip load

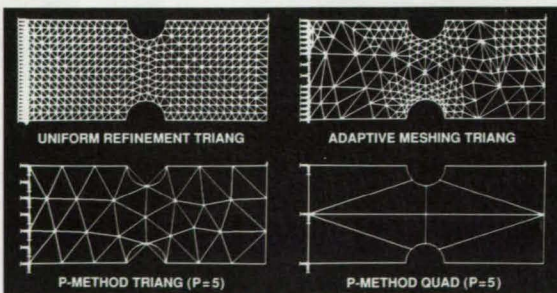

	Uniform Refinement Triang	Adaptive Meshing Triang	P-Method Triang (P = 5)	P-Method Quad (P = 5)
No. of Elements	2,890	176	46	8
Nodes per Element	3	6	6	8
$\sigma_x$ at Point D	4,936	5,819	5,773	6,008
Error (%)	16.9	2.1	2.8	1.1
CPU Time (Sec) (386/20 MHz PC)	297	2,417	90	99

**SPECIAL OFFER:**

Subject to availability, Structural Research & Analysis Corp. will send you a working version of COSMOS/M which will enable you to run your own statics, dynamics and heat transfer problems. Introductory user guide plus shipping and handling fee \$30.00.

Call 213/452-2158

### Solid modeling, FEA and drafting on your PC, Mac II or Workstation

#### Analysis:

- STATICS: Linear/Nonlinear
- DYNAMICS: Linear/Nonlinear
- HEAT TRANSFER: Linear/Nonlinear
- FLUID FLOW: Laminar, Turbulent
- ELECTROMAGNETICS
- FATIGUE\*
- CRASH DYNAMICS\*
- BUCKLING
- OPTIMIZATION
- KINEMATICS\*

#### Features:

- H- & P\*-METHODS
- AUTOMATIC ADAPTIVE MESHING
- 25,000 NODES, 100,000 D.O.F.\*
- SUBSTRUCTURING
- COMPOSITE/SANDWICH
- PLASTICITY, LARGE STRAIN, CREEP, etc.
- ANSYS®, NASTRAN®, PATRAN®, SINDA, PRO/Engineer®, AutoCAD®, INTERGRAPH® and other CAD INTERFACES

\*Available in Release 1.65

ANSYS, NASTRAN, PATRAN, PRO/Engineer and AutoCAD are the registered trademarks of Swanson Analysis Systems, Inc., NASA, PDA Engineering, Parametric Technologies and Autodesk, Inc., respectively.

**FEA SYSTEMS FROM \$995**



STRUCTURAL RESEARCH & ANALYSIS CORPORATION

1661 Lincoln Boulevard  
Suite 200  
Santa Monica, CA 90404  
(213) 452-2158  
FAX (213) 399-6421  
Telex 705578

East Coast Office:  
(412) 782-2425

DEALER INQUIRIES WELCOME

## Higher-Performance Ambient-Temperature Heat Pipe


A porous wick is added to the liquid channel.

Lyndon B. Johnson Space Center, Houston, Texas

The heat pipe shown in the figure is an improved version of the heat pipe described in "High-Performance Ambient-Temperature Heat Pipe" (MFS-26062), *NASA Tech Briefs* Vol. 12, No. 10, page 43. The heat pipe is 3 m long and made of aluminum. It differs from the previous heat pipe in that a lining of sintered aluminum powder has been added to the liquid channel. The new, porous lining results in improved thermal performance.

This work was done by Donald M. Ernst, Robert M. Shauback and Nelson J. Gernert of Thermacore, Inc., for Johnson Space

The **New Design** is similar to the previous design except that a porous lining of sintered aluminum has been added to the liquid channel.

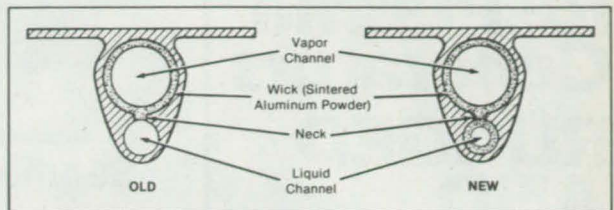

**Center.** No further documentation is available.

In accordance with Public Law 96-517, the contractor has elected to retain title to this invention. Inquiries concerning rights for its commercial use should be addressed to

Nelson J. Gernert  
Thermacore, Inc.

780 Eden Road  
Lancaster, PA 17601

Refer to MSC-21515, volume and number of this *NASA Tech Briefs* issue, and the page number.

## Thermally Actuated Unlatching Mechanism

Differential thermal contraction causes release at a predetermined low temperature.

NASA's Jet Propulsion Laboratory, Pasadena, California

A thermally actuated latch releases a component initially secured to it, when it is cooled to a predetermined temperature lower than the initial temperature. A latch of this type might be used, for example, to retain the cover of a cryogenic aerospace instrument during launch through intermediate cooling. With a nonmoving hook, such a latch might also be used to prevent the door of an industrial furnace from being opened until the furnace cools to a safe temperature.


The latch includes a supporting arm and a spring-loaded hook made of titanium, which has a relatively low coefficient of thermal expansion. It also includes an engaging arm made of epoxy or high-density polyethylene, either of which has a relatively high coefficient of thermal expansion (see figure). As the latch cools, the engaging arm shrinks away from the hook, and

the spring drives the hook away from the arm.

The temperature of disengagement depends on the specific design and materials. For the design and materials of the prototype, disengagement occurs when the

temperature falls from ambient to  $-48^{\circ}\text{C}$ .

This work was done by Virginia G. Ford of Caltech for NASA's Jet Propulsion Laboratory. For further information, Circle 92 on the TSP Request Card. NPO-17601

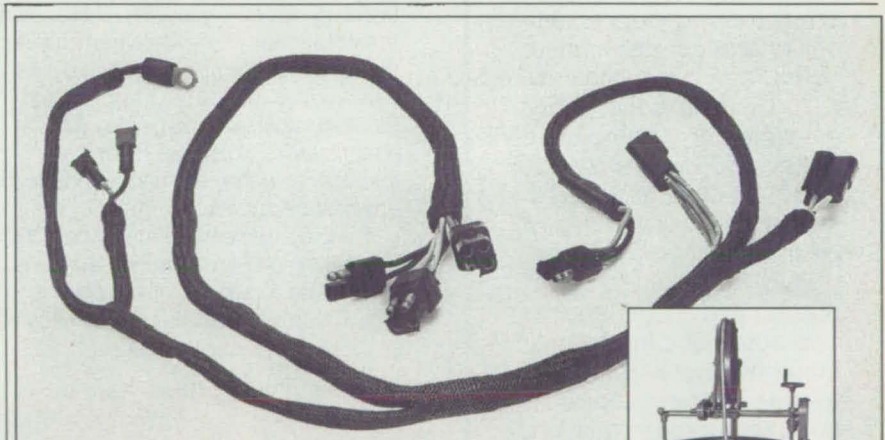

## Automotive. Aerospace. Marine. Military. Electronics.

If you've got the application, Wardwell shield and harness braiders have the solution across a wide range of industries and applications. For braiding a protective jacket over a wire bundle or harness assembly, rely on Wardwell's harness braider. Available in 16, 20, 24, 32, 36, 48, 56, 64, and 72 carrier models, it can fabricate jackets of textile or wire. For fabrication of wire shielding over an insulated-wire core, our shielding braider comes equipped with 24" capstan, motor drive with start/stop controls, and many other options. It's available with carriers suitable for textile braiding as well.

Call Wardwell at (401) 724-8800 for more information and a copy of our current brochure.




**WARDWELL**

Our experience is the difference

WARDWELL BRAIDING MACHINE CO.

1211 High Street, Central Falls, RI 02863 USA

(401) 724-8800 Fax: (401) 723-2690 TWX: 710 384-1305

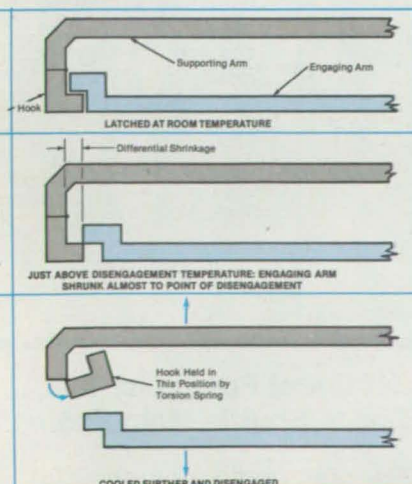

The **Simple Latch** is disengaged by differential thermal contraction of its parts.

# RF Plasma Generators RUGGED AND RELIABLE, COMPACT AND CLEAN



ENI's Series of solid-state plasma power generators offers the ruggedness, reliability and control to meet your exacting requirements.


You can choose either air-cooled or water-cooled units, up to 5 kw, 9-460 kHz, and 13.56 MHz, designed to meet today's most stringent cleanroom specifications.

ENI offers a wide range of plasma power generators and automatic impedance matching networks to fit a wide range of applications. For more information, please contact us at:

**ENI**  
A Division of Astec America, Inc.  
100 Highpower Road,  
Rochester, NY 14623-3498  
(716) 427-8270  
Telefax: (716) 427-7839



Circle Reader Action No. 301

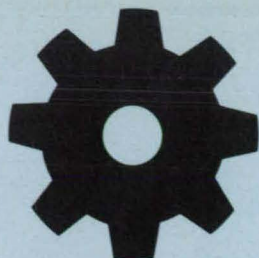

## Machinery

**Hardware, Techniques,  
and Processes**

58 Segmented Arm for  
Positioning and  
Assembly

**Books and Reports**

58 Jet Boost Pumps for  
the Space Shuttle  
Main Engine

### Segmented Arm for Positioning and Assembly

Control of a large robotic arm relies on conservation of angular momentum.

*Lyndon B. Johnson Space Center, Houston, Texas*

A proposed segmented robotic arm (see figure) for positioning and assembly of components of large structures would contain motor-and-flywheel angular-momentum devices in each arm segment. These devices would transfer angular momentum to and from the segments of the arm to produce the desired motion of the arm. The arm was conceived for use in outer space, but the concept may also be adaptable to terrestrial uses in which buoyancy cancels the effect of gravitation — for example, floating on or under water.

The application of the torques to particular portions of the arm would be controlled by selectively locking and releasing the rotational joints between the segments. If an angular momentum device in one segment were to fail, the arm could still be used, albeit with some degradation of performance, simply by locking the joint that connects that segment to one of the adjacent segments.

The proposed arm would be about 300 ft (90 m) long and could manipulate components of up to about 1 million pounds (0.5 Gg). The truss structure of each segment


would minimize its mass while providing stiffness to support the control and utility systems.

Neglecting friction between the arm and the environment, the total torque about any given joint would be the vector sum of all the individual segment torques. Thus, the more segments there were, the larger would be the effective control torque available at the base of the arm.

The accumulated location errors at the free end of the arm may present a problem. The arm would use position feedback to correct such errors. When the arm is handling a massive object, mechanical oscillations or vibrations could occur if the joints were locked while the load or arm was still moving. Active feedback from sensors that measure local motions would be used to send control signals to the angular-momentum-storage devices to damp any such undesired motions.

*This work was done by Reginald B. Berka of Johnson Space Center. For further information, Circle 30 on the TSP Request Card.*

MSC-21512

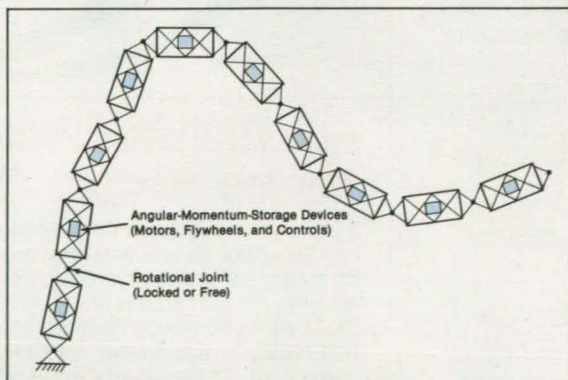

The **Segments of the Robotic Arm** would be moved by transferring angular momentum to and from the segment motors with flywheels.

### Books and Reports

These reports, studies, handbooks are available from NASA as Technical Support Packages (TSP's) when a Request Card number is cited; otherwise they are available from the National Technical Information Service.

### Jet Boost Pumps for the Space Shuttle Main Engine

Benefits could include increased reliability, simplified ducts, and decreased weight.

A brief report proposes the use of jet boost pumps in conjunction with the main pumps that supply liquid hydrogen and liquid oxygen to the main engine of the Space Shuttle. The present turbine-drive boost pumps are complicated and insufficiently reliable. In contrast, a jet pump is inherently very reliable because the main part of the pump has no moving parts. Moreover, a jet pump can be connected with simpler ducts, and it weighs less.

Jet pumps have been used in a wide variety of applications. In a jet pump, jets of fluid escape through nozzles at high speed from a manifold or plenum at high inlet pressure into a channel filled with the same or a different fluid at a low inlet pressure. Kinetic energy is transferred to the low-pressure flow by mixing, thereby inducing a combined outlet flow at a pressure between the high and low inlet pressures. The principal advantage of this kind of pump is simplicity, and the principal disadvantage is low efficiency.

The report contains several sections. The first section summarizes the principle of operation and previous experience with jet pumps. The next section describes the operation of a representative jet pump, presents some parameters used to describe performance, and discusses the effects of some pump configurations on efficiency.

The next section discusses the increase in temperature of the outlet flow over that of the inlet flow — a manifestation of the efficiency penalty. This causes an increase in the vapor pressure of the outlet fluid, with consequent reduction in the net positive suction head available to the main pump that follows. The increase in temperature is attributed to the kinetic energy lost in the mixing of the two inlet flows, and a conservative design protocol requires the assumption that all mixing losses are converted to heat.

The next section discusses the performance and design of the main pump in connection with the net positive suction head of the flow supplied to it by the jet pump. The last section presents some of the design parameters for the proposed liquid-oxygen and liquid-hydrogen pumps in the Space Shuttle. A comparison with the parameters of the corresponding turbine-drive boost pumps shows that the jet boost pumps should perform better.

*This work was done by Sen Y. Meng of Rockwell International Corp. for Marshall Space Flight Center. To obtain a copy of the report, "SSME Jet Pump," Circle 68 on the TSP Request Card.*

*Inquiries concerning rights for the commercial use of this invention should be addressed to the Patent Counsel, Marshall Space Flight Center [see page 18]. Refer to MFS-29673.*

## Smallest position sensor ever



For even the tightest installations, Kaman's 0.080-inch diameter sensor lets you resolve microscopic displacements down to 4 micro-inches at 50 kHz — without contact. Ideal for both magnetic and non-magnetic materials, the KD-2300 is only one of Kaman's 24 standard sensors that let you see small changes in position without touching the target. Whether you want single-channel or multi-channel output, Kaman can meet your needs. Call us for details.

Kaman Instrumentation Corporation, 1500 Garden of the Gods Road, Colorado Springs, CO 80907. Phone 719-599-1825. FAX 719-599-1823.  
**1-800-552-6267**

# KAMAN

Circle Reader Action No. 472

## Outstanding Advanced Technology Development Facility in Durham, NC



- 197,205 sq. ft. adjacent to Research Triangle Park
- Superb research & development / production complex




**BINSWANGER SOUTHERN**

230 South Tryon Street, Charlotte, NC 28202  
704-377-0801 • FAX 704-377-9046

Philadelphia, PA • New York, NY • Chicago, IL • Boston, MA  
Providence, RI • St. Louis, MO • Marshall, MI • Denver, CO  
Milwaukee, WI • Dallas, TX • Atlanta, GA • Raleigh, NC  
Miami, FL • Greensboro, NC  
Columbia, SC • Lexington, KY • Oxford, MS  
Tokyo • London • Zurich • Frankfurt • Milan • Paris

**COMMERCIAL & INDUSTRIAL REAL ESTATE**

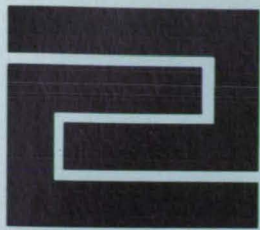

## Fabrication Technology

### Hardware, Techniques, and Processes

- 60 Coating Solar Cells by Microwave Plasma Deposition
- 60 Making Mullite Fibers by Airgap Wet Spinning
- 61 Detecting Filler Spaces Under Tiles
- 62 Tool for Robotic Resistive Roll Welding
- 63 Flexible Interior-Impression-Molding Tray

- 64 Monitoring Weld Penetration Via Gas Pressure
- 67 Beam Splitter for Welding-Torch Vision System
- 67 Making Three-Layer Solid Electrolyte/Electrode Sandwiches
- 69 Spacing Windings Evenly in Toroidal Inductors

## Coating Solar Cells by Microwave Plasma Deposition

Semiconductor wafers can be processed at temperatures low enough not to harm them.

NASA's Jet Propulsion Laboratory, Pasadena, California

Antireflection films can be deposited on silicon solar cells at high production rates with microwave-enhanced plasma deposition. Microwave energy at a frequency of 2.45 GHz generates a plasma in a mixture of gases, from which a thin film of silicon nitride deposits on silicon substrates. The reaction temperature is relatively low (only 250 °C), and the film deposition rate is more than 500 Å/min — 2 to 5 times faster than in a plasma without microwave enhancement. The quality of the antireflection film is similar to that produced by chemical-vapor deposition.

The deposition is carried out in a quartz chamber (see figure). The neck of the chamber is positioned in a rectangular microwave cavity resonator at a point where the electric field is high. Microwave power is guided by a rectangular waveguide into the cavity. Argon flows into the reactor while silane and ammonia or nitrogen flow over the silicon substrate in the flared portion of the chamber. The application of the microwave field to the argon gas at low pressure forms a high-density excited-state plasma that rapidly dissociates the other gases to form a dense silicon nitride film on the silicon substrate.


The substrate rests on a movable, heated holder. This allows the temperature of the substrate and its position in the chamber to be adjusted for maximum speed and uniformity of deposition. A mechanical pump continuously removes the used re-

actants from the chamber.

When microwaves rather than the usual 13.56-MHz radio-frequency waves are used to create the plasma, the field in the cavity oscillates so rapidly that the forces on the free electrons change direction before they can travel very far. Therefore, the plasma is not swept to the walls of the reactor. In comparison with lower-frequency plasma systems, the microwave system uses less power and consumes smaller quantities of gas. In addition, the species

formed in the plasma are longer lived and can thus dissociate the reactants in a region of the chamber well away from the plasma-generation region. Deposition can thus be done under the most favorable conditions.

*This work was done by Behrooz Minaee, Sanjeev R. Chitre, and Narges Zahedi of Superwave Technology Inc., for NASA's Jet Propulsion Laboratory. For further information, Circle 121 on the TSP Request Card. NPO-17035*

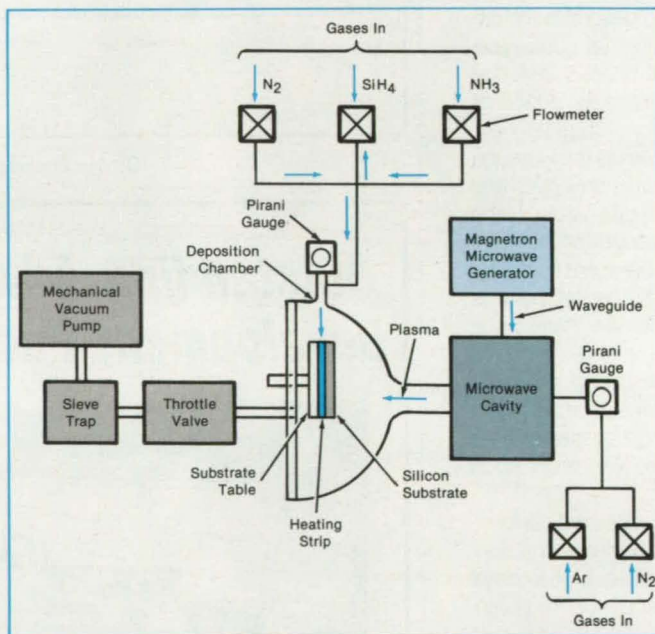

A Magnetron produces 2.45-GHz microwaves at a power of 1 kW. Pirani gauges measure the pressure in the deposition chamber while a mechanical vacuum pump removes spent gases. The properties and growth rate of the film depositing on the substrate depend critically on the mix of reactive neutral and ionic species in the plasma. Results are best with a highly activated plasma and moderate bombardment energies.

## Making Mullite Fibers by Airgap Wet Spinning

Neither melting nor a dangerous solvent is required.

Marshall Space Flight Center, Alabama

A proposed process would make continuous mullite ( $Al_6Si_2O_{13}$ ) fibers that would retain structural integrity at temperatures up to and somewhat beyond 1,300 °C. Heretofore, mullite fibers have been made by melt spinning (which requires high temperatures) and dry spinning (which requires a dangerous solvent like toluene or benzene).

The proposed process would make highly pure mullite fibers, without melting and with-

out a dangerous solvent. Instead, it would involve airgap wet spinning of an alumina/silica sol/gel mixture. The mixture would be extruded through a single-hole spinneret into a spin bath of deionized water and polyethyleneimine, where it would be converted to gel fiber. Continuing on its way, the gel fiber would be wound onto a package. Later, the gel fiber would be unwound from the spool and fed through a tube furnace, where it

would be converted to mullite.

*This work was done by Dennis S. Tucker and J. Scott Sparks of Marshall Space Flight Center. No further documentation is available.*

*Inquiries concerning rights for the commercial use of this invention should be addressed to the Patent Counsel, Marshall Space Flight Center [see page 18]. Refer to MFS-28431.*

## Detecting Filler Spaces Under Tiles

An eddy-current probe detects hidden seams, steps, and holes in a metal substrate.

*John F. Kennedy Space Center, Florida*

An eddy-current probe nondestructively and indirectly indicates whether screed is present under ceramic tile on an aluminum substrate. The particular eddy-current probe is intended for use on the insulating tiles on the Space Shuttle, but the eddy-current-probe technique has many potential terrestrial applications in nondestructive testing.

The screed, a room-temperature-vulcanizing polymer (RTV), is a filler that provides a smooth surface for bonding the tiles over seams, steps, and fasteners in the aluminum substrate. The screed can deteriorate under the influence of spilled hydraulic fluid, tile-waterproofing compound, and wide-ranging heat cycles, but there is no way of ascertaining from the appearance of the tile surface whether screed underlies the tile. Sometimes, it is necessary to remove tiles where screed may possibly be present, a process that takes 80 worker-hours per tile. Often, tiles are removed in a suspect area only to reveal that no screed has been used there. Moreover, tiles are frequently damaged during removal and replacement.


With the new probe, screed can be detected without removing tiles. Only about 0.5 worker-hour is needed to evaluate one tile. If screed is found, the tile can then be removed so that the RTV can be inspected and repaired. Unnecessary removal — and potential damage — is eliminated.

Pulsed high-frequency current in a coil in the probe induces eddy currents in the aluminum substrate (see figure). The coil detects the magnetic field produced by the eddy currents. The magnetic field can be related to the distance between the probe (which is placed on the outer surface of the tile) and the substrate, and thus indicates indirectly where screed is present. In the prototype instrument, the output signal of the probe is displayed on an oscilloscope, the output of which, in turn, could be fed to a digital voltmeter. In demonstrations, the prototype produced accurate information about the configuration of the substrate under the tiles. It gave repeatable results from test to test and from operator to operator.


*This work was done by Paul Mende and David Shinkevich of Lockheed Space Operations Co. and John Scheuer of Lockheed Missiles and Space Co. for Kennedy Space Center. For further information, Circle 130 on the TSP Request Card.*

*Inquiries concerning rights for the commercial use of this invention should be addressed to the Patent Counsel, Kennedy Space Center [see page 18]. Refer to KSC-11411.*

The **Transducer Coil Excites Eddy Currents** in the aluminum substrate material. The response appears on an oscilloscope or meter. Changes in the response indicate spatially abrupt changes in the substrate.

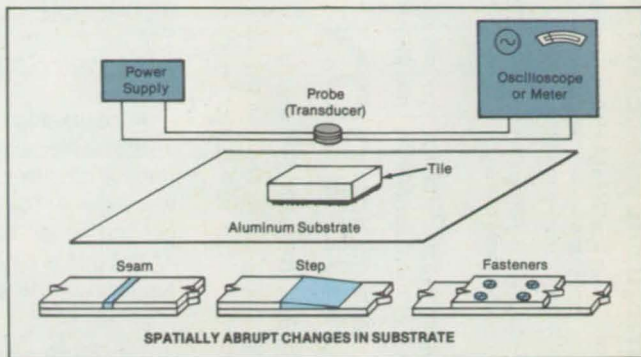

## Exhibit Your Latest Products At America's Premier Technology Showcase

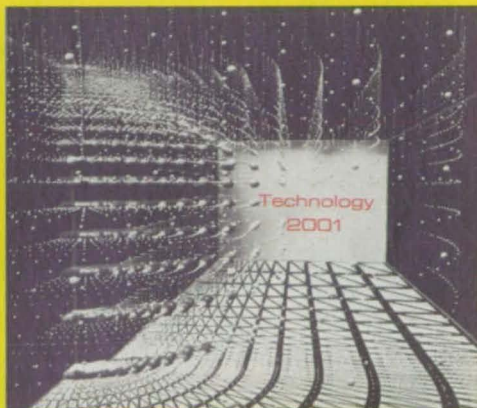

Graphic Courtesy Stardent Computer Inc.

## Technology 2001

The Second National Technology Transfer Conference & Exposition  
December 3-5, 1991  
San Jose Convention Center  
San Jose, CA


Join the leading federal laboratories, their contractors, and other high-tech companies exhibiting the latest advances in electronics, materials, computer hardware and software, manufacturing technology, and biotechnology. Sponsored by NASA and *NASA Tech Briefs*, Technology 2001 is your best, most cost-effective opportunity to meet with and sell to a large number of research directors, project leaders, senior design engineers, and other technology managers looking for innovative ideas and products. Act now to reserve a prime spot at this major national event!

Call (800) 258-0201 today for a complete exhibit reservation package. NY residents call (212) 490-3999.

# No matter how you look at it...we've got the right GPS time and frequency receiver for you

- Event Time Logging Module provides precise time-tagging for power line fault locating systems
- Network synchronization configurations support telecommunications master clock applications

- Power line Voltage Phase Angle Module provides precise time-tagged 60-cycle phase angle measurements
- Integrated antenna/downconverter supports long cable feeds

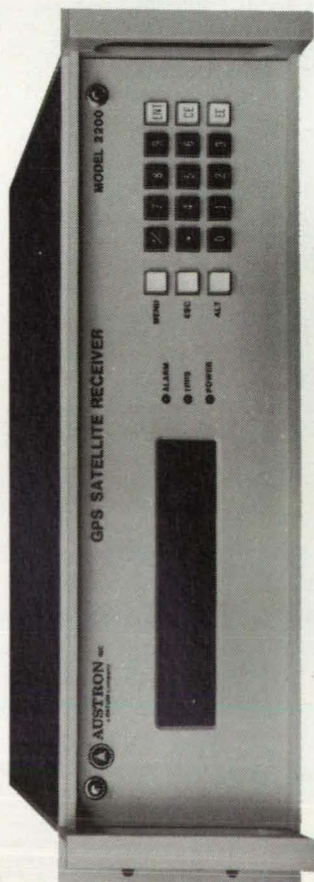

Contact us today for complete literature and information. Find out how you can benefit from GPS and get with the leading edge of today's most sophisticated technology.

## FTS / AUSTRON

Datum companies working together to meet your needs...  
 P. O. BOX 14766 AUSTIN, TX 78761 ■ TEL (512) 251-2313 ■ FAX (512) 251-9685

## Tool for Robotic Resistive Roll Welding

Resistance-welding current starts and stops automatically according to force exerted against the workpiece.




Marshall Space Flight Center, Alabama

A roll-welding attachment for a robot is a simple, inexpensive device that incorporates a modified commercial resistance-welding gun. The roll welder is used to apply brazing foil to a workpiece.

The gun is mounted on a board, and a tungsten-alloy wheel is attached to its elec-

trode holder (see figure). A spring-loaded plate is used for attachment to the end effector of the robot. The hand-operated trigger switch that turns on welding current in the unmodified gun is removed from the interior of the gun and mounted externally on the board, where it is actuated by a spring-

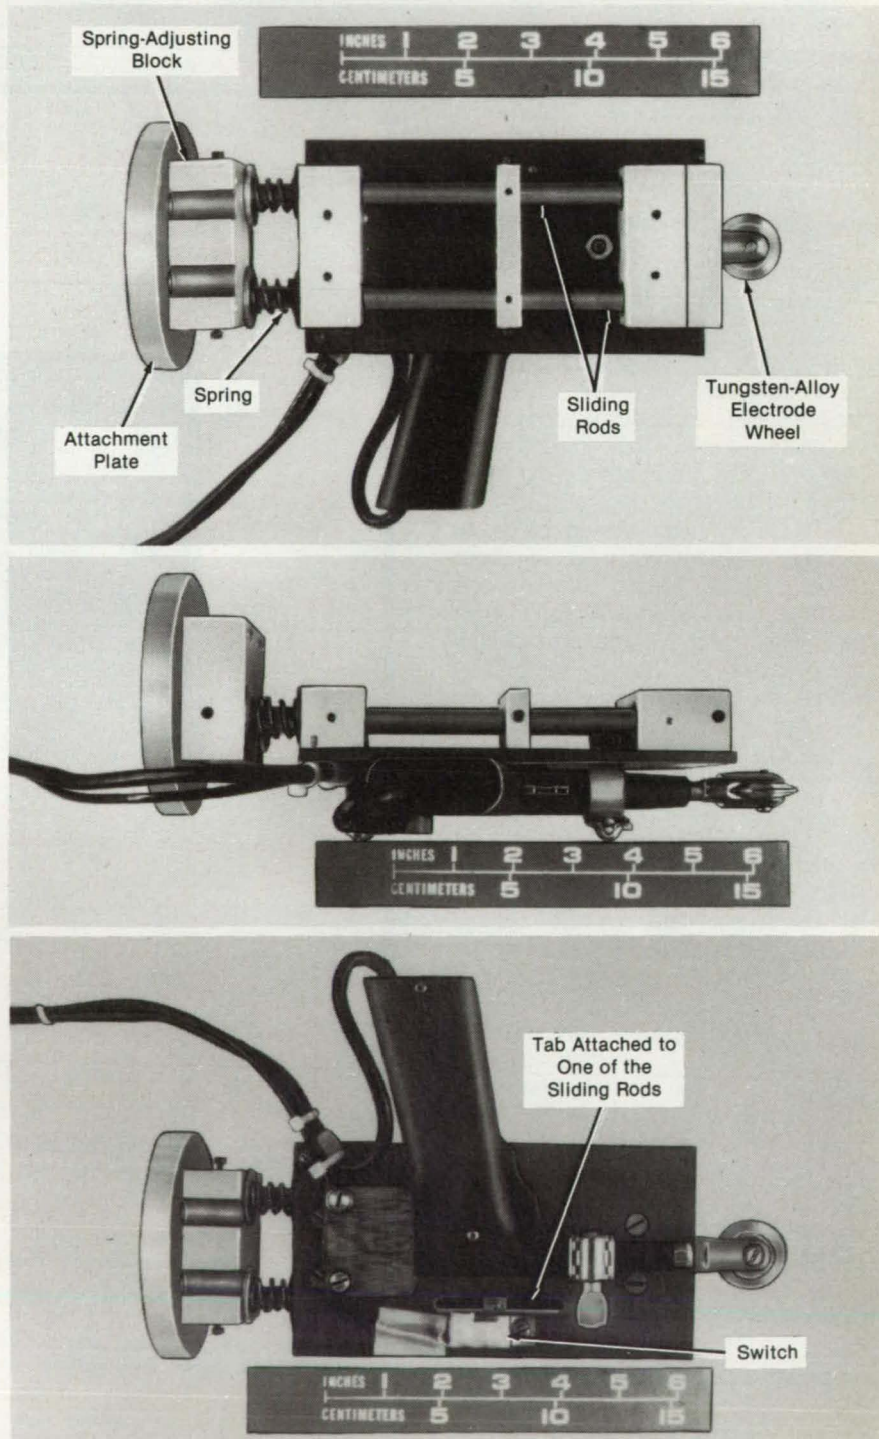

The Modified Welding Gun is easily attached to the end effector of a robot. The robot applies the welding force and moves the electrode wheel along the prescribed path.



loaded mechanism and the attachment plate.


The robot applies a force to the attachment plate, thereby compressing the springs and pressing the wheel against the foil on the workpiece. The rods on which the attachment plate are mounted slide into the gun until a tab actuates the switch lever, turning on welding current. The robot then rolls the wheel along the foil to weld it to the workpiece. When the robot removes the force, the springs push the rods and attachment

plate outward, turning off the welding current.

*This work was done by Jeffrey L. Gilbert of Rockwell International Corp. for Marshall Space Flight Center. No further documentation is available.*

*Inquiries concerning rights for the commercial use of this invention should be addressed to the Patent Counsel, Marshall Space Flight Center [see page 18]. Refer to MFS-29660.*

## Flexible Interior-Impression-Molding Tray

Weld joints in cavities can be examined nondestructively. 


*Marshall Space Flight Center, Alabama*

Yet another device and its method of operation have been added to the variety of techniques for making impression molds of otherwise inaccessible interior surfaces. This latest device is used inside a combustion chamber of complicated shape for the nondestructive evaluation of the qualities of welds, including such features as offset, warping, misalignment of parts, and drop-through.

The device includes a flexible polypropylene tray trimmed to fit the desired interior surface contour. Two neodymium boron magnets  $\frac{1}{2}$  in. (12.7 mm) or  $\frac{3}{4}$  in. (19 mm) in diameter and an inflatable bladder are attached to the tray (see figure). In operation, a video borescope (not shown in the figure) is first used to identify the surface to be inspected. Next, the impression-molding material — a quick-setting, very-high-

viscosity silicone — is prepared by mixing Citricron base (or equivalent) putty with the amount of accelerator required to obtain a setting time of 10 to 20 minutes.

The tray is loaded with impression-molding material and inserted in the cavity. Viewing the interior of the cavity through the borescope, the technician guides the tray to the surface to be inspected with the aid of two external neodymium boron magnets. Using a 60-cm<sup>3</sup> plastic syringe with a check valve, the technician pumps air into the bladder. The bladder becomes inflated, pressing the flexible tray and its putty against the surface to be inspected. After the 10- to 20-minute setting time, the technician deflates the bladder and extracts the tray from the cavity with the help of a tether. The accurate impression of the wall on the putty is then examined.

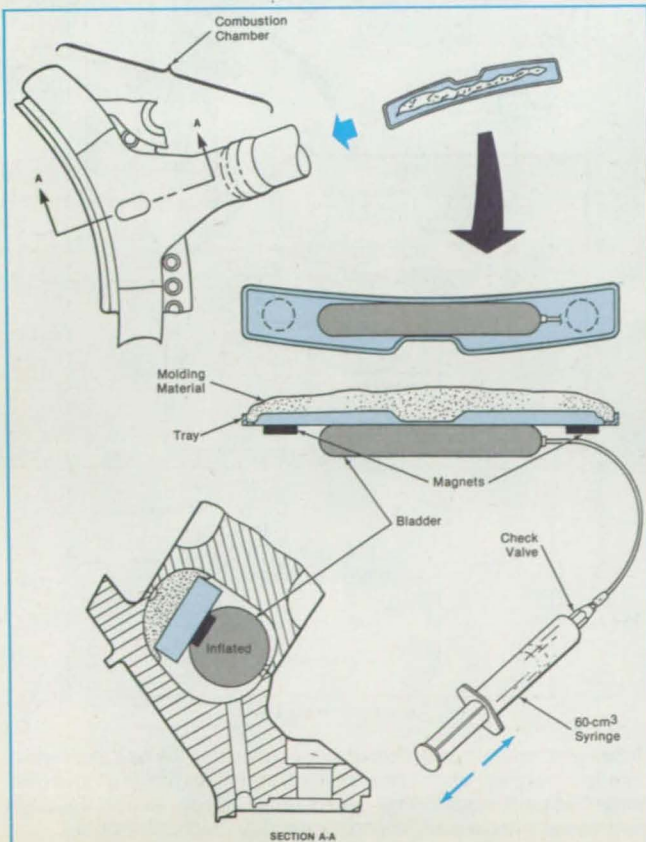

*This work was done by Jeffrey E. Anders of Rockwell International Corp. for Marshall Space Flight Center. No further documentation is available.*

*Inquiries concerning rights for the commercial use of this invention should be addressed to the Patent Counsel, Marshall Space Flight Center [see page 18]. Refer to MFS-29679.*

The Tray and Putty are inserted in a cavity to make a mold of the interior surface.

## 3M Lowers Cost of High Temperature Electrical Tapes


New proprietary film matched with acrylic and silicone adhesives for UL Class 155°C/180°C

AUSTIN, Tex. — Two newly developed high temperature electrical insulating tapes are lower priced than current tape constructions now on the market. The secret is in matching new tough proprietary film with appropriate high temperature adhesives.

Scotch™ Electrical Tape 72 is thin, high temperature resistant, light tan, and semi-opaque. It is combined with an acrylic pressure-sensitive adhesive, and is UL Recognized for continuous use at temperatures not exceeding 155°C, for class F operating components.

Scotch™ Electrical Tape 73 is thin, high temperature resistant, light brown, and semi-transparent. It is combined with a silicone pressure-sensitive adhesive, and is UL Recognized for continuous use at temperatures not exceeding 180°C, for class H operating components.



Flexibility, conformability and flagging resistance are also key features. UL Component Recognition. 

Typical high temperature electrical insulating applications are in motors, coils, transformers, TV yoke/deflection magnets, wrap and fill capacitors, and similar electrical and electronic products.

Both tapes are flame retardant, flagging resistant and meet NASA outgassing requirements.

Permanently printable using conventional tape printing equipment. Standard widths from 1/16" to 4". Custom slitting available.

For more information, contact a 3M Electrical Specialties Division representative or authorized distributor or call 1-800-233-3636.

3M Electrical Specialties Division

PO Box 2963  
Austin, TX 78769-2963

**3M**

## JR3 MULTI-AXIS FORCE-TORQUE SENSORS



- ◆ 3, 4, and 6-axis configurations
- ◆ Variety of sizes, capacities and bolt patterns
- ◆ Digital and analog support electronics
- ◆ Military and spaceflight capabilities

# JR<sup>3</sup>

JR3 Inc.  
22 Harter Ave.  
Woodland, CA 95695  
(916) 661-3677  
FAX: (916) 661-3701

Circle Reader Action No. 446

## ANVIL CASES... BUILT FOR AIR, LAND & SEA

- **M.A.C.C. Cases** – military application cases and containers meet or exceed the stringent testing of MIL-STD-810
- **A.T.A. Cases** meet or exceed the Air Transport Association specification 300 Category 1 standards



CALL FOR  
OUR NEW  
CATALOG!

• Custom measuring and designing available • Building quality cases since 1952

Call Today For More Information

**ANVIL CASES**  
SUBSIDIARY OF ZERO CORPORATION

15650 Salt Lake Ave., City of Industry, CA 91745 • P.O. Box 1202, La Puente, CA 91747

(800) FLY-ANVIL (800) 359-2684

## Monitoring Weld Penetration Via Gas Pressure

Jumps in pressure indicate whether full penetration has been achieved or lost.


*Marshall Space Flight Center, Alabama*

A welding monitor uses pressure on the back side of a weldment to monitor the penetration of the weld. The pressure-monitoring system was devised to ensure full penetration along the full lengths of weld joints, when direct observation of their back sides by visual inspection, x rays, or fiber optics is not possible.

The system operates on the principle that the pressure of the inert purge gas flowing through the cavity on the back of the weldment decreases sharply the instant a weld keyhole is established, indicating full penetration. When the keyhole closes, the pressure rises suddenly, indicating that full penetration has been lost. The information gained by use of the monitor can be used in the initial development of welding parameters or during production as a safeguard.

*This work was done by J. Ben Coby, Jr., and Douglas M. Todd by Rockwell International Corp. for Marshall Space Flight Center. No further documentation is available.*

*Inquiries concerning rights for the commercial use of this invention should be addressed to the Patent Counsel, Marshall Space Flight Center [see page 18]. Refer to MFS-29683.*

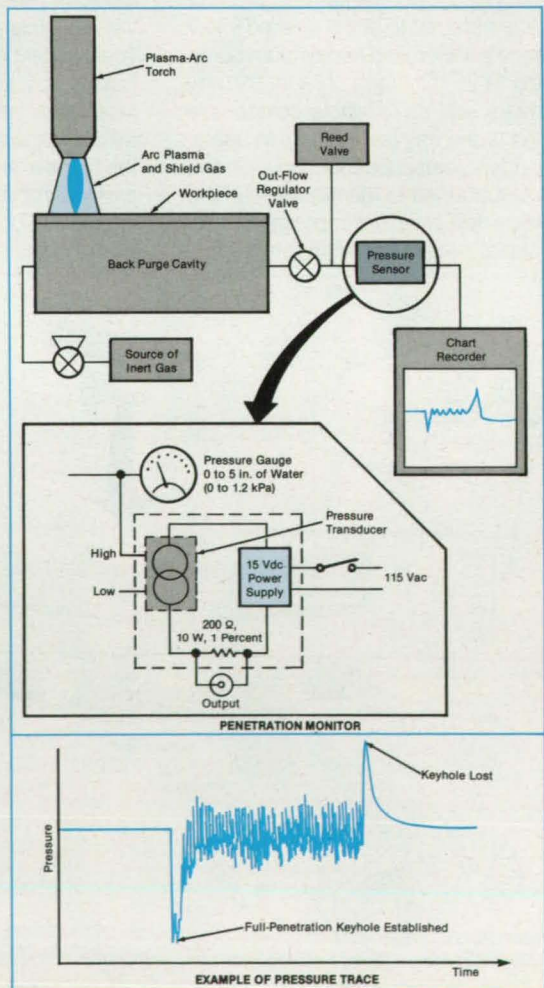

**A Sensor Continuously Measures** the pressure of the inert gas flowing through the cavity on the back of a weldment. A sudden drop on the pressure chart means that the weld pool has fully penetrated; a sudden rise means that the pool no longer extends through the joint.

## Beam Splitter for Welding-Torch Vision System

Illumination for previews could be directed along the torch.

Marshall Space Flight Center, Alabama


A compact welding torch equipped with an along-the-torch vision system includes a cubic beam splitter to direct preview light on the weldment and to reflect light coming from the welding scene for imaging. The beam splitter is integral with the torch; it requires no external mounting brackets. The torch is, therefore, exceptionally compact.

The beam splitter is inside the torch at the right-angle bend in the torch housing (see figure). It directs light from a lamp, in a beam concentric with the welding torch, onto the weld path. It collects the same light after reflection from the workpiece and diverts it into a system of lenses in the torch. A video camera processes the reflected beam and converts it into an image of the

weld.

The beam splitter is rugged and withstands vibrations and a wide range of temperatures. It is a commercially available, reasonably priced item that comes in a variety of sizes and optical qualities with antireflection and interference-filter coatings on the desired faces. It can be made to provide 50 percent transmission and 50 percent reflection of the incident light to exhibit minimal ghosting of the image.

This work was done by Jeffrey L. Gilbert of Rockwell International Corp. for Marshall Space Flight Center. No further documentation is available.  
MFS-29641

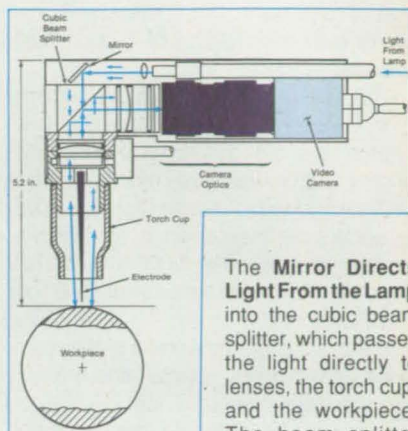

The Mirror Directs Light From the Lamp into the cubic beam splitter, which passes the light directly to lenses, the torch cup, and the workpiece. The beam splitter turns reflected light 90°, directing it into the camera optics.

## Making Three-Layer Solid Electrolyte/Electrode Sandwiches

Compositions and particle sizes are adjusted for sintering at a common temperature.

NASA's Jet Propulsion Laboratory, Pasadena, California

A tape-casting-and-sintering process joins two ceramic materials having widely different sintering temperatures into an integral sandwich structure. Although monolithically joined, the layers retain their identities, without migration of constituents.

The method is used to make a three-layer structure composed of outer porous layers of strontium-doped lanthanum manganite and an inner dense layer of yttria-stabilized zirconia (see figure). Such structures could be used to make electrolytic and fuel cells with solid electrolytes for use at high temperatures. In a cell, the porous outer layers are the electrodes, and the dense inner layer is the electrolyte. Other potential applications include oxygen pumps and oxygen sensors.

Ordinarily, tape-cast zirconia powder requires a sintering temperature of at least 1,400 °C to produce a dense layer, whereas manganite powder condenses to an overly dense layer at that temperature. Moreover, manganese migrates into the zirconia layer, adversely affecting electrical properties. In the new method, the sintering temperature of the zirconia is lowered by using a slip composed of submicron-size powder particles with a minimum amount of binder and plasticizer. The sintering temperature of the manganite is raised by using a slip made up of larger, micron-size particles in a large amount of binder and plasticizer.

The strontium-doped lanthanum manganite powder is coarsened by presintering for 2 h at 1,250 °C and crushing the product just enough for it to pass through a 53- $\mu$ m screen. It is mixed with a commer-

cial polyvinyl butyral binder/plasticizer, stirred without breaking the coarsened particles, degassed, and cast on glass by a

tape-casting machine. After drying, the tape contains 50 to 65 percent by volume of ceramic material and 35 to 50 percent

### Inspiration, design and quality - all part of our high resolution system.

The performance of the Dage-MTI 81 Series Camera and the HR-2000 Monitor is beyond comparison. This viewing system is preferred by professionals around the world.

It's Dage-MTI technology that makes these instruments so outstanding. The 81 Camera with its 1600 line resolution capability, multi-rate scanning and high detail contrast is a perfect match for the HR-2000 Monitor that provides over 2000 line resolution. Together they have exceptional versatility, are simple to operate and extremely user friendly.

For a demonstration, call 219-872-5514, or write for literature to our corporate offices: Dage-MTI, Inc., 701 N. Roeske Ave., Michigan City, IN 46360 U.S.A. FAX 219-872-5559 Dage-MTI European Office: +44-635-71844 FAX +44-635-62067

**Dage-MTI** INC.  
precision video



organic binder and plasticizer.


Meanwhile, the fine yttria-stabilized zirconia powder is mixed in a solvent with a dispersant such as menhaden fish oil and ball-milled to break up agglomerated particles. The zirconia slip is degassed and spread over the manganite tape by the tape-casting machine.

When the zirconia layer is dry enough not to run when handled, the tape is folded in half so that a double layer of zirconia is sandwiched between two manganite layers. The sandwich is pressed lightly to drive out excess air, then dried in air. The dry sandwich is pressed at 3,000 to 5,000 psi (21 to 34 MPa) and sintered in air for 6 h at 1,300 °C.

At this sintering temperature, the manganite does not decompose, and manganese therefore does not diffuse into the zirconia layer. After sintering, the density of the resulting porous manganite layer is 50 to 60 percent of the theoretical, and the density of the zirconia layer is 98 percent of the theoretical.

*This work was done by James E. Schroeder of Caltech for NASA's Jet Propulsion Laboratory. For further information, Circle 135 on the TSP Request Card.*

*In accordance with Public Law 96-517, the contractor has elected to retain title to this invention. Inquiries concerning rights for its commercial use should be ad-*

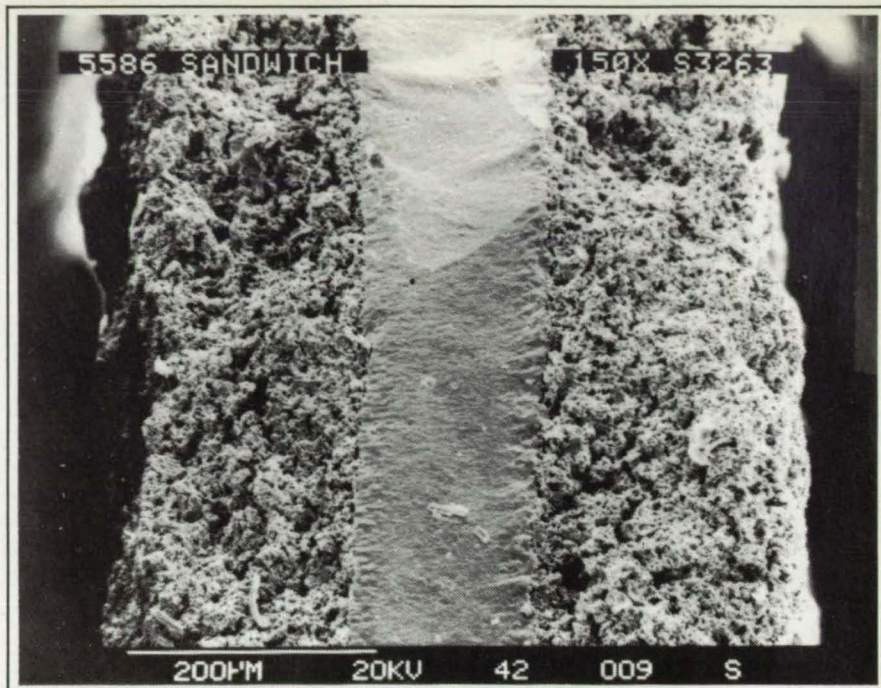

**Magnified Cross Sections** of the ceramic sandwich show porous strontium-doped lanthanum manganite on the outside and dense yttria-stabilized zirconia on the inside. The layered ceramic is sintered at a temperature 100 °C below the normal sintering temperature for zirconia.

*dressed to*

*Edward Ansell*

*Director of Patents and Licensing*

*Mail Stop 305-6*

*California Institute of Technology*

*1201 East California Boulevard*

*Pasadena, CA 91125*

*Refer to NPO-17078, volume and number of this NASA Tech Briefs issue, and the page number.*

## LOOKING FOR A RUGGED, RELIABLE MASS SPECTROMETER LEAK DETECTOR?



### LOOK TO AMETEK'S 1120He\*

Easy to maintain, easy to operate unit with unique Diatron-4™ detector element can sense helium leaks in pressurized or evacuated parts and systems. Fast-acting 1.5 second response time. The Model 1120He with solid-state electronics is sensitive enough to detect one part of helium in 10 million parts of air. Minimum detectable leak rate:  $5 \times 10^{-11}$  atm cc/sec of helium. Units also available for argon detection. For technical literature, contact AMETEK, Process & Analytical Instruments Division, 150 Freeport Road, Pittsburgh, PA 15238. Tel: 412-828-9040. Fax: 412-826-0399.

**AMETEK**  
PROCESS & ANALYTICAL INSTRUMENTS DIVISION

\*Previously marketed as DuPont 1205SA; kits for updating units with solid-state electronics available.

## SPECIAL OFFER:

### APOLLO COMMEMORATIVE POSTER

Actual size: 30" x 21"—in full color!



Relive mankind's greatest adventure with this official NASA commemorative poster. A gorgeous full-color rendition of the Apollo moon landing printed on high-quality poster stock and shipped in a protective tube. Special introductory price only \$8.95 each. **BONUS:** Order now and receive three prints for just \$23.95.

Rush me \_\_\_\_\_ Apollo commemorative poster(s). I have enclosed \$ \_\_\_\_\_ plus \$3.00 for postage. (NY residents add sales tax.) Total enclosed: \$ \_\_\_\_\_

Name \_\_\_\_\_

Company \_\_\_\_\_

Address \_\_\_\_\_

City \_\_\_\_\_ State \_\_\_\_\_ Zip \_\_\_\_\_

Mail with payment to: NASA Tech Briefs, Dept. F,  
41 East 42nd St., New York, NY 10017

For credit card orders call: (212) 490-3999

# Spacing Windings Evenly in Toroidal Inductors


Leakage inductance is controlled.

NASA's Jet Propulsion Laboratory, Pasadena, California

A technique for winding a toroidal inductor results in even spacing of windings around the toroidal core. Even spacing minimizes the proportion of leakage inductance, especially if the core has relatively low permeability. The new winding technique is useful, for example, in minimizing the leakage inductance of an inductor containing a powder core, intended for use in a power supply operating at a frequency between 250 kHz and 2 MHz.

The new technique involves a three-step winding process. First, the wire (typically, litz wire) to be wound on the core can be covered with shrinkable tubing. (This is not practical in small RF units where only a single wire is used.) Next, the wire is wound on the core through gaps or holes in an alignment disk (or disks) that enforce(s) the desired spacing (see figure). Finally, heat is applied to shrink the tubing, locking the wire in place.

This work was done by W. T. McLyman of Caltech for NASA's Jet Propulsion Laboratory. For further information, Circle 150 on the TSP Request Card.

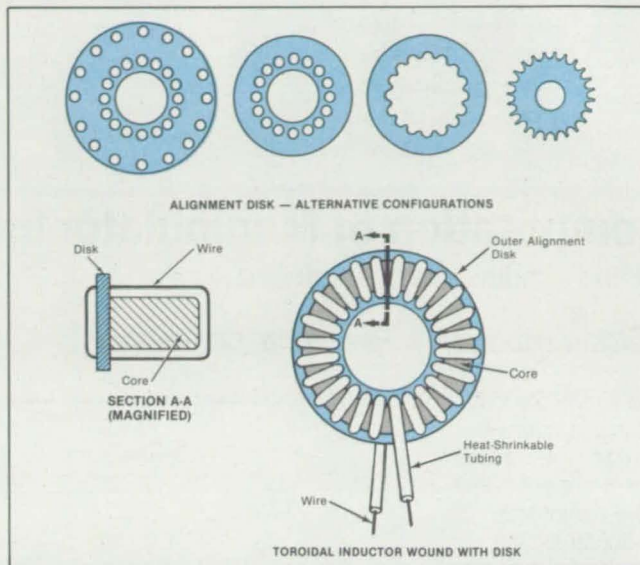

Alignment Disks space the winding evenly, and heat-shrinkable tubing locks it in place. However, shrinkable tubing is not necessary to get good results.

This invention is owned by NASA, and a patent application has been filed. Inquiries concerning nonexclusive or exclusive license for its commercial development

should be addressed to the Patent Counsel, NASA Resident Office-JPL [see page 18]. Refer to NPO-17830.


## REALLY SERIOUS ABOUT ACCURATE MOISTURE MEASUREMENT?


When accurate and consistent measurement of trace amounts of moisture in gas or air is vital for your process, production or research, MCM offers the most up-to-date solution science has yet produced. All instruments feature:

- Unique silicon chip moisture sensor.
- Fastest ACCURATE response to moisture changes at wet or dry levels.
- Exclusive Push Purge® self diagnostic and moisture stripping capability.
- Operation in pressures from vacuum to 275 atmospheres, in virtually any ambient temperature and under static or dynamic sample flow conditions.
- Precision and repeatability independent of flow, chemical reactions, predictive electronic circuitry or mirror chilling systems.

Complete service and traceable recalibration at MCM equipped Instrument Calibration and Standards Laboratories in the U.S.A. and Canada.

STEPHENS ANALYTICAL, INC.  
P.O. Box 1126  
Champlain, NY 12919-1126  
Tel: (514) 332-1230  
Fax: (514) 331-2084

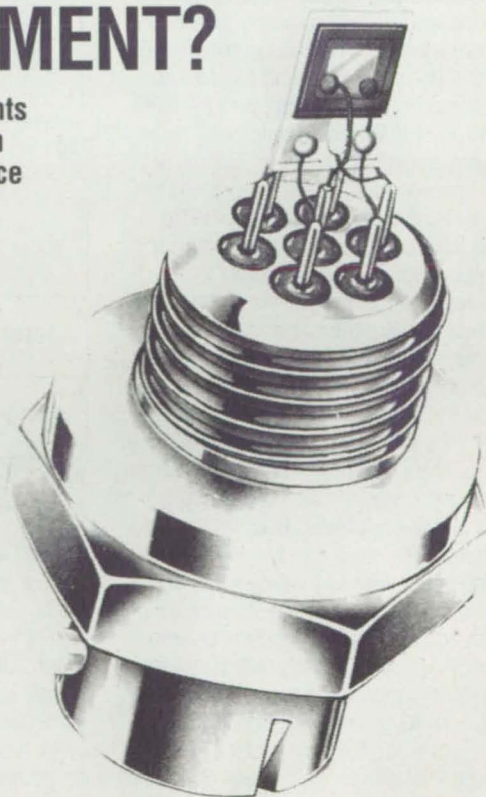

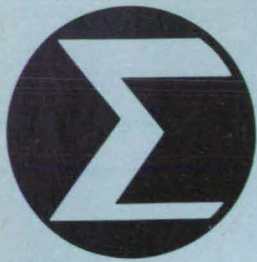

# Mathematics and Information Sciences

## Hardware, Techniques, and Processes

70 Efficient Computation of Manipulator Inertia Matrix

## Books and Reports

71 Norms and Completeness in Variational Methods

72 Orthogonal Patterns in a Binary Neural Network

## Computer Programs

49 Surface-Shading Program

50 Ada Namelist Package

## Efficient Computation of Manipulator Inertia Matrix

Real-time control and simulation are enhanced.

NASA's Jet Propulsion Laboratory, Pasadena, California

An improved method for the computation of the manipulator inertia matrix has been developed, which is based on the concept of the spatial inertia of composite rigid body (see Figure 1). The computation of the inertia matrix is required for the implementation of the advanced dynamic-control schemes as well as the dynamic simulation of the manipulator motion. The development of this method is motivated by the increasing demand for fast algorithms to provide real-time control and simulation capability and, particularly, the need for faster-than-real-time simulation capability, which will be required in many anticipated space teleoperation applications.

The work starts by discussing two physical interpretations for elements of the inertia matrix, leading to two distinct previously proposed algorithms: i.e., the Composite Rigid-Body (CRB) algorithm and the Newton-Euler Based (NEB) algorithm, with the CRB algorithm being the most efficient. The redundancy in both algorithms is analyzed, and it is shown that the two algorithms are basically equivalent; i.e., they can be transformed to each other. For developing the new algorithm, spatial notation is used, which leads to compact equations and simplifies the algorithmic analysis. Using more classical notation, the final equations of the algorithm are then presented in a coordinate-free form. The choice of optimal frame(s) for projection of the coordinate-free (intrinsic) equations is discussed by analyzing the vectors and the tensors involved in the equations. It is shown that significant efficiency can be achieved by using different frames for projection of different sets of equations. The developed algorithm achieves a greater computational efficiency over the CRB algorithm by eliminating the redundancy in the intrinsic equations as well as by the suitable choice coordinate frame for their projection.

Figure 2 shows a comparison of the efficiency of the developed algorithm (des-

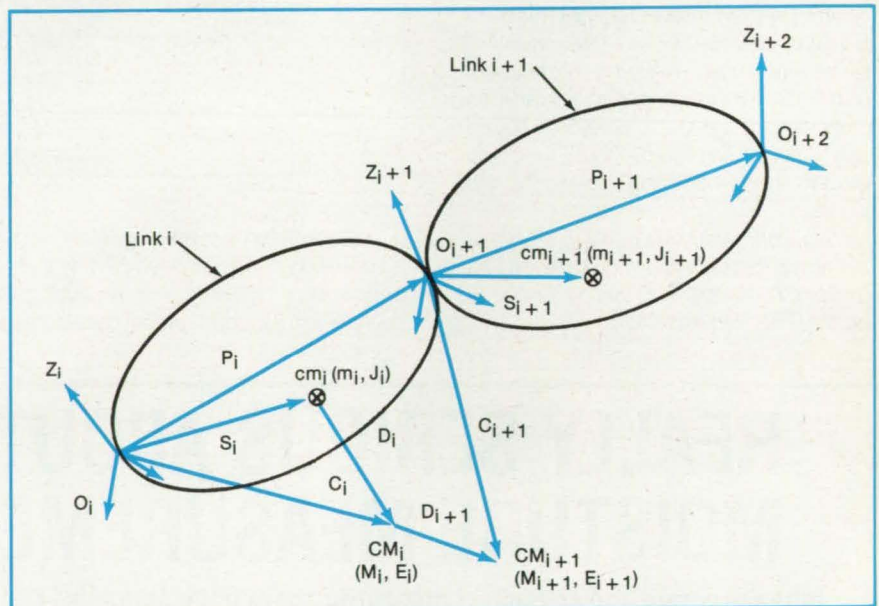


Figure 1. **Center of Mass of Composite Rigid Body** is shown schematically  $cm_i$  = center of mass link  $i$ ,  $CM_i$  = center of mass composite system composed of link  $i$  through link  $n$ .

Algorithm	General		n = 6	
	Multiplication	Addition	Multiplication	Addition
OCRB	$11n^2 + 79n - 21$	$8n^2 + 73n - 39$	849	687
VCRB	$(9/2)n^2 + (231/2)n - 117$	$4n^2 + 88n - 95$	738	595

Figure 2. **Comparison of Computational Costs of Evaluating the Inertia Matrix** shows that the VCRB algorithm is more suitable for parallel processing than the CRB algorithm is.

ignated as VCRB) and the previously proposed composite rigid-body algorithm (designated as OCRB). The developed algorithm is also more suitable for parallel processing than the CRB algorithm. This is mainly due to the fact that the algorithm achieves a greater computational efficiency by reducing the data dependency in the computation. In a separate report, it is shown that the developed algorithm can

be fully parallelized, leading to the computation of the inertia matrix in a time of  $O(\log n) + O(1)$  with  $O(n^2)$  processors.

This work was done by Amir Fijany and Antal K. Bejczy of Caltech for NASA's Jet Propulsion Laboratory. For further information, Circle 51 on the TSP Request Card.  
NPO-17545

## Books and Reports

These reports, studies, handbooks are available from NASA as Technical Support Packages (TSP's) when a Request Card number is cited; otherwise they are available from the National Technical Information Service.


## Norms and Completeness in Variational Methods

Incomplete bases and incorrect norms can lead to erroneous results.

A paper discusses the significance of norms and completeness in analyses based on the variational principle of mechanics. Such analyses are conducted to determine static deflections and/or vibrations of structures, including complicated ones like spacecraft. In practice, analysts often pay insufficient attention to the requirements for a complete set of basis functions and the correct choice of a norm. The paper illustrates by an example that such a casual approach can lead to erroneous results. One kind of error could occur in an iterative algorithm based on the variational method; the mere fact that the solutions converge does not guarantee that they converge to the correct solution.

The example is that of a simple cantilever beam loaded uniformly along its length. The exact solution for the deflection of the beam is well known; it is a fourth-order polynomial function of position along the beam. A variational-principle solution is sought in the form of a Fourier cosine series. The idea is to choose the coefficients of the cosine terms in such a way as to minimize the total potential energy; that is, the bending energy minus the work performed by the applied loading. Thus, the Fourier cosine terms are the basis functions, and the bending energy is the norm.

Heretofore, many analysts have tacitly assumed that if, as in the case of Fourier cosine terms, the basis functions are members of an infinite family of orthogonal functions and satisfy the geometric boundary conditions, convergence of the variational solution to the correct solution is guaranteed. In this example, the assumption is shown to be false. First, it is shown that the Fourier cosine series that minimizes the total potential energy and that satisfies the geometric boundary conditions differs from the exact fourth-degree polynomial solution. The resolution of the discrepancy lies in the fact that the Fourier cosine terms are complete in the  $L^2$  norm, whereas the problem at hand requires basis functions, which are complete in the energy norm (integral, along the length of the beam, of the square of the

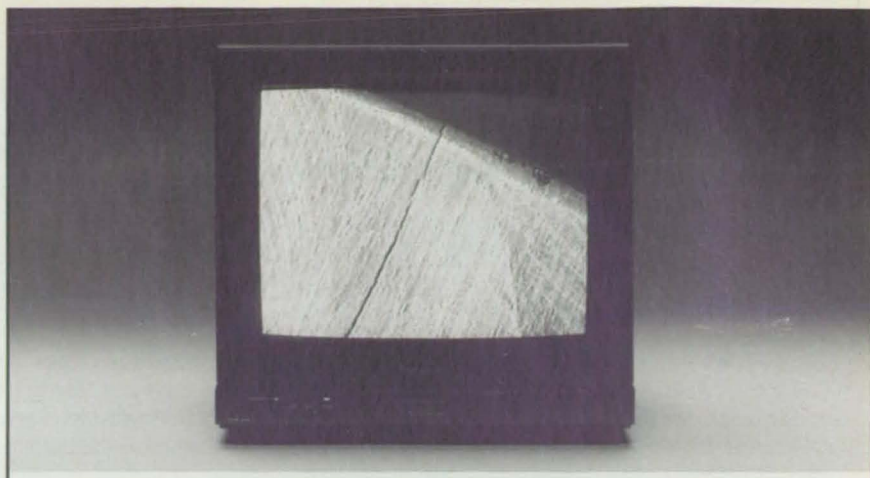

## SCOPEMAN REVEALS SMALL PROBLEMS IN PRODUCT QUALITY

### Better than any other surface inspection method.

Now there is a new way to inspect for product defects. Quickly, easily and with a new degree of accuracy.

The Scopeman system is not like any optical inspection product you've seen before. It is a



1-800-548-7039 or  
(619) 453-7905

handheld microscope that gives you a high resolution, full color video image. It reaches virtually anywhere, records the images for later use, and can be fitted for your specific application.

Call today for a free video demonstration on how Scopeman can reveal your small problems before they become bigger.

**MORITEX** U.S.A., INC.

Circle Reader Action No. 317



9903



9500



9200



9640

## THE DRIVING FORCE IN THE MAGNETICS FIELD

### F.W. BELL 9000 SERIES GAUSSMETERS

The 9000 Series is made up of six models with features never before available in a gaussmeter. All digital gaussmeters are user-friendly, microprocessor based with state-of-the-art circuitry.

#### 9000 SERIES UNIQUE FEATURES:

- Fully Menu-Driven • Completely Bus-Controllable • Internal Probe Compensation • IEEE-488 & RS-232 Ports
- Peak Hold • Programmable for Gauss or Tesla • LCD Digital Display or Zero-center Analog Meter • Analog Bar Graph
- Two Three-Level Classifiers • Relative Mode • Over 70 Standard Precalibrated Probes available

(Not all Features available on all models)

Request full technical data today.

**9000**  
SERIES  
GAUSSMETERS

**F.W. BELL**

6120 Hanging Moss Rd.  
Orlando, FL 32807  
Phone: 407-678-6900  
Fax: 407-677-5765

second derivative of the deflection with respect to length).

Closer examination shows that the Fourier cosine terms do not constitute a complete set of basis functions for this problem; the additional function  $x^2$  (where  $x$  denotes position along the beam) is needed to complete the set. When a term proportional to  $x^2$  is included, the variational solution becomes exact; that is, equivalent to the fourth-degree polynomial along the length of the beam.

This work was done by Joel A. Storch of Caltech for NASA's Jet Propulsion Laboratory. To obtain a copy of the report "Significance of Norms and Complete-

ness in Variationally Based Methods," Circle 5 on the TSP Request Card. NPO-18071

## Orthogonal Patterns in a Binary Neural Network

When probed by any pattern, the network converges to one of the stored patterns.

A report presents some recent developments in the theory of binary neural networks. The subject matter is relevant to associative (content-addressable) memories and to the recognition of patterns —

both of considerable importance in the advancement of robotics and artificial intelligence.

A network of  $N$  neurons is represented by  $N$  variables  $x_1$  through  $x_N$  each capable of taking on one of the two values  $\pm 1$ . The state of the network is defined in terms of a pattern or vector  $\mathbf{x}$  composed of the  $N$  variables. The information in  $M$  given patterns is stored in synaptic parameters calculated according to

$$T_{i,j} = \sum_{\ell=1}^M x_i^{(\ell)} x_j^{(\ell)}$$

where  $\ell$  denotes the  $\ell$ th pattern.

The retrieval of information from the network is initiated by applying a probe (initial state)  $\mathbf{x}(0)$ . Neurons are then selected at random, one at a time, and their states are updated according to

$$x_j(k+1) = \text{sign} \left\{ \sum_{i=1}^n T_{i,j} x_i(k) \right\}$$

Previous research has shown that the network is globally stable in the sense that, initialized by any probe, it converges to some final state, and that under some conditions stored patterns can be retrieved without error.

To be retrievable, a stored pattern must be an equilibrium point of the network. It is shown that when the stored patterns are mutually orthogonal, they are equilibrium states of the network. The mathematical model is then modified slightly to allow storage of only mutually orthogonal patterns. The state of the network, initialized by any probe, is shown to converge to a pattern in the space, called the "memory space," spanned by the stored patterns.

There can be, at most,  $N$  orthogonal patterns. It is shown that when the stored patterns satisfy a certain coding condition, they are the only members of the memory space. The maximum number of such code words is shown to be  $(2N)^{1/2}$ , in agreement with a previous empirical observation.

A particular code-construction method is proposed. A network loaded with such code acts as a decoder. The stored patterns are shown to have basins of attraction of Hamming radius  $N/(2M)$ . When initialized within this range of a stored pattern, the state of the network converges with probability 1 to that pattern in less than a neural-update-cycle time. When the probe falls outside this range, the probability of retrieving the nearest stored pattern can still be increased to 1 by repeatedly running the network with the same probe.

This work was done by Yoram Baram of Ames Research Center. To obtain a copy of the report, "Orthogonal Patterns in Binary Neural Network," Circle 48 on the TSP Request Card. ARC-12454

## NEW! VERSION 2

Recursive & iterative programming • Over 70 new math functions • New manual, 500 examples & exercises

# The Joy of DERIVEing.



### DERIVE — A Mathematical Assistant program.

PC Magazine says it's "a joy to use" and proclaims it "Editors' Choice." PC Week calls it "fast and capable." The DERIVE program is delivered with

built-in standard equipment

### Human engineering.

You don't have to be fluent in computerese to use DERIVE. In fact, it's the friendliest and easiest to use of any symbolic math package on the road today. Its menu-driven interface



and on-line help make it easy—you'll soon be up to speed doing math, instead of trying to learn how to drive the software.

that delights both math lovers and math phobics.

### High performance.

DERIVE does numeric and symbolic equation solving, exact and approximate arithmetic to thousands of digits, calculus, trigonometry and matrices. It displays formulas in comprehensible 2D format using raised exponents and built-up fractions. It plots beautiful 2D curves and 3D surfaces on monochrome or color monitors.

### Compact and sporty.

PC Magazine calls it a "small wonder." All it takes is 512K of memory and one floppy disk drive. DERIVE takes to the road on PC compatibles, and really gets around on laptop and even handheld computers!

### Freedom to maneuver.

DERIVE's automated expertise releases you from the drudgery of hand calculations. You can do problems you'd never attempt otherwise and obtain exact symbolic solutions, in addition to approximate numerical solutions.

### No sticker shock.

DERIVE's suggested retail price is \$250. And of course DERIVE doesn't require an expensive computer, a math co-processor, or even a hard disk drive.

Order DERIVE through your favorite software dealer or mail-order house. For a list of dealers, write Soft Warehouse, Inc. at 3615 Harding Avenue, Suite 505, Honolulu, HI 96816. Or call (808) 734-5801 after 11 a.m. Pacific Standard Time.

And happy DERIVEing!


DERIVE is a registered trademark of Soft Warehouse, Inc.

Handcrafted Software for the Mind



Soft Warehouse  
HONOLULU · HAWAII



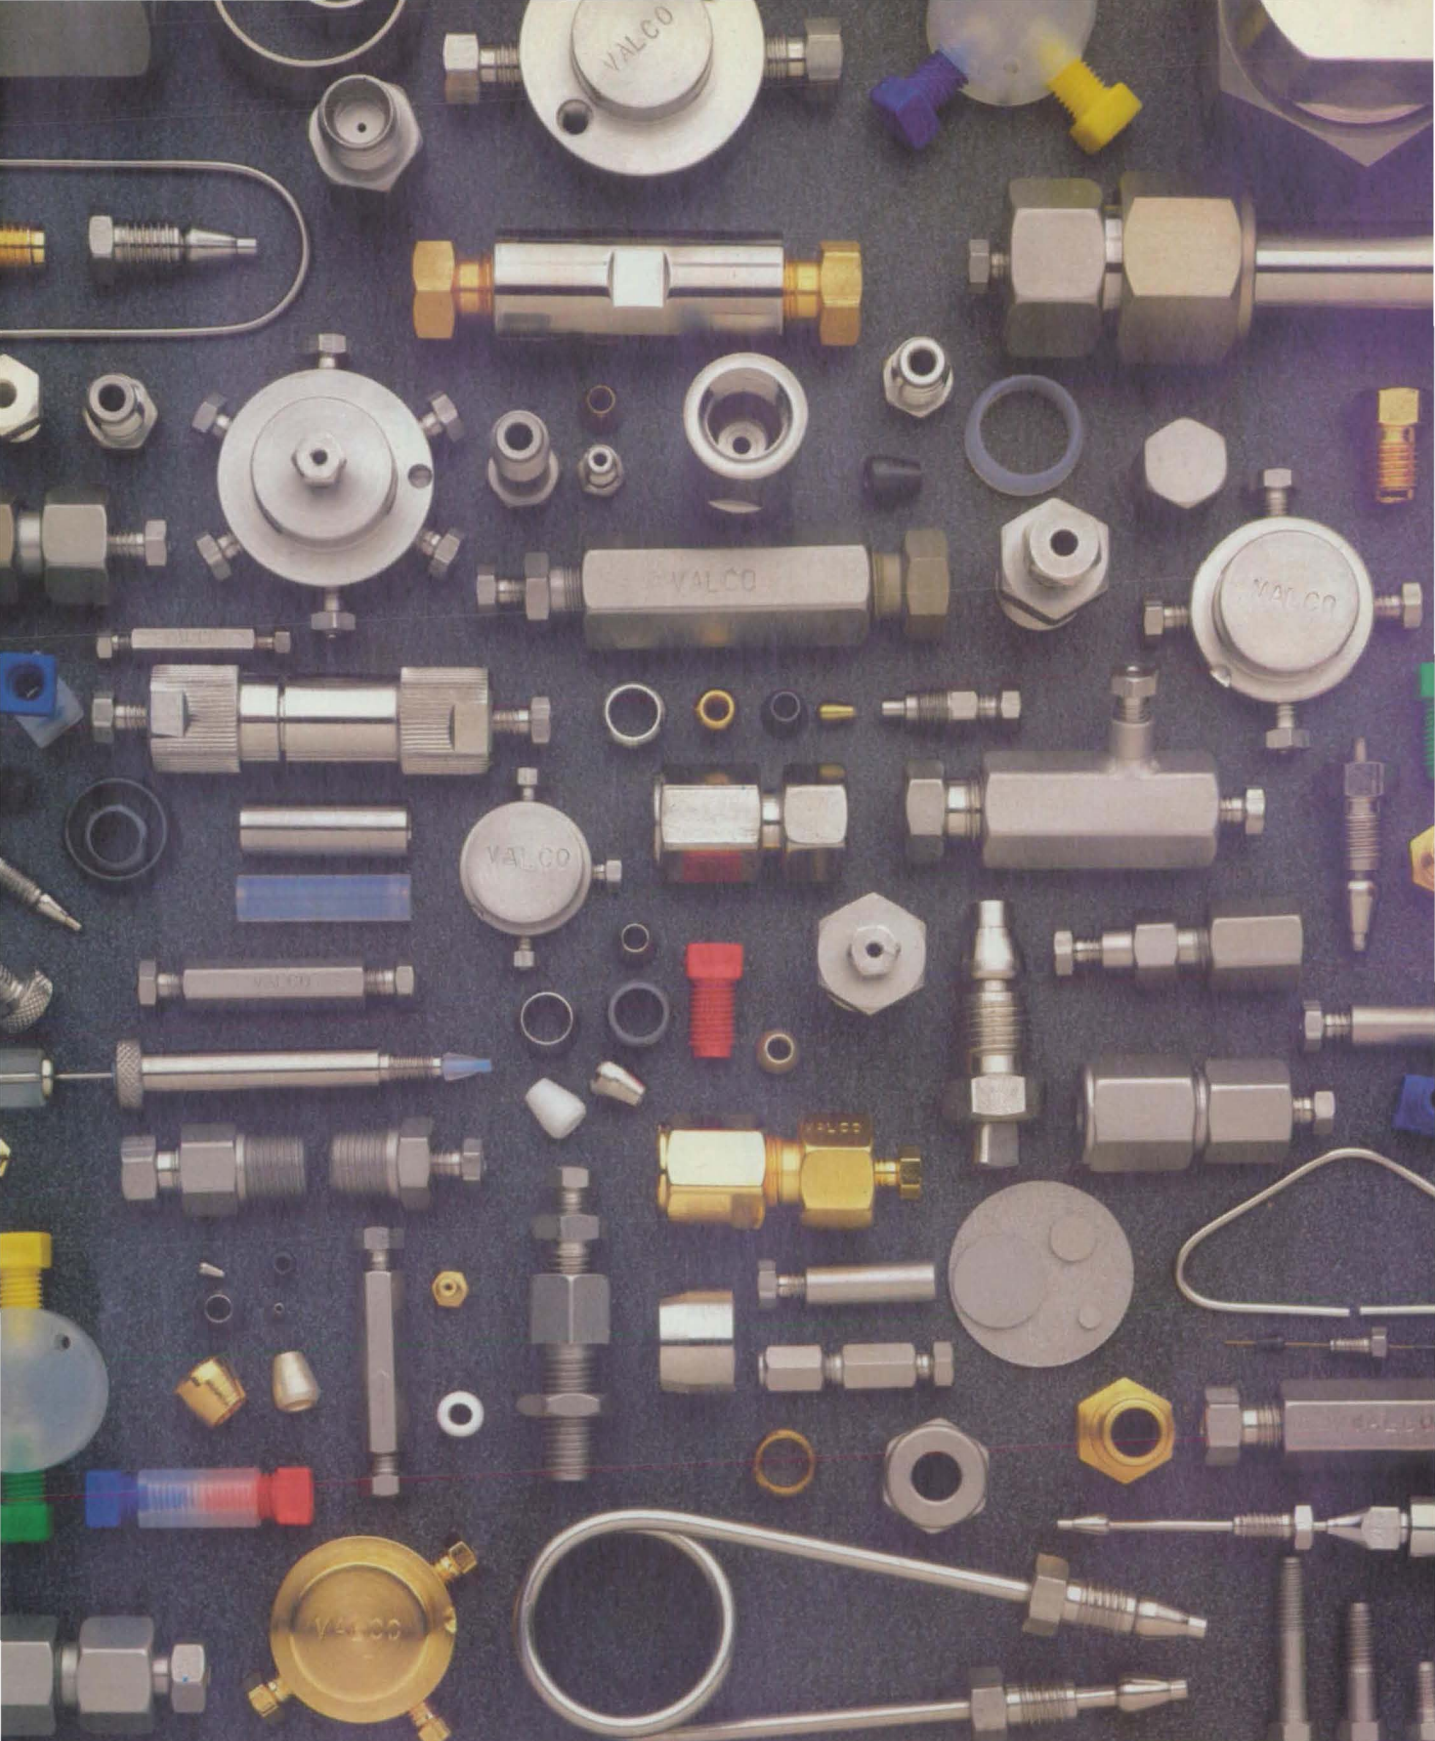

**MORE CHROMATOGRAPHIC FITTINGS THAN ANYWHERE ELSE IN THE WORLD.** Circle Reader Action No. 498

**VICI**

Valco Instruments Co. Inc.  
P.O. Box 55603, Houston, TX 77255 USA  
Telephone (713) 688-9345  
Telefax (713) 688-8106 Telex 79-0033 VALCO HOU  
Sales Calls 1-800-FOR-VICI

**VICI**AG

Valco Europe  
Untertannberg 7 CH-6214 Schenkon, Switzerland  
Telephone (045) 21 68 68  
Telefax (045) 21 30 20 Telex 868342 VICI CH



# Life Sciences

Hardware, Techniques  
and Processes

74 Intramuscular Contact Lead Filled  
With Conductive Solution

## Intramuscular Contact Lead Filled With Conductive Solution

The solution would maintain electrical conduction even when wires fail.


*NASA's Jet Propulsion Laboratory,  
Pasadena, California*

A proposed sheath for a braided-wire intramuscular conductor would preserve electrical continuity even if the wire breaks, as such wires often do because of corrosion and repeated flexing in the chemically and mechanically active environment of the human body. Such braided wires are used to deliver electrical stimuli to muscles in biomedical research on human and animal physiology, the development of prostheses, the regeneration of nerves and muscles, and artificial implants.

The sheath would be a tube of polyethylene terephthalate (Mylar or equivalent) or other plastic and would be surrounding a braided titanium or platinum wire (see figure). The sheath would contain an electrically conductive (e.g., salt) solution so that the wire is immersed in a conductive liquid. The solution would wet the wire but not the sheath. If the wire should break at any point along its length, the liquid would maintain electrical conduction, and the wire could still deliver electrical pulses. The electrically insulating sheath would prevent electrical leakage to the surrounding tissue.

The sheathed wire would be implanted surgically with the aid of a device that resembles a catheter. According to calculations, the stress of a representative 0.4-in. (0.1-cm) diameter sheath bent to a 2-in. (5-cm) radius would be 5,000 lb/in.<sup>2</sup> (34 MPa), the endurance limit of Mylar.

*This work was done by Robert M. Bamford and James A. Hendrickson of Caltech for NASA's Jet Propulsion Laboratory. For further information, Circle 99 on the TSP Request Card. NPO-17186*

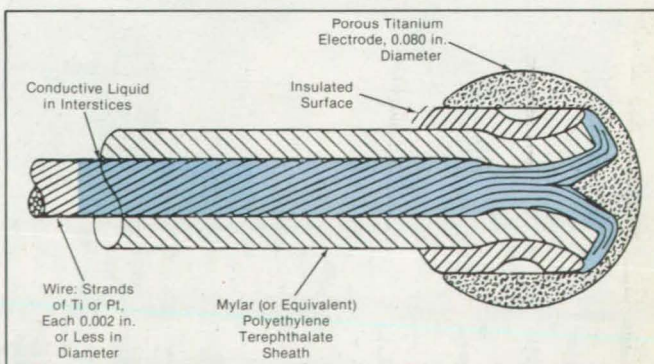

**A Plastic Sheath Would Surround** a conductive solution in which a braided wire would be immersed. At the end of the cable, the wire and sheath would be crimped together and press-fit in a porous titanium electrode.

### VINYL MIGHT CRACK AT 30,000 FEET.

#### **SPECIFY STEVENS URETHANE FILM AND SHEET.**

When you can't tolerate product failure, look to Stevens polyurethane film and sheet for the answer. Its ability to stand up to continual flexing and resistance to cracking makes it the ideal material for high performance aircraft earphone cushions. And, urethane is more comfortable against the skin, too. Stevens urethane film and sheet could be the solution to your design problem. Thicknesses from .001" to .125" Widths from 5" to 60" Send for our free brochure today.

JPS Elastomerics Corp.  
Industrial Products Division  
395 Pleasant Street  
Northampton, MA 01060  
Tel: (413) 586-8750  
Fax: (413) 584-6348


## STEVENS

Elastomerics

Circle Reader Action No. 350

### Transparent LCD Heaters

FORM

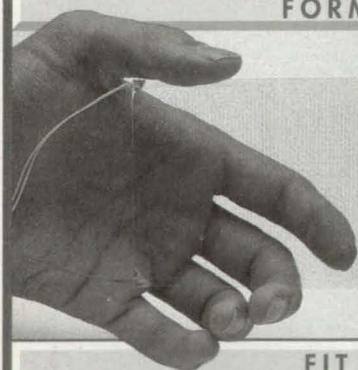

FIT

Cold weather LCD operation • Window defogging  
Optical and scientific instruments

FUNCTION

Here's a clear solution to heating backlit LCD's: Rugged and reliable Thermal-Clear™ heaters constructed with micro-thin wire elements and flexible insulation.

- Transparent optical grade Mylar
- Transmits over 82% of visible light
- Up to 17 watts per square inch, uniform or profiled
- Optional temperature sensors or sensorless controller

7300 Commerce Ln.  
Minneapolis, MN  
55432-3177 USA

## MINCO

PRODUCTS, INC.

Phn: 612/571-3121  
Telex: 687-9025  
FAX: 612/571-0927

Circle Reader Action No. 308

## New on the Market

Rockwell Communication Systems, Dallas, TX, has developed a five-channel **Global Positioning System receiver** measuring 2 1/2" x 4". The NavCore V can provide 3D position information worldwide for OEM applications in the automotive, marine, agriculture, mining, and consumer electronics industries, and could be employed in a handheld unit for personal navigation. It features a gallium arsenide receiver front-end, a high-speed digital signal processor, and a low-power navigation microprocessor.

**Circle Reader Action Number 800.**



A new **insertion magnetic flowmeter** from Metron Technology, Boulder, CO, accurately measures the flow rate of conductive liquids in line sizes from 3 to 80 inches. Meter electronics yield either 4 to 20 mA or pulse output and can be mounted remotely. A high-pressure retractor allows installation and removal without line shutdown or depressurization.

**Circle Reader Action Number 794.**

Sensor Products Inc., New York City, has created Pressurex™, a tactile **pressure detecting film** for determining compression magnitude and dispersion between contact surfaces. When subjected to pressure, the film turns a shade of red whose intensity indicates the force applied. By comparing the film to a color-calibrated spectrum chart, the user can quickly determine the compression force. If greater sensitivity is needed, the Pressurex densitometer can scan the film to produce a pressure distribution map. Pressurex comes in four sensitivities for pressure detection up to 18,000 lb/in<sup>2</sup>, and operates in a variety of temperature and humidity conditions.

**Circle Reader Action Number 790.**


A new line of **brushless DC motors** from American Precision Industries, Oceanside, CA, features rare-earth magnets for high performance and high speeds at a variety of speed controls; quiet operation; and Hall-effect commutation. The motors meet MIL-I-45208A and NASA 5300-4 (1C) and can be customized. Applications include computer peripherals, laser scanners, medical and lab equipment, pumps, material handling equipment, and test and measurement instrumentation.

**Circle Reader Action Number 798.**



Master Bond Inc., Hackensack, NJ, has introduced a room-temperature **curing adhesive** for bonding applications from -51° to +232° C. The EP33 adhesive produces high-strength bonds which resist thermal cycling and chemicals. It is 100 percent reactive, contains no diluents or solvents, and adheres to metals, glass, ceramics, wood, vulcanized rubbers, and most plastics.

**Circle Reader Action Number 792.**

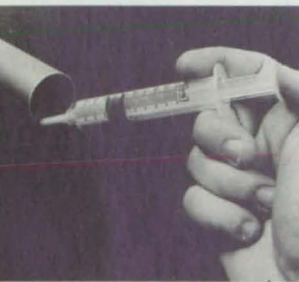

WH Brady Thin Film Products, Milwaukee, WI, has introduced BRADYTOUCH™ plastic transparent **touch screens** for industrial, medical, and telecommunications applications. Available in both matrix and analog formats, the lightweight screens can be used with any flat CRT, LCD, plasma, or electroluminescent display panel. They are constructed with an optical adhesive that reduces reflection and refraction.

**Circle Reader Action Number 796.**

Polydamp™ melamine foam (PMF), a **sound-absorbing composite** produced by Polymer Technologies Inc., Newark, DE, functions under a temperature range of -45° to +200° C and will not drip or produce excess flame and smoke when ignited. PMF comprises a melamine foam core sandwiched between a film facing and a pressure-sensitive adhesive backing. The composite weighs 0.7 lbs/sq ft and adheres to metals, plastics, foams, and many other surfaces.

**Circle Reader Action Number 786.**




A new **neurocomputer system** can speed learning in neural networks 1000 fold, according to the manufacturer, Adaptive Solutions Inc., Beaverton, OR. Application developers can use the system to solve pattern recognition problems in optical character recognition, machine vision, speech recognition, and robotic and process control. It consists of a server, a neurocomputer for a UNIX network, and a robust software development environment called CodeNet.

**Circle Reader Action Number 788.**



The Seriplex™ **control system** offered by Automated Process Control, Jackson, MS, can replace hundreds of control wires with one four-wire cable. A single cable lined with intelligent I/O modules is connected to a computer or PLC to control hundreds of sensors and loads. The modules have built-in communications, logic, and I/O control, and can operate as a stand-alone interconnect between an operator and hundreds of remote I/O devices without a CPU or PLC.

**Circle Reader Action Number 784.**

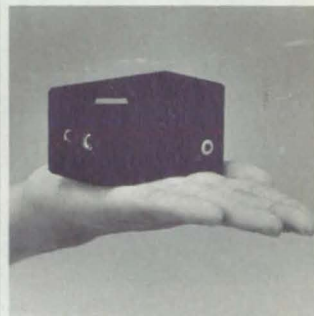

Advanced Photonix Inc., Los Angeles, CA, has produced large-area **avalanche photodetection devices** (APDs) designed to replace photomultiplier tubes in low-light-level applications. The rugged solid-state devices consume one-tenth the power of photomultiplier tubes, allowing for a much smaller power source. And unlike the glass tubes, APDs are not affected by magnetic fields, and therefore do not need shielding. In combination with scintillation crystals, the devices can be used in radiation detection, and also offer applications in scanners, industrial process controls, and military systems, including laser tracking and guidance.

**Circle Reader Action Number 778.**

Hamamatsu Photonic Systems of Bridgewater, NJ, has introduced a picosecond **photodetector** that replaces the head, power supply, and cables currently used as an oscilloscope accessory. The model C4258 consists of a large-area photodiode with associated high-frequency circuitry and power source in a single compact case. It operates from 450 to 870 nm, making it useful for monitoring mode-locked lasers such as argon ion and Ti sapphire.

**Circle Reader Action Number 782.**

Conductus Inc., Sunnyvale, CA, has developed a process for manufacturing **Josephson junctions**, the key elements in most superconductive electronic circuits, including those used in signal processing, sensor, and digital applications. Employing conventional photolithographic techniques, the fabrication process creates reproducible grain boundary Josephson junctions on a wafer scale, and can be extended to complex superconductive integrated circuits.

**Circle Reader Action Number 780.**

Now Shipping Version 2.1!

# EasyPlot™

the ultimate plotting package

- equations
- point & click
- pull-down menus
- curve fits
- zoom & scroll
- derivatives
- FFTs, polar plot
- 3d

Lightning fast graphics, powerful data analysis. An indispensable tool for handling technical data.

Call 1-800-833-1511 or write for your

## Free Working Demo

Originally developed at MIT Lincoln Laboratory. Runs on PCs with EGA, VGA, or Hercules graphics. Supports color printing and EMS memory. Mouse optional. Price: \$349. Dealer inquiries welcome.

**Spiral Software** 6 Perry St, Suite 2, Brookline, MA 02146 (617) 739-1511, FAX: (617) 739-4836

Circle Reader Action No. 563

## A Scientific Miracle... And A Work Of Art



## EcoSphere

Originally developed by NASA, EcoSpheres are not only prototypes of future space colonies, but also elegant reminders of the potential for ecological balance on Earth. This carefree aquarium — a permanently sealed glass globe — contains live shrimp, algae, water, and air in bioregenerated balance. Available in two sizes: 3.25" or 6.50" diameter. Base and replacement policy included.

Rush me \_\_\_\_\_ EcoSpheres in the following size(s):  
\_\_\_\_\_ 3.25" diameter (\$79.00) \_\_\_\_\_ 6.50" diameter (\$229.00)  
Add \$12.00 for shipping (EcoSpheres are delivered overnight). NY residents add sales tax.  
Total Enclosed: \$ \_\_\_\_\_

Name \_\_\_\_\_  
Address \_\_\_\_\_  
City \_\_\_\_\_  
State \_\_\_\_\_ Zip \_\_\_\_\_  
Daytime Phone # \_\_\_\_\_

Mail with check or money order to:  
NASA Tech Briefs, Dept. F, 41 East 42nd Street, New York, NY 10017

## New on the Market



Ingersoll-Rand, Baxter Springs, KS, has introduced a moving gantry system for **waterjet cutting** of composites, plastics, glass, metals, and other materials. Suited for semi-automated production, the computer-driven system provides a contouring accuracy of  $\pm 0.015"$  per axis over total travel. The steel grid cutting area has a 125 lb/ft<sup>2</sup> load capacity and can cut large-scale pieces. **Circle Reader Action Number 776.**


A new **deposition system for producing thin films** has been developed by Jet Process Corp., New Haven, CT. The jet vapor deposition (JVD) process uses a supersonic jet flow of inert carrier gas formed by a nozzle directed into a low-vacuum chamber to create uniform thin films at high rates and low temperatures. It deposits thin films of a variety of metals, oxides, nitrides, semiconductors, and organics, and can be used to coat wires, tapes, fibers, and inside channels and tubes. **Circle Reader Action Number 768.**

Ei/Engineering Information Inc., New York City, has introduced Ei Page One™, a **CD-ROM database** containing citations from engineering journals and conference proceedings worldwide. Updated monthly, the database covers publications from 3000 engineering societies, commercial publishers, research and development organizations, university presses, and government agencies. Readers can scan the table of contents or skip to a journal of interest and call up successive issues or articles. **Circle Reader Action Number 770.**



Smart Touch™, a **flat-panel operator interface** from Total Control Products Inc., Berkeley, IL, replaces push buttons, pilot lights, thumbwheels, panel meters, and alarm displays with touch-actuated graphic controls. The built-in CAD editor produces graphic characters such as lines, circles, fan shapes, squares, tiled squares, and filled patterns. Only five inches deep, the flat-panel display has a resolution of 640 x 400 pixels.


**Circle Reader Action Number 772.**

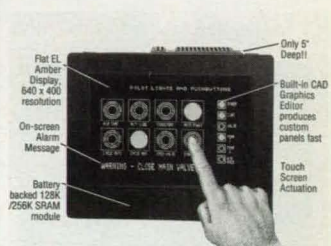

A new line of portable **thermal imaging radiometers** is offered by Inframetrics Inc., North Billerica, MA. Features include an integrated floppy disk image recorder, built-in image processing, an embedded color LCD display, backlit controls, and electric cooling, which eliminates the need for liquid nitrogen. **Circle Reader Action Number 774.**



Monolithic Systems Corp., Englewood, CO, has introduced the MicroVGA 452, a **half-length card which enhances VGA monitor resolution**. An anti-aliasing technique reduces stair-stepping to provide straight lines, smooth circles and arcs, and near photo-realistic images. It provides a resolution of 1536 x 1280 with 742,813 colors on a standard (640 x 480) monitor. **Circle Reader Action Number 766.**

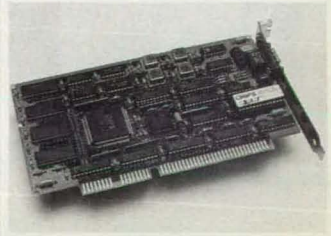

## New Literature




West Instruments, East Greenwich, RI, has released a four-color brochure on its Gardsman **microprocessor-based controllers** which offer up to 32 loops with continuous adaptive self-tuning and pre-tune algorithms. A multi-loop, 32-character LED provides deviation bar graph display for up to 32 loops simultaneously. The Gardsman recipe feature allows all data to be stored on a solid-state memory card. **Circle Reader Action Number 712.**

Zero Plastics, Chicopee, MA, has published a catalog of standard and custom plastic thermoformed and rotationally-molded **cases for commercial and military applications**. Illustrations and color photographs highlight design features, benefits, suggested applications, and accessories and options. **Circle Reader Action Number 710.**




A free catalog from Applied Microsystems Corp., Redmond, WA, offers **microprocessor development tools** for embedded design projects. It features in-circuit emulators, source level debuggers, and a variety of software tools and utilities. Application articles available through the catalog describe how to develop microprocessor-based designs. **Circle Reader Action Number 706.**

Kinney Vacuum Co., Canton, MA, has published a guide to selecting **vacuum pumps** based on vacuum pressure and capacity. It includes formulas for factoring gas load and pump down-time into capacity calculations, and features a color-coded selector chart that describes Kinney's vacuum pumps, boosters, and booster/pump combinations. **Circle Reader Action Number 702.**

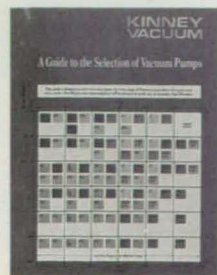


A 20-page catalog of **optical interference filters and coatings** for laser, absorption, and fluorescence spectroscopy is available from Omega Optical Inc., Brattleboro, VT. It provides details on physical theory, coating design, and spectral characteristics, and includes a glossary of optics terms and a conversion table of absorbance versus percent transmittance. Instrumental considerations such as signal-to-noise ratio and incident angle effects are presented along with physical configurations. **Circle Reader Action Number 714.**

A 412-page handbook of **linear motion products** from Star Linear Systems, Charlotte, NC, provides engineering specifications for round shaft linear bearings, ball rail linear motion guides, and precision rolled and ground ballscrews. Over 130 pages are dedicated to high-precision linear positioning tables with ballscrew, timing belt, or rodless cylinder drive packages. **Circle Reader Action Number 708.**

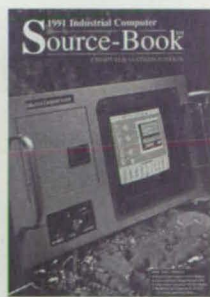

More than 500 **industrial computer systems** and data acquisition, industrial control, and communication products for the IBM PC/XT/AT are featured in a free publication from Industrial Computer Source, San Diego, CA. New product offerings include 20/15/10 slot rack and bench-top chassis, 8 and 15 slot chassis with electroluminescent displays, 486/25 MHz and 386/25/33 MHz CPU cards, and LabTech Notebook with ICONview. **Circle Reader Action Number 704.**

General Dynamics Space Systems Div., San Diego, CA, has published a four-color brochure on its **materials and process facilities** for integrated testing and analysis. It describes and illustrates the company's laboratories dedicated to mechanical and physical properties, cryogenics, engineering processes, composites processing, liquid oxygen compatibility testing, surface science and x-ray analysis, printed circuit boards, and non-destructive testing. Data sheets list each facility's capabilities and equipment. **Circle Reader Action Number 724.**

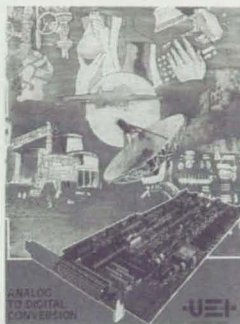

Solutions for engineering, laboratory, and process control applications are detailed in **PC Instrumentation for the 90s**, a new publication from United Electronic Industries, Watertown, MA. It includes technical information for **data acquisition boards, systems, and software**. The board software, called Status, provides data acquisition at a maximum board throughput and features windowing, a graphic interface, pulldown menus, and context-sensitive help. **Circle Reader Action Number 720.**

A free catalog from Global Specialties, New Haven, CT, highlights **electronic testing and prototyping equipment**. New products include digital multimeters, test instruments, power supplies, frequency counters, breadboards, and PC prototyping cards. It also features a handheld multimeter, three logic analysis test kits, and a digitally-synthesized function generator. **Circle Reader Action Number 716.**


Electronic Devices Inc., Yonkers, NY, has issued a 152-page catalog of **rectifier bridges, low- and high-voltage diodes, and high-voltage assemblies**. It contains specifications for hundreds of silicon rectifiers, and includes new products such as x-ray diodes, in-line PC mount bridges in 10 and 40 amp ratings, high-current single- and three-phase bridges, and miniature high-voltage diodes, arrays, and multipliers. **Circle Reader Action Number 726.**

Introducing  
ColorStation D  
From  
Raster Graphics  
The World's  
Best Full Color,  
D-Size  
Electrostatic  
Plotter.

The ColorStation, a 400-dpi, D-size **electrostatic plotter**, is spotlighted in a new brochure from Raster Graphics Inc., Sunnyvale, CA. The brochure describes ColorStation's Silicon Imaging Bar™, a writing head which eliminates streaking and striations, and its patented paper transport system, which automatically loads paper from a roll, cuts it, and anchors it to a belt while the image is written, eliminating registration marks on the media. The free publication also covers software compatibility and has a features/benefits comparison chart. **Circle Reader Action Number 728.**


A four-color brochure from Gruman Data Systems, Woodbury, NY, describes **logistics information systems** that support CALS standards and Open System Interconnect (OSI) protocols. It explores such programs as the Defense Logistics Services Center Modernization Program, the US Navy Rapid Acquisition of Manufactured Parts system, and Phase I of the US Army CALS program. The systems are installed without interruption of existing operations by means of special transitioning techniques. **Circle Reader Action Number 722.**

Keithley Instruments, Cleveland, OH, has published a handbook of **low-voltage measurement techniques**. Each of its four main sections—metrology, superconductivity, component evaluation, and materials research—illustrate three measurement applications. The handbook also discusses physical phenomena such as Johnson noise, thermoelectric potentials, and magnetic fields, as well as their effects on low-level signals. **Circle Reader Action Number 718.**

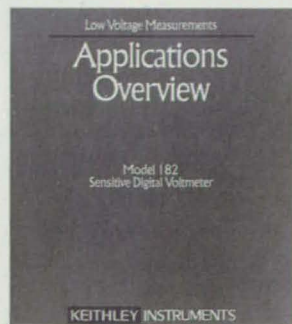


# IN THE AGE OF SUPERCOMPUTING, GENERATING DATA ISN'T THE PROBLEM... UNDERSTANDING IT IS

Spyglass software and the Macintosh make analyzing and graphing 2D and 3D data easier, faster, and more accessible than ever before. Spyglass delivers the functionality and power researchers need to import, analyze, graph, and present their data.

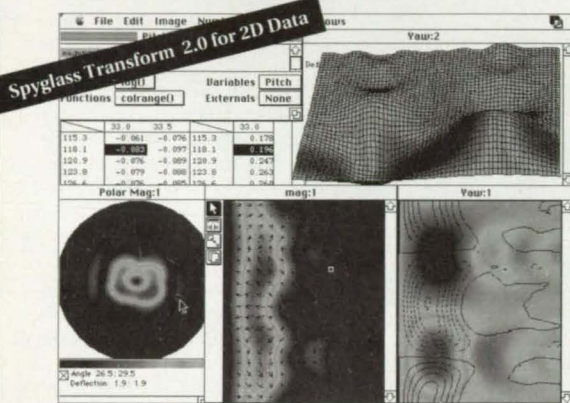

The surface, contour, and vector plots were all created using Spyglass Transform 2.0 and data from calculations used for an in-flight guidance system. Note that with Transform, you can overlay plots on raster images. Data smoothing and re-sampling are built-in features. Transform's Notebook (upper left) lets you enter and evaluate algebraic formulas, provides a full range of built-in functions, and is linkable to your own custom FORTRAN and C functions.

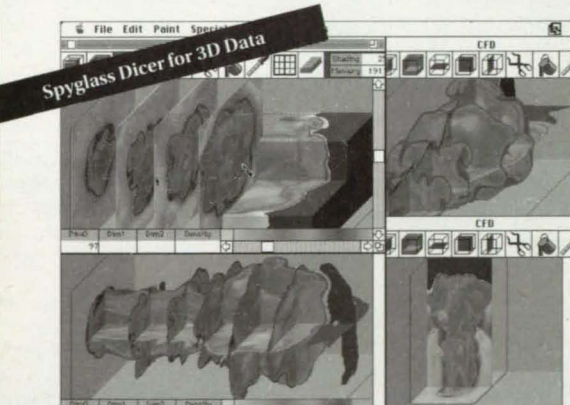

Only Spyglass Dicer lets you visualize volumetric data in seconds. The slices, cubes, and solids shown were created in Dicer using data from a fluid flow simulation. Interactive tools make it easy to add new slices, cubes, or cutouts, or to re-position existing ones. You can also generate animations, change orientation and shading and manipulate color.

Spyglass Transform \$495/Spyglass Dicer \$495 (U.S. list prices)  
Education and Government pricing available

Call to learn how you can qualify to receive a free Spyglass Demonstration Kit. To receive a detailed information packet, please contact Spyglass or...

Spyglass, Inc.  
701 Devonshire Dr. C-17  
Champaign, IL 61820  
Phone: (217) 355-1665  
Fax: (217) 398-0413



## Subject Index

**EULER EQUATIONS OF MOTION**  
Calculating aerolelastic transients using Euler equations  
page 51 ARC-12351

### F

**FAR INFRARED RADIATION**  
Phototransistors for long-wavelength infrared  
page 26 NPO-18029

**FIBERS**  
Making mullite fibers by airgap wet spinning  
page 60 MFS-28431

**FINITE ELEMENT METHOD**  
Calculating transient vibrations of coupled substructures  
page 54 MFS-28477

**FLANGES**  
Flange correction for metal-to-metal contacts  
page 20 NPO-18052

**FLIGHT CHARACTERISTICS**  
Surface-shading program  
page 49 ARC-12381

**FLOW VISUALIZATION**  
Twin-mirrored-galvanometer laser-light-sheet generator  
page 30 LAR-14248

**FUEL CELLS**  
Making three-layer solid electrolyte/electrode sandwiches  
page 67 NPO-17078

### G

**GALLIUM ARSENIDES**  
Improved planar Schottky diode  
page 24 GSC-13205

**GAS SPECTROSCOPY**  
Computer processing of tunable-diode-laser spectra  
page 28 NPO-18019

**GATES (CIRCUITS)**  
Associative-memory array of optical logic gates  
page 30 NPO-17997

**GRAVITY ANOMALIES**  
Computing gravitational bumps from repeating-orbit data  
page 52 NPO-17925

### H

**HEAT PIPES**  
Higher-performance ambient-temperature heat pipe  
page 57 MSC-21515

**HEAT TRANSFER**  
High-power liquid-metal heat-transfer loop  
page 36 NPO-18034

**HELICOPTER CONTROL**  
Precise autohover control for a helicopter  
page 33 ARC-12243

**HELICOPTERS**  
Calculating flow through a helicopter rotor  
page 55 ARC-12202

**HIGH LEVEL LANGUAGES**  
Ada namelist package  
page 50 NPO-17984

**HOVERING**  
Precise autohover control for a helicopter  
page 33 ARC-12243

**HYPERSONIC WIND TUNNELS**  
Laser spectroscopic measurement of temperature and density  
page 43 ARC-12719

### I

**IMIDES**  
New synthesis of high-performance bismaleimides  
page 46 LAR-13958

### A

**ACRYLATES**  
Fast-acting rubber-to-coated-aluminum adhesive  
page 44 MFS-28434

**ADA (PROGRAMMING LANGUAGE)**  
Ada namelist package  
page 50 NPO-17984

**ADDITION RESINS**  
Tough, high-performance, thermoplastic addition polymers  
page 46 LAR-10000

**ADHESIVES**  
Fast-acting rubber-to-coated-aluminum adhesive  
page 44 MFS-28434

**AEROELASTICITY**  
Calculating flow through a helicopter rotor  
page 55 ARC-12202  
Calculation of aerolelastic transients using Euler equations  
page 51 ARC-12351

**AIRCRAFT CONTROL**  
Precise autohover control for a helicopter  
page 33 ARC-12243

**AMBIENT TEMPERATURE**  
Higher-performance ambient-temperature heat pipe  
page 57 MSC-21515

**ANTIREFLECTION COATINGS**  
Coating solar cells by microwave plasma deposition  
page 60 NPO-17035

**ARTIFICIAL INTELLIGENCE**  
Orthogonal patterns in a binary neural network  
page 72 ARC-12454

### B

**BEAM SPLITTERS**  
Beam splitter for welding-torch vision system  
page 67 MFS-29641

**BIPOLAR TRANSISTORS**  
Doping to reduce base resistances of bipolar transistors  
page 22 NPO-17948

**BISMALEIMIDE**  
New synthesis of high-performance bismaleimides  
page 46 LAR-13958

**BONDING**  
Fast-acting rubber-to-coated-aluminum adhesive  
page 44 MFS-28434

**BUFFER STORAGE**  
Deep FIFO surge buffer  
page 32 ARC-12159

### C

**CALCULUS OF VARIATIONS**  
Norms and completeness in variational methods  
page 71 NPO-18071

**CERAMICS**  
Making three-layer solid electrolyte/electrode sandwiches  
page 67 NPO-17078

**CLOSED CYCLES**  
High-power liquid-metal heat-transfer loop  
page 36 NPO-18034

**COMPUTATIONAL FLUID DYNAMICS**  
Surface-shading program  
page 49 ARC-12381

**COMPUTER GRAPHICS**  
Surface-shading program  
page 49 ARC-12381

**COMPUTER STORAGE DEVICES**  
Deep FIFO surge buffer  
page 32 ARC-12159

**CONDUCTORS**  
Intramascular contact lead filled with conductive solution  
page 74 NPO-17186

**CONTACT RESISTANCE**  
Flange correction for metal-to-metal contacts  
page 20 NPO-18052

**CRYOGENICS**  
Mixed-gas sorption Joule-Thomson refrigerator  
page 38 NPO-17569

**CYBERNETICS**  
Orthogonal patterns in a binary neural network  
page 72 ARC-12454

### D

**DATA STORAGE**  
Deep FIFO surge buffer  
page 32 ARC-12159

**DENSITY MEASUREMENT**  
Laser spectroscopic measurement of temperature and density  
page 43 ARC-12719

**DEPOSITION**  
Coating solar cells by microwave plasma deposition  
page 60 NPO-17035

### E

**EARTH GRAVITATION**  
Computing gravitational bumps from repeating-orbit data  
page 52 NPO-17925

**EDDY CURRENT**  
Detecting filler spaces under tiles  
page 61 KSC-11411

**ELECTRIC CONTACTS**  
Flange correction for metal-to-metal contacts  
page 20 NPO-18052  
Intramascular contact lead filled with conductive solution  
page 74 NPO-17186

**ELECTRIC WELDING**  
Tool for robotic resistive roll welding  
page 62 MFS-29660

**ELECTROLYTIC CELLS**  
Making three-layer solid electrolyte/electrode sandwiches  
page 67 NPO-17078

**EQUATIONS OF MOTION**  
Efficient computation of manipulator inertia matrix  
page 70 NPO-17545

**ESTIMATING**  
Estimating liquid and gas contents in a tank  
page 51 MSC-21500

**Computer controllable  
X-Y table only \$1,890**  
Includes table, step motors  
& control / driver



- ✓ Compact & Simple Design
- ✓ Scanning and Feeding
- ✓ Testing and Manufacturing
- ✓ 747 Different Models
- ✓ Send for free catalog

CALL 800/642-6446 except NYS

**VELMEX INC.** P.O. BOX 38  
E. BLOOMFIELD, NY 14443  
PHONE 716/657-6151

Circle Reader Action No. 447

## Carborundum non-inductive bulk ceramic resistors


New brochure presents high-performance ceramic resistors designed to exceed performance of conventional film, composition and wire-wound resistors. Designed for higher voltages, energies or frequencies, Carborundum non-inductive bulk ceramic fixed resistors are available in three types: AS—high voltage/energy for capacitor crow bar circuits, pulse-forming networks, impulse voltage generators, snubber circuits; A—high resistance for grounding resistors, voltage dividers; SP—high-power/frequency loads for parasitic suppression, current limiting, snubber circuits.



Brochure also has information on Carborundum thermistor and varistor products.

The Carborundum Company  
Electric Products Division  
P.O. Box 664, Niagara Falls, NY 14302  
Telephone 716 278-2521 Telefax 716 278-6270

Circle Reader Action No. 406

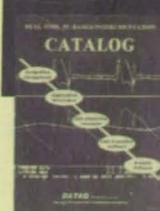

# FREE!

**CATALOG of  
REAL TIME  
DATA ACQUISITION  
PRODUCTS**

**for the PC**  
Filled with applications information,  
competitive comparisons,  
waveform analysis techniques,  
hardware and software specifications,  
and DEMO DISK!

We manufacture the industry's fastest data acquisition hardware and software designed for applications that demand a true real time display with simultaneous disk streaming. Call us at...

**1-800-553-9006**

**DATAQ INSTRUMENTS, INC.**

825 Sweitzer Avenue  
Akron, Ohio 44311  
Tel(216)434-4284 Fax(216) 434-5551


Circle Reader Action No. 505



**FREE!  
130  
Page  
Catalog**  
-----  
**"Optics  
for  
Industry"**

Free 130 page product catalog from Rolyne, world's largest supplier of "Off-the-Shelf" optics. 24-hour delivery of simple or compound lenses, filters, prisms, mirrors, beamsplitters, reticles, objectives, eyepieces plus thousands of other stock items. Rolyne also supplies custom products and coatings in prototype or production quantities. **ROLYN OPTICS Co.**, 706 Arrowgrand Circle, Covina, CA 91722-2199, (818)915-5707, FAX (818)915-1379

Circle Reader Action No. 551

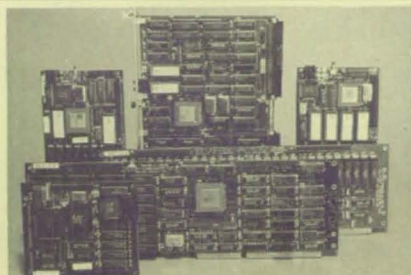

## SC/FOX™ Embedded-System Computers

**SC/FOX VME SBC (Single Board Computer)** 18 MIPS, 60 MIPS burst, general-purpose, slot-1 Master/Slave System Controller. Up to 64K bytes 0-ws memory, 1 SCSI, 1 ptr, 2 serial ports. Uses 16-bit Harris RTX 2000.

**SC/FOX PCS (Parallel Coprocessor System)** 15 MIPS, 50 MIPS burst, general purpose PC/AT/386 plug-in board, 32K to 1M byte 0-ws static memory, multiple PCS operation, SCSI option. Uses Harris RTX 2000.

**SC/FOX SBC (Single Board Computer)** 18 MIPS, 60 MIPS burst, Stand-alone operation, Eurocard size, 1 ptr, 1 serial port, up to 512K bytes 0-ws memory, 2 50-pin user connectors, SCSI option. Uses Harris RTX 2000.

**SC/FOX PCS32 (Parallel Coprocessor System 32)** 15 MIPS to 70 MIPS, general-purpose PC/AT/386 32-bit plug-in board with 64K to 1M byte 0-ws static memory. Uses 32-bit SC32 Forth microprocessor.

Ideal for embedded real-time control, data acquisition, or high-speed processing. Forth software included, C optional. OEM pricing.

**SILICON COMPOSERS INC (415) 322-8763**

208 California Ave., Palo Alto, CA 94306  
Circle Reader Action No. 679

## DIAMOND WORKSTATION



There are trackballs, and then there is the  
**DIAMOND TRACKBALL**  
You've seen the rest—Now try the best!

The most versatile, rugged professional input device on the market today. Nothing compares in price, performance, reliability and customer satisfaction.

Emulates all mouse formats without additional drivers.

Approved for use on SUN, DEC, SILICON GRAPHICS, TEKTRONIX, AT&T, IBM PC/AT, P/S-2 and CLONES.

**Evergreen  
SYSTEMS  
INTERNATIONAL**




31336 Via Colinas  
Westlake Village,  
California 91362  
(818) 991-7835

\*Fax: (818) 991-4036

Circle Reader Action No. 573

**Free Standing Wire Grid Polarizers  
For Spectroscopy at Millimeter and  
Sub-millimeter wavelength**

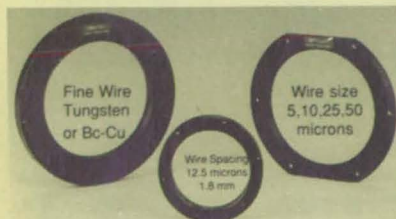

### Applications

- FAR-IR Wavelength Polarization
  - Interferometer Beam Divider
  - Variable Reflector
  - Coupling Device for Long Wavelength Lasers
  - Suitable for High Vacuum and Cryogenic Conditions
- Custom design available




Another quality product from

**SPECAC**

**SPECAC ANALYTICAL INC.**  
301 Commerce Drive Tel (203) 366-5112  
Fairfield, CT 06430 Fax (203) 384-1524  
A Cambridge Electronics Industries (CEI) Company

Circle Reader Action No. 621

**FINALLY  
A COMPUTER AT  
EVERY SENSOR**

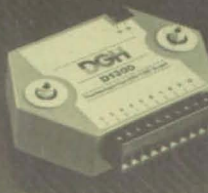

- Direct sensor to RS-232C/RS-485
- Digital output in engineering units
- Digital I/O for solid state relays
- Digital limits and alarm capability
- Simple ASCII commands
- Small size fits in a thermowell



(603) 622-0452

Circle Reader Action No. 490

# RAD-HARD SRAM



64K SRAM. 55ns post-rad access time.  
1575 Garden of the Gods Rd., Colorado  
Springs, CO 80907 **800-MIL-UTMC**



**UNITED  
TECHNOLOGIES  
MICROELECTRONICS  
CENTER**

Circle Reader Action No. 533

## Full Line Precision Timing by TRUETIME

**Sync Clocks      Time Code**



- GPS
- TRANSLATORS
- GOES
- GENERATORS
- WWVB
- SYNC. GENERATORS
- OMEGA
- TAPE SEARCH
- DCF77
- PLUG-IN CARDS
- MSF
- DISPLAYS

3243 Santa Rosa Avenue • Santa Rosa, CA 95407  
(707) 528-1230 • FAX 707-527-6640 • TELEX 176687




Circle Reader Action No. 536

## VOICE MASTER® SYSTEM II VOICE RECOGNITION & SOUND DIGITIZER



**FOR IBM PC/XT/AT/386/486, PS/2, LAPTOPS**

- Add voice recognition to most existing MSDOS programs. TSR program lets you define and activate keyboard macros by voice command. Great for CAD and DTP.
- Record/playback speech and sounds for voice mail, presentations, education, or entertainment. "Desktop audio" sound editing and compression utilities included.

A COMPLETE PRODUCT. Hardware attaches to parallel printer port. No slots required. Sturdy vinyl-clad steel enclosure. Includes headset/microphone, printer cable, software and user manual.

**MADE IN USA. ONLY \$219.95**

CALL OR WRITE FOR FREE PRODUCT CATALOG



**COVOX INC.**  
675 Conger St.  
Eugene, OR 97402

TEL (503) 342-1271  
FAX (503) 342-1283  
BBS (503) 342-4135

Circle Reader Action No. 381

## FREE CATALOG! LINEAR MOTION COMPONENTS

*All products ship within 24 hours.*

- Ball Slides
- Crossed Roller Slides
- Positioning Slides
- Tables
- Accessories




**Call TOLL FREE:  
1-800/447-2042**

**In CT: 203/790-4611  
or FAX: 203/748-5147**




**TUSK DIRECT, INC.**  
Clarke Industrial Park, PO Box 326, Bethel, CT 06801

Circle Reader Action No. 372

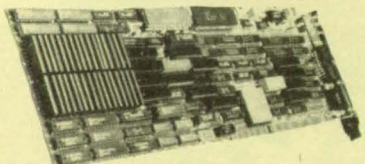

## 4 MEG VIDEO Model 10 Flexible Image Processor and Application Accelerator For The PC/AT

- 8 to 8000 Pixels per Line
- 2 to 19 MHz sampling/display rate
- 10 MIPs Programmable Accelerator
- 4 Megabytes of Reconfigurable Image Memory
- RS-170, RS-330, and CCIR input/output
- Variable timing for nonstandard formats
- Genlock to external timing sources
- Analog or digital inputs
- Software programmable timing/resolution



3005 MacArthur Blvd., Northbrook, IL 60062  
708-498-4002      FAX: 708-498-4321

Circle Reader Action No. 443

## HORSE POWER STEP MOTION SYSTEM



Powerful Mini-Step system by ELECTRONIC PRODUCTS, Mountain View, CA, has driver, supply, CY545 motion controller and position sensor with slip detection to +/- 0 steps. High level commands. RS232 to any computer. Drives large motors in full/half/quad step (1600 spr) to 20K pps. 4 to 14 amp @ 100 vdc bipolar driver includes full protection. 16meg steps of high speed absolute motion. 8 additional I/O. Free application assistance. \$1265. (800) 424-STEP.

Circle Reader Action No. 409

## Build Your Own Space Shuttle



This 1/72 scale model of the space shuttle Discovery features a huge 13" wingspan and includes engraved tile detail, movable rudder and flap, authentic NASA decals, adjustable manipulator arm, opening cargo bay doors, and detailed Spacelab payload. Molded in white. Kits are \$24.95 each + \$4.00 postage and handling. (NY residents add sales tax.) **Send check or money order to: NASA Tech Briefs, Dept. F, 41 East 42nd St., New York, NY 10017. For credit card orders, call (800) 258-0201 (NY state: 212-490-3999).**

**INDUCTORS**  
Spacing windings evenly in toroidal inductors  
page 69      NPO-17830

**INFRARED DETECTORS**  
Phototransistors for long-wavelength infrared  
page 26      NPO-18029

**INSPECTION**  
Flexible interior-impression-molding tray  
page 63      MFS-29679

**INSTRUMENT COMPENSATION**  
Accounting for nonlinearity in a microwave radiometer  
page 40      NPO-17451

**JACOBI INTEGRAL**  
Jacobi-integral method for two-body problem  
page 56      MSC-21623

**JET PUMPS**  
Jet boost pumps for the Space Shuttle main engine  
page 58      MFS-29673

**JIGS**  
Jig for compression-relaxation tests of plastics  
page 53      MSC-21674

**JOULE-THOMSON EFFECT**  
Mixed-gas sorption Joule-Thomson refrigerator  
page 38      NPO-17569

**LASER SPECTROMETERS**  
Computer processing of tunable-diode-laser spectra  
page 28      NPO-18019

**LASER SPECTROSCOPY**  
Laser spectroscopic measurement of temperature and density  
page 43      ARC-12719

**LATCHES**  
Thermally actuated unlatching mechanism  
page 57      NPO-17601

**LIGHT BEAMS**  
Twin-mirrored-galvanometer laser-light-sheet generator  
page 30      LAR-14248

**LINKAGES**  
Thermally actuated unlatching mechanism  
page 57      NPO-17601

**LIQUID METALS**  
High-power liquid-metal heat-transfer loop  
page 36      NPO-18034

**LIQUID-GAS MIXTURES**  
Estimating liquid and gas contents in a tank  
page 51      MSC-21500

**LOGIC CIRCUITS**  
Associative-memory array of optical logic gates  
page 30      NPO-17997

Orthogonal patterns in a binary neural network  
page 72      ARC-12454

**MANIPULATORS**  
Efficient computation of manipulator inertia matrix  
page 70      NPO-17545

Segmented arm for positioning and assembly  
page 58      MSC-21512

**MATHEMATICAL MODELS**  
Microwave brightness of land surfaces from outer space  
page 34      NPO-17739

**METAL JOINTS**  
Monitoring weld penetration via gas pressure  
page 64      MFS-29683

**MICROWAVE RADIOMETERS**  
Accounting for nonlinearity in a microwave radiometer  
page 40      NPO-17451

Microwave brightness of land surfaces from outer space  
page 34      NPO-17739

**MOLDS**  
Flexible interior-impression-molding tray  
page 63      MFS-29679

**MULLITES**  
Making mullite fibers by airgap wet spinning  
page 60      MFS-28431

**MUSCLES**  
Intramuscular contact lead filled with conductive solution  
page 74      NPO-17186

**NEURAL NETS**  
Orthogonal patterns in a binary neural network  
page 72      ARC-12454

**NONDESTRUCTIVE TESTS**  
Detecting filler spaces under tiles  
page 61      KSC-11411

**NONLINEARITY**  
Accounting for nonlinearity in a microwave radiometer  
page 40      NPO-17451

**OPTICAL MEMORY (DATA STORAGE)**  
Associative-memory array of optical logic gates  
page 30      NPO-17997

**PENETRATION**  
Monitoring weld penetration via gas pressure  
page 64      MFS-29683

**PHOTOTRANSISTORS**  
Phototransistors for long-wavelength infrared  
page 26      NPO-18029

**PHOTOVOLTAIC CELLS**  
Thin, lightweight solar cell  
page 20      LEW-14959

**PLASTICS**  
Jig for compression-relaxation tests of plastics  
page 53      MSC-21674

**POLYIMIDE RESINS**  
Polyamide-imides made from BTDA  
page 48      LAR-13942

Tough, high-performance, thermoplastic addition polymers  
page 46      LAR-10000

**POLYIMIDES**  
Making solid aromatic polyimide fibers  
page 44      LAR-14162

New synthesis of high-performance bismaleimides  
page 46      LAR-13958

**POSITIONING DEVICES (MACHINERY)**  
Jig for compression-relaxation tests of plastics  
page 53      MSC-21674

**PROGRAMMING LANGUAGES**  
Ada namelist package  
page 50      NPO-17984

**PUMPS**  
Jet boost pumps for the Space Shuttle main engine  
page 58      MFS-29673



# Advertisers Index

3-D Visions .....	(RAC 669*)	11
3M Electrical Specialties		
Division .....	(RAC 606)	63
Aerospace Optics, Inc. (RAC 309)		25
Aerotech, Inc. ....	(RAC 375)	27
Algor Interactive		
Systems, Inc. ....	(RAC 361)	82
Amco Engineering Co. (RAC 500)		36
Ametek .....	(RAC 636)	68
Anvil Cases .....	(RAC 528)	64
Anritsu America, Inc. (RAC 507)		COV III
Apollo Poster .....		68
Astro-Med, Inc. ....	(RAC 405)	19
Austron, Inc. ....	(RAC 304)	62
Binswanger Company (RAC 303)		59
Contemporary		
Cybernetics Group ..	(RAC 411)	COV II
Covox, Inc. ....	(RAC 381)	80
Data-MTI, Inc. ....	(RAC 542)	67
Dataq Instruments, Inc. (RAC 505)		79
DGH Corporation .....	(RAC 490)	79
Dolphin Scientific, Inc. (RAC 510)		32
DSP Development		
Corporation .....	(RAC 652)	COV IV
Dynamics Research		
Corporation .....	(RAC 601)	43
Eastman Kodak Co. ..	(RAC 417)	41
ENI .....	(RAC 301)	58
Epix, Inc. ....	(RAC 443)	80
Evergreen Systems		
International .....	(RAC 573)	79
Fluoramics, Inc. ....	(RAC 364)	47
F.W. Bell .....	(RAC 513)	71
Gould Recording		
Systems .....		7
Hardigg Cases .....	(RAC 492)	31
IBM Corporation .....		4-5
INCO Alloys		
International .....	(RAC 569)	45
Integrated Systems, Inc. (RAC 567)		39
JPS Elastomerics		
Corp. ....	(RAC 349,350)	50,74
JR3, Inc. ....	(RAC 446)	64
Kaman Instrumentation		
Corporation .....	(RAC 472)	59
KeveX X-Ray Tube		
Division .....	(RAC 531)	16
Kinometrics/Truetime (RAC 536)		80
Lasertechnics .....	(RAC 600)	1
Magnetic Shield Corp. (RAC 370)		42
MathSoft, Inc. ....	(RAC 682)	35
Mechanical		
Dynamics, Inc. ....	(RAC 548)	55
Meridian Software		
Systems, Inc. ....	(RAC 496)	23
Minco Products, Inc. ..	(RAC 308)	74
Moritex U.S.A., Inc. ....	(RAC 317)	71
Motion Products .....	(RAC 409)	80
National Instruments ..	(RAC 681)	17
National Standards		
Association .....	(RAC 415)	49
Nicolet Instruments ...	(RAC 697)	21
NUPRO Company ....	(RAC 380)	46
Olympus Corporation ..	(RAC 424,425)	40
Patton & Patton Software		
Corporation .....	(RAC 499)	24
Precision Filters, Inc. (RAC 306)		54
RGB Spectrum .....	(RAC 467)	10
Rolyn Optics Co. ....	(RAC 551)	79
Scientech, Inc. ....	(RAC 308)	50
Silicon Composers, Inc. (RAC 679)		79
Smooth-On, Inc. ....	(RAC 440)	38
Soft Warehouse, Inc. (RAC 374)		72
Specac Analytical, Inc. (RAC 621)		79
Spiral Software .....	(RAC 593)	76
Spyglass Inc. ....	(RAC 521)	78
Stevens Analytical, Inc. (RAC 674)		69
Structural Research and Analysis		
Corporation .....	(RAC 676)	56
TEAC America, Inc. ..	(RAC 344)	3
Technology 2001 .....	(RAC 589)	8-9,61
Teledyne Relays .....	(RAC 537)	33
Tescoro Corporation ..	(RAC 545)	40
The Carborundum Co. (RAC 406)		79
Toshiba Video		
Systems .....	(RAC 393)	29
TransEra Corp. ....	(RAC 473)	2


<b>R</b>	
<b>REFRIGERATORS</b>	
Mixed-gas sorption	
Joule-Thomson	
refrigerator	
page 38	NPO-17569
<b>RELAXATION (MECHANICS)</b>	
Jig for compression-relaxation tests of plastics	
page 53	MSC-21674
<b>REMOTE HANDLING</b>	
Segmented arm for positioning and assembly	
page 58	MSC-21512
<b>REMOTE MANIPULATOR SYSTEM</b>	
Efficient computation of manipulator inertia matrix	
page 70	NPO-17545
<b>REMOTE SENSING</b>	
Microwave brightness of land surfaces from outer space	
page 34	NPO-17739
<b>RESIN MATRIX COMPOSITES</b>	
Polyamide-imides made from BTDA	
page 48	LAR-13942
<b>ROBOTICS</b>	
Segmented arm for positioning and assembly	
page 58	MSC-21512
Tool for robotic resistive roll welding	
page 62	MFS-29660
<b>ROTOR AERODYNAMICS</b>	
Calculating flow through a helicopter rotor	
page 55	ARC-12202

<b>S</b>	
<b>SATELLITE ORBITS</b>	
Computing gravitational bumps from repeating-orbit data	
page 52	NPO-17925
<b>SCHOTTKY DIODES</b>	
Improved planar Schottky diode	
page 24	GSC-13205
<b>SEMICONDUCTOR DEVICES</b>	
Doping to reduce base resistances of bipolar transistors	
page 22	NPO-17948
Thin, lightweight solar cell	
page 20	LEW-14959
<b>SEMICONDUCTOR DIODES</b>	
Improved planar Schottky diode	
page 24	GSC-13205
<b>SHEATHS</b>	
Intramuscular contact lead filled with conductive solution	
page 74	NPO-17186
<b>SILICON NITRIDES</b>	
Coating solar cells by microwave plasma deposition	
page 60	NPO-17035
<b>SOLAR CELLS</b>	
Coating solar cells by microwave plasma deposition	
page 60	NPO-17035
Thin, lightweight solar cell	
page 20	LEW-14959
<b>SORPTION</b>	
Mixed-gas sorption	
Joule-Thomson refrigerator	
page 38	NPO-17569
<b>SPACE SHUTTLE MAIN ENGINE</b>	
Jet boost pumps for the Space Shuttle main engine	
page 58	MFS-29673
<b>SPACECRAFT TRAJECTORIES</b>	
Jacobi-integral method for two-body problem	
page 56	MSC-21623
<b>STRUCTURAL ANALYSIS</b>	
Norms and completeness in variational methods	
page 71	NPO-18071
<b>STRUCTURAL VIBRATION</b>	
Calculating transient vibrations of coupled substructures	
page 54	MFS-28477
<b>SYNTHETIC FIBERS</b>	
Making solid aromatic polyimide fibers	
page 44	LAR-14162
<b>SYNTHETIC RESINS</b>	
Polyamide-imides made from BTDA	
page 48	LAR-13942
<b>T</b>	
<b>TANKS (CONTAINERS)</b>	
Estimating liquid and gas contents in a tank	
page 51	MSC-21500
<b>TEMPERATURE CONTROL</b>	
Higher-performance ambient-temperature heat pipe	
page 57	MSC-21515
<b>TEMPERATURE MEASUREMENT</b>	
Laser spectroscopic measurement of temperature and density	
page 43	ARC-12719
<b>THERMOPHYSICAL PROPERTIES</b>	
Thermally actuated unlatching mechanism	
page 57	NPO-17660

Tusk Direct, Inc. ....	(RAC 372)	80
United Technologies Microelectronics Center .....	(RAC 533)	79
United Technologies Optical Systems .....	(RAC 331)	37
Valco Instruments Co., Inc. ....	(RAC 498)	73
Velmex, Inc. ....	(RAC 447)	79
Wardwell Braiding Machine Co. ....	(RAC 396)	57
YSI Incorporated .....	(RAC 408)	14
Zero Plastics .....	(RAC 614)	42

\*RAC stands for Reader Action Card. For future information on these advertisers, please circle the RAC number on the Reader Action Card in this issue. This index has been compiled as a service to our readers and advertisers. Every precaution is taken to insure its accuracy, but the publisher assumes no liability for errors or omissions.

<b>THERMOPLASTIC RESINS</b>	
Tough, high-performance, thermoplastic addition polymers	
page 46	LAR-10000
<b>TILES</b>	
Detecting filler spaces under tiles	
page 61	KSC-11411
<b>TOROIDS</b>	
Spacing windings evenly in toroidal inductors	
page 69	NPO-17830
<b>TRANSIENT RESPONSE</b>	
Calculating transient vibrations of coupled substructures	
page 54	MFS-28477
<b>TRANSISTORS</b>	
Doping to reduce base resistances of bipolar transistors	
page 22	NPO-17948
<b>TUNABLE LASERS</b>	
Computer processing of tunable-diode-laser spectra	
page 28	NPO-18019
<b>TWO BODY PROBLEM</b>	
Jacobi-integral method for two-body problem	
page 56	MSC-21623
<b>V</b>	
<b>VARIATIONAL PRINCIPLES</b>	
Norms and completeness in variational methods	
page 71	NPO-18071
<b>VIDEO EQUIPMENT</b>	
Beam splitter for welding-torch vision system	
page 67	MFS-29641
<b>W</b>	
<b>WELD TESTS</b>	
Flexible interior-impression-molding tray	
page 63	MFS-29679
<b>WELDED JOINTS</b>	
Monitoring weld penetration via gas pressure	
page 64	MFS-29683
<b>WELDING</b>	
Beam splitter for welding-torch vision system	
page 67	MFS-29641
Tool for robotic resistive roll welding	
page 62	MFS-29660
<b>WET SPINNING</b>	
Making mullite fibers by airgap wet spinning	
page 60	MFS-29431
Making solid aromatic polyimide fibers	
page 44	LAR-14162
<b>WIND TUNNELS</b>	
Twin-mirrored-galvanometer laser-light-sheet generator	
page 30	LAR-14248
<b>WINDING</b>	
Spacing windings evenly in toroidal inductors	
page 69	NPO-17830
<b>WINGS</b>	
Calculation of aeroleastic transients using Euler equations	
page 51	ARC-12351

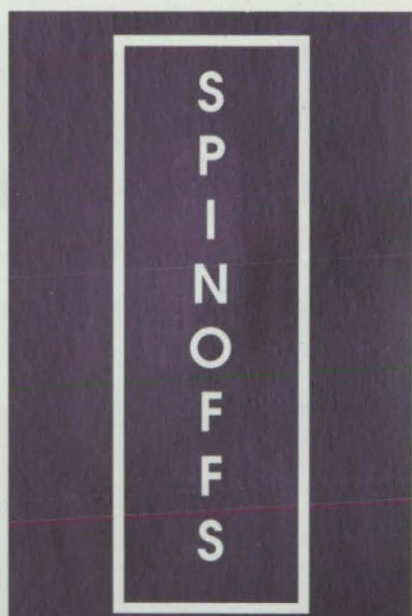

Credit where credit is due!  
 Transferred/applied NASA technology to a commercial product? We would like to inform the public about it in our annual report Spinoff. For more details call: 301-859-5300 Ext 242.

Circle Reader Action No. 366



Photo courtesy Diatek Corp.

**A new infrared thermometer measures energy emitted from the eardrum.**

# Mission **A**ccomplished

*Through the technology transfer process, many of the systems, methods, and products pioneered by NASA are reapplied in the private sector, obviating duplicate research and making a broad range of new products and services available to the public.*

A nurse inserts the plastic-covered probe into the opening of the patient's ear canal and presses a button activating the sensor. The probe detects infrared radiation emitted from the eardrum and converts it into electricity, which is then converted by a microprocessor into the corresponding body temperature and displayed on a liquid crystal screen. The aural device reduces the risk of cross-infection because it avoids contact with mucous membranes, Lyman said, and because it employs disposable probe covers.

The Model 7000's optical sensor

was designed by Diatek engineers, then refined with help from NASA's Jet Propulsion Laboratory (JPL). The company's challenge was to design the optical components so the one-piece, handheld instrument could make rapid and accurate measurements, Lyman explained. Through NASA's Technology Affiliates Program, which lends NASA expertise to US firms developing new technology-based products, Diatek consulted JPL scientists who have used infrared sensors to remotely measure the temperatures of planets and stars. JPL also aided in mechanical analysis of the thermometer design, according to Dr. James Rooney, manager of the Technology Affiliates Program.

Introduced in February, the Model 7000 is targeted for acute-care hospitals and alternative health care sites such as Surgi-Centers, nursing homes, blood banks, and cancer and burn centers. Diatek estimates the clinical thermometry market at \$126 million worldwide, and expects 60 percent of all clinical thermometers to use infrared sensors by 1997. □

*For further information about NASA's Technology Affiliates Program, contact:*

*Dr. James Rooney  
Jet Propulsion Laboratory  
4800 Oak Grove Drive  
Pasadena, CA 91109*


## ALGOR FEA—Design and Stress Analysis \$889\*

**For 286 or 386 desktop computers**

- **Finite Elements:** truss, beam, 2-D solid, 3-D solid, membrane, plate/shell, pipe, boundary, rigid link, non-linear gap, thin and thick shell/plate composites.
- **Stress Analysis:** point load, pressure, temperature, accelerations, centrifugal loads, deflections.
- **Dynamic Analysis:** mode shapes, frequencies, time stress history, response spectrum, direct integration, random vibration.
- **Heat Transfer Analysis:** 2-D/3-D conduction, convection, radiation, heat source, temperature, steady state and transient.
- **Graphics:** 3-D models; hidden line removal; light source shading animation; stress, displacement, temperature and flux contours w/optional shading; deformations; pan; zoom; node/element numbers; color.
- **Modeling:** 2-D/3-D mesh, cylinders, extrusions profile-path, warped surfaces; boundaries, loads, materials. SUPERDRAW II and parametric model generation.
- **Full Capability, no size restrictions:** 3-D drawing, Computer Aided Design, solid modeling, design visualization, finite element stress analysis, and graphic post-processing.

GSA Contract #GS00K89AGS6270

*Design the future with Algor.*

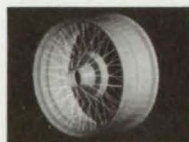

Wire wheel model



Propeller hub/blades



Stress contour on clip



Temperature contour electronic part

*Algor has the largest base of installed FEA software in the world!*

**TEL: (412) 967-2700 FAX: (412) 967-2781**



**ALGOR**  
Quality Engineering Software Since 1977

ALGOR INTERACTIVE SYSTEMS, INC.  
260 Alpha Drive, Pittsburgh, PA 15238


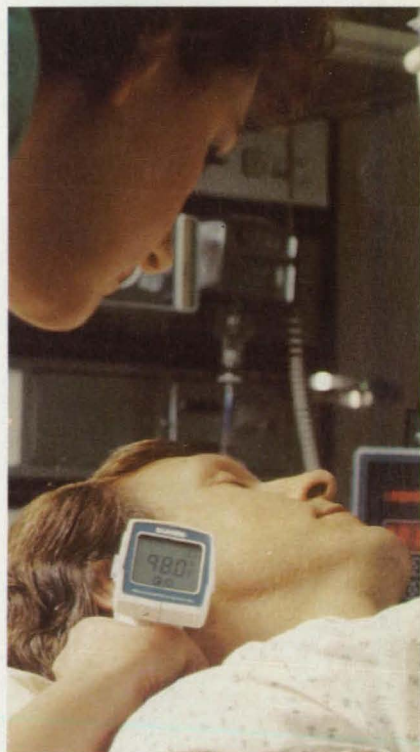


Photo courtesy Diatek Corp.

**The Model 7000's infrared sensor delivers temperature readings in either Centigrade or Fahrenheit in two seconds or less.**

# TOUCH AND GO...

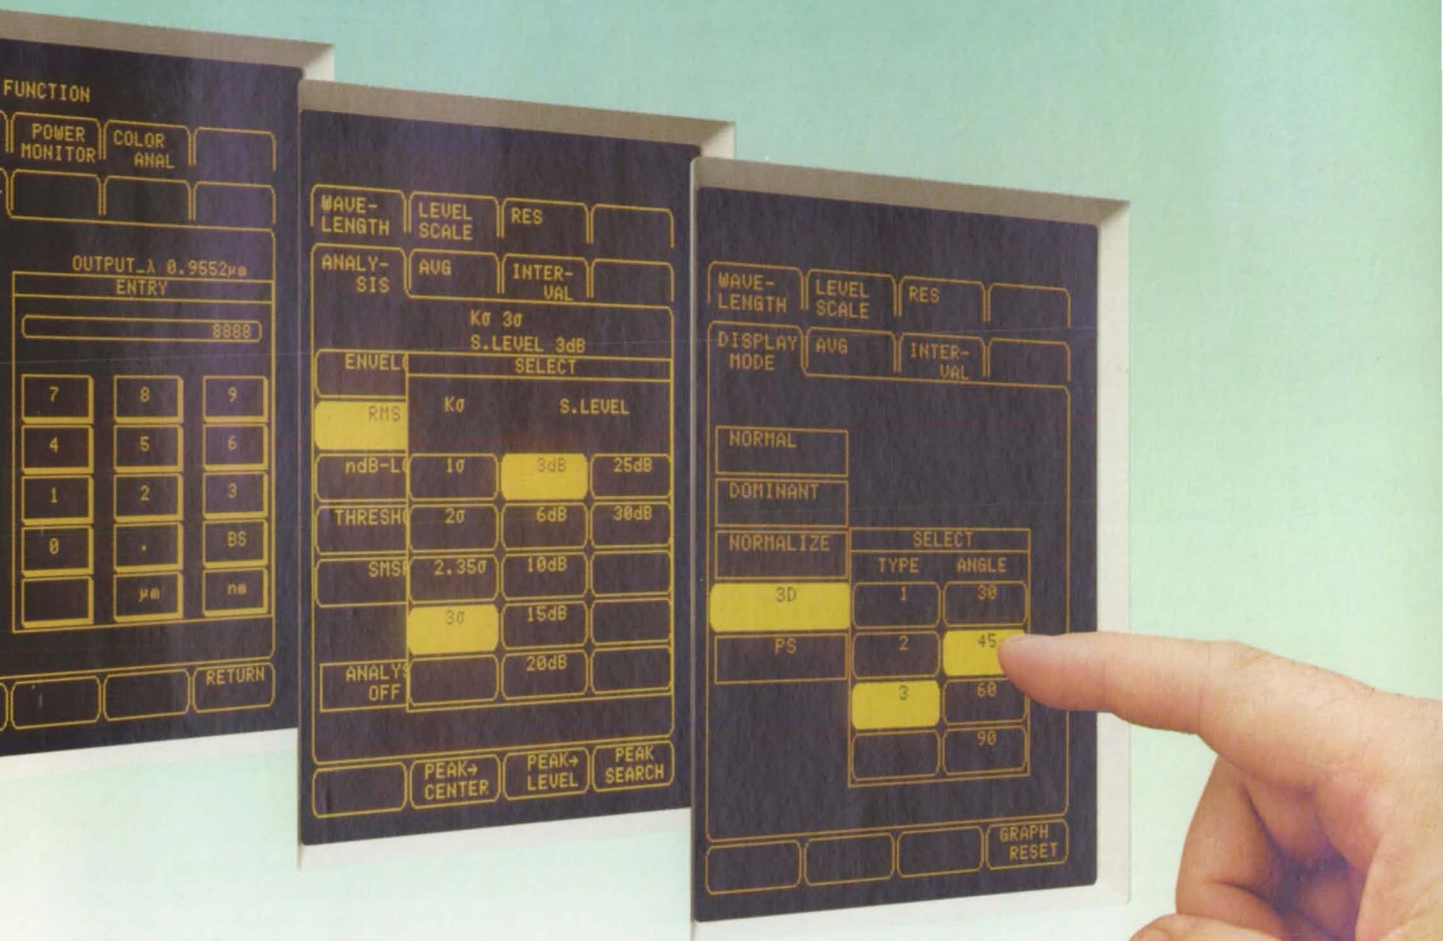

## The Optical Spectrum Analyzer That Puts More Power At Your Fingertip!

- Broad Bandwidth (0.35 to 1.75  $\mu\text{m}$ )
- Broad Dynamic Range (up to > 80 dB)
- High Sensitivity (-80 dBm)
- Low Polarization Dependency ( $< \pm 0.5$  dB)
- High Level Accuracy ( $< \pm 1.5$  dB)

The advanced series of MV02 Optical Spectrum Analyzers provides a new dynamic user interface that simplifies operation with a touch EL panel and a high resolution

color display. The display section can be interfaced with up to three optical units that can be selected depending on measurement application. Color analysis can be measured directly and polarization modes can be viewed simultaneously. Direct spatial coupling is used for the double monochromator optical unit.

For literature or a demo, contact Anritsu America, Inc. 15 Thornton Road, Oakland, NJ 07436. Call 800-255-7234 or (in NJ) 201-337-1111. FAX 201-337-1033.



# Anritsu

Circle Reader Action No. 507

ANRITSU CORP., JAPAN

Now  
under  
X-Windows

DADiSP 2.0

Now with  
Data-Acquisition  
Support



# DADiSP. The Big Picture in Signal Processing

**DADiSP** — interactive graphics and data analysis software for scientists and engineers. DADiSP 2.0 delivers unprecedented power, through easy-to-use menus. Choose from hundreds of analysis functions and graphic views — from tables to 3-D. Simultaneously display multiple windows, each with different data or analyses, for unlimited perspective on your toughest data analysis problems.

**Build your own analysis worksheets** — build and display an entire signal processing chain, *without programming*. And DADiSP's powerful graphic spreadsheet automatically recalculates and updates the entire chain if you change your data or a processing step.

**Do serious signal processing...** the way you always pictured it! FFTs, digital filter design, convolutions, waterfall plots, and more — all at the press of a key.


**Data Acquisition and Instrumentation Control** — use DADiSP/LT and DADiSP/488 to collect data from A-D boards and instruments directly into a DADiSP window for immediate viewing and analysis.

**Flexible, expandable, customizable** — annotate your graphs and send them to printers, plotters, or publishing packages. Create your own macros, automate routine tasks, and run any program written in any language from within DADiSP. *DADiSP even lets you build your own menus.*

**A proven standard** — already used by thousands of engineers and scientists worldwide, in a whole range of applications like medical research, signal processing, chemistry, vibration analysis, communications, manufacturing quality control, test & measurement, and more. DADiSP supports the IBM PC and PS/2, SUN, DEC VAX, HP 9000, IBM RS/6000 and Concurrent families of personal computers and workstations.

**GET THE PICTURE! 800-424-3131  
INMA617-577-1133**

Ask for our Evaluation Disk. For more information, write to DSP Development Corporation, One Kendall Square, Cambridge, MA 02139, or FAX: 617-577-8211.

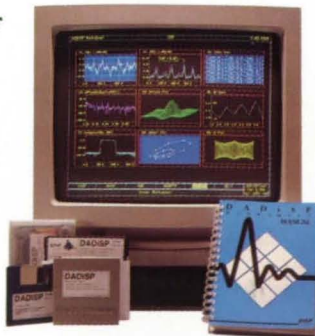

Australia-Interworld Electronics, 03-521-2952; Denmark-Dan Trade, 42-27-4511; Engberg Power Consult, 42-25-1777; England-Adept Scientific, (0462) 480055; Finland-Mespek OY, 9-0-3511800; France-SM2i, 1-34-89-78-78; Germany-Datalog, (02166) 46082; Digi-Logger, (07720) 38022; Infomatik Systeme, 0631-46007; Ingenieurburo Kohler- 069-769829; Kontron Messtechnik, 08165-770; India-Dynalog Microsystems, 22-583908; Italy-BPS Computers, 2-61290221; BRM Italiana, 11-771-0010; Japan-Astrodesign, 044-751-1011; Netherlands-Computer Engineering Roosendaal, 01650-57417; New Zealand-GTS Engineering, 09-392-464; Scotland-Diagnostic Instruments, 0501-43031; Sweden-Systec, 013-110140; Switzerland-Urech & Harr AG, 061-611325; Taiwan-Advantech, 2-351-2117; Howching (02) 5050525

Circle Reader Action No. 652