


70

NASA CR-72168  
R-6754-2

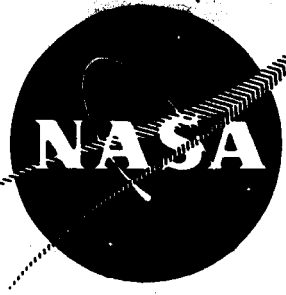

3

**PROPERTIES OF NONAQUEOUS ELECTROLYTES**  
**SECOND QUARTERLY REPORT**  
**(20 September 1966 to 19 December 1966)**

By  
**Rudolf Keller**  
**James N. Foster**  
**James D. Ray**  
**Jack M. Sullivan**

Prepared For

**National Aeronautics and Space Administration**

**Contract NAS3-8521**

**Rocketdyne**  
**A Division of North American Aviation, Inc.**  
**Canoga Park, California**

FACILITY FORM 602

N67 18161 (ACCESSION NUMBER)

70 (PAGES)

NASA CR 72168 (NASA CR OR TMX OR AD NUMBER)

(THRU)

(CODE)

(CATEGORY)

GPO PRICE \$ \_\_\_\_\_

CFSTI PRICE(S) \$ \_\_\_\_\_

Hard copy (HC) 3.00

Microfiche (MF) .65

## NOTICE

This report was prepared as an account of Government sponsored work. Neither the United States, nor the National Aeronautics and Space Administration (NASA), nor any person acting on behalf of NASA:

- A.) Makes any warranty or representation, expressed or implied, with respect to the accuracy, completeness, or usefulness of the information contained in this report, or that the use of any information, apparatus, method, or process disclosed in this report may not infringe privately owned rights; or
- B.) Assumes any liabilities with respect to the use of, or for damages resulting from the use of any information, apparatus, method or process disclosed in this report.

As used above, "person acting on behalf of NASA" includes any employee or contractor of NASA, or employee of such contractor, to the extent that such employee or contractor of NASA, or employee of such contractor prepares, disseminates, or provides access to, any information pursuant to his employment or contract with NASA, or his employment with such contractor.

Requests for copies of this report should be referred to

National Aeronautics and Space Administration  
Office of Scientific and Technical Information  
Attention: AFSS-A  
Washington, D.C. 20546



ROCKETDYNE • A DIVISION OF NORTH AMERICAN AVIATION, INC.

NASA CR-72168

R-6754-2

PROPERTIES OF NONAQUEOUS ELECTROLYTES  
SECOND QUARTERLY REPORT  
(20 September 1966 to 19 December 1966)

By

Rudolf Keller  
James N. Foster  
James D. Ray  
Jack M. Sullivan

Prepared For

National Aeronautics and Space Administration

19 January 1967

Contract NAS3-8521

Technical Management  
NASA Lewis Research Center  
Cleveland, Ohio  
Space Power Systems Division  
Mr. Robert B. King

Rocketdyne  
A Division of North American Aviation, Inc.  
Canoga Park, California



#### FOREWORD

This report was prepared under G.O. 8852 in compliance with Article VI and Paragraph B of Contract NAS3-8521 for the National Aeronautics and Space Administration, Lewis Research Center, Cleveland, Ohio. The work was conducted in the Chemistry Section of Rocketdyne's Research Division, during the period 20 September through 19 December 1966.

#### ABSTRACT

A complete vapor phase chromatographic analysis of dimethyl formamide was conducted, and several techniques were utilized to verify the water content of propylene carbonate and dimethyl formamide. Solutes were characterized by spark source mass spectrometry and emission spectroscopy.

Physical properties such as the density, viscosity, and conductance of electrolytes containing LiCl and/or  $AlCl_3$  in dimethyl formamide were determined.



CONTENTS

Foreword . . . . .	iii
Abstract . . . . .	iii
Summary . . . . .	1
Description of Progress . . . . .	3
Preparation of Electrolytes . . . . .	3
Purification of Solvents . . . . .	3
Analysis of Solvents by Vapor Phase Chromatography . . . . .	4
Analysis of Solvents by Karl Fischer Titration . . . . .	13
Analysis of Solvents by Nuclear Magnetic Resonance . . . . .	14
Analysis of Solutes by Spark Source Mass Spectrometry . . . . .	21
Analysis of Solutes by Emission Spectroscopy . . . . .	29
Discussion of Solute Analysis Results . . . . .	31
Physical Property Determinations . . . . .	33
Density Measurements . . . . .	33
Viscosity Measurements . . . . .	34
Solubility Measurements . . . . .	35
Conductance Measurements . . . . .	37
Measurements of Transference Numbers by the Hittorf Method . . . . .	44
Work Planned for Next Quarter . . . . .	45
Preparation of Electrolytes . . . . .	45
Physical Property Determinations . . . . .	45
References . . . . .	47



ILLUSTRATIONS

1. Initial Portion of Chromatograms of Spectroquality Dimethyl Formamide . . . . .	7
2. Chromatogram of Distilled Spectroquality Dimethyl Formamide, DMF #4-1, on Carbowax 20M . . . . .	9
3. Chromatogram of Distilled Spectroquality Dimethyl Formamide, DMF #4-1, on Apiezon L . . . . .	10
4. Chromatograms of Propylene Carbonate Containing Various Amounts of Water . . . . .	12
5. Proton NMR Spectrum of Propylene Carbonate Containing 10 percent H <sub>2</sub> O . . . . .	16
6. Proton Spectrum of Propylene Carbonate Containing 0.85-Percent Added H <sub>2</sub> O; Second Derivative Display . . . . .	17
7. High Resolution Spectrum of Propylene Carbonate Obtained by Using 1.5 Hz Lock-In-Amplifier Detection . . . . .	18
8. High Gain Display of Carbon 13 Sidebands and Water Resonances in Propylene Carbonate . . . . .	19
9. High Gain Spectrum of Acetonitrile . . . . .	22
10. Equivalent Conductance of LiCl in DMF at 25 and 60 C . . . . .	39
11. Equivalent Conductance of LiCl/DMF, AlCl <sub>3</sub> /DMF, and LiCl-AlCl <sub>3</sub> /DMF at 25 and 60 C . . . . .	40



## TABLES

1. Response of Cross-Section Detector to Various Amounts of Water in Dimethyl Formamide . . . . .	5
2. Impurity Concentrations in LiCl #2 Determined by Spark Source Mass Spectrometry and Emission Spectroscopy . . . . .	23
3. Impurity Concentrations in AlCl <sub>3</sub> #3 Determined by Spark Source Mass Spectrometry and Emission Spectroscopy . . . . .	24
4. Impurity Concentrations in LiF #2-1 Determined by Spark Source Mass Spectrometry and Emission Spectroscopy . . . . .	25
5. Impurity Concentrations in TMA.PF <sub>6</sub> #1 Determined by Spark Source Mass Spectrometry and Emission Spectroscopy . . . . .	26
6. Impurity Concentrations in CuCl <sub>2</sub> #2 Determined by Spark Source Mass Spectrometry and Emission Spectroscopy . . . . .	27
7. Emission Spectroscopic Analysis Results for Solutes . . . . .	30
8. Densities of Solution of LiCl in DMF at 25 C . . . . .	33
9. Viscosities of Solutions of LiCl in DMF at 25 C . . . . .	35
10. Solubilities of LiCl in DMF at 25 C . . . . .	36
11. Solubility of AlCl <sub>3</sub> in DMF at 25 C . . . . .	37
12. Specific Conductance ( $\lambda$ ) and Equivalent Conductance ( $\Lambda$ ) of LiCl/DMF at 25 and 60 C . . . . .	38
13. Specific Conductance ( $\lambda$ ) and Equivalent Conductance ( $\Lambda$ ) of AlCl <sub>3</sub> /DMF at 25 and 60 C . . . . .	42
14. Specific Conductance ( $\lambda$ ) and Equivalent Conductance ( $\Lambda$ ) of LiCl-AlCl <sub>3</sub> /DMF at 25 and 60 C . . . . .	43



## SUMMARY

Propylene carbonate, dimethyl formamide, and acetonitrile were distilled during the report period. Dimethyl formamide was completely characterized by vapor phase chromatography. Several methods [vapor phase chromatography (VPC), nuclear magnetic resonance (NMR), and Karl Fischer titration] were utilized to verify the water content of distilled propylene carbonate.

Some solutes were analyzed by spark source mass spectrometry and emission spectroscopy. Because no crucial impurities at levels of 100 ppm or more were revealed, it was decided to utilize the chemicals, i.e., lithium chloride, aluminum chloride, lithium fluoride, tetramethylammonium hexafluorophosphate, and cupric chloride, without any further purification.

Physical properties such as density, viscosity, and conductance were determined for  $\text{LiCl}/\text{DMF}$ ,  $\text{AlCl}_3/\text{DMF}$ , and  $\text{LiCl}-\text{AlCl}_3/\text{DMF}$  solutions. The solubilities of  $\text{LiCl}$  and  $\text{AlCl}_3$  in dimethyl formamide were determined.






## DESCRIPTION OF PROGRESS

## PREPARATION OF ELECTROLYTES

Purification of Solvents

Propylene carbonate was distilled as described in Ref. 1.

Spectrograde dimethyl formamide (99.9-percent purity) was distilled at a pressure of 25 mm Hg using a Vigreux column. Dimethyl formamide was distilled from Multrathane M (Mobay Chemical Company) to reduce the content of water and amines. A schematic representation of the reaction of Multrathane M (p, p' diphenylmethane diisocyanate) with water and dimethylamine is as follows:

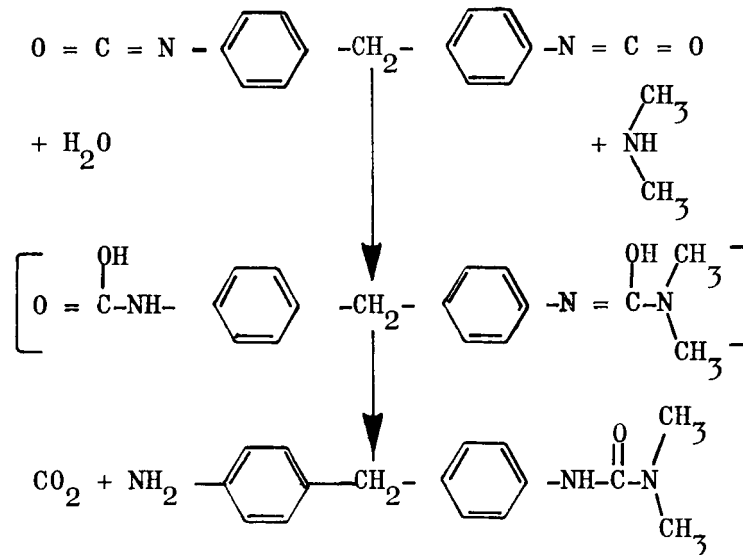

From gas chromatographic data, it was determined that the water content was reduced from 230 to 50 ppm (by weight). Furthermore, the lower boiling impurities were reduced to a great extent. Neither predistillation



from  $\text{CaH}_2$  nor an additional distillation through a 30-plate Oldershaw column produced significantly different results. This indicated that dimethyl formamide of acceptable purity may be obtained by a relatively simple purification procedure and approximately 2 liters have been so obtained.

Approximately 1 liter of spectrograde acetonitrile was purified by double distillation from  $\text{P}_2\text{O}_5$  on the spinning band column. Karl Fisher titration analysis of this material indicated a water content of 23 ppm. A 2-1/2-foot, 1-inch-diameter, electrically heated Heli-pak packed column is being assembled for future use as an alternative to the spinning band column.

#### Analysis of Solvents by Vapor Phase Chromatography

Dimethyl Formamide. The procedure for a complete VPC analysis of dimethyl formamide has been finalized; one batch of purified dimethyl formamide, was analyzed on three columns. One column was packed with Porapak Q; this column is used primarily for the determination of water. The remaining two columns were packed with Apiezon L and Carbowax 20M on Chromosorb. These two columns are used for the determination of organic matter.

The procedure for the determination of water was described in the Ref. 1. The eluent from the Porapak Q column is monitored with a cross-section detector. The response for water in dimethyl formamide was determined to be  $67 \text{ ppm/cm}^2$  by adding known amounts of water to the dimethyl formamide and measuring the resulting area of the water peak. The response determined for various water concentrations in dimethyl formamide is presented in Table 1. The response determined by the same procedure (Fig. 4)\* for

\*Figure 4 is presented on page 12.



water in propylene carbonate was 50 ppm/cm<sup>2</sup>. These values are different because the water concentrations are reported on a weight basis. Thus, the 100-microliter samples correspond to 94 milligrams of dimethyl formamide and 120 milligrams of propylene carbonate. The responses for water in dimethyl formamide and propylene carbonate are in agreement within the experimental accuracy of the method, if they are expressed on a volume basis, i.e., the responses are 64 and 60 ppm/cm<sup>2</sup> (parts per million by volume), respectively.

TABLE 1  
RESPONSE OF CROSS-SECTION DETECTOR TO VARIOUS AMOUNTS  
OF WATER IN DIMETHYL FORMAMIDE

<u>Sample No.</u>	<u>H<sub>2</sub>O, ppm</u>	<u>H<sub>2</sub>O Peak Area, cm<sup>2</sup></u>
1	X*	1.7
2	X + 106	3.6
3	X + 252	5.4

\*The sample to which the water was added contained an unknown amount of water, X. Based on the response of 67 ppm/cm<sup>2</sup>, X is 110 ppm.

To verify the results determined by the VPC technique, a sample of dimethyl formamide was analyzed by the Karl Fischer method. The water content determined by VPC and Karl Fischer methods was 93 and 83 ppm, respectively. These values are in agreement within the experimental accuracy of the two methods.



Figure 1 shows chromatograms for two samples of dimethyl formamide, an undistilled and a distilled sample of spectroquality material (designated DMF #4 and DMF #4-1, respectively). In each chromatogram, the first and second peaks are air (oxygen and/or nitrogen) and carbon dioxide; the third peak is water. The undistilled product contained 230 ppm water and the distilled material contained 50 ppm water.

The cross-section detector indicated approximately the same response for formic acid, formaldehyde, water, and methanol. Formic acid, formaldehyde, and methanol were eluted after water and before dimethyl formamide. Because no peaks were found on the chromatogram for the distilled dimethyl formamide between the water peak and the dimethyl formamide peak, the concentration of formic acid, formaldehyde, and methanol each was less than 10 ppm.

Vapor phase chromatographic analysis utilizing a single column is not definitive because an impurity could be eluted at the same time as the major component or an impurity could have a very long retention time. Relatively long retention times appear to be characteristic of Porapak columns. Dimethyl formamide, for example, has a retention time of 8 minutes at 200 C on Porapak Q, but is not retained on Carbowax 20M or Apiezon L at this temperature. Changing the nature of the column, particularly the polarity of the liquid phase, results in a change of the retention times for each component. Thus, two components that have the same retention time on a nonpolar column (because of the similarity in their boiling points) may have different retention times on a polar column (because of the difference in their polarities).

Dimethyl formamide was analyzed on polar and nonpolar columns. The polar column was 5 percent Carbowax 20M on Chromosorb W (DMCS-AW, 60/80 mesh) packed in 1/8-inch by 20-foot stainless-steel tubing. The nonpolar column was packed with 5 percent Apiezon L on Chromosorb W (DMCS-AW, 60/80

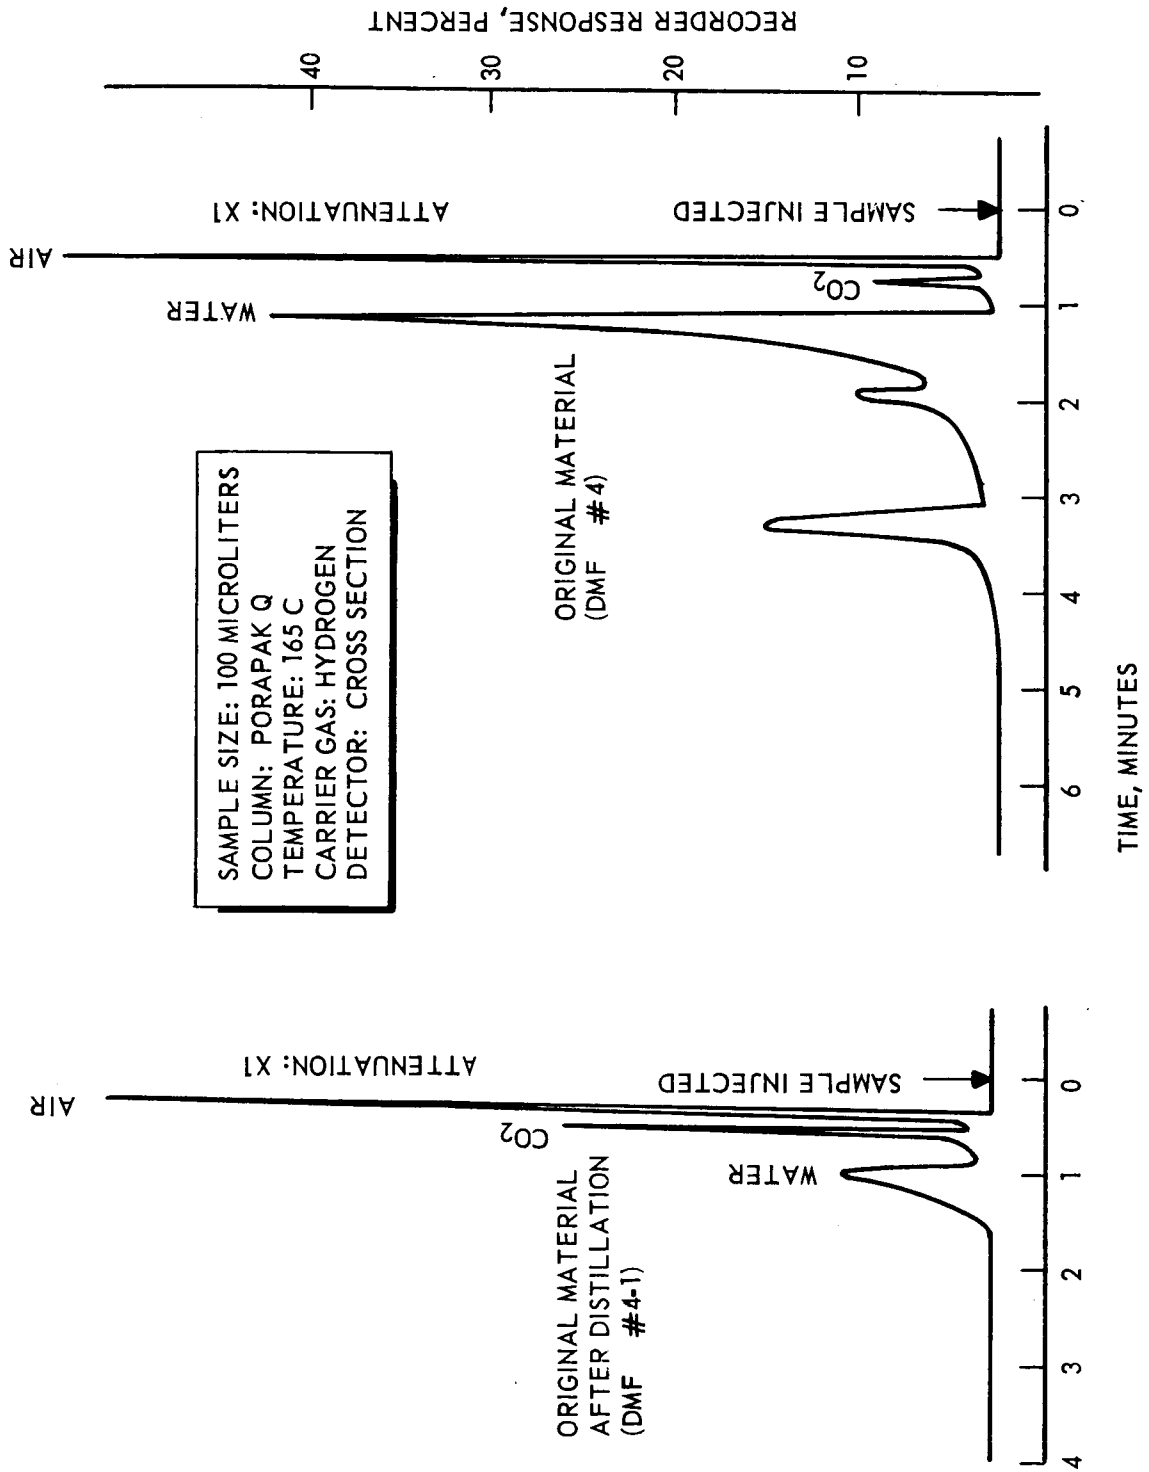


Figure 1. Initial Portion of Chromatograms of Spectroquality Dimethyl Formamide



mesh); this was packed in 1/8-inch by 10-foot stainless-steel tubing. A flame-ionization detector was employed with these two columns. Several chromatograms were made at different temperatures to obtain sharp, easily delineated peaks. For peaks which appear ahead of dimethyl formamide, better resolution is generally obtained at lower temperatures; peaks which follow the dimethyl formamide peak are generally sharper at higher temperatures. Programmed temperature gas chromatography usually results in good resolution and peak shape because of the increasing temperature during elution of the sample. Because of the upper limit placed on impurities (100 ppm), several isothermal chromatograms obtained at different column temperatures are more preferable than one gas chromatogram with programmed temperature control. This is because there is better stability and reproducibility inherent in the isothermal technique.

Chromatograms were obtained for a batch of distilled dimethyl formamide, DMF#4-1, on the Carbowax 20M column at temperatures of 66, 96, and 165 C. Figure 2 shows a chromatogram of DMF#4-1 on Carbowax 20M at 96 C. In general, all of the chromatograms were similar. Two peaks appeared at the beginning of the chromatograms at 96 and 165 C followed by a peak for dimethyl formamide. There were no peaks observed after that of dimethyl formamide even though the chromatogram was continued for 40 minutes after the elution of dimethyl formamide.

Chromatograms were also obtained for DMF#4-1 on an Apiezon L column at temperatures of 40, 102, and 165 C. Figure 3 shows a chromatogram on Apiezon L at 102 C. Two peaks which were not well resolved appeared at the beginning of the chromatograms at 102 and 165 C, followed by a peak for dimethyl formamide. Neither an Apiezon L column nor a Carbowax 20M column produced peaks after that of dimethyl formamide.

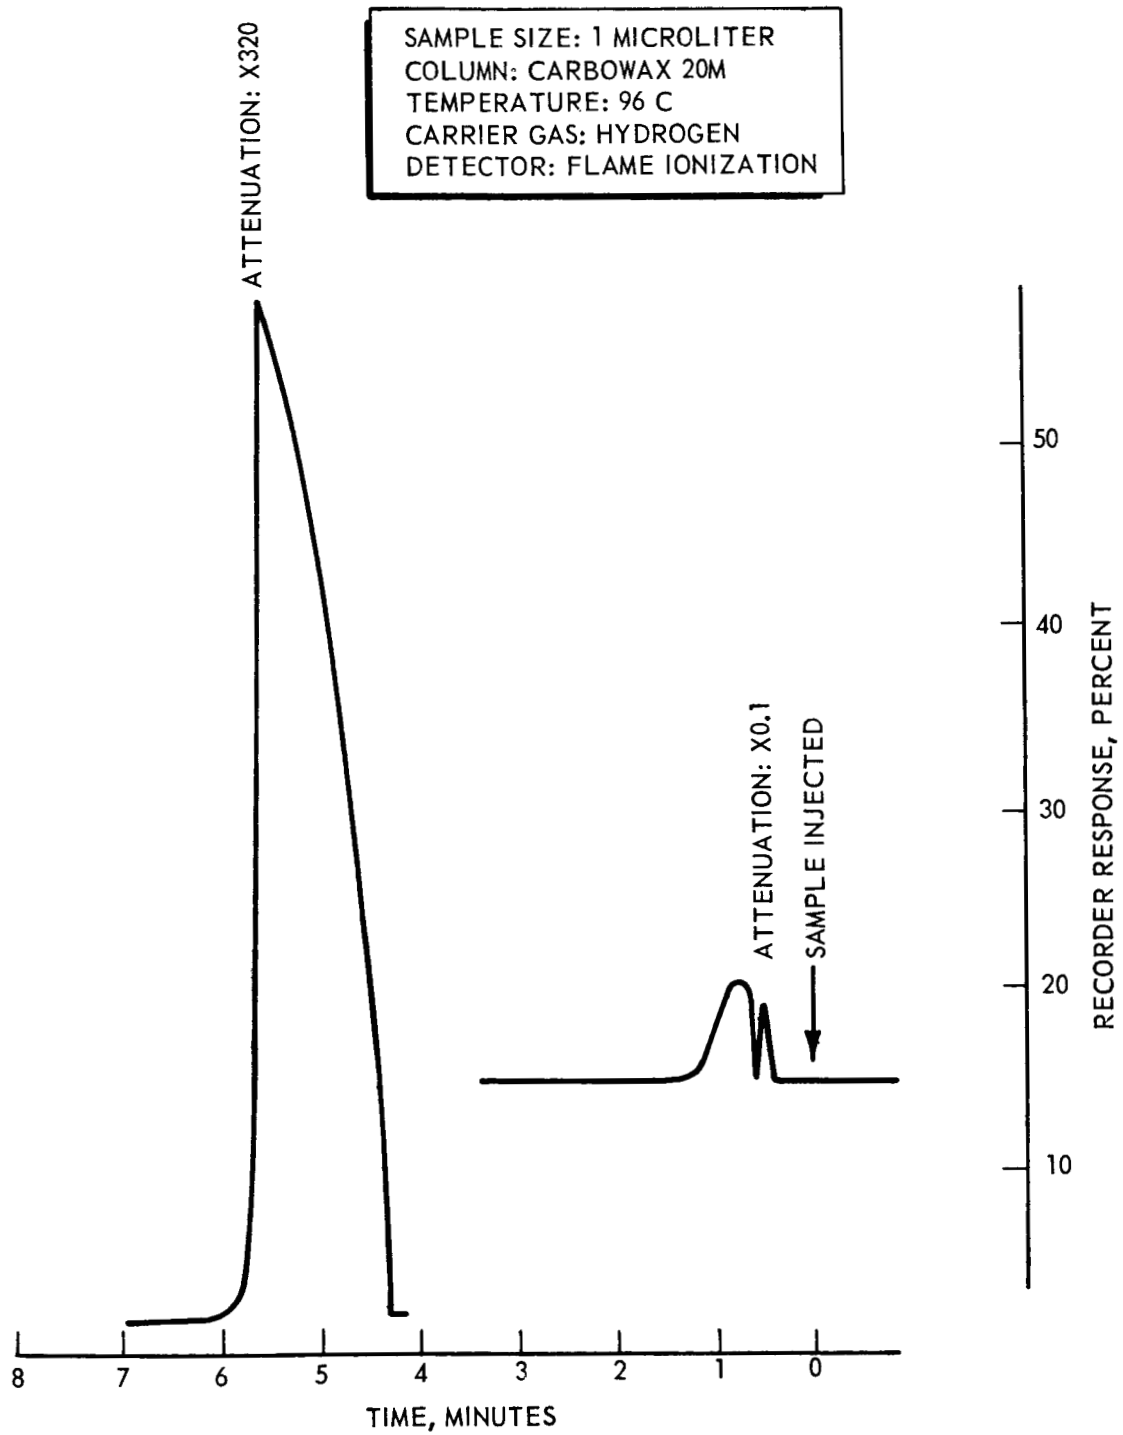


Figure 2. Chromatogram of Distilled Spectroquality Dimethyl Formamide, DMF #4-1, on Carbowax 20M

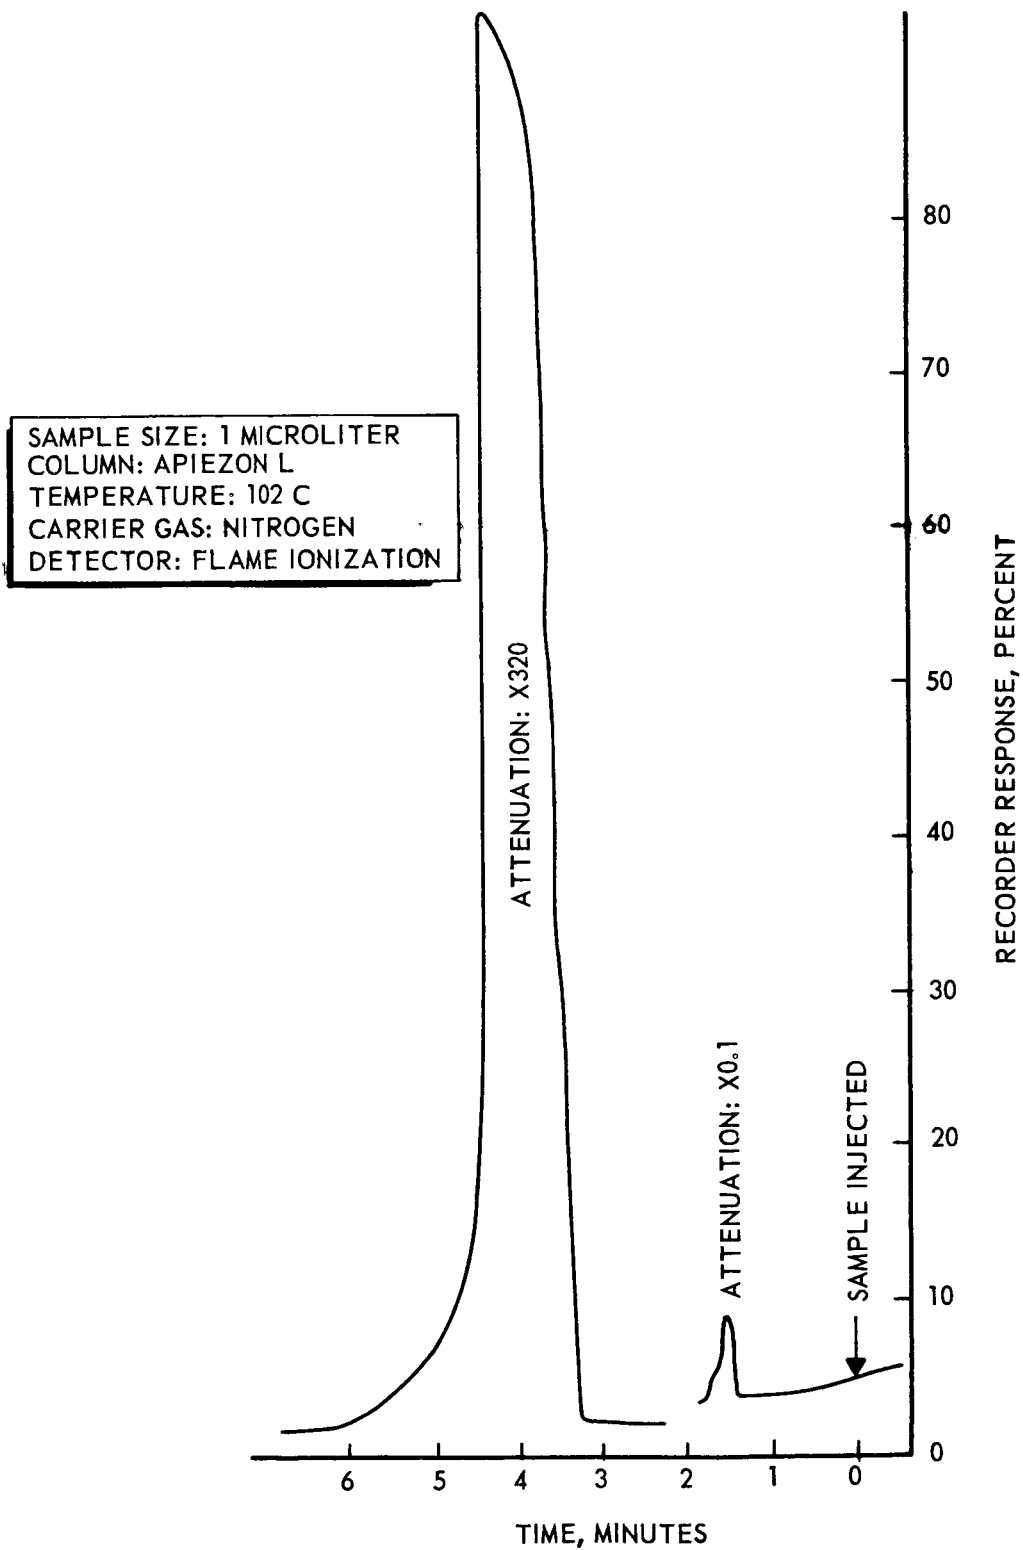


Figure 3. Chromatogram of Distilled Spectroquality Dimethyl Formamide, DMF #4-1, on Apiezon L





The area of the dimethyl formamide peak corresponds to  $6000 \text{ cm}^2$ . For most organic compounds, the area of the response of the flame-ionization detector is proportional to the weight of compounds being analyzed. As a result, if an organic impurity is present with a concentration of 100 ppm, a peak with an area of  $0.6 \text{ cm}^2$  would be expected. On the most sensitive range, the area of the response would be  $6 \text{ cm}^2$  which corresponds to a triangular peak with a base of 1 centimeter and a height of 12 centimeters. No such peaks were found on either column.

The analytical results on the Porapak Q column with a cross-section detector were compared with those obtained on Carbowax 20M and Apiezon L columns with the flame-ionization detector. It was concluded that no impurity is present in the distilled spectroquality dimethyl formamide, DMF#4-1, with a concentration greater than 100 ppm.

Propylene Carbonate. Complete characterization of propylene carbonate was not accomplished but uncertainties in the water determination have been resolved.

When propylene carbonate was first analyzed, water concentrations were much higher than reported by other workers who distilled propylene carbonate. Furthermore, water appeared as two peaks rather than one peak. Figure 4 shows the initial portion of chromatograms of propylene carbonate containing various amounts of water. From this, a response of  $50 \text{ ppm/cm}^2$  was determined. The reliability of the water determination in propylene carbonate was substantiated by the following facts:

1. The capability of the method to determine low water contents was demonstrated by an analysis of propylene carbonate which had been dried with Linde Molecular Sieve 4A; this sample contained 20 ppm water.

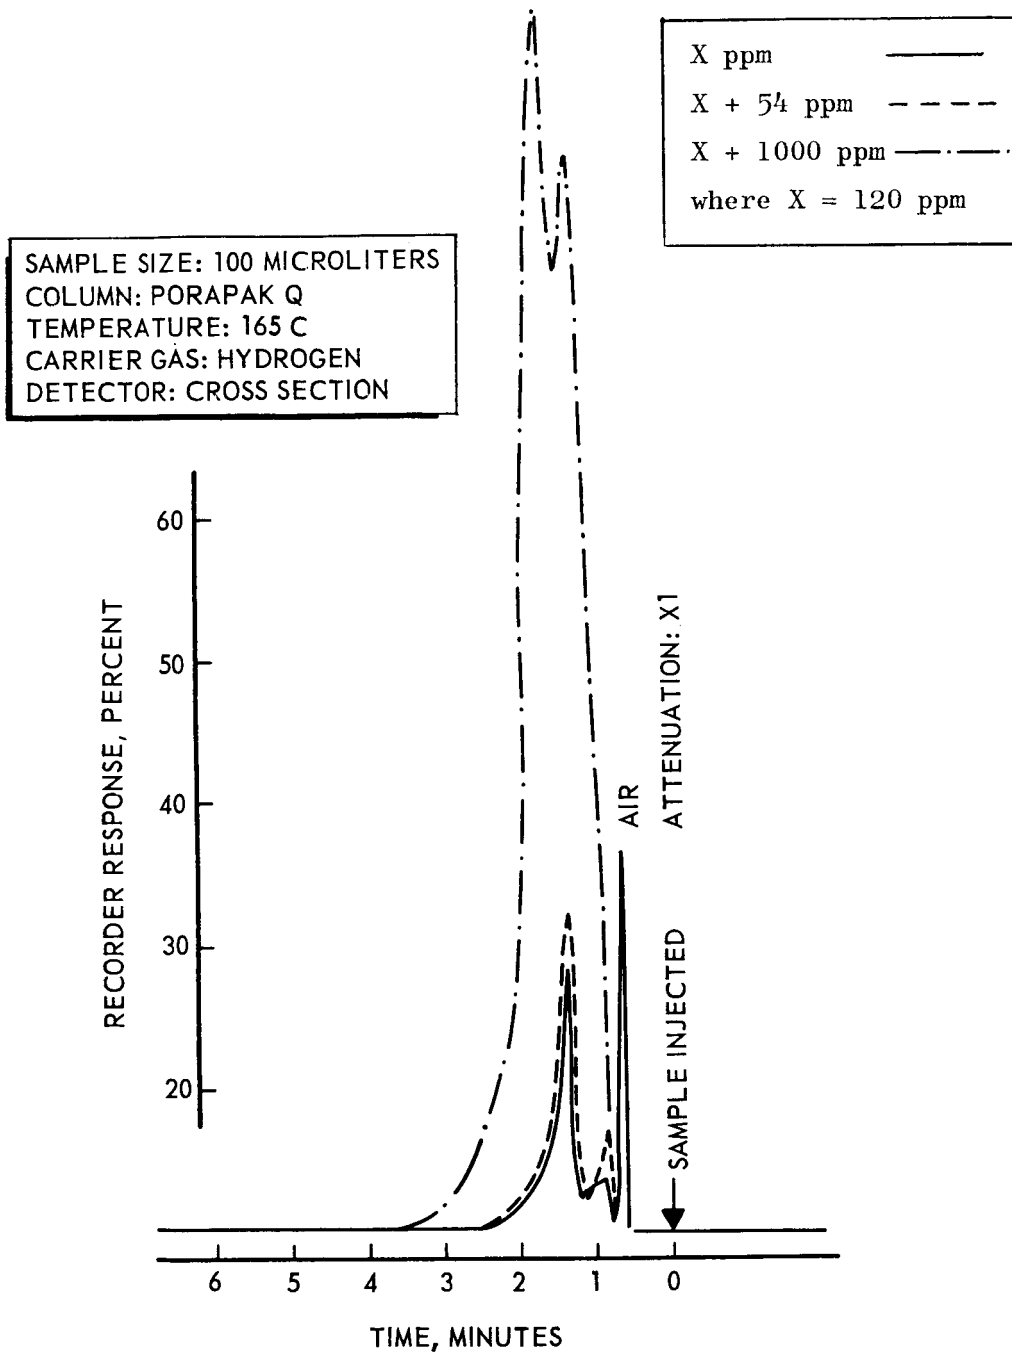


Figure 4. Chromatograms of Propylene Carbonate Containing Various Amounts of Water




2. The addition of aliquots of water to a sample of propylene carbonate increased the size of both chromatographic peaks.
3. The response factor for water in propylene carbonate (using the area of both peaks) is essentially the same as the response factor for water in dimethyl formamide.
4. The Karl Fischer method results agree with those found by the VPC method. The Karl Fischer method indicated that there were 158 ppm water in a sample which analyzed as 180 ppm by VPC.
5. The water content obtained by the NMR method is identical with that obtained by the VPC method (200 ppm for a particular sample).

Analysis of Solvents by Karl Fischer


Titration

As an independent check of the results obtained by VPC, Karl Fischer reagent (Ref. 2) has been employed to determine water content. To date, Karl Fischer titration is the only method utilized to determine the water content in acetonitrile.

Karl Fischer reagent is a well specified mixture of pyridine, iodine, methanol, and sulfur dioxide. The titration of H<sub>2</sub>O in this CH<sub>3</sub>OH solution involves a sequence of reactions that can be represented by the following equations:



and





The standard reagent titrates 5 milligrams of water per milliliter of titrant. To determine trace quantities of water in solvents, the titrant was diluted with methanol to an activity of  $\sim 1$  mg  $H_2O$ /ml titrant. If 100 grams ( $\sim 100$  milliliters) of solvent are titrated, each milliliter of titrant corresponds to 10 ppm of water, giving a 1 milliliter titration with a 5-milliliter micro-burette (0.01 ml/div). The lower limit for the determination of water is less than 10 ppm. The direct titration endpoint was determined potentiometrically and the titrations were performed in a closed system. The titrant was standardized against the water of hydration of weighed quantities of sodium tartrate.

Several substances interfere with Karl Fischer analyses including: alkaline materials, compounds containing active hydrogen, and strong oxidizing or reducing agents. One problem associated with large sample sizes is the disruption of the electrolytic nature of the titration system such that the standard endpoint cannot be employed. This problem was not found in the titration of propylene carbonate or acetonitrile.

The titration of dimethyl formamide containing small amounts of water was unusual because the endpoint was passed when the first drop of Karl Fischer reagent was added. This was because the reagent slowly reacted with the sample; subsequent additions of reagent reacted rapidly so that the sample could be titrated in the usual fashion. This reaction appears to be autocatalytic, but the mechanism was not investigated.

#### Analysis of Solvents by Nuclear Magnetic Resonance

The immediate objective of the present NMR studies was to obtain an independent analysis for impurities in the solvents. In particular, a method in addition to VPC and Karl Fischer titration to analyze for water was



desirable. The measurements taken are not only valuable in regard to the analytical aspects of the program but also constitute the necessary basis for the structural NMR studies.

The NMR technique employed was developed under another contract (Ref. 3). Previous experience acquired at Rocketdyne on the analysis of water in nitrogen tetroxide had revealed that the detection limit for water was 50 ppm. Because some acetonitrile samples were analyzed as less than this, it was desirable to improve the NMR sensitivity. The use of broad-line techniques, with a modulating field of 1.5 Hz and an amplitude in gauss comparable to the natural line widths observed in proton spectra produced the desired improvement in sensitivity. At present, as judged by the spectra presented in this report, the sensitivity is approximately 1 ppm when scan rates of some 100 Hz per hour are used.

All the spectra presented in Fig. 5 through 9 were obtained by use of a Varian Associates high-resolution 60 MHz radio-frequency unit, high-resolution magnet equipped with flux stabilizer and field homogeneity controls, and a Princeton Applied Research lock-in-amplifier. The spectra are therefore all displayed as the second derivative of the absorption mode.

Figure 5 displays the spectrum of propylene carbonate containing 10 percent water, utilizing a 15-millimeter sample tube. The signal-to-noise ratio is not as good as that obtained by the use of 5-millimeter sample tubes which were used for all of the other spectra. The spectrum is included for future reference in interpreting chemical shifts of water as a function of dilution. For this comparison, Fig. 6 through 8 show the spectra of propylene carbonate to which 8500 and 930 ppm water had been added to a sample that was analyzed as 200 ppm water by VPC.



The water resonance is the single isolated peak in the middle of the spectrum. Comparison of this with spectra of samples containing less water shows the large chemical shift of the water resonance upon dilution. This spectrum was obtained in a 15-millimeter sample tube so that signal-to-noise ratio is much poorer than obtained with the 5-millimeter sample tubes used for all other spectra presented in this report.

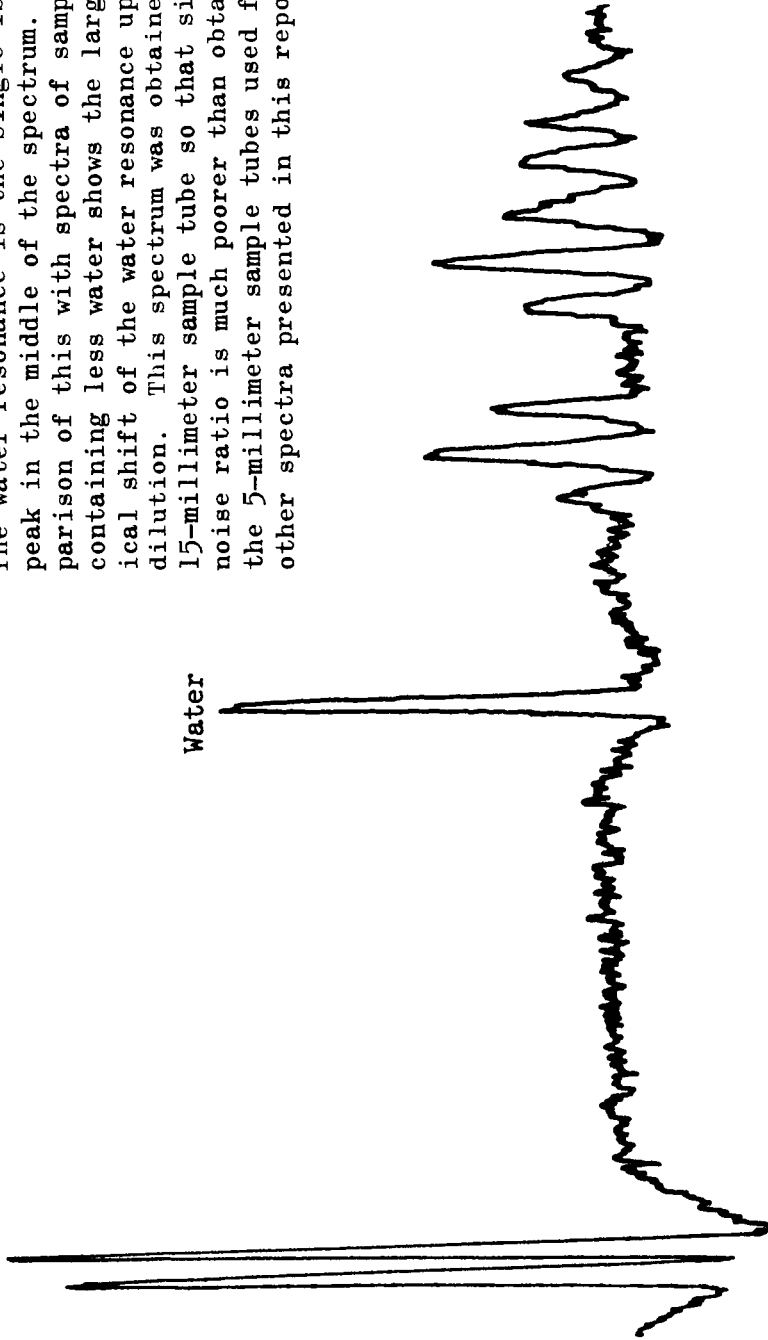


Figure 5. Proton NMR Spectrum of Propylene Carbonate Containing 10 Percent  $H_2O$

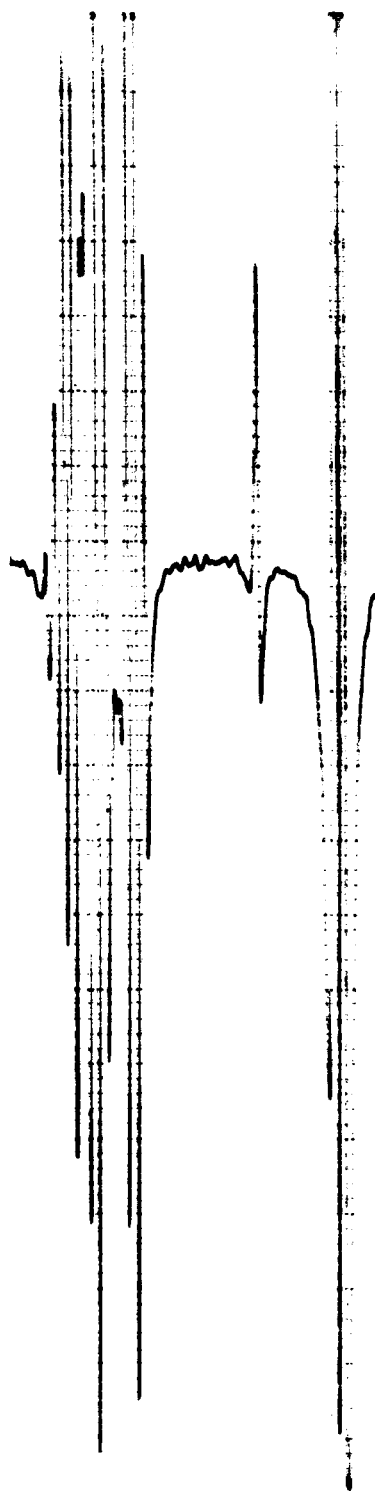


Figure 6. Proton Spectrum of Propylene Carbonate Containing 0.85-  
Percent Added  $H_2O$ ; Second Derivative Display  
(The water line is the singlet in the middle of the spectrum)



This  $H^1$  spectrum at 60 MHz has sufficient gain to show the carbon 13 sidebands and in addition shows the presence of 1130-ppm water. The large second derivative doublet on the right which is due to the methyl group is flanked on either side by small doublets caused by carbon 13 splitting of the methyl resonance. The water resonance is just at the right of the left pair of carbon 13 sidebands.

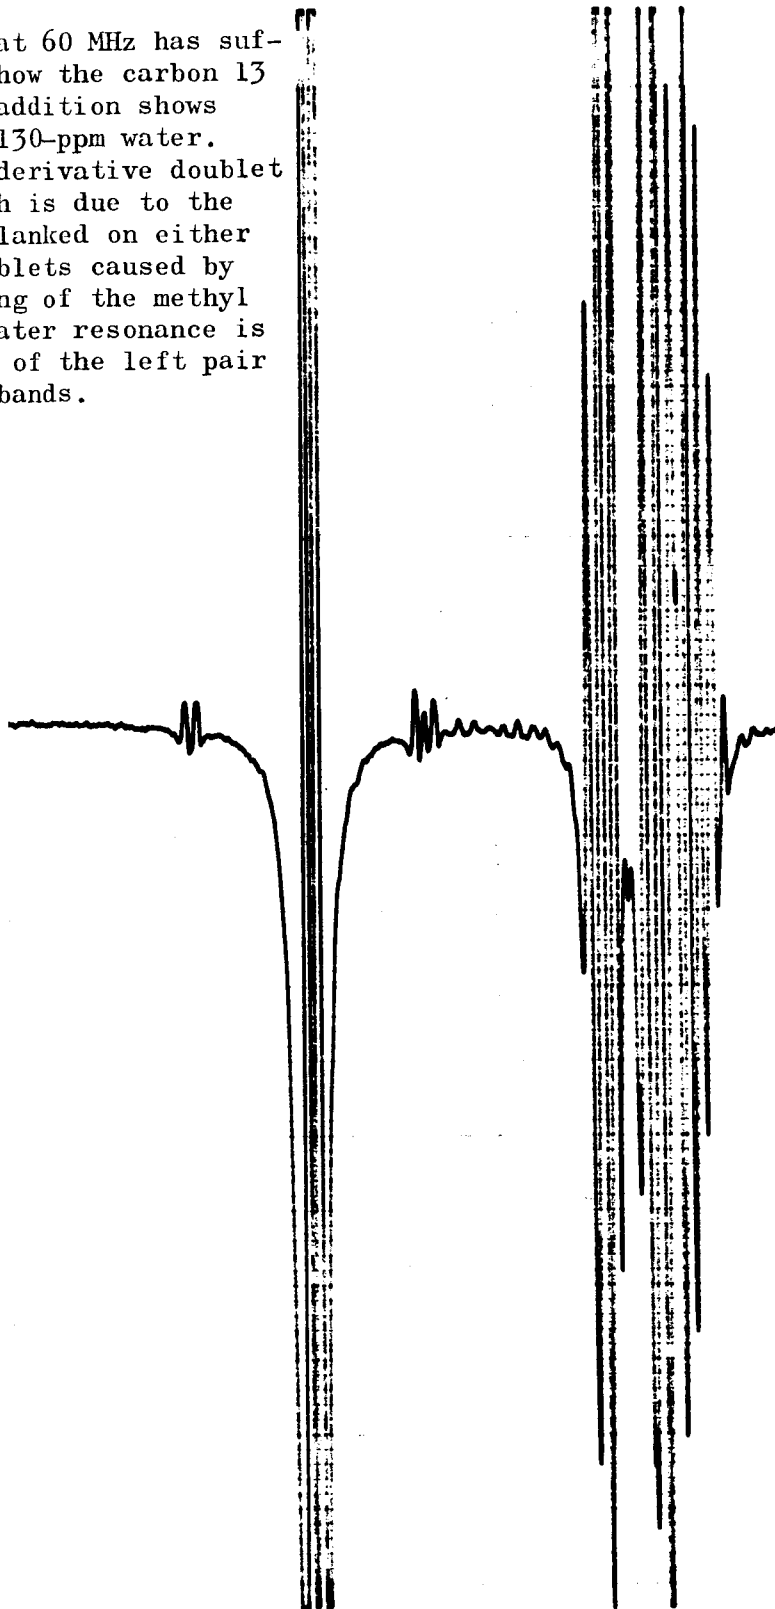


Figure 7. High Resolution Spectrum of Propylene Carbonate Obtained by Using 1.5 Hz Lock-In-Amplifier Detection



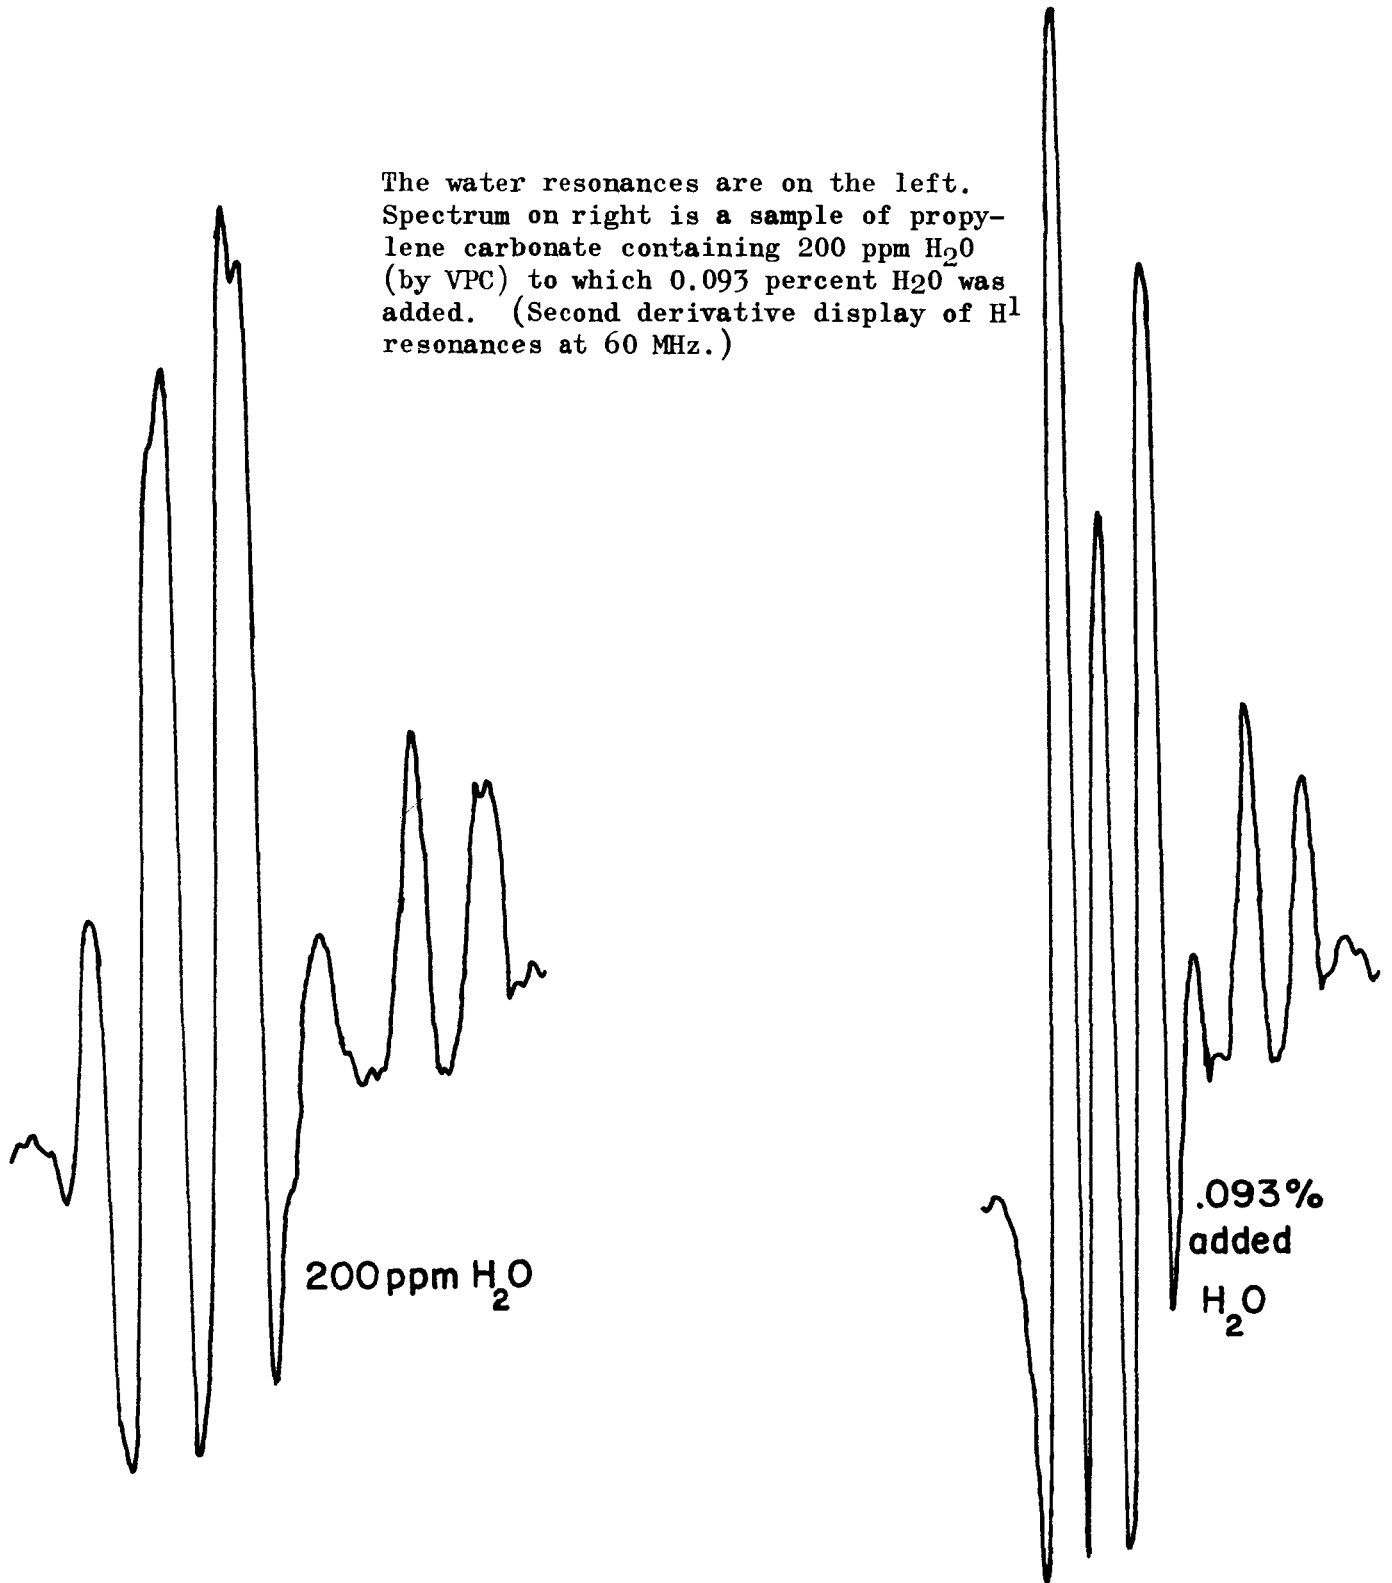


Figure 8. High Gain Display of Carbon 13 Sidebands and Water Resonances in Propylene Carbonate



The top of the usual absorption mode would be at the bottom of the figure in each case; differentiation inverts this. Figure 5 appears more nearly like an ordinary high-resolution absorption mode spectrum; however, the wings extending below the base line on each side of a line are quite evident. With the higher resolution afforded by the smaller size sample tubes and sample spinning, these wings become extremely large in Fig. 6 through 8. None of the spectra are well phased so as to produce perfectly symmetrical peaks and wings; however, the phasing is nearly perfect in Fig. 5 and 7.

Figure 8 displays spectra used in the analysis of water content of propylene carbonate. The spectrum on the left was of a sample containing 200 ppm water which had been analyzed by VPC. The spectrum on the right is of the same propylene carbonate batch to which 0.093 percent water had been added. For evaluation of the actual concentration in the 200 ppm sample, the following equation was used:

$$\frac{X \text{ ppm} + 930 \text{ ppm}}{X \text{ ppm}} = \frac{340}{100} \cdot \frac{8}{5}$$

Here, 340/100 is the ratio of the combined areas of the two peaks referred to the total areas of the peaks above a line drawn between the two peak wing minima. The ratio 8/5 refers to the distance between the peaks in the two spectra (the scan rates were not identical). The value for water concentration (X) deduced in this way is 200 ±20 ppm, in agreement with that found by VPC. Both precision and sensitivity could be increased by slower scan speed and higher gain, respectively.

In addition to constituting an analysis for water, the NMR study has shown the absence of any other organic impurities in propylene carbonate in amounts greater than 10 ppm. This conclusion is based on the fact that spectra were run over the entire range of known proton resonances without detecting resonances other than those of propylene carbonate.



Figure 9 displays the proton spectrum of a sample of acetonitrile which was run to determine whether the water resonance would be separate from the methyl resonance. As it can be seen, there is ample separation of peaks to allow the analysis of water in acetonitrile.


### Analysis of Solutes by Spark Source

#### Mass Spectrometry

Five solutes were analyzed by spark source mass spectrometry: lithium chloride (LiCl #2, 99.9 percent, Atomergic Chemetals Division of Gallard Schlesinger), aluminum chloride ( $\text{AlCl}_3$  #3, 99.999 percent, Rocky Mountain Research, Inc.), lithium fluoride (LiF #2-1, 99.9 percent, Electronic Space Products, Inc.; dried under vacuum at elevated temperature), tetramethylammonium hexafluorophosphate ( $\text{TMA.PF}_6$  #1, Ozark-Mahoning Company), and anhydrous cupric chloride ( $\text{CuCl}_2$  #2, reagent grade, Fisher Scientific Co.). These analyses were performed at the Bell & Howell Research Center, Pasadena, California. The results are presented in Table 2 for LiCl, in Table 3 for  $\text{AlCl}_3$ , in Table 4 for LiF, in Table 5 for  $\text{TMA.PF}_6$ , and in Table 6 for  $\text{CuCl}_2$ . Results obtained by emission spectroscopy were added for comparison purposes.

Analyses for tantalum and gold are not presented because tantalum slits were used in the mass spectrometer and the samples were sparked against an ultrahigh purity gold probe. No analysis was made for hydrogen in the cases of LiCl and of  $\text{AlCl}_3$ . Other elements not listed were generally below the limit of 5 or 10 ppm (atomic).

Samples were not prepared under entirely anhydrous conditions. Although the samples were pressed in closed rubber bags, they were trimmed and exposed to the laboratory air during transfer from the inert atmosphere

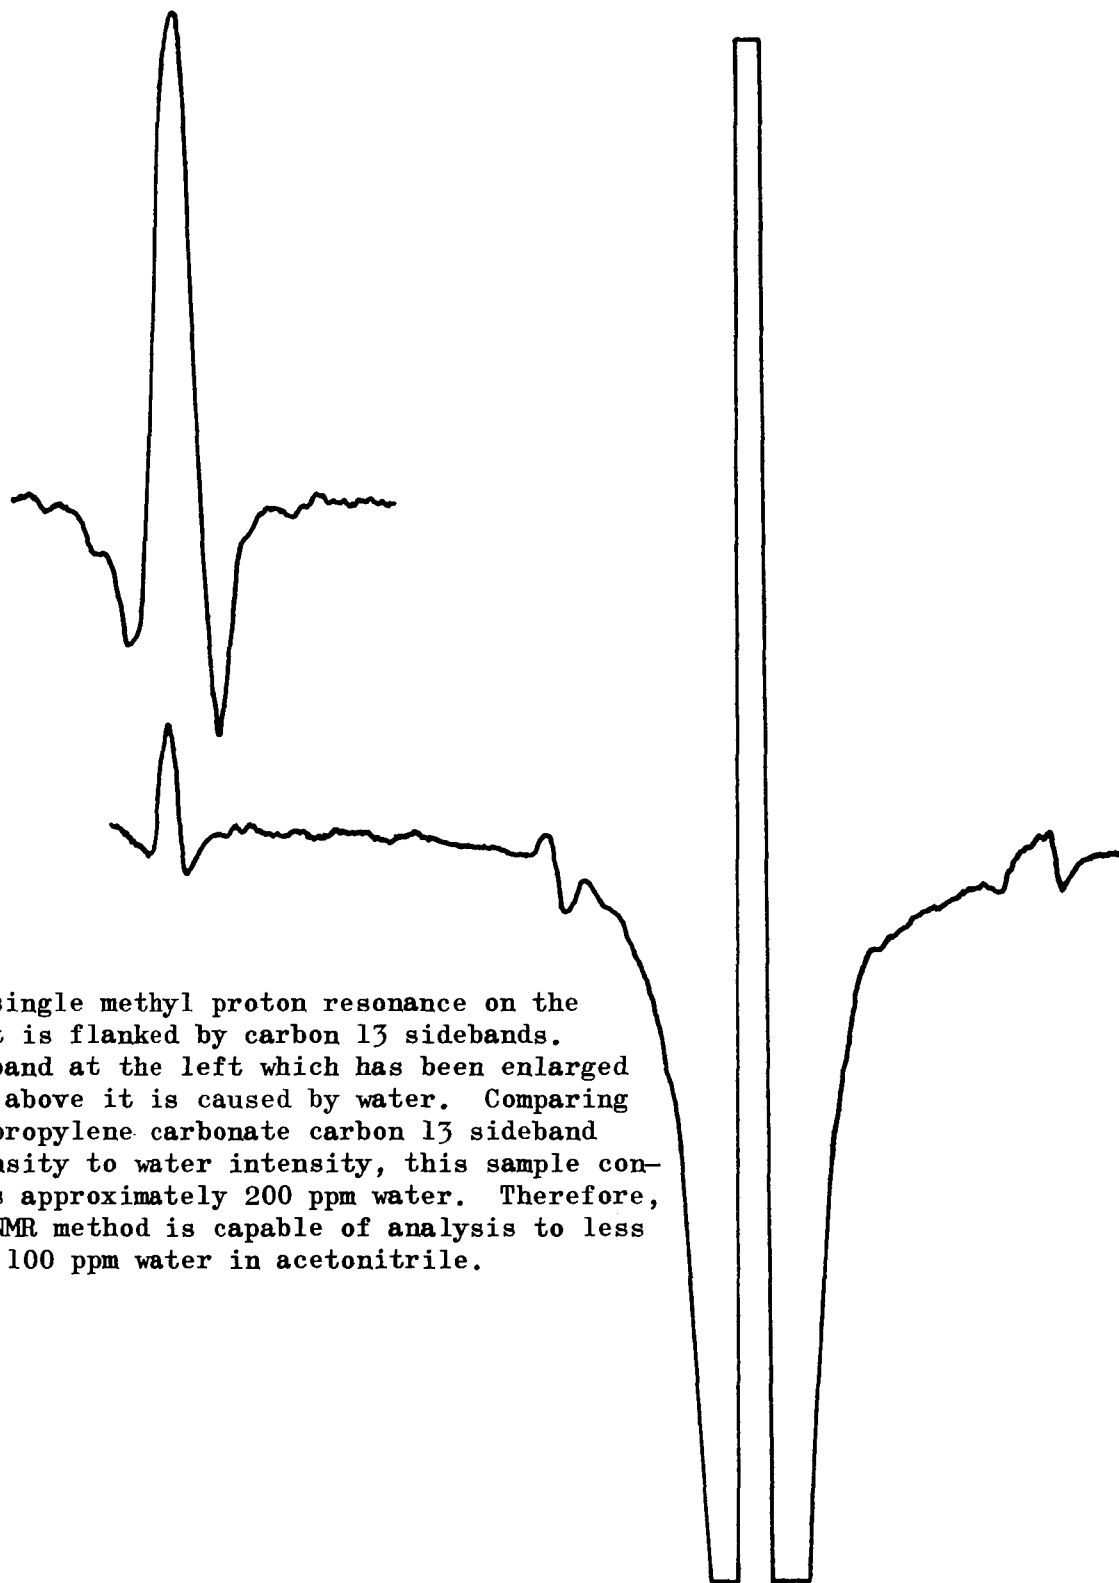

The single methyl proton resonance on the right is flanked by carbon 13 sidebands. The band at the left which has been enlarged just above it is caused by water. Comparing the propylene carbonate carbon 13 sideband intensity to water intensity, this sample contains approximately 200 ppm water. Therefore, the NMR method is capable of analysis to less than 100 ppm water in acetonitrile.

Figure 9. High Gain Spectrum of Acetonitrile



TABLE 2

IMPURITY CONCENTRATIONS IN LiCl #2 DETERMINED BY SPARK  
SOURCE MASS SPECTROMETRY AND EMISSION SPECTROSCOPY

Impurity	Spark Source Mass Spectrometry			Emission Spectroscopy
	Detection Limit, ppm atomic	Content, ppm atomic	Content, ppm per weight	Content, ppm per weight
Be	0.2	0.42	0.2	<0.3
C	1	120	68	
N	1	6.5	4.3	
O	1	3900	2900	
F	1	17	15	
S	5	8	12	
Na	0.3	180	195	<100
Mg	1	5.4	6.2	2.5
Al	0.5	0.8	1.0	<5
Si	1	2.8	3.8	<10
K	0.5	100	185	<300
Ca	1	6.0	11.5	36
Ti	10	Not detected	(<23)	<4
Cr	1	3.2	7.9	<1
Fe	1	3.3	8.7	<2
Ni	1	13	36	<5
Cu	1	4.4	13	0.6
Zn	1	4.0	12	<100
Ge	10	Not detected	(<34)	<5
Se	1	2.1	7.8	
Br	1	2.0	7.5	
Cd	1	5.3	28	<30
Hg	2	2.1	20	<200



TABLE 3

IMPURITY CONCENTRATIONS IN  $AlCl_3$  #3 DETERMINED BY SPARK  
SOURCE MASS SPECTROMETRY AND EMISSION SPECTROSCOPY

Impurity	Spark Source Mass Spectrometry			Emission Spectroscopy	
	Detection Limit	Content, ppm atomic	Content, ppm per weight	Content (Sample 1),	Content (Sample 2),
				ppm per weight	ppm per weight
Li		Not determined		<50	<50
Be	0.2	1.4	0.4	<0.3	<0.3
B	0.3	0.64	0.21	<30	<30
C	1	91	33		
N	1	58	24		
O	1	2700	1300		
Si				28	54
F	1	24	14		
Na	0.3	57	40	<100	<100
Mg	1	130	95	9.2	12
P	1	51	47		
K	0.5	7.6	8.9	<300	<300
Ca	1	4.9	5.9	9.8	22
Ti	1	(540)	(780)	<4	<4
Cr	1	2.2	3.4	<1	<1
Fe	1	56	94	12	<10
Co	1	20	35	<3	<3
Ni	1	4.4	7.8	<3	<3
Cu	1	8.3	16	21	59
Zn	5	5.8	11.3	<100	<100
Nb	1	6.3	18		
Sb	2	52	190	<40	<40
Hg	2	15	90	<200	<200
Pb				30	<20



TABLE 4

IMPURITY CONCENTRATIONS IN LiF #2-1 DETERMINED BY SPARK  
SOURCE MASS SPECTROMETRY AND EMISSION SPECTROSCOPY

Impurity	Spark Source Mass Spectrometry			Emission Spectroscopy
	Detection Limit, ppm atomic	Content, ppm atomic	Content, ppm per weight	Content, ppm per weight
H	3	290	22	
B	1	2.7	2.3	
C	1	750	690	
N	1	40	43	
O	1	7000	8600	
Na	0.3	4800	8500	<100
Al	0.5	5.8	12.1	4.8
Si	1	28	60	96
P	5	10	24	
S	3	220	540	
Cl	1	1600*	4400*	
K	0.3	270	810	<300
Ca	0.7	14	43	44
V	1	2.0	7.9	<5
Cr	1	2.0	8.0	<1
Cu	1	38*	187*	10
Nb	3	7.0	50	
Sb	5	17	160	<40
Mg				2.2
Pb				16
Fe				4.0
Sn				Trace (<3)
Ni				4.4

\*May be caused by cross sparking of a copper chloride sample also in the the mass spectrometer.



TABLE 5

IMPURITY CONCENTRATIONS IN TMA.PF<sub>6</sub> #1  
DETERMINED BY SPARK SOURCE MASS SPECTROMETRY  
AND EMISSION SPECTROSCOPY

Impurity	Spark Source Mass Spectrometry			Emission Spectroscopy
	Detection Limit, ppm atomic	Content, ppm atomic	Content, ppm per weight	Content, ppm per weight
Li	1	27	20	
B	3	5.7	6.8	<30
O	3	290	510	
Na	1	8.3	20.9	<100
S	20	Not detected	<70	
Cl	3	960*	3720*	
K	1	2.3	9.9	<300
Cu	3	2400*	16700*	5.2
Zn	5	27	194	<100
Mg				8
Si				50
Fe				Trace(<30)
Ca				25

\*May be caused by residuals in the mass spectrometer





TABLE 6

IMPURITY CONCENTRATIONS IN  $\text{CuCl}_2$  #2  
 DETERMINED BY SPARK SOURCE MASS SPECTROMETRY  
 AND EMISSION SPECTROSCOPY

Impurity	Spark Source Mass Spectrometry			Emission Spectroscopy	
	Detection Limit, ppm atomic	Content, ppm atomic	Content, ppm per weight	Content, ppm per weight	
H	3	36	0.8	< 200	
Li	0.3	1200*	190*		
C	1	20	5		
N	1	15	5		
O	1	480	170		
F	1	16	7		
Na	0.3	79	41		
Mg	0.7	1.1	0.6		4.1
Al	0.5	2.9	1.7		4.1
Si	5	Not detected	< 3		
Ca				8.0	
P	1	1.7	1.2	6.9	
S	5	27	19		
K	0.3	31	27		
Ca	0.7	2.9	2.6		
Ti	1	3.8	4.1		
V	1	13	15		
Cr	1	7.5	8.7		
Mn	1	3.7	4.5		
Fe	1	100	125		34
Ni	1	46	60		Trace <10

\*May be due to residuals in the mass spectrometer.

TABLE 6  
(Continued)

Impurity	Spark Source Mass Spectrometry			Emission Spectroscopy
	Detection Limit, ppm atomic	Content, ppm atomic	Content, ppm per weight	Content, ppm per weight
Zn	3	6.1	8.9	
Ga	0.7	6.7	10.4	
As	1	9.7	16.2	
Se	2	5.4	9.5	
Br	1	11	20	
Ag	< 5			11
Y	0.7	1.4	2.8	
Ru	2	9.7	22	
Cd	3	50	125	<100
Sn	4	5.2	13.8	
Sb	3	4.4	12.0	
Pb	3	5.2	24.1	26



box to the spark chamber. The trimmed faces changed appearance. The oxygen content represented, therefore, an upper limit for the true oxygen content of the analyzed products which is probably much lower.

Memory effects caused by previously analyzed materials and cross-sparking of other samples in the mass spectrometer evidently interfered in several instances. The analysis of lithium in  $\text{AlCl}_3$  is not presented because a high value for lithium was obtained; this resulted from the preceding sparking of the  $\text{LiCl}$  sample. The analyses for chlorine in  $\text{LiF}$  and  $\text{TMA.PF}_6$ , copper in  $\text{LiF}$  and  $\text{TMA.PF}_6$ , and for lithium in  $\text{CuCl}_2$  and  $\text{TMA.PF}_6$  are also uncertain for the same reason.

Two exposures on the mass spectrometric photographic plate indicated a very high titanium content of the  $\text{AlCl}_3$ , but a corresponding amount of titanium could not be detected on the several other exposures. This phenomenon has not been explained, but a possibility would be a heterogeneity in the sample being sparked. An analysis of an electrolyte containing the  $\text{AlCl}_3$  may be made at a later date using atomic absorption spectroscopy. This will determine whether the overall titanium content is negligible, as assumed.

#### Analysis of Solutes by Emission Spectroscopy

The results obtained by emission spectroscopy are listed in Table 7. The analyses were performed by the Pacific Spectrochemical Laboratory, Inc., Los Angeles, California. The results are considered semiquantitative, with an accuracy of  $\pm 50$  percent and a reproducibility of  $\pm 15$  percent. Empirical corrections were made based on the major anion present, because individual calibrations for most of the matrices were not available. Impurities not listed were below the detection limits which were reported previously for a lithium carbonate matrix (Ref. 1).



TABLE 7  
EMISSION SPECTROSCOPIC ANALYSIS RESULTS FOR SOLUTES  
(Impurity Levels in ppm per Weight)

Solute Impurity	LiClO <sub>4</sub> #2	LiCl #2	LiF #2	LiF #3	TMA·PF <sub>6</sub> #1	Morph·PF <sub>6</sub> #1	AlCl <sub>3</sub> #3	AlCl <sub>3</sub> #3	CuF <sub>2</sub> #2	CuCl <sub>2</sub> #1	CuCl <sub>2</sub> #2
B						16					
Mg	3	3	2	1	8	8	9	12	35	6	4
Al			5	17					170		
Si	10		96	12	50		28	54	Trace ( $<4$ )	7	4
Ca	17	36	44	34	25	49	10	22	86	5	8
Cr									5		7
Mn									23		
Fe	2		4	13	Trace ( $<30$ )		12	Trace ( $<10$ )	1100	11	34
Ni			4						970	Trace ( $<10$ )	Trace ( $<10$ )
Cu	4	1	10	15	5	6	21	59			
Sr						Trace ( $<3$ )					
Ag									6	2	11
Sn	4								400		
Sb						240					
Pb	16		16	20			30		120		26



### Discussion of Solute Analysis Results

After considering the results obtained by spark source mass spectrometry and emission spectroscopy, the following conclusions were reached.

The results obtained by both methods reveal fair agreement. There are some discrepancies beyond typical claims of accuracy (e.g., 20 percent for spark source mass spectrometry, 50 percent for emission spectroscopy); mass spectrometric analysis generally indicated somewhat higher impurity contents. However, some deviations were also found in the results obtained with two samples of the same  $\text{AlCl}_3$  stock (Tables 3 and 7) with the established emission spectroscopic method for which a reproducibility of 15 percent is being claimed.

Although these discrepancies exist, the compounds analyzed contained only few impurities at a level of 100 ppm or higher.

In  $\text{LiCl}$ , impurities such as sodium (195 ppm) and potassium (185 ppm) should not interfere significantly or affect the data to be obtained. The oxygen content indicated is probably caused by contamination of the sample by atmospheric moisture. This chemical will be used for electrolyte solutions after drying under vacuum at elevated temperatures.

In  $\text{AlCl}_3$ , the magnesium, iron, antimony and mercury contents were approximately 100 ppm according to spark source spectrometry, but the emission spectroscopy indicated lower values. The determination of the titanium content is ambiguous. Again, the oxygen content may be caused by handling of the sample.

Of the five chemicals analyzed by both methods, the  $\text{LiF}$  sample revealed the largest amount of impurities. The oxygen content may be high because of sample handling, but the oxygen appears to be present in a form other



than water, because only a low hydrogen content was found. The sodium content as determined by mass spectrometry, was 8500 ppm, but below 100 ppm as determined by emission spectroscopy; an additional flame photometric test of a solution is advisable. Results for copper and chlorine are ambiguous; emission spectroscopy indicated a low copper content, and an analysis for chlorine may be necessary using conventional analytical techniques. Sulfur and carbon contents indicate the presence of possibly sulfate and carbonate. Because lithium fluoride has a low solubility in the solvents and electrolytes under consideration, only small quantities of this material will be used, and therefore only small quantities of impurities will be introduced into the solutions. LiF will be used without further purification. However, in solubility determinations, an analysis based on fluorine contents rather than lithium contents seems advisable.

Tetramethylammonium hexafluorophosphate contains only negligible amounts of impurities. Organic impurities have not been determined specifically.

In  $\text{CuCl}_2$ , many impurities were discovered, but all at low levels. Only iron and cadmium were found at impurity levels of approximately 100 ppm. It is assumed that the high lithium value was caused by the residuals in the mass spectrometer and the oxygen content was caused by handling.

It is recommended that all of the five chemicals tested be used as received from the supplier. Drying under vacuum at elevated temperatures is advisable for LiCl and LiF.



## PHYSICAL PROPERTY DETERMINATIONS

Density Measurements

Density measurements were made both on pure DMF and on LiCl/DMF solutions at 25 C using a standard Weld pycnometer. The dry pycnometer was weighed, transferred to the dry box, and filled with the solution of interest. The pycnometer was then transferred to the constant temperature bath and allowed to equilibrate. The capillary plug was inserted, and the pycnometer was again weighed. The weight of solution was corrected to weight in vacuum. A similar procedure with distilled water allowed the determination of the volume of the pycnometer.

The density measurements are presented in Table 8. The density of 0.9436 gm/cm<sup>3</sup> for pure DMF compares favorably with the value of 0.9439 found by Prue and Sherrington (Ref. 4) and of 0.9442 gm/cm<sup>3</sup> found by Leader and Gormley (Ref. 5). Graphic interpolation furnished the density values used for the viscosity measurements presented in the following paragraph.

TABLE 8

## DENSITIES OF SOLUTION OF LiCl in DMF at 25 C

<u>Concentration, molarity</u>	<u>Density, gm/ml</u>
0	0.9436
0.3066	0.9569
1.0221	0.9840
2.24 (Saturated Solution)	1.0235



### Viscosity Measurements

Viscosities of DMF and of LiCl/DMF solutions were measured using a Cannon-Fenske Routine Viscometer (size 25). The viscometer was thoroughly cleaned with cleaning solution, washed with conductivity water and acetone, and dried in a stream of dry air. The viscometer was transferred to the dry box and 5 cc of solution was added with a pipette. The viscometer was then placed in the constant temperature bath, allowed to equilibrate, and measurements were taken using an electrical timer. A similar procedure with distilled water allowed the viscosity to be calculated from the equation:

$$\frac{\eta}{\eta_0} = \frac{dT}{d_0 T_0}$$

where

- $\eta$  = viscosity of the solution
- $d$  = measured density of the solution
- $T$  = time of efflux of solution
- $\eta_0$  = known viscosity of distilled water
- $d_0$  = known density of distilled water
- $T_0$  = time of efflux of distilled water

The similarity of efflux times renders the kinetic energy correction negligible except perhaps for the 1.022 M solution.





The viscosities determined by the preceding procedure at 25 C are shown in Table 9. The value  $7.93 \times 10^{-3}$  poise for pure DMF is in good agreement with the value of  $7.96 \times 10^{-3}$  poise obtained by Prue and Sherrington (Ref. 4) and by Ames and Sears (Ref. 6).

TABLE 9

## VISCOSITIES OF SOLUTIONS OF LiCl in DMF at 25 C

LiCl-Concentration, mole/liter	Density, gm/ml	Efflux Time, seconds	Viscosity, millipoises
Distilled H <sub>2</sub> O	0.997	434.7	8.95
0.000	0.944	407.0	7.93
$8.177 \times 10^{-3}$	0.944	409.9	7.99
$4.088 \times 10^{-2}$	0.945	420.4	8.20
$2.044 \times 10^{-1}$	0.952	473.5	9.31
$3.066 \times 10^{-1}$	0.957	509.4	10.07
1.022	0.984	893.2	18.15

Solubility Measurements

The solubility of LiCl in DMF was determined at 25 and 60 C respectively. The results are presented in Table 10. Saturated solutions were prepared in volumetric flasks by adding an excess of LiCl, heating to 80 C for approximately 2 hours, and allowing the flask to equilibrate in the constant temperature baths overnight.



TABLE 10

## SOLUBILITIES OF LiCl in DMF at 25 C

Temperature, C	Solubility, molar	Solubility (Average), molar
60	3.75	3.76
	3.76	
25	2.45	2.42
	2.40	
	2.40	

The solubility of LiCl at 60 C was measured by drawing approximately 5 cc of saturated solution into a weighed glass syringe. The syringe was again weighed and the contents were washed into a 100-milliliter volumetric flask with conductivity water. The flask was filled to the 100-milliliter level and a 10-milliliter sample was titrated with 0.1984 M  $\text{AgNO}_3$  using dichlorofluorescein as the indicator. Duplicate determinations were made.

Three determinations of the solubility of LiCl at 25 C were made. The first determination was made using the same procedure as for the 60 C measurements, while the following two determinations involved taking 5 cc samples, diluting to 100 cc with conductivity water, and titrating as done previously.

The molar solubility of  $\text{AlCl}_3$  in DMF was measured at 25 and 60 C by taking 5 cc samples of the saturated solutions, diluting with conductivity water, and titrating with standard  $\text{AgNO}_3$  solution. The results are presented in Table 11.



TABLE 11

SOLUBILITY OF  $\text{AlCl}_3$  in DMF at 25 C

Temperature, C	Solubility, molar
60	0.273
25	0.0773

### Conductance Measurements

Conductivity values of solutions were determined in Freas cells as described previously (Ref. 1). Conductance values obtained with  $\text{LiCl}/\text{DMF}$  solutions are presented in Table 12. The relationship between the equivalent conductance and the square root of the concentration is presented in Fig. 10 for the temperatures of 25 and 60 C. The results are also shown on an expanded scale in Fig. 11.

No irregularities were observed, except at the elevated temperature of 60 C. There, the conductance value of the pure solvent and of the solution at the lowest solute concentration were somewhat unstable. This introduced an uncertainty in the conductance data and particularly in the solvent correction.

Equivalent conductance values at infinite dilution of  $\Lambda_o = 84.0 \text{ ohm}^{-1} \text{ equ}^{-1} \text{ cm}^2$  at 25 C and of  $\Lambda_o = 118 \text{ ohm}^{-1} \text{ equ}^{-1} \text{ cm}^2$  at 60 C were obtained. The 25 C value compares with  $\Lambda_o = 81.4 \text{ ohm}^{-1} \text{ equ}^{-1} \text{ cm}^2$  found previously at Rocketdyne (Ref. 1) in an electrolyte containing lower quality solvent and solute and a literature value of  $80.2 \text{ ohm}^{-1} \text{ equ}^{-1} \text{ cm}^2$  (Ref. 4).



TABLE 12  
 SPECIFIC CONDUCTANCE ( $\lambda$ ) AND EQUIVALENT CONDUCTANCE ( $\Lambda$ )  
 OF LiCl/DMF AT 25 AND 60 C

Concentration (C), molar	$\sqrt{C}$ , molar <sup>1/2</sup>	$\lambda$ (25 C), ohm <sup>-1</sup> cm <sup>-1</sup>	$\Lambda^*$ (25 C), ohm <sup>-1</sup> equ <sup>-1</sup> cm <sup>2</sup>	$\lambda$ (60 C), ohm <sup>-1</sup> cm <sup>-1</sup>	$\Lambda^*$ (60 C), ohm <sup>-1</sup> equ <sup>-1</sup> cm <sup>2</sup>
1.022	1.011	$8.50 \times 10^{-3}$	8.32	$1.115 \times 10^2$	10.91
0.204	0.452	$4.78 \times 10^{-3}$	23.36	$5.87 \times 10^{-3}$	28.71
0.0409	0.202	$1.69 \times 10^{-3}$	41.34	$2.13 \times 10^{-3}$	52.15
0.00818	0.0904	$4.89 \times 10^{-4}$	59.70	$6.47 \times 10^{-4}$	78.86
0.001635	0.0404	$1.21 \times 10^{-4}$	73.21	$1.66 \times 10^{-4}$	100.3
0.000327	0.0181	$2.73 \times 10^{-5}$	80.61	$3.83 \times 10^{-5}$	111.1
0.0000654	0.00809	$6.38 \times 10^{-6}$	82.72	$8.32 \times 10^{-6}$	97.1
0		$9.7 \times 10^{-7}$		$2.0 \times 10^{-6}$	
			Extrapolated: $\Lambda_0 = 84.0$		Extrapolated: $\Lambda_0 = 118$

$\Lambda^*$ : Equivalent conductance, corrected for conductance of pure solvent

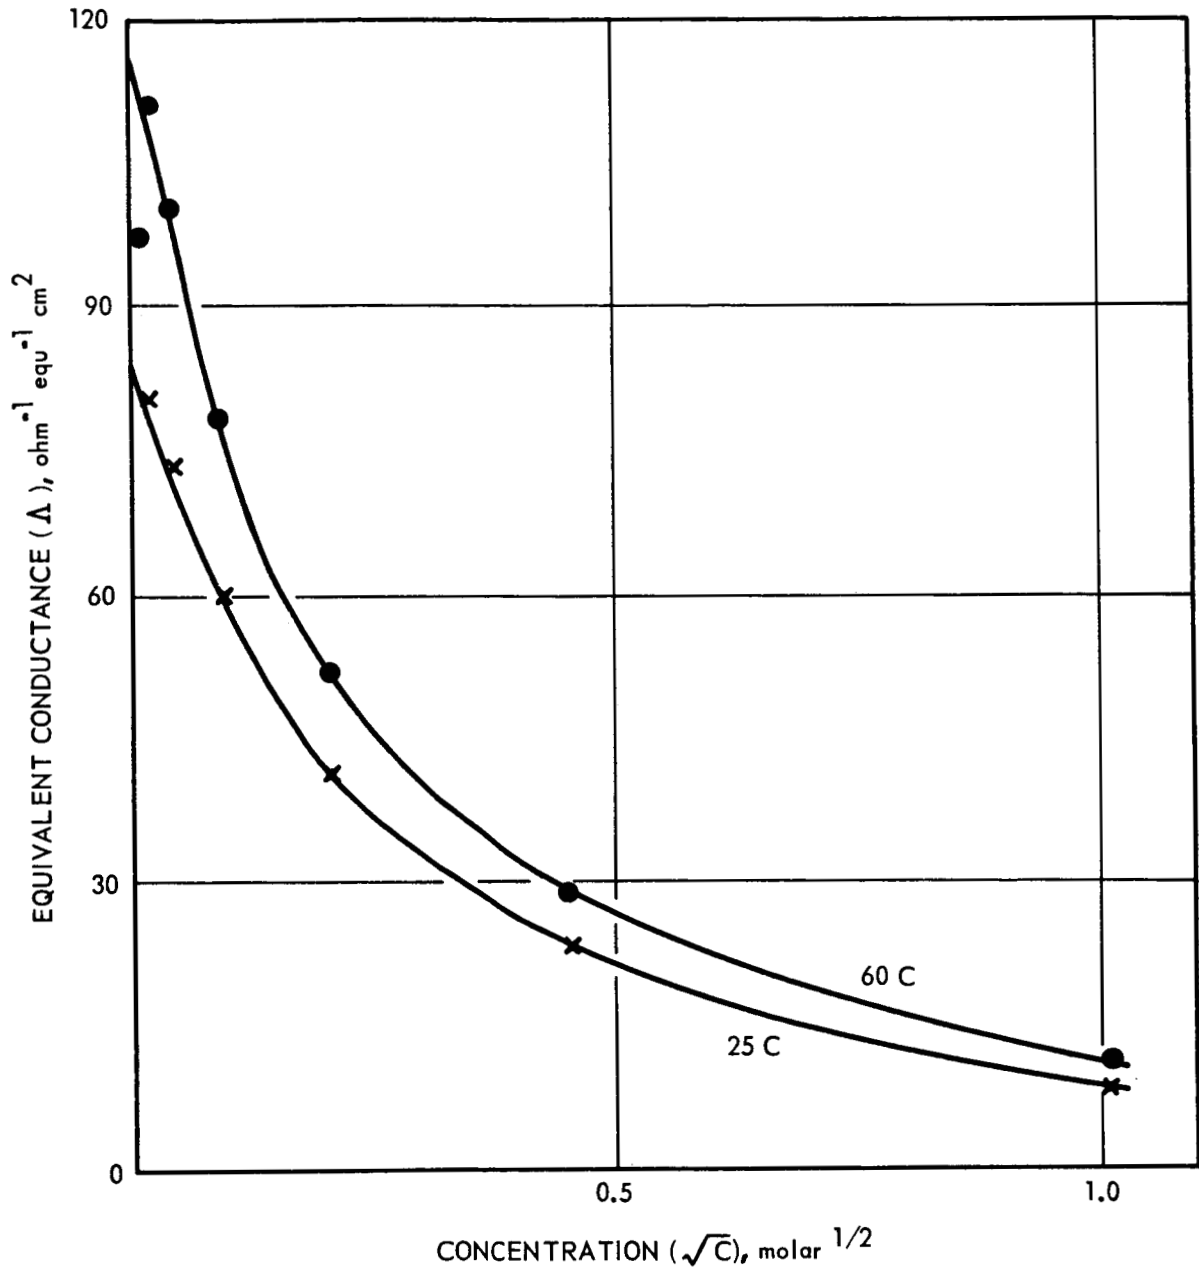


Figure 10. Equivalent Conductance of LiCl in DMF at 25 and 60 C

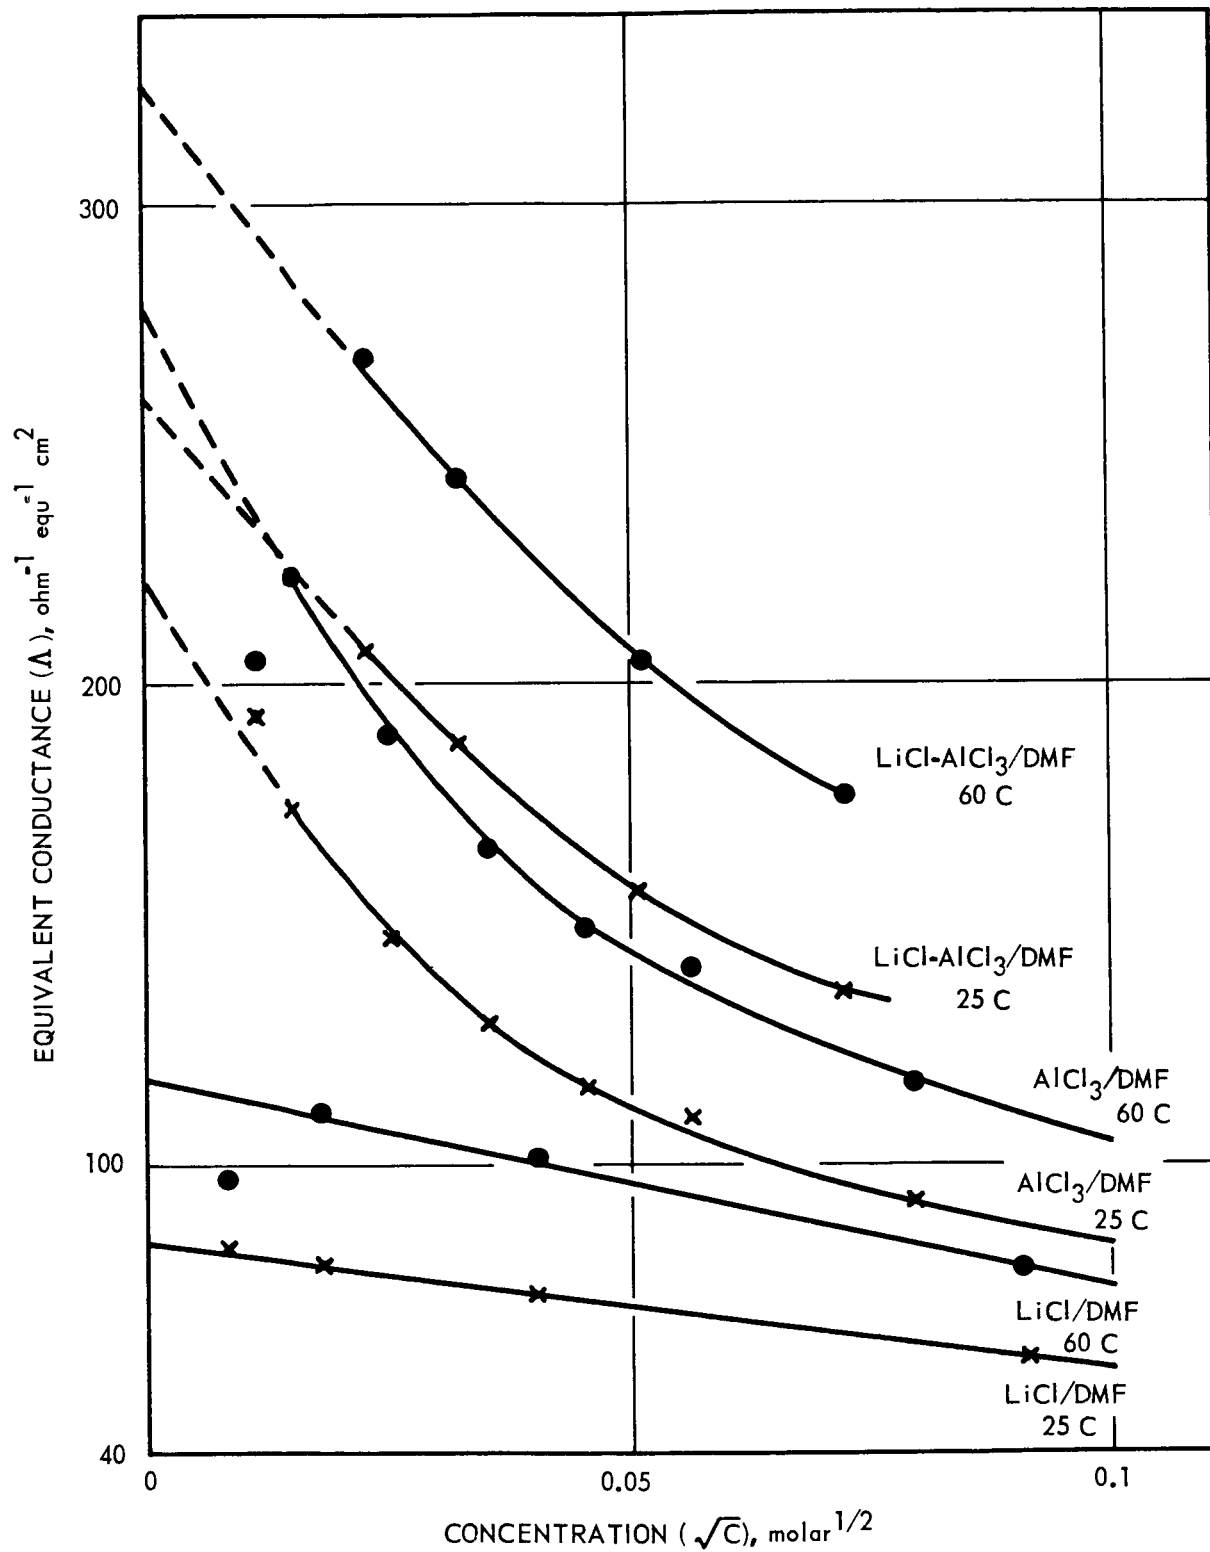


Figure 11. Equivalent Conductance of LiCl/DMF, AlCl<sub>3</sub>/DMF, and LiCl-AlCl<sub>3</sub>/DMF at 25 and 60 C



Conductance values obtained with  $\text{AlCl}_3/\text{DMF}$  solutions are presented in Table 13. Because of the limited solubility of  $\text{AlCl}_3$  in DMF, no measurements could be taken at higher concentrations. The graphic extrapolation to zero concentration is shown in Fig. 11; it yielded values of  $\Lambda_0 = 220 \text{ ohm}^{-1} \text{ equ}^{-1} \text{ cm}^2$  at 25 C and  $\Lambda_0 = 280^{-1} \text{ equ}^{-1} \text{ cm}^2$  at 60 C. This extrapolation is somewhat uncertain because a straight line was not obtained.

Results obtained with equimolar solutions of  $\text{LiCl}$  and  $\text{AlCl}_3$  in DMF are presented in Table 14 and are also represented in Fig. 11. Concentration values refer to each component, i.e., a 0.05 molar  $\text{LiCl-AlCl}_3$  solution contains 0.05 mole of  $\text{LiCl}$  and 0.05 mole of  $\text{AlCl}_3$  per liter. Extrapolation resulted in  $\Lambda_0 = 260 \text{ ohm}^{-1} \text{ equ}^{-1} \text{ cm}^2$  for 25 C and  $\Lambda_0 = 325 \text{ ohm}^{-1} \text{ equ}^{-1} \text{ cm}^2$  for 60 C.

A comprehensive analysis of the data has not yet been conducted but the following has been determined:

1. The equivalent conductance of  $\text{LiCl}$  at infinite dilution is smaller in DMF than in water.
2. Incomplete dissociation is indicated by negative deviations from the limiting law according to Onsager.
3. The extrapolation in the case of  $\text{AlCl}_3$  containing electrolytes is uncertain, because the relationship is not linear and data points have greater relative experimental errors at lower concentrations.
4.  $\text{AlCl}_3/\text{DMF}$  electrolytes contain a greater number of conductive species than  $\text{LiCl}/\text{DMF}$ .  $\text{AlCl}_3$  possibly dissociates largely into  $\text{Al}^{+++}$  and  $3\text{Cl}^-$  at infinite dilution.
5. The sum of the  $\Lambda_0$  values for  $\text{LiCl}/\text{DMF}$  and  $\text{AlCl}_3/\text{DMF}$  electrolytes does not equal the  $\Lambda_0$  value found for the  $\text{LiCl-AlCl}_3/\text{DMF}$  mixed electrolyte.



TABLE 13  
 SPECIFIC CONDUCTANCE ( $\lambda$ ) AND EQUIVALENT CONDUCTANCE ( $\Lambda$ )  
 OF  $\text{AlCl}_3/\text{DMF}$  AT 25 AND 60 C

Concentration (C), molar	$\sqrt{C}$ , molar <sup>1/2</sup>	$\lambda$ (25 C), ohm <sup>-1</sup> cm <sup>-1</sup>	$\Lambda^*$ (25 C), ohm <sup>-1</sup> equ <sup>-1</sup> cm <sup>2</sup>	$\lambda$ (60 C), ohm <sup>-1</sup> cm <sup>-1</sup>	$\Lambda^*$ (60 C), ohm <sup>-1</sup> equ <sup>-1</sup> cm <sup>2</sup>
0.0638	0.259	$3.18 \times 10^{-3}$	49.8	$4.24 \times 10^{-3}$	66.4
0.00638	0.0798	$5.83 \times 10^{-4}$	91.4	$7.52 \times 10^{-4}$	117.9
0.00319	0.0565	$3.51 \times 10^{-4}$	110.1	$4.51 \times 10^{-4}$	141.4
0.002125	0.0461	$2.47 \times 10^{-4}$	116.2	$3.18 \times 10^{-4}$	149.4
0.001275	0.0357	$1.65 \times 10^{-4}$	129.3	$2.13 \times 10^{-4}$	166.6
0.000638	0.0253	$9.44 \times 10^{-5}$	147.5	$1.21 \times 10^{-4}$	189.2
0.000255	0.0150	$4.50 \times 10^{-5}$	174.9	$5.74 \times 10^{-5}$	222.7
0.0001275	0.0113	$2.51 \times 10^{-5}$	193.7	$3.18 \times 10^{-6}$	204.7
0	0	$3.5 \times 10^{-7}$	Extrapolated: $\Lambda_0 = 220$	$5.66 \times 10^{-7}$	Extrapolated: $\Lambda_0 = 280$





TABLE 14  
 SPECIFIC CONDUCTANCE ( $\lambda$ ) AND EQUIVALENT CONDUCTANCE ( $\Lambda$ )  
 OF  $\text{LiCl-AlCl}_3/\text{DMF}$  AT 25 AND 60 C

Concentration (C), molar	$\sqrt{C}$ molar <sup>1/2</sup>	$\lambda$ (25 C), $\text{ohm}^{-1} \text{cm}^{-1}$	$\Lambda^*$ (25 C), $\text{ohm}^{-1} \text{equ}^{-1} \text{cm}^2$	$\lambda$ (60 C), $\text{ohm}^{-1} \text{cm}^{-1}$	$\Lambda^*$ (60 C), $\text{ohm}^{-1} \text{equ}^{-1} \text{cm}^2$
0.0528	0.230	$3.79 \times 10^{-3}$	71.84	$4.95 \times 10^{-3}$	93.7
0.00527	0.0726	$7.19 \times 10^{-4}$	136.2	$9.34 \times 10^{-4}$	176.6
0.00264	0.0514	$4.15 \times 10^{-4}$	157.2	$5.42 \times 10^{-4}$	204.9
0.001055	0.0325	$1.985 \times 10^{-4}$	187.4	$2.60 \times 10^{-4}$	243.9
0.00528	0.0230	$1.096 \times 10^{-4}$	206.3	$1.436 \times 10^{-4}$	268.1
0		$8.3 \times 10^{-7}$	Extrapolated: $\Lambda_0 = 260$	$2.2 \times 10^{-6}$	Extrapolated $\Lambda_0 = 325$



Measurement of Transference Numbers by the  
Hittorf Method

A Hittorf cell was fabricated for measurements of transference numbers. The cell design of Wall, Stent, and Ondrejcin (Ref. 7) was modified to allow easy immersion of part of the cell into the constant temperature bath. The high electrolyte resistances may cause excessive cell heating and require that the cell be cooled. The cell is presently being tested with an aqueous electrolyte.



## WORK PLANNED FOR NEXT QUARTER

### PREPARATION OF ELECTROLYTES

The distillation of solvents will continue. A complete vapor phase chromatographic characterization of acetonitrile will be made.

The purity of the distilled products will be checked on a routine basis by a chromatogram with a Porapak Q column for propylene carbonate and dimethyl formamide and by Karl Fischer titration for acetonitrile.

Analysis of solutes will be continued.

### PHYSICAL PROPERTY DETERMINATIONS

Determinations of physical properties will continue using solute-solvent combinations which have been sufficiently characterized and purified. Nuclear magnetic resonance studies will be made using  $\text{LiCl}$  and  $\text{AlCl}_3$  as solutes, and dimethyl formamide and propylene carbonate as solvents.



REFERENCES

1. NASA CR-72106, Properties of Nonaqueous Electrolytes, First Quarterly Report, R. Keller, J. N. Foster, and J. M. Sullivan, Rocketdyne, a Division of North American Aviation, Inc., Canoga Park, California, October 1966.
2. Mitchell, J., and O. Smith, "Aquametry," Interscience, New York (1948).
3. AFRPL-TR-66-317, Methods for Elimination of Corrosion Products of Nitrogen Tetroxide, Second Quarterly Progress Report, Rocketdyne, a Division of North American Aviation, Inc., Canoga Park, California, November 1966.
4. Prue, J. E. and P. J. Sherrington, Trans. Faraday Soc. 57, 1795 (1961).
5. Leader G. K. and J. F. Gormley, J. Amer. Chem. Soc. 73, 5731 (1951).
6. Ames, D. P. and P. G. Sears, J. Phys. Chem., 59 16 (1955).
7. Wall, F. T., G. S. Stent, and J. J. Ondrejcin, J. Phys. & Colloid. Chem. 54, 979 (1950); see also Weissberger, A., Physical Methods of Organic Chemistry, Part IV, 3rd Ed. (1960), p. 3066.



REPORT DISTRIBUTION LIST FOR  
CONTRACT NO. NAS3-8521

National Aeronautics & Space Administration Scientific & Technical Information Facility Post Office Box 33 College Park, Maryland 20740 Attention: NASA Representative	(3)
National Aeronautics & Space Administration Washington, D. C. 20546 Attention: E. M. Cohn (RNW)	(1)
National Aeronautics & Space Administration Washington, D. C. 20546 Attention: A. M. Greg Andrus (FC)	(1)
National Aeronautics & Space Administration Goddard Space Flight Center Greenbelt, Maryland 20771 Attention: Thomas Hennigan (Code 716.2)	(1)
National Aeronautics & Space Administration Goddard Space Flight Center Greenbelt, Maryland 20771 Attention: E. R. Stroup (Code 636.2)	(1)
National Aeronautics & Space Administration Goddard Space Flight Center Greenbelt, Maryland 20771 Attention: Joseph Sherfey (Code 735)	(1)
National Aeronautics & Space Administration Langley Research Center Langley Station Hampton, Virginia 23365 Attention: John L. Patterson (MS-234) Instrument Research Division	(1)



National Aeronautics & Space Administration (1)  
Langley Research Center  
Langley Station  
Hampton, Virginia 23365  
Attention: M. B. Seyffert (MS-112)  
Instrument Research Division

National Aeronautics & Space Administration (1)  
Langley Research Center  
Langley Station  
Hampton, Virginia 23365  
Attention: S. T. Peterson/Harry Ricker

National Aeronautics & Space Administration (1)  
Lewis Research Center  
21000 Brookpark Road  
Cleveland, Ohio 44135  
Attention: Dr. B. Lubarsky (MS 500-201)

National Aeronautics & Space Administration (1)  
Lewis Research Center  
21000 Brookpark Road  
Cleveland, Ohio 44135  
Attention: N. D. Sanders (MS 302-1)

National Aeronautics & Space Administration (1)  
Lewis Research Center  
21000 Brookpark Road  
Cleveland, Ohio 44135  
Attention: H. J. Schwartz (MS 500-202)

National Aeronautics & Space Administration (1)  
Lewis Research Center  
21000 Brookpark Road  
Cleveland, Ohio 44135  
Attention: Dr. J. S. Fordyce (MS 302-1)

National Aeronautics & Space Administration (1)  
Lewis Research Center  
21000 Brookpark Road  
Cleveland, Ohio 44135  
Attention: J. E. Dilley (MS 500-309)

National Aeronautics & Space Administration (1)  
Lewis Research Center  
21000 Brookpark Road  
Cleveland, Ohio 44135  
Attention: M. J. Saari (MS 500-202)



National Aeronautics & Space Administration (1)  
Lewis Research Center  
21000 Brookpark Road  
Cleveland, Ohio 44135  
Attention: J. J. Weber (MS 3-19)

National Aeronautics & Space Administration (2)  
Lewis Research Center  
21000 Brookpark Road  
Cleveland, Ohio 44135  
Attention: Robert B. King (MS 500-202)

National Aeronautics & Space Administration (1)  
Lewis Research Center  
21000 Brookpark Road  
Cleveland, Ohio 44135  
Attention: Library (MS 60-3)

National Aeronautics & Space Administration (1)  
Lewis Research Center  
21000 Brookpark Road  
Cleveland, Ohio 44135  
Attention: Report Control (MS 5-5)

National Aeronautics & Space Administration (1)  
George C. Marshal Space Flight Center  
Huntsville, Alabama 35812  
Attention: Philip Youngblood

National Aeronautics & Space Administration (1)  
George C. Marshal Space Flight Center  
Huntsville, Alabama 35812  
Attention: Richard Boehme (Bldg. 4487-BB)

National Aeronautics & Space Administration (1)  
Manned Spacecraft Center  
Houston, Texas 77058  
Attention: William R. Dusenbury  
Propulsion & Energy Systems Branch  
(Bldg. 16, Site 1)

National Aeronautics & Space Administration (1)  
Manned Spacecraft Center  
Houston, Texas 77058  
Attention: Robert Cohen  
Gemini Project Office



National Aeronautics & Space Administration (1)  
Manned Spacecraft Center  
Houston, Texas 77058  
Attention: Richard Ferguson (EP-5)

National Aeronautics & Space Administration  
Manned Spacecraft Center  
Houston, Texas 77058  
Attention: Forrest E. Eastman (EE-4)

National Aeronautics & Space Administration (1)  
Ames Research Center  
Moffett Field, California 94035  
Attention: James R. Swain/A. S. Hertzog  
Pioneer Project

National Aeronautics & Space Administration (1)  
Ames Research Center  
Moffett Field, California 94035  
Attention: Jon Rubenzer  
Biosatellite Project

Jet Propulsion Laboratory (1)  
4800 Oak Grove Drive  
Pasadena, California 91103  
Attention: Aiji Uchiyama

Department of the Army

U. S. Army Engineer R & D Labs. (1)  
Fort Belvoir, Virginia 22060  
Attention: Electrical Power Branch (SMOFB-EP)

Commanding Officer (1)  
U. S. Army Electronics R & D Labs.  
Fort Monmouth, New Jersey 07703  
Attention: Power Sources Division (SELRA/PS)

Research Office (1)  
Rand D. Directorate  
Army Weapons Command  
Rock Island, Illinois 61201  
Attention: Mr. G. Riensmith, Chief





U. S. Army Research Office (1)  
Box CM, Duke Station  
Durham, North Carolina 27706  
Attention: Dr. Wilhelm Jorgensen

U. S. Army Research Office (1)  
Chief, Rand D  
Department of the Army  
3D442, The Pentagon  
Washington, D. C. 20546

Harry Diamond Laboratories (1)  
Room 300, Building 92  
Connecticut Avenue & Van Ness Street, N. W.  
Washington, D. C. 20008  
Attention: Nathan Kaplan

Army Materiel Command (1)  
Research Division  
AMCRD-RSCM-T-7  
Washington, D. C. 20315  
Attention: John W. Crellin

Army Materiel Command (1)  
Development Division  
AMCRD-DE-MO-P  
Washington, D. C. 20315  
Attention: Marshall D. Aiken

U. S. Army TRECOM (1)  
Fort Eustis, Virginia 23604  
Attention: Dr. R. L. Echols (SMOFE-PSG)

U. S. Army TRECOM (1)  
Fort Eustis, Virginia 23604  
Attention: Leonard M. Bartone (SMOFE-ASE)

U. S. Army Mobility Command (1)  
Research Division  
Warren, Michigan 48090  
Attention: O. Renius (AMSMO-RR)



Natick Laboratories (1)  
Clothing and Organic Materials Division  
Natick, Massachusetts 01760  
Attention: Norman Fertman

Department of the Navy

Office of Naval Research (1)  
Washington, D. C. 20360  
Attention: Head, Power Branch, (Code 429)

Office of Naval Research (1)  
Department of the Navy  
Washington, D. C. 20360  
Attention: H. W. Fox (Code 425)

Naval Research Laboratory (1)  
Washington, D. C. 20390  
Attention: Dr. J. C. White (Code 6160)

U. S. Navy Marine Engineering Laboratory (1)  
Annapolis, Maryland 21402  
Attention: J. H. Harrison

Bureau of Naval Weapons (1)  
Department of the Navy  
Washington, D. C. 20360  
Attention: Whitewall T. Beatson (Code RAAE-52)

Bureau of Naval Weapons (1)  
Department of the Navy  
Washington, D. C. 20360  
Attention: Milton Knight (Code RRRE-62)

Naval Ammunition Depot (1)  
Crane, Indiana 47522  
Attention: E. Bruess/H. Shultz

Naval Ordnance Laboratory (1)  
Department of the Navy  
Corona, California 91720  
Attention: William C. Spindler (Code 441)

Naval Ordnance Laboratory (1)  
Department of the Navy  
Silver Spring, Maryland 20900  
Attention: Philip B. Cole (Code WB)



Bureau of Ships (1)  
Department of the Navy  
Washington, D. C. 20360  
Attention: C. F. Viglotti (Code 660)

Bureau of Ships (1)  
Department of the Navy  
Washington, D. C. 20360  
Attention: Bernard B. Rosenbaum (Code 340)

Department of the Air Force

Space Systems Division (1)  
Los Angeles Air Force Station  
Los Angeles, California 90045  
Attention: SSSD

Flight Vehicle Power Branch (1)  
Aero Propulsion Laboratory  
Wright-Patterson Air Force Base, Ohio 45433  
Attention: James E. Cooper

Air Force Cambridge Research Lab. (1)  
L. G. Hanscom Field  
Bedford, Massachusetts 01731  
Attention: Commander (CRO)

Headquarters, U. S. Air Force (AFRDR-AS) (1)  
Washington 25, D. C.  
Attention: Major G. Starkey

Headquarters, U. S. Air Force (AFRDR-AS) (1)  
Washington 25, D. C.  
Attention: Lt. Col. William G. Alexander

Rome Air Development Center, ESD (1)  
Griffis Air Force Base, New York 13442  
Attention: Frank J. Mollura (RASSM)

Other Government Agencies

National Bureau of Standards (1)  
Washington, D. C. 20234  
Attention: Dr. W. J. Hamer



Office, DDR&E, USE & BSS (1)  
The Pentagon  
Washington, D. C. 20310  
Attention: G. B. Wareham

Mr. Donald B. Hoatson (1)  
Army Reactors, DRD  
U. S. Atomic Energy Commission  
Washington, D. C. 20545

Institute for Defense Analyses (1)  
R & E Support Division  
400 Army-Navy Drive  
Arlington, Virginia 22202  
Attention: Mr. R. Hamilton

Institute for Defense Analyses (1)  
R & E Support Division  
400 Army-Navy Drive  
Arlington, Virginia 22202  
Attention: Dr. George C. Szego

U. S. Atomic Energy Commission (1)  
Auxiliary Power Branch (SNAP)  
Division of Reactor Development  
Washington 25, D. C.  
Attention: Lt. Col. George H. Ogburn, Jr.

Lt. Col. John H. Anderson (1)  
Advanced Space Reactor Branch  
Division of Reactor Development  
U. S. Atomic Energy Commission  
Washington 25, D. C.

Clearing House (1)  
5285 Park Royal Road  
Springfield, Virginia 22151

Industry

Aerojet-General Corporation (1)  
Von Karman Center  
Bldg. 312, Dept. 3111  
Azusa, California  
Attention: Mr. Russ Fogle



Aeronutronic Division (1)  
Philco Corporation  
Ford Road  
Newport Beach, California 92660

Aerospace Corporation (1)  
Post Office Box 95085  
Los Angeles, California 90045  
Attention: Library

Aerospace Corporation (1)  
Systems Design Division  
2350 East El Segundo Boulevard  
El Segundo, California  
Attention: John G. Krisilas

Allis-Chalmers Manufacturing Co. (1)  
1100 South 70th Street  
Milwaukee, Wisconsin 53201  
Attention: Dr. P. Joyner

American University (1)  
Mass. & Nebraska Avenues, N. W.  
Washington, D. C. 20016  
Attention: Dr. R. T. Foley,  
Chemistry Department

Arthur D. Little, Inc. (1)  
Acorn Park  
Cambridge, Massachusetts 02140  
Attention: Dr. Ellery W. Stone

Atomics International Division (1)  
North American Aviation, Inc.  
8900 De Soto Avenue  
Canoga Park, California 91304  
Attention: Dr. H. L. Recht

Battelle Memorial Institute (1)  
505 King Avenue  
Columbus, Ohio 43201  
Attention: Dr. C. L. Faust



Bell Telephone Laboratories, Inc. (1)  
Murray Hill, New Jersey 07971  
Attention: U. B. Thomas

The Boeing Company (1)  
P. O. Box 3707  
Seattle, Washington 98124

Borden Chemical Company (1)  
Central Research Laboratory  
P. O. Box 9524  
Philadelphia, Pennsylvania 19124

Burgess Battery Company (1)  
Foot of Exchange Street  
Freeport, Illinois 61032  
Attention: Dr. Howard J. Strauss

C & D Batteries (1)  
Division of Electric Autolite Col.  
Conshohocken, Pennsylvania 19428  
Attention: Dr. Eugene Willihnganz

Calvin College (1)  
Grand Rapids, Michigan 49506  
Attention: Prof. T. P. Dirkse

Catalyst Research Corporation (1)  
6101 Falls Road  
Baltimore, Maryland 21209  
Attention: J. P. Wooley

Chem-Cell Inc. (1)  
150 Dey Road  
Wayne, New Jersey 07470  
Attention: Peter D. Richman

Delco Remy Division (1)  
General Motors Corporation  
2401 Columbus Avenue  
Anderson, Indiana 46011  
Attention: Dr. J. J. Lander

Douglas Aircraft Company, Inc. (1)  
Astropower Laboratory  
2121 Campus Drive  
Newport Beach, California 92663  
Attention: Dr. Carl Berger



Dynatech Corporation (1)  
17 Tudor Street  
Cambridge, Massachusetts 02138  
Attention: R. L. Wentworth

Eagle-Picher Company (1)  
Post Office Box 47  
Joplin, Missouri 64802  
Attention: E. M. Morse

Elgin National Watch Company (1)  
107 National Street  
Elgin, Illinois 60120  
Attention: T. Boswell

Electric Storage Battery Company (1)  
Missile Battery Division  
2510 Louisburg Road  
Raleigh, North Carolina 27604  
Attention: A. Chreitzberg

Electric Storage Battery Company (1)  
Carl F. Norberg Research Center  
19 West College Avenue  
Yardley, Pennsylvania 19068  
Attention: Dr. R. A. Schaefer

Electrochimica Corporation (1)  
1140 O'Brien Drive  
Menlo Park, California 94025  
Attention: Dr. Morris Eisenberg

Electro-Optical Systems, Inc. (1)  
300 North Halstead  
Pasadena, California 91107  
Attention: M. Klein

Emhart Manufacturing Company (1)  
Box 1620  
Hartford, Connecticut 06101  
Attention: Dr. W. P. Cadogan

Engelhard Industries, Inc. (1)  
497 DeLancy Street  
Newark, New Jersey 07105  
Attention: Dr. J. G. Cohn



Dr. Arthur Fleischer (1)  
466 South Center Street  
Orange, New Jersey 07050

General Electric Company (1)  
Research & Development Center  
Schenectady, New York 12301  
Attention: Dr. R. C. Osthoff  
(Bldg. 37, Room 2083)

General Electric Company (1)  
Missile & Space Division  
Spacecraft Department  
P. O. Box 8555  
Philadelphia, Pennsylvania 19101  
Attention: E. W. Kipp, Room T-2513

General Electric Company (1)  
Battery Products Section  
P. O. Box 114  
Gainesville, Florida 32601

General Electric Company (1)  
Research & Development Center  
Schenectady, New York 12301  
Attention: Dr. H. Liebhafsky

General Motors Corporation (1)  
Defense Research Laboratories  
6767 Hollister Street  
Santa Barbara, California 93105  
Attn: Dr. J. S. Smatko/Dr. C. R. Russell

General Telephone & Electronics Labs. (1)  
Bayside, New York  
Attention: Dr. Paul Goldberg

Globe-Union, Inc. (1)  
900 East Keefe Avenue  
Milwaukee, Wisconsin 53201  
Attention: Dr. Warren Towle

Globe-Union, Inc. (1)  
900 East Keefe Avenue  
Milwaukee, Wisconsin 53201  
Attention: Dr. C. K. Morehouse





Gould-National Batteries, Inc. (1)  
Engineering & Research Center  
2630 University Avenue, S. E.  
Minneapolis, Minnesota 55418  
Attention: D. L. Douglas

Gulton Industries (1)  
Alkaline Battery Division  
212 Durham Avenue  
Metuchen, New Jersey 08840  
Attention: Dr. Robert Shair

Grumman Aircraft (1)  
OPGS, Plant 35  
Bethpage, Long Island, N. Y.  
Attention: Bruce Clark

Hughes Aircraft Corporation (1)  
Centinda Avenue & Teale Street  
Culver City, California 90230  
Attention: T. V. Carvey

Hughes Aircraft Corporation (1)  
Bldg. 366, M. S. 524  
El Segundo, California 90245  
Attention: R. B. Robinson

Hughes Research Labs. Corp. (1)  
3011 Malibu Canyon Road  
Malibu, California 90265  
Attention: T. M. Hahn

ITT Federal Laboratories (1)  
500 Washington Avenue  
Nutley, New Jersey 07110  
Attention: Dr. P. E. Lighty

ITT Research Institute (1)  
10 West 35th Street  
Chicago, Illinois 60616  
Attention: Dr. H. T. Francis



Institute of Gas Technology (1)  
State and 34th Street  
Chicago, Illinois 60616  
Attention: B. S. Baker

Johns Hopkins University (1)  
Applied Physics Laboratory  
8621 Georgia Avenue  
Silver Spring, Maryland 20910  
Attention: Richard Cole

Johns-Manville R & E Center (1)  
P. O. Box 159  
Manville, New Jersey 08835  
Attention: J. S. Parkinson

Leesona Moos Laboratories (1)  
Lake Success Park, Community Drive  
Great Neck, New York 11021  
Attention: Dr. H. Oswin

Livingston Electronic Corporation (1)  
Route 309  
Montgomeryville, Pennsylvania 18936  
Attention: William F. Meyers

Lockheed Missiles & Space Company (1)  
3251 Hanover Street  
Palo Alto, California 94304  
Attention: Library/Dr. G. B. Adams

Lockheed Missiles & Space Company (1)  
Dept. 62-30  
3251 Hanover Street  
Palo Alto, California 94304  
Attention: J. E. Chilton

Idaho State University (1)  
Department of Chemistry  
Pocatello, Idaho 83201  
Attention: Dr. G. Myron Arcand



Mallory Battery Company (1)  
60 Elm Street  
North Tarryton, New York 10593  
Attention: R. R. Clune

P. R. Mallory & Company, Inc.  
Technical Services Laboratory  
Indianapolis, Indiana 46206  
Attention: A. S. Doty

P. R. Mallory & Company, Inc. (1)  
Northwest Industrial Park  
Burlington, Massachusetts 02103  
Attention: Dr. Per Bro

P. R. Mallory & Company, Inc. (1)  
3029 East Washington Street  
Indianapolis, Indiana 46206  
Attention: Technical Librarian

Marquardt Corporation (1)  
16555 Saticoy Street  
Van Nuys, California 91406  
Attention: Dr. H. G. Krull

Material Research Corporation (1)  
Orangeburg, New York  
Attention: V. E. Adler

Melpar (1)  
Technical Information Center  
3000 Arlington Boulevard  
Falls Church, Virginia 22046

Midwest Research Institute (1)  
425 Volker Boulevard  
Kansas City, Missouri 64110  
Attention: Dr. B. W. Beadle

Monsanto Research Corporation (1)  
Boston Laboratory  
Everett, Massachusetts 02149  
Attention: Dr. J. O. Smith

North American Aviation, Inc. (1)  
Rocketdyne Division  
6633 Canoga Avenue  
Canoga Park, California 91303  
Attention: Library



North American Aviation, Inc. (1)  
12214 Lakewood Boulevard  
Downey, California 90241  
Attention: Burton M. Otzinger

Dr. John Owen (1)  
P. O. Box 87  
Bloomfield, New Jersey 07003

Power Information Center (1)  
University of Pennsylvania  
Moore School Building  
200 South 33rd Street  
Philadelphia, Pennsylvania 19104

Philco Corporation (1)  
Division of the Ford Motor Company  
Blue Bell, Pennsylvania 19422  
Attention: Dr. Phillip Cholet

Radiation Applications, Inc. (1)  
36-40 37th Street  
Long Island City, New York 11101

Radio Corporation of America (1)  
Astro Division  
Hightstown, New Jersey 08520  
Attention: Seymour Winkler

Radio Corporation of America (1)  
P. O. Box 800  
Princeton, New Jersey 08540  
Attention: I. Schulman

Southwest Research Institute (1)  
8500 Culebra Road  
San Antonio, Texas 78206  
Attention: Dr. Jan Al

Sonotone Corporation (1)  
Saw Mill River Road  
Elmsford, New York 10523  
Attention: A. Mundel

Texas Instruments, Inc. (1)  
Metals and Controls Division  
34 Forest Street  
Attleboro, Massachusetts 02703  
Attention: Dr. E. M. Jost



Texas Instruments, Inc. (1)  
13500 North Central Expressway  
Dallas, Texas 75222  
Attention: Dr. Isaac Trachtenberg

Thomas A. Edison Research Laboratory (1)  
McGraw Edison Company  
Watchung Avenue  
West Orange, New Jersey 07052  
Attention: Dr. P. F. Grieger

TRW Systems, Inc. (1)  
One Space Park  
Redondo Beach, California 90278  
Attention: Dr. A. Krausz  
(Bldg. 60, Rm. 929)

TRW Systems, Inc. (1)  
One Space Park  
Redondo Beach, California 90278  
Attention: Mr. Richard Sparks

TRW Inc. (1)  
23555 Euclid Avenue  
Cleveland, Ohio 44117  
Attention: Librarian

Tyco Laboratories, Inc. (1)  
Bear Hill  
Hickory Drive  
Waltham, Massachusetts 02154  
Attention: W. W. Burnett

Union Carbide Corporation (1)  
Development Laboratory Library  
P. O. Box 6056  
Cleveland, Ohio 44101

Union Carbide Corporation (1)  
Parma Research Laboratory  
P. O. Box 6116  
Cleveland, Ohio 44101  
Attention: Library

University of California (1)  
Space Science Laboratory  
Berkeley, California 94720  
Attention: Dr. C. W. Tobias



University of Pennsylvania  
Electrochemistry Laboratory  
Philadelphia, Pennsylvania 19104  
Attention: Prof. J. O'M. Bockris

(1)

Western Electric Company  
Suite 802, RCA Building  
Washington, D. C. 20006  
Attention: R. T. Fiske

(1)

Westinghouse Electric Corporation  
Research & Development Center  
Churchill Borough  
Pittsburgh, Pennsylvania 15235  
Attention: Dr. A. Langer

(1)

Whittaker Corporation  
3850 Olive Street  
Denver, Colorado 80237  
Attention: Borch Wendir

(1)

Whittaker Corporation  
Controls & Guidance  
9601 Canoga Avenue  
Chatsworth, California 91311  
Attention: Dr. M. Shaw

(1)

Yardney Electric Corporation  
Yardney Building  
40-52 Leonard Street  
New York, New York 10013  
Attention: Dr. George Dalin

(1)

UNCLASSIFIED

Security Classification

DOCUMENT CONTROL DATA - R&D		
<i>(Security classification of title, body of abstract and indexing annotation must be entered when the overall report is classified)</i>		
1. ORIGINATING ACTIVITY (Corporate author) Rocketdyne, a Division of North American Aviation, Inc., 6633 Canoga Avenue, Canoga Park, California		2a. REPORT SECURITY CLASSIFICATION UNCLASSIFIED
		2b. GROUP
3. REPORT TITLE PROPERTIES OF NONAQUEOUS ELECTROLYTES		
4. DESCRIPTIVE NOTES (Type of report and inclusive dates) Quarterly Report (20 September through 19 December 1966)		
5. AUTHOR(S) (Last name, first name, initial) Keller, R.; Foster, J. N.; Ray, J. D.; Sullivan, J. M.		
6. REPORT DATE 19 January 1967	7a. TOTAL NO. OF PAGES 76	7b. NO. OF REFS 7
8a. CONTRACT OR GRANT NO. NAS3-8521	9a. ORIGINATOR'S REPORT NUMBER(S) R-6754-2	
b. PROJECT NO.		
c.	9b. OTHER REPORT NO(S) (Any other numbers that may be assigned this report)	
d.	NASA CR-72168	
10. AVAILABILITY/LIMITATION NOTICES		
11. SUPPLEMENTARY NOTES	12. SPONSORING MILITARY ACTIVITY National Aeronautics and Space Administration, Lewis Research Center, Cleveland, Ohio	
13. ABSTRACT <p>A complete vapor phase chromatographic analysis of dimethyl formamide was conducted, and several techniques were utilized to verify the water content of propylene carbonate and dimethyl formamide. Solutes were characterized by spark source mass spectrometry and emission spectroscopy. Physical properties such as the density, viscosity, and conductance of electrolytes containing LiCl and/or AlCl<sub>3</sub> in dimethyl formamide were determined.</p>		

DD FORM 1473  
1 JAN 64

UNCLASSIFIED

Security Classification

14. KEY WORDS	LINK A		LINK B		LINK C	
	ROLE	WT	ROLE	WT	ROLE	WT
Nonaqueous Electrolytes Dimethyl Formamide Propylene Carbonate Lithium Chloride Aluminum Chloride Source Mass Spectrometry Emission Spectroscopy						

**INSTRUCTIONS**

**1. ORIGINATING ACTIVITY:** Enter the name and address of the contractor, subcontractor, grantee, Department of Defense activity or other organization (*corporate author*) issuing the report.

**2a. REPORT SECURITY CLASSIFICATION:** Enter the overall security classification of the report. Indicate whether "Restricted Data" is included. Marking is to be in accordance with appropriate security regulations.

**2b. GROUP:** Automatic downgrading is specified in DoD Directive 5200.10 and Armed Forces Industrial Manual. Enter the group number. Also, when applicable, show that optional markings have been used for Group 3 and Group 4 as authorized.

**3. REPORT TITLE:** Enter the complete report title in all capital letters. Titles in all cases should be unclassified. If a meaningful title cannot be selected without classification, show title classification in all capitals in parenthesis immediately following the title.

**4. DESCRIPTIVE NOTES:** If appropriate, enter the type of report, e.g., interim, progress, summary, annual, or final. Give the inclusive dates when a specific reporting period is covered.

**5. AUTHOR(S):** Enter the name(s) of author(s) as shown on or in the report. Enter last name, first name, middle initial. If military, show rank and branch of service. The name of the principal author is an absolute minimum requirement.

**6. REPORT DATE:** Enter the date of the report as day, month, year; or month, year. If more than one date appears on the report, use date of publication.

**7a. TOTAL NUMBER OF PAGES:** The total page count should follow normal pagination procedures, i.e., enter the number of pages containing information.

**7b. NUMBER OF REFERENCES:** Enter the total number of references cited in the report.

**8a. CONTRACT OR GRANT NUMBER:** If appropriate, enter the applicable number of the contract or grant under which the report was written.

**8b, 8c, & 8d. PROJECT NUMBER:** Enter the appropriate military department identification, such as project number, subproject number, system numbers, task number, etc.

**9a. ORIGINATOR'S REPORT NUMBER(S):** Enter the official report number by which the document will be identified and controlled by the originating activity. This number must be unique to this report.

**9b. OTHER REPORT NUMBER(S):** If the report has been assigned any other report numbers (*either by the originator or by the sponsor*), also enter this number(s).

**10. AVAILABILITY/LIMITATION NOTICES:** Enter any limitations on further dissemination of the report, other than those

imposed by security classification, using standard statements such as:

- (1) "Qualified requesters may obtain copies of this report from DDC."
- (2) "Foreign announcement and dissemination of this report by DDC is not authorized."
- (3) "U. S. Government agencies may obtain copies of this report directly from DDC. Other qualified DDC users shall request through \_\_\_\_\_."
- (4) "U. S. military agencies may obtain copies of this report directly from DDC. Other qualified users shall request through \_\_\_\_\_."
- (5) "All distribution of this report is controlled. Qualified DDC users shall request through \_\_\_\_\_."

If the report has been furnished to the Office of Technical Services, Department of Commerce, for sale to the public, indicate this fact and enter the price, if known.

**11. SUPPLEMENTARY NOTES:** Use for additional explanatory notes.

**12. SPONSORING MILITARY ACTIVITY:** Enter the name of the departmental project office or laboratory sponsoring (*paying for*) the research and development. Include address.

**13. ABSTRACT:** Enter an abstract giving a brief and factual summary of the document indicative of the report, even though it may also appear elsewhere in the body of the technical report. If additional space is required, a continuation sheet shall be attached.

It is highly desirable that the abstract of classified reports be unclassified. Each paragraph of the abstract shall end with an indication of the military security classification of the information in the paragraph, represented as (TS), (S), (C), or (U).

There is no limitation on the length of the abstract. However, the suggested length is from 150 to 225 words.

**14. KEY WORDS:** Key words are technically meaningful terms or short phrases that characterize a report and may be used as index entries for cataloging the report. Key words must be selected so that no security classification is required. Identifiers, such as equipment model designation, trade name, military project code name, geographic location, may be used as key words but will be followed by an indication of technical context. The assignment of links, rules, and weights is optional.