

1. Report No. <b>NASA CR-132445</b>	2. Government Accession No.	3. Recipient's Catalog No.	
4. Title and Subtitle <b>ANALYTIC MODELS OF DUCTED TURBOMACHINERY TONE NOISE SOURCES-- Volume III: Program Test Case Results</b>		5. Report Date <b>May 1974</b>	
7. Author(s) <b>T.L. Clark, U.W. Ganz, G.A. Graf, and J.S. Westall</b>		6. Performing Organization Code	
9. Performing Organization Name and Address <b>Boeing Commercial Airplane Company P.O. Box 3707 Seattle, Washington 98124</b>		8. Performing Organization Report No. <b>D6-43296-3</b>	
12. Sponsoring Agency Name and Address <b>National Aeronautics and Space Administration Washington, D.C. 20546</b>		10. Work Unit No.	
15. Supplementary Notes			
16. Abstract <p>Volume I of this report describes the analytic models developed for computing the periodic sound pressures of subsonic fans and compressors in an infinite, hardwall annular duct with uniform flow. The basic sound-generating mechanism is the scattering into sound waves of velocity disturbances appearing to the rotor or stator blades as a series of harmonic gusts. The models include component interactions and rotor alone. Volume II of this report describes the computer subprograms developed for numerical computations of sound pressure mode amplitudes from the analysis. Volume III presents some test case results from the computer programs.</p>			
17. Key Words (Suggested by Author(s)) <b>Analytic models      Tone noise Turbomachinery noise      Thin airfoils Fan duct Acoustic modes</b>		18. Distribution Statement <b>Unclassified--Unlimited</b>	
19. Security Classif. (of this report) <b>Unclassified</b>	20. Security Classif. (of this page) <b>Unclassified</b>	21. No. of Pages <b>110</b>	22. Price*

## CONTENTS

	<u>Page</u>
1.0      INTRODUCTION.....	1
2.0      SAMPLE DRIVER.....	2
2.1    Usage of Sample Driver.....	2
2.1.1   Control Cards and Deck Structure.....	2
2.1.2   Data Deck.....	3
2.2    FORTRAN Listing of Sample Driver.....	6
2.3    Sample Driver Subroutine Descriptions.....	8
2.3.1   Subroutine INPT.....	8
2.3.2   Subroutine DISCOEF.....	14
2.3.3   Subroutine PRNTIN.....	25
2.3.4   Subroutine PRNTOUT.....	29
3.0      TEST CASE RESULTS.....	35
3.1    Primary Subroutine AAAAA.....	35
3.1.1   Card Image of Main Driver Input.....	37
3.1.2   Primary Subroutine Input/Output.....	40
3.2    Primary Subroutine AABAA.....	54
3.2.1   Card Image of Main Driver Input.....	55
3.2.2   Primary Subroutine Input/Output.....	57
3.3    Primary Subroutine BCDA.....	65
3.3.1   Card Image of Main Driver Input.....	66
3.3.2   Primary Subroutine Input/Output.....	69
3.4    Primary Subroutine BBCAA.....	83
3.4.1   Card Image of Main Driver Input.....	85
3.4.2   Primary Subroutine Input/Output.....	88

## 1.0 INTRODUCTION

To support the documentation of the computer subprograms, test cases for the various major computing options of the subprograms have been executed and the results compiled. This volume contains these results as well as a description of the main program utilized for the test case executions. The computer used was the CDC 6600 at the Boeing Computer Services, Inc. facility at Renton, Washington. These cases have been executed on a CDC 6600 computer at the NASA Langley Research Center and the results compared. The computed numbers were the same, showing the subprograms to be essentially system independent since the two computer facilities have quite different systems. Section 2 describes the main driver program and section 3 presents the test case results.

## 2.0 SAMPLE DRIVER

The sample main program — the sample driver SDRIVER — consists of input through subroutine INPT, printout of the input by subroutine PRNTIN, a call to the primary subroutine, and the printout of the mode amplitudes by subroutine PRNTOUT.

Two special features are available. One, data reduction subroutine DISCOEF, is used with package 3 (BCDAA). This subroutine inputs velocity distortion data and computes the corresponding distortion Fourier coefficients that are stored in array AR. In the use of package 4 (BBCAA), a summation of the mode amplitudes over eddies is available. The above two special features are available through the extended definitions of ARMISC(22) and ARMISC(26), respectively.

### 2.1 Usage of Sample Driver

#### 2.1.1 Control Cards and Deck Structure

Process number card

JOB card

USER card

LINECNT (10000) (if optional printout is desired)

RUN(S)

LGO.

7-8-9 card

Source deck of the subroutine package

7-8-9 card

Data deck

7-8-9 card

6-7-8-9 card

2.1.2 Data Deck. — There is one sample driving program for all packages. Only one package may be used in any one execution of the sample driving program. The following paragraphs describe how to set up the data deck.

The first card must have one of the following in the first five columns: AAAAA, AABAA, BCDA, or BBCAA. Then the data deck consists of one or more cases which are stacked sequentially. Each case is defined by specifying the array ARMISC, the array AR, and, under certain conditions, angular distortion data.

The first five cards of a case are used to input the array ARMISC, which has dimension 40. Input the 40 values, ARMISC(1) through ARMISC(40), in the format FORMAT (8F10.2). Not all 40 values are used and some values refer to a particular package only. The user should know which values are needed. Most elements of array ARMISC are defined in the FORTRAN dictionary (vol. II, sec. 2.2). The two exceptions are:

ARMISC(22)      In package 3 (BCDA), ARMISC(22) = 4 means that velocity distortion data is to be input. Subroutine DISCOEF is called by the sample driver, SDRIVER, and computes Fourier coefficients of this data according to ARMISC(23) and ARMISC(24). Finally, ARMISC(22) is set to 3 and package 3 is called.

AMRISC(26)      This is used in package 4 (BBCAA) for accumulation of the eddies, which takes place in the sample driver, SDRIVER.

0 or blank      means do not sum over eddies  
do not put any nonzero value in  
ARMISC(26) when using other packages

1	means start summing over the eddies beginning with this case
2	means sum over eddies
3	means sum over eddies ending with this case

It is assumed that when the user wants to sum C cases over eddies, he changes only the eddy data, ARMISC(28) through ARMISC(37) in these C cases.

The next card (sixth card) indicates which component (inlet stator, rotor, outlet stator) data is required in the array AR. This card must:

- 1) Have a 1 in column 5 if inlet stator data is required
- 2) Have a 1 in column 10 if rotor data is required
- 3) Have a 1 in column 15 if outlet stator data is required

Next, the array AR is input. Its elements are completely defined in the FORTRAN dictionary. Input data by components: first, input AR(I, J, 1) for all I, J if inlet stator data is required; next, input AR(I, J, 2) for all I, J if rotor data is required; and, finally, input AR(I, J, 3) for all I, J if outlet stator data is required. For a given component, K:

- 1) Input AR(1, J, K) for all J.
- 2) Input AR(2, J, K) for all J.
- 3) If spanwise data is required, input AR(3, J, K) for all J, AR(4, J, K) for all J, etc.

Now, for given K and I, input AR(I, 1, K), AR(I, 2, K), AR(I, 3, K), ..., with format FORMAT (9F8.2).

Finally, in package 3 (BCDAA), if velocity distortion data is required (ARMISC[22] = 4), it is input now. Input the first card with format FORMAT(16I5) where:

1) Columns 1-5 contain the number of angles, which must be  $\leq$  40

2) Columns 6-10 contain NSPAND, where:

AR(1,1,2) if spanwise velocity distortion data is desired; it must be specified at the radial coordinates AR(3,1,2), AR(4,1,2), ..., AR(m,1,2),  
 $m = 2 + AR(1,1,2)$

0 if average values are to be used

Next, input the angles using format FORMAT (8F10.4).

If NSPAND = 0, input average distortion values. These must be input per angle as the angles were input using format FORMAT (8F10.4).

If NSPAND  $\neq$  0, input distortion values:

1) At first radial position for each angle as the angles were input using format FORMAT (8F10.4)

2) At second radial position as in item 1 above

•  
•  
•

3) At last radial position as in item 1 above

## 2.2 FORTRAN Listing of Sample Driver

```
PROGRAM SDRIVER(INPUT,OUTPUT,TAPE5=INPUT,TAPE6=OUTPUT)
C PURPOSE      SAMPLE MAIN PROGRAM FOR THE PRIMARY SUBROUTINE
C
DIMENSION AR(20,40,3),ARMISC(40),ARMUMN(40,50),MAXN(50),MUSE(50)
COMPLEX ALPHAMN(40,50),ASUM(40,50)
DIMENSION KIN(3)
DATA MDIM,NDIM,MAXDIM,MAXJ/50,40,20,40/
DATA ICASE/0/
C
DIMENSION V(20,40)
DATA MAXPHI/40/
C
C          READ PRIMARY SUBROUTINE NAME
C
READ(5,5) IPRG
5 FORMAT(A5)
C
C          RETURN POINT FOR NEXT CASE
C
10 CONTINUE
LAST = 0
C
C          CALL SUBROUTINE INPT TO READ THE NEXT DATA CASE
CALL INPT(  * , NARMISC,ARMISC,MAXDIM,MAXJ,AR,KIN,NOFJ,ICASE,IEND)
C
C          CHECK IF LAST CASE
C
IF( IEND.NE.0 ) GO TO 1000
C
C          CALL SUBROUTINE DISCOEF TO INPUT THE DISTORTION
C          AND COMPUTE THE CORRESPONDING FOURIER COEFFICIENTS,
C          PLACING THE RESULTS IN AR
C
IF(ARMISC(22).EQ.4)CALL DISCOEF(ARMISC,MAXDIM,MAXJ,AR,KIN,NOFJ,
MAXPHI,V,ICASE)
C
C          CALL SUBROUTINE PRNTIN TO PRINTOUT THE INPUT DATA
CALL PRNTIN(IPRG,ICASE,NARMISC,ARMISC,MAXDIM,MAXJ,AR,NOFJ,KIN)
C
C          UPDATE ARMISC WHEN DISCOEF IS USED
C
IF( ARMISC(22).EQ.4) ARMISC(22)=3
C
C          CALL THE PRIMARY SUBROUTINE TO COMPUTE MODAL AMPLITUDES
C
IF([IPRG.EQ.5]HAAAAAA) CALL AAAA(AARMISC,MAXDIM,MAXJ,AR,MDIM,NDIM,
IARMJMN,NOFM,MUSE,MAXN,ALPHAMN,IERROR)
```

```

      IF(I PRG.EQ.5HABAA) CALL AABAA(ARMISC,MAXDIM,MAXJ,AR,MDIM,NDIM,
1ARMJMN,NOFM,MUSE,MAXN,ALPHAMN,ERROR)
C
      IF(I PRG.EQ.5HBODAA) CALL BCDAA(ARMISC,MAXDIM,MAXJ,AR,MDIM,NDIM,
1ARMJMN,NOFM,MUSE,MAXN,ALPHAMN,ERROR)
C
      IF(I PRG.EQ.5HBBCAA) CALL BBCAA(ARMISC,MAXDIM,MAXJ,AR,MDIM,NDIM,
1ARMJMN,NOFM,MJSE,MAXN,ALPHAMN,ERROR)
C
      50 CONTINUE
      IF(LAST.EQ.0)   WRITE(6,60)
      IF(LAST.EQ.1)   WRITE(6,70)
60  FORMAT(1H1)
70  FORMAT(1H1,1IX,*ACCUMULATION OF EDDYS*)
C
C          CALL SUBROUTINE PRNTOUT TO PRINTOUT THE MODAL AMPLITUDES
C
    IF(ERROR.NE.4) CALL PRNTOUT(MDIM,NDIM,NOFM,MUSE,MAXN,ALPHAMN)
C
C
      IF(ARMISC(26).EQ.0.) GO TO 10
      IF(ARMISC(26) = 2.) 500,550,600
500  DO 510 N=1,NDIM
      DO 510 M=1,MDIM
510  ASUM(N,M) = ALPHAMN(N,M)
      GO TO 10 .
550  DO 560 N=1,NDIM
      DO 560 M=1,MDIM
560  ASUM(N,M) = ASUM(N,M) + ALPHAMN(N,M)
      GO TO 10
600  IF(LAST.EQ.1)   GO TO 10
      DO 510 N=1,NDIM
      DO 510 M=1,MDIM
610  ALPHAMN(N,M) = ASUM(N,M) + ALPHAMN(N,M)
      LAST = 1
      GO TO 50
C
1000 CONTINUE
C
      RETJRN
      END

```

## 2.3 Sample Driver Subroutine Descriptions

### 2.3.1 Subroutine INPT

*Purpose:* This subroutine provides a standardized input on TAPE 5 of arrays AR and ARMISC. This subroutine will be updated as primary subroutines are developed.

*Method:* The procedure is as follows:

- 1) Determine the number of elements in ARMISC.
- 2) Input ARMISC.
- 3) Check for an END OF FILE and return upon detection.
- 4) Update the case counter.
- 5) Input which components, K, are to be input.
- 6) For each component to be input, perform steps 7 to 9 below.
- 7) Compute the number of J's to be used.
- 8) Input AR for I equal to 1 and 2.
- 9) When there is spanwise data, input AR for the remaining I's.

*Usage:* CALLING SEQUENCE

```
DIMENSION ARMISC (NARMISC), AR(MAXDIM,MAXJ,3), KIN(3)
```

```
•  
•  
•
```

```
CALL INPT(PROG,NARMISC,ARMISC,MAXDIM,MAXJ,  
* AR,KIN,NOFJ,ICASE,IEND)
```

INPUT

OUTPUT

NARMISC      The number of elements in the array ARMISC,  
                set to 40

ARMISC

to            See FORTRAN dictionary

AR

KIN           KIN(K), K = 1, 2, 3 is 1 or 0, depending on  
                whether component K is input or not,  
                respectively


ICASE        The case counter, which should be initialized to  
                zero before the first call to this subroutine


IEND         = 1: an END OF FILE is encountered; presumably  
                the previous case is the last case

                = 0: no END OF FILE

*Timing:*    The timing is proportional to the number of elements in  
                ARMISC and AR.

*Tapes:*    TAPE 5 is used for input.

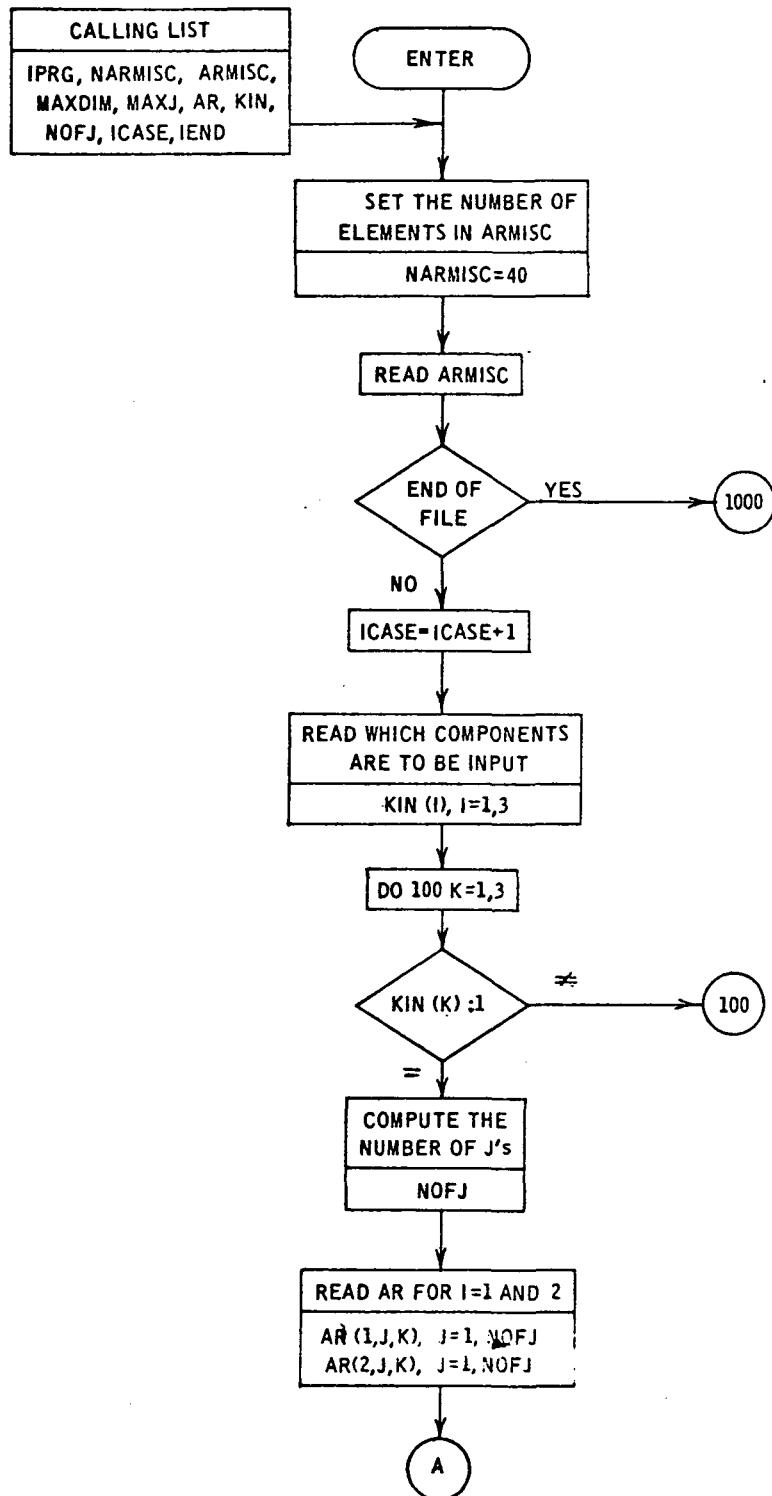

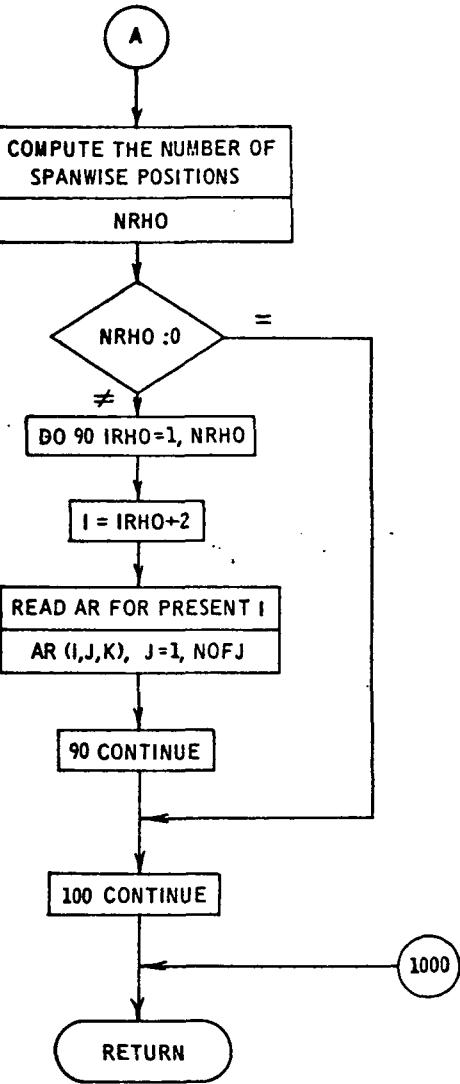

```

SUBROUTINE INPT(      NARMISC,ARMISC,MAXDIM,MAXJ,AR,KIN,NOFJ,ICASE,
1IEND)
C PURPOSE      THIS PROGRAM PROVIDES FOR STANDARDIZED INPUT
C
C DIMENSION ARMISC(1),AR(MAXDIM,MAXJ,3),KIN(3)
C
C NARMISC = 40
C
C          INPUT ARMISC
C
C READ(5,20)(ARMISC(I),I=1,NARMISC)
20 FORMAT(8F10.2)
C
C          CHECK FOR END OF FILE AND SET IEND ACCORDINGLY
C
C IF(EOP,5)30,40
30 IEND=1
GO TO 1000
40 IEND=C
C
C          UPDATE THE CASE COUNTER
C
C ICASE = ICASE + 1
C
C          INPUT KIN(K), K=1,2,3 WHERE KIN(K) IS 3 OR 1 DEPENDING
C          UPON WHETHER INPUT FOR COMPONENT K IS TO BE INPUT
C          BELOW OR NOT
C
C READ(5,50) (KIN(I),I=1,3)
50 FORMAT(16I5)
C
C          LOOP ON THE K INDEX
C
DO 100 K=1,3
IF( KIN(K).NE.1) GO TO 100
C
C          COMPUTE THE NUMBER OF ELEMENTS J TO READ
MISC22=ARMISC(22)
NGCDEF = ARMISC(18+<)
NOFFA=0
IF(ARMISC(25).EQ.3)NOFFA=2
NOFA1=0
IF(MISC22.EQ.2)NOFA1=1
NDDEF = 0
IF(MISC22.EQ.3)NDDEF = ARMISC(23)
NOFJ=9+NGCDEF +NOFFA+NOFA1+NDDEF
C
C          INPUT AR FOR I = 1 AND 2 ALWAYS
C
READ(5,60) (AR(1,J,K),J=1,NOFJ)

```

```
60 FORMAT(9F8.0)
  READ(5,70) (AR(Z,J,K),J=1,NDFJ)
70 FORMAT(9F8.2)
C
C           INPUT AR FOR I = 2 AND ABOVE ONLY WHEN AR(I,I,K)
C           IS NOT ZERO
C
NRHO = AR(1,1,K)
IF( NRHO.EQ.0 ) GO TO 100
DO 90 IRHO=1,VRHO
  I = IRHO + 2
90 READ(5,70) (AR(I,J,K),J=1,NDFJ)
C
100 CONTINUE
C
1000 RETJRN
END
```

### 2.3.2 Subroutine DISCOEF

*Purpose:* This subroutine inputs distortion data on logical unit TAPE 5 per component ( $K = 1, 2$ , or  $3$ ) as average values or per spanwise positions (see AR) and per angle (up to 40), prints out the values input, calculates the Fourier series according to ARMISC data, and places the resulting data in AR.

*Method:* The procedure is as follows:

- 1) Print a title and case number.
- 2) Perform the following steps for each component input.
- 3) Input the number of angles, up to 40 and at least 2, and a parameter that the distortion will be given at the spanwise positions in AR or as average values.
- 4) Input the angles in degrees.
- 5) Input the distortion per angle when only average values are input.
- 6) Otherwise, per spanwise position, input the distortion per angle.
- 7) Print out the component index.
- 8) For printout, divide the number of angles into groups of 5 and for each group perform steps 9 and 10.
- 9) Print the angles in the present group.
- 10) Print the distortion according to the input in steps 5 and 6.

- 11) Compute the number of Fourier series indexes and the index multiplication factor.
- 12) For the average values or for each spanwise position, repeat steps 13 and 16.
- 13) Set the I index for AR.
- 14) For each Fourier series index, repeat steps 15 and 16.
- 15) Compute the Fourier series sine and cosine coefficients by integration over angle using the trapezoidal rule.
- 16) Store the coefficients calculated in AR.
- 17) Update the number of J's.

*Usage:*      CALLING SEQUENCE

```
DIMENSION ARMISC(NARMISC),AR(MAXDIM,MAXJ,3),KIN(3),
* V(MAXDIM,MAXPHI)
.
.
.
CALL DISCOEF (ARMISC,MAXDIM,MAXJ,AR,KIN,NOFJ,MAXPHI,V,ICASE)
```

INPUT

ARMISC

MAXDIM     See FORTRAN dictionary

MAXJ

KIN        Array of components input; see subroutine INPT

MAXPHI      Second dimension of array V set in calling  
program corresponding to the maximum number  
of angles

ICASE      Case number

INPUT/OUTPUT

AR      See FORTRAN dictionary for definition; this  
will contain the computed Fourier coefficients

NOFJ      The number of J positions used

OUTPUT


V      The array of input distortion values, dimensioned  
V(MAXDIM,MAXPHI), where the rows  
correspond to spanwise data and the columns  
correspond to angle data


*Restrictions:* There must be at least two angles, but at most MAXPHI  
which is set to 40 in SDRIVER. The spanwise positions  
(unless average values) must be those in array AR.


*Printout:* The distortion values input will be printed out.


*Timing:* The timing is proportional to MAXDIM x MAXPHI.

*Tapes:* TAPE 5 is used for input and TAPE 6 is used for output.

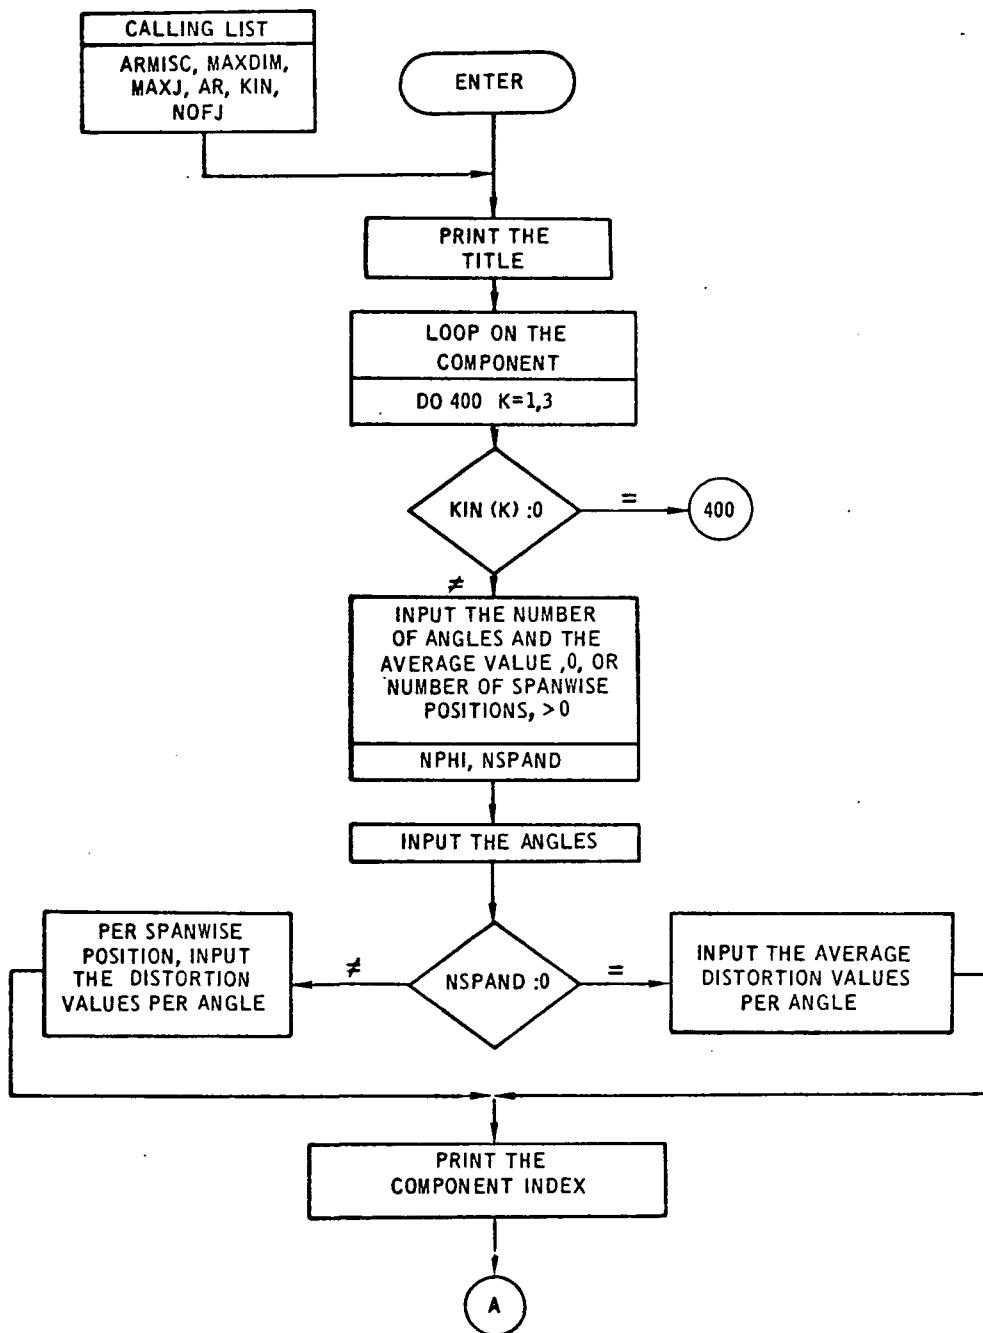

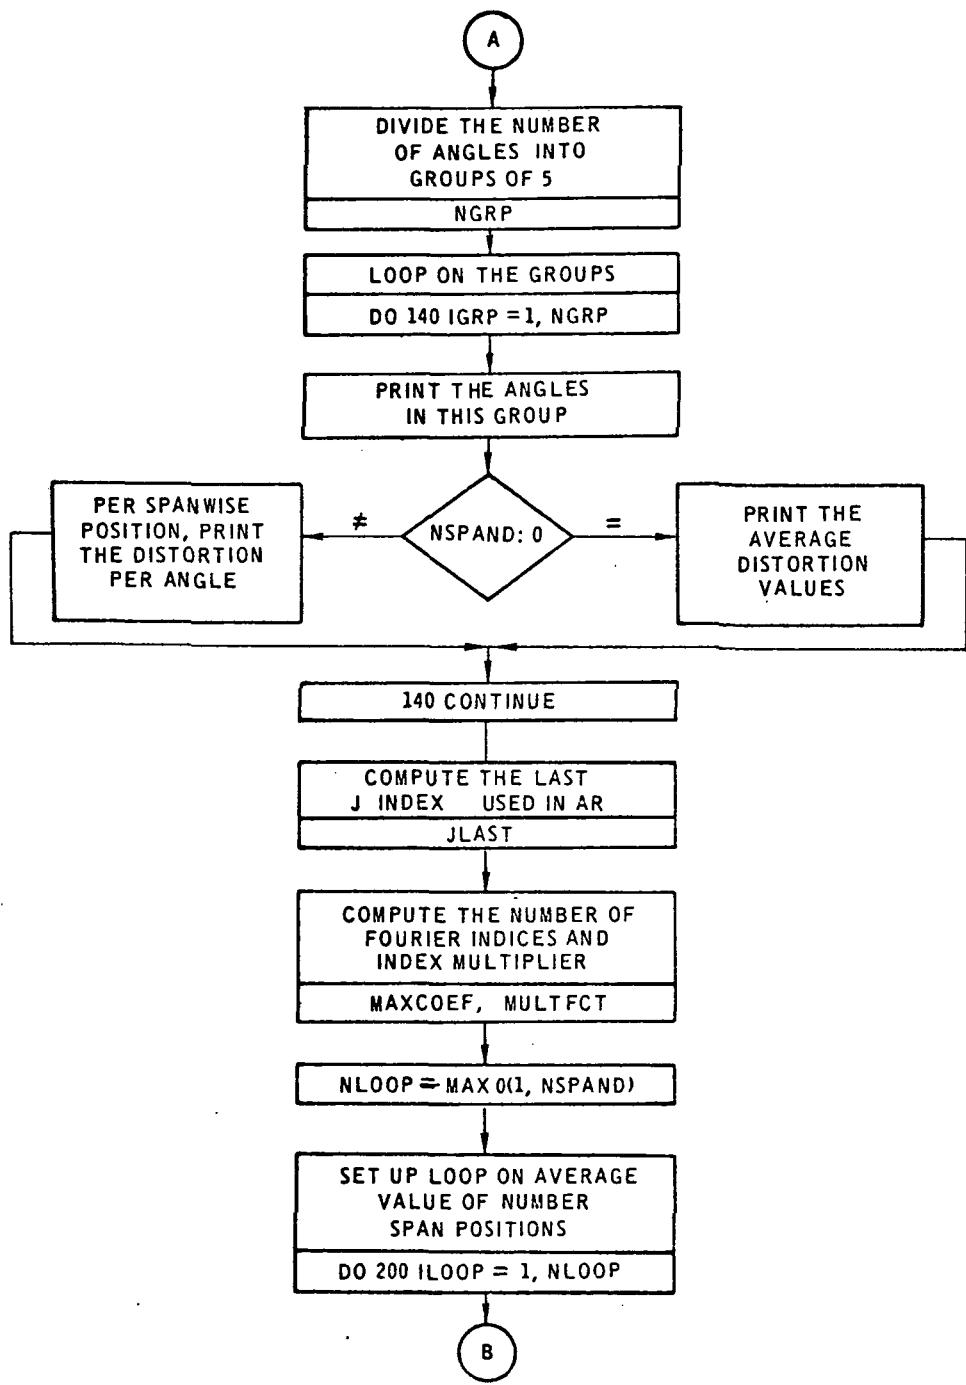

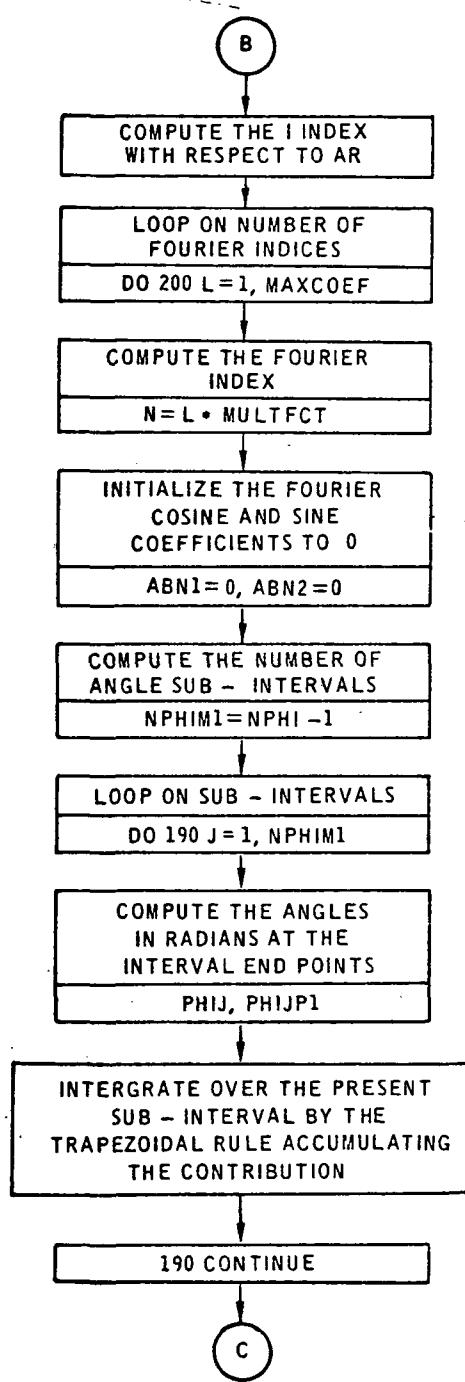

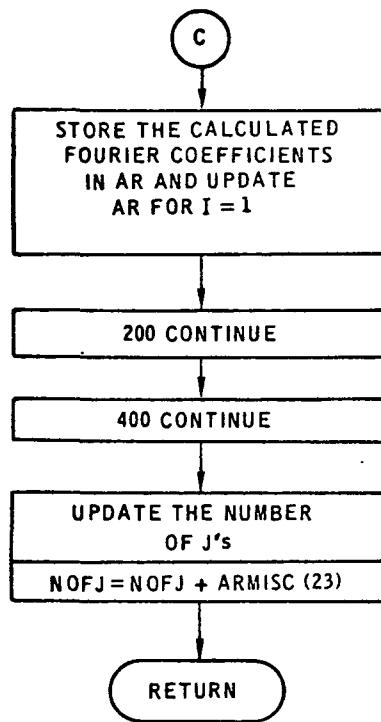

```

SUBROUTINE DISCDEF(ARMISC,MAXDIM,MAXJ,AR,KIN,NOFJ,MAXPHI,V,ICASE)

C PURPOSE      THIS IS A DATA REDUCTION SUBROUTINE WHICH INPUTS
C               DISTORTION, ARMISC(22)=4, VALUES PER SPAN POSITION, THOSE
C               IN AR, FOR A SET OF ANGLES, PRINTS OUT THOSE VALUES,
C               COMPUTES THE FOURIER COEFFICIENTS ACCORDING TO ARMISC(23)
C               AND ARMISC(24) AND PLACES THOSE VALUES IN AR

C               DIMENSION ARMISC(1),AR(MAXDIM,MAXJ,3),V(MAXDIM,MAXPHI),KIN(3)
C               DATA DTDR/0.01745329251994/,THUP!/6.28318530717959/

C               INPUT THE DISTORTION V(I,J) WHERE I=1, CORRESPONDS TO THE
C               ANGLE, I=2 TO THE AVERAGE VALUE, I=3,4,... TO SPANWISE
C               POSITIONS AR(I,L,K), J=1,2,... CORRESPOND TO ANGLES

C               PRINT TITLE

C               WRITE(6,5)ICASE
5 FORMAT(1H1//1IX,*DISTORTION INPUT FOR CASE #,13)

C               LOOP ON COMPONENT

C               00 400 K=1,3
C               IF( KIN(K).EQ.0 ) GO TO .400

C               INPUT NPHI, THE NUMBER OF ANGLES, AT MOST 40, AND
C               NSPAND, 0 IF ONLY AVERAGE VALUES OF DISTORTION ARE GIVEN
C               OR EQUAL TO AR(1,1,K) FOR SPANWISE DATA

C               READ(5,10) NPHI,NSPAND
10 FORMAT(16I5)

C               INPUT THE ANGLE IN DEGREES

C               READ(5,20) (V(1,J),J=1,NPHI)
20 FORMAT(9F10.4)

C               IF( NSPAND ) 40,30,40

C               INPUT THE AVERAGE DISTORTION VALUES

C               30 READ(5,20) (V12,J),J=1,NPHI
C               GO TO 60

C               INPUT THE DISTORTION PER SPANWISE POSITION

C               40 00 50 ISPANO=1,NSPAND
C                   I = ISPANO + 2
50 READ(5,20) (V(I,J),J=1,NPHI)

C               PRINTOUT THE DISTORTION INPUT

```

```

C           PRINT THE COMPONENT
C
C       60 WRITE(6,70) K
C       70 FORMAT(1HO,10X,*K = *,1)
C
C           DIVIDE THE ANGLES INTO GROUPS OF 5 FOR COLUMN OUTPUT
C
C       NGRP = (NPHI-1)/5 + 1
C       DO 140 IGRP=1,NGRP
C
C           COMPUTE THE FIRST AND LAST J INDEX WITH RESPECT TO
C           V FOR THE PRESENT GROUP OF 5
C
C       J1 = (IGRP-1)*5 + 1
C       J2 = MIN0(J1+4,NPHI)
C
C           PRINT THE ANGLES
C
C       WRITE(6,80) (V(I,J),J=J1,J2)
C       80 FORMAT(1HO,10X,* ANGLE = *,5F10.4)
C
C       IF( NSPAND ) 110,90,110
C
C           PRINT AVERAGE DISTORTION VALUES
C
C       90 WRITE(6,100) (V(I,J),J=J1,J2)
C       100 FORMAT(1HO,10X,*AVERAGE = *,5F10.4)
C       GO TO 140
C
C           PRINT DISTORTION VALUES PER SPANWISE POSITION
C
C       110 WRITE(6,115)
C       115 FORMAT(13X,*SPAN*)
C       DO 120 ISPAND=1,NSPAND
C           I = ISPAND + 2
C       120 WRITE(6,130) AR(I,I,K),(V(I,J),J=J1,J2)
C       130 FORMAT(11X,F6.4,5F10.4)
C
C       140 CONTINUE
C
C           CALCULATE THE DISTORTION FOURIER SERIES
C
C           COMPUTE THE LAST J INDEX USED WITH RESPECT TO AR
C
C           JLAST = NOFJ
C
C           COMPUTE THE FACTORS DETERMINING THE FOURIER INDICES
C
C           MAXCOEF = ARMISC(23)/2
C           MULTFCT = ARMISC(24)

```

```

      LOOP ON THE AVERAGE VALUE OR SPANWISE POSITION INDEX
      SETTING THE I APPROPRIATE TO BOTH V AND AR

      NLOOP = MAX0(1,NSPAND)
      DO 200 ILOOP=1,NLOOP
      I = ILOOP + 2
      IF( NSPAND.EQ.0) I=2

      LOOP ON NUMBER OF FOURIER SERIES COEFFICIENTS

      DO 200 L=1,MAXCOEF

      COMPUTE THE FOURIER SERIES INDEX

      N = L*MULTFCT

      COMPUTE THE FOURIER COSINE AND SINE COEFFICIENT FOR
      THE PRESENT SPAN POSITION AND FOURIER SERIES INDEX
      BY INTEGRATING OVER THE ANGLE USING THE TRAPEZOIDAL RULE

      INITIALIZE THE COEFFICIENT SUM

      ABN1 = 0.
      ABN2 = 0.

      LOOP ON THE SUB-INTERVALS

      NPHIM1 = NPHI - 1
      DO 190 J=1,NPHIM1

      SET THE ANGLES AND COSINE AND SINE ARGUMENTS
      AT THE INTERVAL END POINTS

      JP1 = J+1
      PHIJP1 = V(1,JP1)*DTOR
      PHIJ  = V(1,J)*DTOR
      ARGNJP1= N*PHIJP1
      ARGNJ  = N*PHIJ

      COMPUTE THE TRAPEZOIDAL RULE CONTRIBUTION

      ABN1=ABN1+(PHIJP1-PHIJ)*(V(I,JP1)*COS(ARGNJP1)+V(I,J)*COS(ARGNJ))
190 ABN2=ABN2+(PHIJP1-PHIJ)*(V(I,JP1)*SIN(ARGNJP1)+V(I,J)*SIN(ARGNJ))
      ABN1= ABN1*MULTFCT
      ABN2= ABN2*MULTFCT

      STORE THE COEFFICIENT IN AR

      JNEXT = JLAST + 2*(L-1)+1
      AR(I,JNEXT,K) = ABN1
      AR(I,JNEXT+1,K) = ABN2
      AR(I,JNEXT,K) = NSPAND

```

```
AR(1,JNEXT+1,K)=NSPAND  
200 CONTINUE  
C  
400 CONTINUE  
C  
      UPDATE NOFJ  
C  
      NOFJ = NOFJ + ARMISC(23)  
C  
      RETURN  
END
```

### 2.3.3 Subroutine PRNTIN

*Purpose:* This subroutine provides for a standardized output on TAPE 6 of the arrays ARMISC and AR.

*Method:* The procedure is as follows:

- 1) Print the case number.
- 2) Print the array ARMISC.
- 3) For each component K input, repeat the following steps.
- 4) Divide the number of I's into groups of 6 per line.
- 5) For each group of I's, print AR for all J's in that group and all I's.

*Usage:* CALLING SEQUENCE

```
DIMENSION ARMISC(NARMISC),AR(MAXDIM,MAXJ,3),KIN(3)
```

```
•  
•  
•
```

```
CALL PRNTIN(IPRG,ICASE,NARMISC,ARMISC,  
*      MAXDIM,MAXJ,AR,NOFJ,KIN)
```

#### INPUT

IPRG        The five-letter name (5Hxxxxx) of the primary subroutine being used

ICASE       The number of the case

NARMISC Number of elements in ARMISC

ARMISC

to See FORTRAN dictionary


AR

NOFJ The number of J's in AR

KIN KIN(K), K = 1, ..., 3 is 1 or 0 depending on  
whether component K data is to be printed  
(i.e., input)

*Timing:* The timing is proportional to the number of elements in the arrays ARMISC and AR.

*Tapes:* TAPE 6 is used for output.

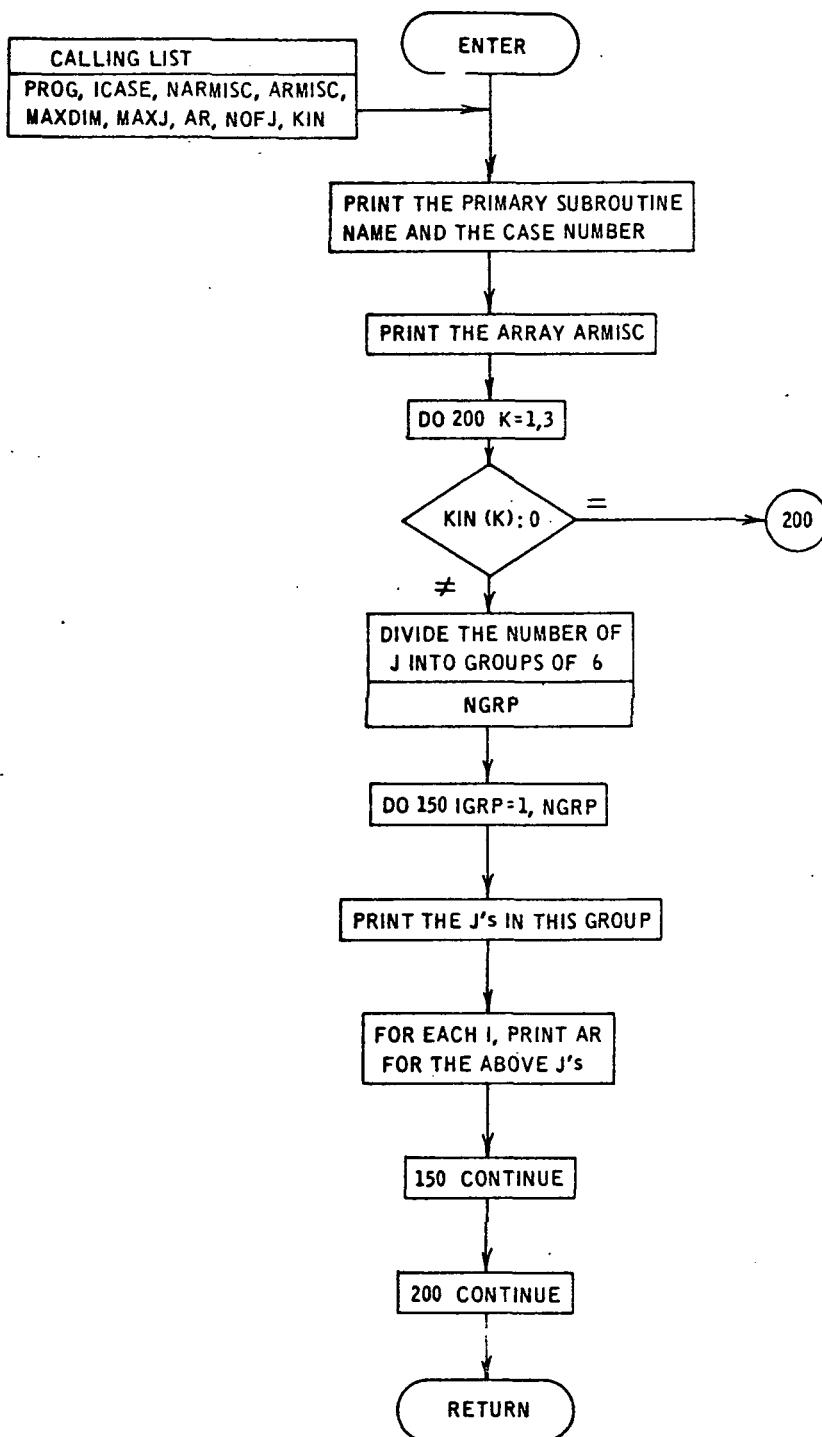

```

SUBROUTINE PRNTIN(IPRG,ICASE,NARMISC,ARMISC,MAXDIM,MAXJ,AR,NOFJ,
 1KIN)
C
C PURPOSE      STANDARDIZED INPUT PRINTOUT SUBROUTINE
C
  DIMENSION ARMISC(NARMISC),AR(MAXDIM,MAXJ,3),KIN(3)
  DIMENSION T1(2)
  DATA T1(1),T1(2)/9H INDEX ,9H VALUE/
C
  WRITE(6,10)IPRG,ICASE
 10 FORMAT(1H1//1H0,10X,*SUBROUTINE *,A5/1H0,10X,*INPUT FOR CASE *,I3)
C
  NCLM=MINO(4,NARMISC)
  NROW=(NARMISC-1)/4+1
  WRITE(6,20)(T1(1),T1(2),[CLM=1,NCLM])
 20 FORMAT(1H0,10X,*ARRAY ARMISC*/10X,8A9)
  DO 35 IR=1,NROW
  WRITE(6,30) (I,ARMISC(I),I=IR,NARMISC,NROW)
 30 FORMAT(10X,4(4X,I3,1X,F10.4))
 35 CONTINUE
C
  WRITE(6,40)
 40 FORMAT(/1H0,10X,*ARRAY AR*)
  DO 200 K=1,3
  IF(<IN(K).EQ.0) GO TO 200
  NOFI= AR(1,1,K)+2
  NGRP=(NOFJ-1)/6+1
 45 WRITE(6,50)K
 50 FORMAT(1H0,11X,*K = *,I1)
  DO 150 IGRP=1,NGRP
  J1=(IGRP-1)*6+1
  J2=MINO(J1+5,NOFJ)
  WRITE(6,60) (J,J=J1,J2)
 60 FORMAT(1H0,11X,*J =*,6(8X,I2,1X))
  WRITE(6,70)
 70 FORMAT(1H ,12X,*1*)
  DO 100 I=1,NOFI
  WRITE(6,80) (I,(AR(I,J,K),J=J1,J2))
 80 FORMAT(12X,I2*2X,6(1X,F10.5))
 100 CONTINUE
 150 CONTINUE
 200 CONTINUE
C
  RETJRN
  END

```

#### 2.3.4 Subroutine PRNOUT

*Purpose:* This subroutine prints out the modal amplitudes, array ALPHAMN, as computed by a primary subroutine.

*Method:* The procedure is as follows:

- 1) Print the heading.
- 2) Divide the number of m's into groups of 3.
- 3) For each group in step 2, repeat the following steps.
- 4) Compute the index corresponding to the largest and smallest m in the present group.
- 5) Compute the largest n corresponding to the m's in this group.
- 6) For each n, up to the largest, repeat the following steps.
- 7) Construct a variable format such that for each m in the present group, the format will print blank or the modal amplitude as a modulus and a phase between -180° and 180°, depending on whether there is or is not a modal amplitude corresponding to the current m and n, respectively.
- 8) Print the information determined in step 7.

*Usage:* CALLING SEQUENCE

DIMENSION MUSE(MDIM), MAXN(MDIM)


COMPLEX ALPHAMN(NDIM,MDIM)


•  
•  
•

CALL PRNTOUT(MDIM,NDIM,NOFM,MUSE,MAXN,ALPHAMN)

*Timing:* The timing is proportional to NOFM times the largest value in MAXN.

*Tapes:* TAPE 6 is used for printout.

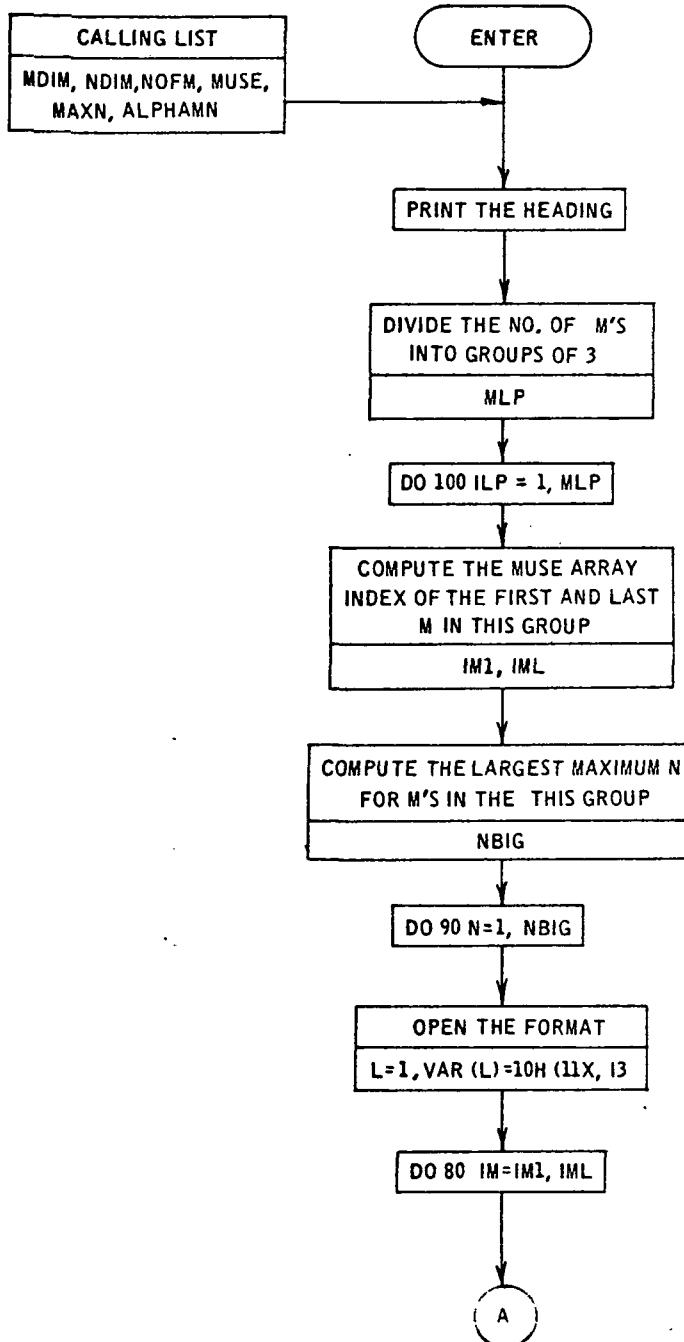

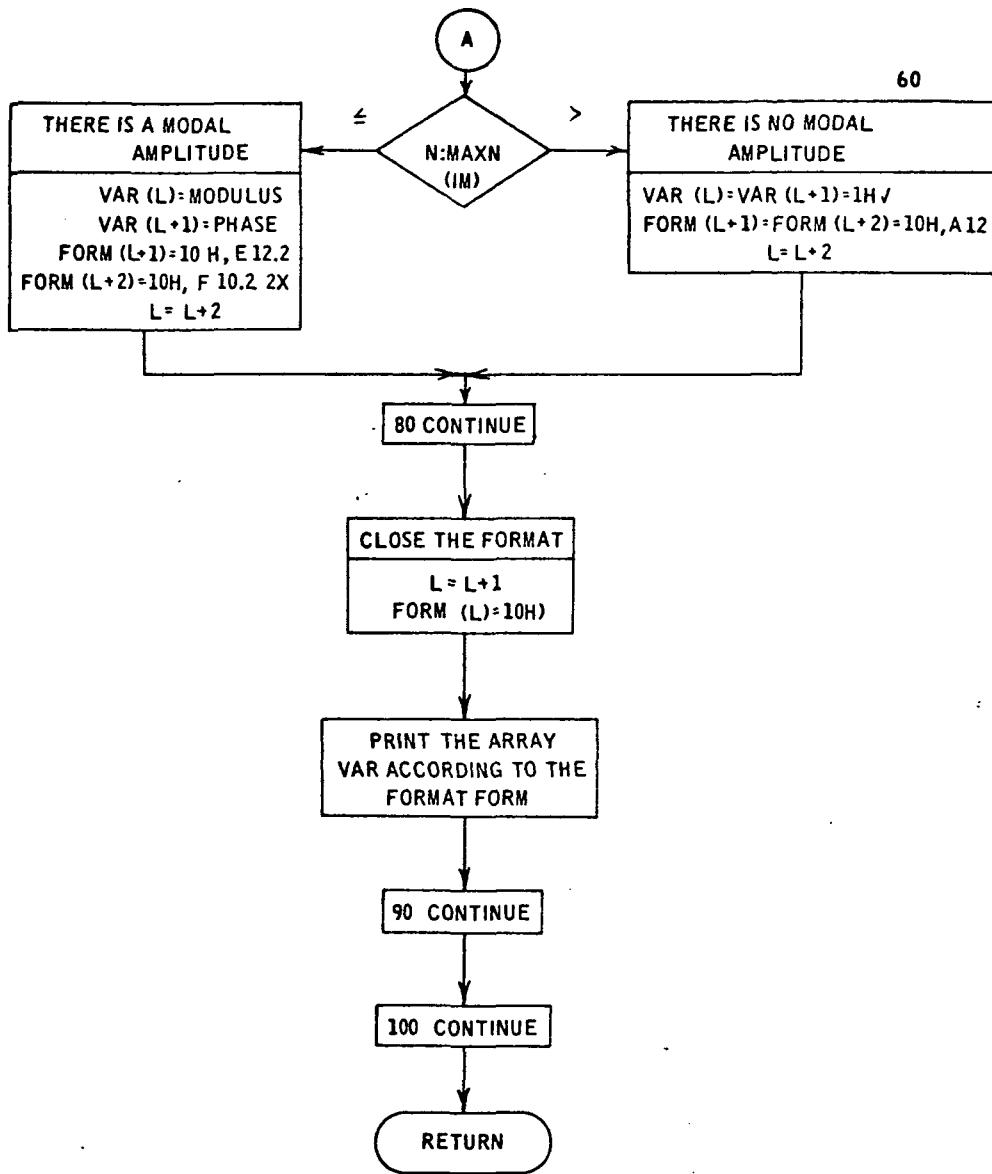

```

SUBROUTINE PRNTOUT(MDIM,NDIM,NOFM,MUSE,MAXN,ALPHAM)
C PURPOSE      STANDARDIZED MODAL AMPLITUDE PRINTOUT
C
DIMENSION MUSE(MDIM),MAXN(MDIM),VAR(6),FORM(8)
COMPLEX ALPHAMN(NDIM,MDIM),ALPHA
DATA ME,BLNU,RAOTODG /4H     ,1H +57.29577951308232/
REAL MODULUS
C
WRITE(6,10)
10 FORMAT(1HO,1IX,*MODAL AMPLITUDES = (MODULUS,PHASE)*/  

1HO,13X,*PHASE.LT.180 DEG AND PHASE.GT.-180 DEG*)
C
C           COMPUTE THE NUMBER OF M IN SETS OF 3
C
MLP =(NOFM-1)/3 + 1
C
C           LOOP ON SETS OF M, COMPUTING THE FIRST AND LAST M
C
DO 100 ILP=1,MLP
IM1 = 3*(ILP-1)+1
IML = MIN0(IM1+2,NOFM)
C
C           PRINT THE M AND COLUMN HEADING N
C
WRITE(6,20). (ME,MUSE(IM),IM=IM1,IML)
20 FORMAT(1HO,13X, 3(9X,A4, 14,7X) )
WRITE(6,30)
30 FORMAT(13X,*N*)
C
C           COMPUTE THE LARGEST N OVER ALL MIN THIS SET
C
NBIG = 1
DO 40 IM=IM1,IML
40 NBIG = MAX0(MAXN(IM),NBIG)
C
C           LOOPING ON N, CONSTRUCT THE FORMAT
C
DO 90 N=1,NBIG
C
C           OPEN THE FORMAT AND SET N PRINT FORMAT
C
L = 1
FORM(1)=1OH(1IX,13
C
C           LOOP ON M, FILLING THE VARIABLE AND FORMAT
C
DO 80 IM=IM1,IML
C
C           DECISION ON TYPE OF ELEMENT
C
IF( N-MAXN(IM) )50,50,60

```

```

C          MODAL AMPLITUDE HERE ONLY

50 ALPHA = ALPHAMN(N,IM)
MODULUS = CABS(ALPHA)
IF(MODULUS) 53,52,53
52 PHASE = 0.
GO TO 55
53 PHASE = ATAN2( AIMAG(ALPHA),REAL(ALPHA) )*RAOT00G
55 VAR(L) = MODULUS
L = L+1
FORM(L) = 10H,E12.2
VAR(L) = PHASE
L = L+1
FORM(L) = 10H,F10.2,2X
GO TO 80
60 VAR(L) = BLNK
L = L+1
FORM(L) = 10H,A12
VAR(L) = BLNK
L = L+1
FORM(L) = 10H,A12
C
80 CONTINUE
C          COMPUTE NUMBER OF WORDS IN FORMAT AND SET LAST ELEMENT
C
L = L + 1
FORM(L)=10H
C
L = L - 2
WRITE(6,FORM) N,(VAR(I),I=1,L)
C
90 CONTINUE
C
100 CONTINUE
C
RETURN
END

```

### 3.0 TEST CASE RESULTS

The purpose of these test cases is to demonstrate the different options included in the four subroutine packages.

The test cases executed with primary subroutine AAAAA include the evaluation of several options that are common to all four packages. The test cases with the other three packages demonstrate options that are unique for each one of them.

The test cases for the packages AAAAA and BBCAA include base cases. The inputs used for the base cases serve as reference inputs. The inputs for the other test cases are equal to the reference inputs except for one or a few input parameters.

#### 3.1 Primary Subroutine AAAAA

##### Case

- 1        Base case:  
            Viscous wakes interaction between inlet stator and rotor
- 2        Viscous wakes interaction between rotor and outlet stator:  
            ARMISC(5) = ISOROS = 2.
- 3        Base case with:  
            ARMISC(14) = harmonic index = 2.
- 4        Base case with:  
            ARMISC(4) = 1. indicates downstream propagation
- 5        Base case with:  
            ARMISC(38) = 1. indicates non compact source theory

Case

- 6       Base case with:  
          ARMISC(13) - .1 indicates wake skewness at rotor
- 7       Base case with:  
          AR(1,J,K) = 0. indicates average input values in the  
          AR array only.

### 3.1.1 Card Image of Main Driver Input

AAAAA							
.2	.0	.35	-1.	1.	.0	.875	10.
.0	15.				1.	-1.	
.0							
3.							
	1	1	0				
2.	2.		.0		.0	2.	.0
2.	2.						
.675	.15		.01		6.28	.5	.53
.05	.05						
.35	.2						.5
.0	.0						
1.	.1						.56
.1	.1						
2.	2.		.0		.0	2.	2.
2.	2.						
.675	.15		.01		6.28	.695	.59
.065	.06						
.35	.2						.5
.1	.1						
1.	.1						.8
.03	.02						.675
.0	.2		.35		2.	.0	.375
10.	15.					1.	
-1.							
3.							
	0	1	1				
2.	2.		.0		.0	2.	2.
2.	2.						
.675	.15		.01		6.28	.695	.59
.065	.06						
.35	.2						.5
.1	.1						
1.	.1						.8
.03	.02						.675
2.	2.		.0		.0	2.	0
2.	2.						
.675	.15		.01		6.28	.63	.5
.15	.1						
.35	.2						.59
.15	.1						
1.	.1						.675
.15	.1						
.2	.0		.35		1.	.0	.375
.0	15.					2.	-1.
.0							
3.							
	1	1	0				
2.	2.		.0		.0	2.	.0

2.	2.						
.675	.15		.01		6.28	.5	.53
.05	.05						.5
.35	.2						.5
.0	.0						
1.	.1						.56
.1	.1						
2.	2.		.0		.0	2.	2.
2.	2.						.0
.675	.15		.01		6.28	.695	.59
.065	.06						.5
.35	.2						.5
.1	.1						
1.	.1						.8
.03	.02						.675
.2	.0		.35	1.	1.	.0	
.0	15.					1.	
.0							.375
3.							10.
1	1	0					
2.	2.		.0		.0	.0	.0
2.	2.						
.675	.15		.01		6.28	.5	.53
.05	.05						.5
.35	.2						.5
.0	.0						
1.	.1						.56
.1	.1						
2.	2.		.0		.0	2.	2.
2.	2.						.0
.675	.15		.01		6.28	.695	.59
.065	.06						.5
.35	.2						.5
.1	.1						
1.	.1						.8
.03	.02						.675
.2	.0		.35	-1.	1.	.0	
.0	15.					1.	
.0							.375
3.							10.
1	1	0					
2.	2.		.0		.0	.0	.0
2.	2.						
.675	.15		.01		6.28	.5	.53
.05	.05						.5
.35	.2						.5
.0	.0						
1.	.1						.56
.1	.1						
2.	2.		.0		.0	2.	.0

2.	2.							
.675	.15		.01		6.28	.695	.59	.5
.065	.06							
.35	.2					.59	.5	
.1	.1							
1.	.1					.8	.675	
.03	.02							
.2	.0		.35	-1.	1.	.0	.875	10.
.0	15.				.1	1.	-1.	
.0								
3.								

1	1	0						
2.	2.	0	.0		.0	.0	2.	.0
2.	2.							
.675	.15		.01		6.28	.5	.53	.5
.05	.05							
.35	.2						.5	
.0	.0							
1.	.1						.56	
.1	.1							
2.	2.		.0		.0	2.	2.	.0
2.	2.							
.675	.15		.01		6.28	.695	.59	.5
.065	.06							
.35	.2					.59	.5	
.1	.1							
1.	.1					.8	.675	
.03	.02							
.2	.0		.35	-1.	1.	.0	.875	10.
.0	15.				.1	1.	-1.	
.0								
3.								

1	1	0						
.675	.15		.01		6.28	.5	.53	.5
.05	.05							
.675	.15		.01		6.28	.695	.59	.5
.065	.06							

### 3.1.2 Primary Subroutine Input/Output

SUBROUTINE AAAAA

INPUT FOR CASE 1

ARRAY ARMISC

INDEX	VALUE	INDEX	VALUE	INDEX	VALUE	INDEX	VALUE
1	.2000	11	-0.0000	21	-0.0000	31	-0.0000
2	0.0000	12	-0.0000	22	-0.0000	32	-0.0000
3	.3500	13	-0.0000	23	-0.0000	33	-0.0000
4	-1.0000	14	1.0000	24	-0.0000	34	-0.0000
5	1.0000	15	-1.0000	25	3.0000	35	-3.0000
6	0.0000	16	-0.0000	26	-0.0000	36	-0.0000
7	.8750	17	0.0000	27	-0.0000	37	-0.0000
8	10.0000	18	-0.0000	28	-0.0000	38	-0.0000
9	0.0000	19	-0.0000	29	-0.0000	39	-0.0000
10	15.0000	20	-0.0000	30	-0.0000	40	-0.0000

ARRAY AR

K = 1

J =	1	2	3	4	5	6
I						
1	2.00000	2.00000	-0.00000	0.00000	-0.00000	0.00000
2	.67500	.15000	-0.00000	.01000	-0.00000	5.23000
3	.35000	.20000	-0.00000	-0.00000	-0.00000	-0.00000
4	1.00000	.10000	-0.00000	-0.00000	-0.00000	-0.00000
J =	7	8	9	10	11	
I						
1	0.00000	2.00000	0.00000	2.00000	2.00000	
2	.50000	.53000	.50000	.05000	.05000	
3	-0.00000	.50000	-0.00000	0.00000	0.00000	
4	-0.00000	.56000	-0.00000	.10000	.10000	

K = 2

J =	1	2	3	4	5	6
I						
1	2.00000	2.00000	-0.00000	0.00000	-0.00000	0.00000
2	.67500	.15000	-0.00000	.01000	-0.00000	5.23000
3	.35000	.20000	-0.00000	-0.00000	-0.00000	-0.00000
4	1.00000	.10000	-0.00000	-0.00000	-0.00000	-0.00000
J =	7	8	9	10	11	
I						
1	2.00000	2.00000	0.00000	2.00000	2.00000	
2	.59500	.59000	.50000	.05500	.05500	
3	.59000	.50000	-0.00000	.10000	.10000	
4	.80000	.67500	-0.00000	.03000	.02000	

MODAL AMPLITUDES = (MODULUS,PHASE)

PHASE.LT.180 DEG AND PHASE.GT.-180 DEG

N	M = -5	M = 5
1	4.59E-03	-14.05
2	8.30E-03	-44.27
3	8.70E-03	-45.33
		2.38E-03
		1.28E-03
		1.80E-03
		65.29

SUBROUTINE AAAAA

INPUT FOR CASE 2

ARRAY ARMISC

INDEX	VALUE	INDEX	VALUE	INDEX	VALUE	INDEX	VALUE
1	0.0000	11	-0.0000	21	-0.0000	31	-0.0000
2	.2000	12	-0.0000	22	-0.0000	32	-0.0000
3	.3500	13	-0.0000	23	-0.0000	33	-0.0000
4	-1.0000	14	1.0000	24	-0.0000	34	-0.0000
5	2.0000	15	-0.0000	25	3.0000	35	-0.0000
6	0.0000	16	0.0000	26	-0.0000	36	-0.0000
7	.8750	17	-1.0000	27	-0.0000	37	-0.0000
8	-0.0000	18	-0.0000	28	-0.0000	38	-0.0000
9	10.0000	19	-0.0000	29	-0.0000	39	-0.0000
10	15.0000	20	-0.0000	30	-0.0000	40	-0.0000

ARRAY AR

K = 2

J =	1	2	3	4	5	6
I						
1	2.00000	2.00000	-0.00000	0.00000	-0.00000	0.00000
2	.67500	.15000	-0.00000	.01000	-0.00000	.528000
3	.35000	.20000	-0.00000	-0.00000	-0.00000	-0.00000
4	1.00000	.10000	-0.00000	-0.00000	-0.00000	-0.00000
J =	7	8	9	10	11	
I						
1	2.00000	2.00000	0.00000	2.00000	2.00000	
2	.69500	.59000	.50000	.05500	.05000	
3	.59000	.50000	-0.00000	.10000	.10000	
4	.80000	.67500	-0.00000	.03000	.02000	

K = 3

J =	1	2	3	4	5	6
I						
1	2.00000	2.00000	-0.00000	0.00000	-0.00000	0.00000
2	.67500	.15000	-0.00000	.01000	-0.00000	.528000
3	.35000	.20000	-0.00000	-0.00000	-0.00000	-0.00000
4	1.00000	.10000	-0.00000	-0.00000	-0.00000	-0.00000
J =	7	8	9	10	11	
I						
1	2.00000	0.00000	0.00000	2.00000	2.00000	
2	.63000	.03000	.50000	.03000	.10000	
3	.59000	-0.03000	-0.03000	.15000	.10000	
4	.67500	-0.00000	-0.00000	.15000	.10000	

MODAL AMPLITUDES = (MODULUS,PHASE)

PHASE.LT.180 DEG AND PHASE.GT.-180 DEG

	M = -5		M = 5
N			
1	4.93E-04	-33.39	3.22E-03
2	1.04E-03	-.28	7.50E-03
3	3.85E-03	-18.56	1.11E-02

## SUBROUTINE AAAAA

INPUT FOR CASE 3

## ARRAY ARMSC

INDEX	VALUE	INDEX	VALUE	INDEX	VAL JE	INDEX	VALUE
1	.2000	11	-0.0000	21	-0.0000	31	-0.0000
2	0.0000	12	-0.0000	22	-0.0000	32	-0.0000
3	.3500	13	-0.0000	23	-0.0000	33	-0.0000
4	-1.0000	14	2.0000	24	-0.0000	34	-0.0000
5	1.0000	15	-1.0000	25	3.0000	35	-0.0000
6	0.0000	16	-0.0000	26	-0.0000	36	-0.0000
7	.8750	17	0.0000	27	-0.0000	37	-0.0000
8	10.0000	18	-0.0000	28	-0.0000	38	-0.0000
9	0.0000	19	-0.0000	29	-0.0000	39	-0.0000
10	15.0000	20	-0.0000	30	-0.0000	40	-0.0000

## ARRAY AR

K = 1

J =	1	2	3	4	5	6
I						
1	2.00000	2.00000	-0.00000	0.00000	-0.00000	0.00000
2	.67500	.15000	-0.00000	.01000	-0.00000	.023000
3	.35000	.20000	-0.00000	-0.00000	-0.00000	-0.00000
4	1.00000	.10000	-0.00000	-0.00000	-0.00000	-0.00000
J =	7	8	9	10	11	
I						
1	0.00000	2.00000	0.00000	2.00000	2.00000	
2	.50000	.53000	.50000	.05000	.05000	
3	-0.00000	.50000	-0.00000	0.00000	0.00000	
4	-0.00000	.56000	-0.00000	.10000	.10000	

K = 2

J =	1	2	3	4	5	6
I						
1	2.00000	2.00000	-0.00000	0.00000	-0.00000	0.00000
2	.67500	.15000	-0.00000	.01000	-0.00000	.023000
3	.35000	.20000	-0.00000	-0.00000	-0.00000	-0.00000
4	1.00000	.10000	-0.00000	-0.00000	-0.00000	-0.00000
J =	7	8	9	10	11	
I						
1	2.00000	2.00000	0.00000	2.00000	2.00000	
2	.69500	.59000	.50000	.06500	.06000	
3	.59000	.50000	-0.00000	.10000	.10000	
4	.80000	.67500	-0.00000	.03000	.02000	

MODAL AMPLITUDES = (MODULUS,PHASE)

PHASE.LT.180 DEG AND PHASE.GT.-180 DEG

N	M = -20	M = -10	M = 0
1	1.97E-03 -103.96	2.08E-03 -21.55	3.62E-03 51.12
2	3.88E-03 -170.45	3.16E-03 -87.34	2.24E-03 1.81
3		3.71E-03 -121.19	7.61E-04 23.53
4		3.78E-03 -122.34	6.79E-04 -40.33
5		3.32E-03 -102.22	4.20E-04 130.65
6		7.37E-03 -63.88	3.95E-04 125.31
7			4.13E-04 -44.63

N	M = 10	M = 20
1	1.92E-03 -176.85	1.23E-03 -68.23
2	1.75E-03 148.94	2.98E-04 58.23
3	8.02E-04 125.87	
4	4.62E-04 -33.33	
5	1.80E-03 -37.76	
6	6.90E-03 -24.53	

## SUBROUTINE AAAAA

INPUT FOR CASE 4

## ARRAY ARMISC

INDEX	VALUE	INDEX	VALUE	INDEX	VALUE	INDEX	VALUE
1	.2000	11	-0.0000	21	-0.0000	31	-0.0000
2	0.0000	12	-0.0000	22	-0.0000	32	-0.0000
3	.3500	13	-0.0000	23	-0.0000	33	-0.0000
4	1.0000	14	1.0000	24	-0.0000	34	-0.0000
5	1.0000	15	-1.0000	25	3.0000	35	-0.0000
6	0.0000	16	-0.0000	26	-0.0000	36	-0.0000
7	.8750	17	0.0000	27	-0.0000	37	-0.0000
8	10.0000	18	-0.0000	28	-0.0000	38	-0.0000
9	0.0000	19	-0.0000	29	-0.0000	39	-0.0000
10	15.0000	20	-0.0000	30	-0.0000	40	-0.0000

## ARRAY AR

K = 1

J =	1	2	3	4	5	6
I						
1	2.00000	2.00000	-0.00000	0.00000	-0.00000	0.00000
2	.67500	.15000	-0.00000	.01000	-0.00000	.52300
3	.35000	.20000	-0.00000	-0.00000	-0.00000	-0.00000
4	1.00000	.10000	-0.00000	-0.00000	-0.00000	-0.00000
J =	7	8	9	10	11	
I						
1	0.00000	2.00000	0.00000	2.00000	2.00000	
2	.50000	.53000	.50000	.05000	.35000	
3	-0.00000	.50000	-0.00000	0.30000	0.00000	
4	-0.00000	.56000	-0.00000	.10000	.10000	

K = 2

J =	1	2	3	4	5	6
I						
1	2.00000	2.00000	-0.00000	0.00000	-0.00000	0.00000
2	.67500	.15000	-0.00000	.01000	-0.00000	.523000
3	.35000	.20000	-0.00000	-0.00000	-0.00000	-0.00000
4	1.00000	.10000	-0.00000	-0.00000	-0.00000	-0.00000
J =	7	8	9	10	11	
I						
1	2.00000	2.00000	0.00000	2.00000	2.00000	
2	.59500	.59000	.50000	.05000	.35000	
3	.59000	.50000	-0.00000	.10000	.10000	
4	.80000	.67500	-0.00000	.03000	.02000	

NODAL AMPLITUDES = (MODULUS,PHASE)

PHASE.LT.-180 DEG AND PHASE.GT.-180 DEG

N	M = -5	M = 5
1	3.03E-04	-63.08
2	2.76E-03	-44.44
3	5.50E-03	-43.93
		2.69E-03    96.61
		4.22E-03    67.53
		4.60E-03    43.55

## SUBROUTINE AAAAA

INPUT FOR CASE 5

## ARRAY ARMISC

INDEX	VALUE	INDEX	VALUE	INDEX	VALUE	INDEX	VALUE
1	.2000	11	-0.0000	21	-0.0000	31	-0.0000
2	0.0000	12	-0.0000	22	-0.0000	32	-0.0000
3	.3500	13	-0.0000	23	-0.0000	33	-0.0000
4	-1.0000	14	1.0000	24	-0.0000	34	-0.0000
5	1.0000	15	-1.0000	25	3.0000	35	-0.0000
6	0.0000	16	-0.0000	26	-0.0000	36	-0.0000
7	.8750	17	0.0000	27	-0.0000	37	-0.0000
8	10.0000	18	-0.0000	28	-0.0000	38	1.0000
9	0.0000	19	-0.0000	29	-0.0000	39	-0.0000
10	15.0000	20	-0.0000	30	-0.0000	40	-0.0000

## ARRAY AR

K = 1

J =	1	2	3	4	5	6
I						
1	2.00000	2.00000	-0.00000	0.00000	-0.00000	0.00000
2	.67500	.15000	-0.00000	.01000	-0.00000	.52500
3	.35000	.20000	-0.00000	-0.00000	-0.00000	-0.00000
4	1.00000	.10000	-0.00000	-0.00000	-0.00000	-0.00000
J =	7	8	9	10	11	
I						
1	0.00000	2.00000	0.00000	2.00000	2.00000	
2	.50000	.53000	.50000	.05000	.35000	
3	-0.00000	.50000	-0.00000	0.00000	0.30000	
4	-0.00000	.56000	-0.00000	.10000	.10000	

K = 2

J =	1	2	3	4	5	6
I						
1	2.00000	2.00000	-0.00000	0.00000	-0.00000	0.00000
2	.67500	.15000	-0.00000	.01000	-0.00000	.52500
3	.35000	.20000	-0.00000	-0.00000	-0.00000	-0.00000
4	1.00000	.10000	-0.00000	-0.00000	-0.00000	-0.00000
J =	7	8	9	10	11	
I						
1	2.00000	2.00000	0.00000	2.00000	2.00000	
2	.59500	.52000	.50000	.05300	.36000	
3	.59000	.50000	-0.10000	.00000	.10000	
4	.80000	.67500	-0.00000	.03000	.02000	

MODAL AMPLITUDES = {MODULUS,PHASE}

PHASE.LT.180 DEG AND PHASE.GT.-180 DEG

	M = -5		M = 5	
N				
1	4.09E-03	-35.59	2.35E-03	-120.74
2	7.29E-03	-64.54	1.27E-03	-159.56
3	6.94E-03	-57.70	1.88E-03	32.13

## SUBROUTINE AAAAA

INPUT FOR CASE 6

## ARRAY ARMISC

INDEX	VALUE	INDEX	VALUE	INDEX	VALUE	INDEX	VALUE
1	.2000	11	-0.0000	21	-0.0000	31	-0.0000
2	0.0000	12	-0.0000	22	-0.0000	32	-0.0000
3	.3500	13	.1000	23	-0.0000	33	-0.0000
4	-1.0000	14	1.0000	24	-0.0000	34	-0.0000
5	1.0000	15	-1.0000	25	3.0000	35	-0.0000
6	0.0000	16	-0.0000	26	-0.0000	36	-0.0000
7	.8750	17	0.0000	27	-0.0000	37	-0.0000
8	10.0000	18	-0.0000	28	-0.0000	38	-0.0000
9	0.0000	19	-0.0000	29	-0.0000	39	-0.0000
10	15.0000	20	-0.0000	30	-0.0000	40	-0.0000

## ARRAY AR

K = 1

J =	1	2	3	4	5	6
I						
1	2.00000	2.00000	-0.00000	0.00000	-0.00000	0.00000
2	.67500	.15000	-0.00000	.01000	-0.00000	.528000
3	.35000	.20000	-0.00000	-0.00000	-0.00000	-0.00000
4	1.00000	.10000	-0.00000	-0.00000	-0.00000	-0.00000
J =	7	8	9	10	11	
I						
1	0.00000	2.00000	0.00000	2.00000	2.00000	
2	.50000	.53000	.50000	.05000	.05000	
3	-0.00000	.50000	-0.00000	0.00000	0.00000	
4	-0.00000	.56000	-0.00000	.10000	.10000	

K = 2

J =	1	2	3	4	5	6
I						
1	2.00000	2.00000	-0.00000	0.00000	-0.00000	0.00000
2	.67500	.15000	-0.00000	.01000	-0.00000	.528000
3	.35000	.20000	-0.00000	-0.00000	-0.00000	-0.00000
4	1.00000	.10000	-0.00000	-0.00000	-0.00000	-0.00000
J =	7	8	9	10	11	
I						
1	2.00000	2.00000	0.00000	2.00000	2.00000	
2	.69500	.59000	.50000	.05000	.05000	
3	.59000	.50000	-0.00000	.10000	.10000	
4	.80000	.57500	-0.00000	.03000	.02000	

MODAL AMPLITUDES = (MODULUS,PHASE)

PHASE.LT.180 DEG AND PHASE.GT.-180 DEG

M	M = -5	M = 5
N		
1	3.13E-03      60.47	2.73E-03      -31.72
2	9.15E-03      -10.21	1.50E-03      -84.26
3	1.05E-02      -38.34	1.75E-03      80.62

SUBROUTINE AAAAA

INPUT FOR CASE 7

ARRAY ARMISC

INDEX	VALUE	INDEX	VALUE	INDEX	VALUE	INDEX	VALUE
1	-2.000	11	-0.0000	21	-0.0000	31	-0.0000
2	0.0000	12	-0.0000	22	-0.0000	32	-0.0000
3	.3500	13	-0.0000	23	-0.0000	33	-0.0000
4	-1.0000	14	1.0000	24	-0.0000	34	-0.0000
5	1.0000	15	-1.0000	25	3.0000	35	-0.0000
6	0.0000	16	-0.0000	26	-0.0000	36	-0.0000
7	.8750	17	0.0000	27	-0.0000	37	-0.0000
8	10.0000	18	-0.0000	28	-0.0000	38	-0.0000
9	0.0000	19	-0.0000	29	-0.0000	39	-0.0000
10	15.0000	20	-0.0000	30	-0.0000	40	-0.0000

ARRAY AR

K = 1

J =	1	2	3	4	5	6
I						
1	-0.00000	-0.00000	-0.00000	-0.00000	-0.00000	-0.00000

1      .67500      .15000      -0.00000      .01000      -0.00000      6.28000

J =	7	8	9	10	11	12
I						
1	-0.00000	-0.00000	-0.00000	-0.00000	-0.00000	-0.00000
2	.50000	.53000	.50000	.05000	.05000	.05000

K = 2

J =	1	2	3	4	5	6
I						
1	-0.00000	-0.00000	-0.00000	-0.00000	-0.00000	-0.00000

1      .67500      .15000      -0.00000      .01000      -0.00000      6.28000

J =	7	8	9	10	11	12
I						
1	-0.00000	-0.00000	-0.00000	-0.00000	-0.00000	-0.00000
2	.69500	.59000	.50000	.06500	.06000	.06000

MODAL AMPLITUDES = (MODULUS,PHASE)

PHASE.LT.180 DEG AND PHASE.GT.-180 DEG

N	M = -5	M = +5
1	4.99E-03	-17.19
2	8.05E-03	-68.00
3	1.03E-02	-105.93
		2.96E-03
		2.65E-03
		5.36E-04
		-79.90
		-106.86
		-153.56

### 3.2 Primary Subroutine AABAA

#### Case

1        Inlet stator-rotor interaction, rotor is sound source:

ARMISC(5) = ISOROS = 1.  
ARMISC(18) = IAERO = 1.

2        Inlet stator-rotor interaction, inlet stator is sound source:

ARMISC(5) = ISOROS = 1.  
ARMISC(18) = IAERO = -1.

3        Rotor-outlet stator interaction, outlet stator is sound source:

ARMISC(5) = ISOROS = 2.  
ARMISC(18) = IAERO = 1.

4        Rotor-outlet stator interaction, rotor is sound source:

ARMISC(5) = ISOROS = 2.  
ARMISC(18) = IAERO = -1.

3.2.1 Card Image of Main Driver Input

AABAA								
.2	.0	.35	-1.	1.	.0	.875	10.	
.0	15.				1.	-1.		
.0	1.	2.	2.	.0				
2.								
1	1	0						
2.	2.		.0		.0	2.	.0	
2.	2.							
.675	.15	.01		6.28	.5	.53	.5	
.1	.05							
.35	.2					.5		
.0	.0							
1.	.1					.56		
.2	.1							
2.	2.	.0		.0	2.	2.	.0	
2.	2.							
.675	.15	.01		6.28	.695	.59	.5	
.15	.075							
.35	.2				.59	.5		
.2	.1							
1.	.1				.8	.675		
.1	.05							
.2	.0	.35	-1.	1.	.0	.875	10.	
.0	15.				1.	.0		
1.	-1.	2.	2.	.0				
2.								
1	1	0						
2.	2.		.0		.0	2.	.0	
2.	2.							
.675	.15	.01		6.28	.5	.53	.5	
.1	.05							
.35	.2					.5		
.0	.0							
1.	.1					.56		
.2	.1							
2.	2.	.0		.0	2.	2.	.0	
2.	2.							
.675	.15	.01		6.28	.695	.59	.5	
.15	.075							
.35	.2				.59	.5		
.2	.1							
1.	.1				.8	.675		
.1	.05							
.0	.2	.35	-1.	2.	.0	.875	.0	
10.	15.				1.			
-1.	1.	.0	2.	2.				
2.								
0	1	1						
2.	2.		.0		.0	2.	.0	

2.	2.						
.675	.15						
.15	.375						
.35	.2						
.2	.1						
1.	.1						
.1	.35						
2.	2.						
2.	2.						
.675	.15						
.2	.1						
.35	.2						
.2	.1						
1.	.1						
.2	.1						
.0	.2	.35	-1.	2.	.0	.875	.0
10.	.15.				1.		
.0	-1.	0.	2.	2.			1.
2.							

0	1	1					
2.	2.						
2.	2.						
.675	.15						
.15	.075						
.35	.2						
.2	.1						
1.	.1						
.1	.35						
2.	2.						
2.	2.						
.675	.15						
.2	.1						
.35	.2						
.2	.1						
1.	.1						
.2	.1						

### 3.2.2 Primary Subroutine Input/Output

SUBROUTINE AABAA

INPUT FOR CASE 1

ARRAY ARMISC

INDEX	VALUE	INDEX	VALUE	INDEX	VALUE	INDEX	VALUE
1	.2000	11	-0.0000	21	0.0000	31	-0.0000
2	0.0000	12	-0.0000	22	-0.0000	32	-0.0000
3	.3500	13	-0.0000	23	-0.0000	33	-0.0000
4	-1.0000	14	1.0000	24	-0.0000	34	-0.0000
5	1.0000	15	-1.0000	25	2.0000	35	-0.0000
6	0.0000	16	-0.0000	26	-0.0000	36	-0.0000
7	.8750	17	0.0000	27	-0.0000	37	-0.0000
8	10.0000	18	1.0000	28	-0.0000	38	-0.0000
9	0.0000	19	2.0000	29	-0.0000	39	-0.0000
10	15.0000	20	2.0000	30	-0.0000	40	-0.0000

ARRAY AR

K = 1

J =	1	2	3	4	5	6
I						
1	2.00000	2.00000	-0.00000	0.00000	-0.00000	0.00000
2	.67500	.15000	-0.00000	.01000	-0.00000	6.28000
3	.35000	.20000	-0.00000	-0.00000	-0.00000	-0.00000
4	1.00000	.10000	-0.00000	-0.00000	-0.00000	-0.00000

J = 7      8      9      10      11

I					
1	0.00000	2.00000	0.00000	2.00000	2.00000
2	.50000	.53000	.50000	.10000	.50000
3	-0.00000	.50000	-0.00000	0.00000	0.00000
4	-0.00000	.56000	-0.00000	.20000	.10000

K = 2

J =	1	2	3	4	5	6
I						
1	2.00000	2.00000	-0.00000	0.00000	-0.00000	0.00000
2	.67500	.15000	-0.00000	.01000	-0.00000	6.28000
3	.35000	.20000	-0.00000	-0.00000	-0.00000	-0.00000
4	1.00000	.10000	-0.00000	-0.00000	-0.00000	-0.00000

J = 7      8      9      10      11

I					
1	2.00000	2.00000	0.00000	2.00000	2.00000
2	.59500	.59000	.59000	.50000	.59000
3	.59000	.50000	-0.00000	.20000	.10000
4	.80000	.67500	-0.00000	.10000	.35000

MODAL AMPLITUDES = (MODULUS,PHASE)

PHASE.LT.180 DEG AND PHASE.GT.-180 DEG

N	M = -5	M = 5
1	3.17E-03	-105.54
2	1.28E-03	-55.62
3	4.04E-05	170.01
		1.28E-02
		2.20E-04
		9.80E-04
		118.40

## SUBROUTINE AABAA

INPUT FOR CASE 2

## ARRAY ARMISC

INDEX	VALUE	INDEX	VALUE	INDEX	VALUE	INDEX	VALUE
1	.2000	11	-0.0000	21	0.0000	31	-0.0000
2	0.0000	12	-0.0000	22	-0.0000	32	-0.0000
3	.3500	13	-0.0000	23	-0.0000	33	-0.0000
4	-1.0000	14	1.0000	24	-0.0000	34	-0.0000
5	1.0000	15	0.0000	25	2.0000	35	-0.0000
6	0.0000	16	-0.0000	26	-0.0000	36	-0.0000
7	.8750	17	1.0000	27	-0.0000	37	-0.0000
8	10.0000	18	-1.0000	28	-0.0000	38	-0.0000
9	0.0000	19	2.0000	29	-0.0000	39	-0.0000
10	15.0000	20	2.0000	30	-0.0000	40	-0.0000

## ARRAY AR

K = 1

J =	1	2	3	4	5	6
I						
1	2.00000	2.00000	-0.00000	0.00000	-0.00000	0.00000
2	.67500	.15000	-0.00000	.01000	-0.00000	6.28000
3	.35000	.20000	-0.00000	-0.00000	-0.00000	-0.00000
4	1.00000	.10000	-0.00000	-0.00000	-0.00000	-0.00000
J =	7	8	9	10	11	
I						
1	0.00000	2.00000	0.00000	2.00000	2.00000	
2	.50000	.53000	.50000	.10000	.05000	
3	-0.00000	.50000	-0.00000	0.00000	.00000	
4	-0.00000	.56000	-0.00000	.20000	.10000	

K = 2

J =	1	2	3	4	5	6
I						
1	2.00000	2.00000	-0.00000	0.00000	-0.00000	0.00000
2	.67500	.15000	-0.00000	.01000	-0.00000	6.28000
3	.35000	.20000	-0.00000	-0.00000	-0.00000	-0.00000
4	1.00000	.10000	-0.00000	-0.00000	-0.00000	-0.00000
J =	7	8	9	10	11	
I						
1	2.00000	2.00000	0.00000	2.00000	2.00000	
2	.69500	.59000	.50000	.15000	.07500	
3	.59000	.50000	-0.00000	.20000	.10000	
4	.80000	.67500	-0.00000	.10000	.05000	

MODAL AMPLITUDES = (MODULUS,PHASE)

PHASE.LT.180 DEG AND PHASE.GT.-180 DEG

N	M = -5	M = 5
1	4.72E-03      139.39	1.54E-02      174.89
2	3.14E-02      128.49	5.07E-02      132.56
3	7.46E-02      116.52	8.94E-02      114.36

## SUBROUTINE AABAA

INPUT FOR CASE 3

## ARRAY ARMISC

INDEX	VALUE	INDEX	VALUE	INDEX	VALUE	INDEX	VALUE
1	0.0000	11	-0.0000	21	2.0000	31	-0.0000
2	.2000	12	-0.0000	22	-0.0000	32	-0.0000
3	.3500	13	-0.0000	23	-0.0000	33	-0.0000
4	-1.0000	14	1.0000	24	-0.0000	34	-0.0000
5	2.0000	15	-0.0000	25	2.0000	35	-0.0000
6	0.0000	16	0.0000	26	-0.0000	36	-0.0000
7	.8750	17	-1.0000	27	-0.0000	37	-0.0000
8	0.0000	18	1.0000	28	-0.0000	38	-0.0000
9	10.0000	19	0.0000	29	-0.0000	39	-0.0000
10	15.0000	20	2.0000	30	-0.0000	40	-0.0000

## ARRAY AR

K = 2

J =	1	2	3	4	5	6
1						
1	2.00000	2.00000	-0.00000	0.00000	-0.00000	0.00000
2	.67500	.15000	-0.00000	.01000	-0.00000	6.28000
3	.35000	.20000	-0.00000	-0.00000	-0.00000	-0.00000
4	1.00000	.10000	-0.00000	-0.00000	-0.00000	-0.00000
J =	7	8	9	10	11	
1						
1	2.00000	2.00000	0.00000	2.00000	2.00000	
2	.69500	.59000	.59000	.15000	.07500	
3	.59000	.50000	-0.00000	.20000	.10000	
4	.80000	.67500	-0.00000	.10000	.05000	

K = 3

J =	1	2	3	4	5	6
1						
1	2.00000	2.00000	-0.00000	0.00000	-0.00000	0.00000
2	.67500	.15000	-0.00000	.01000	-0.00000	6.28000
3	.35000	.20000	-0.00000	-0.00000	-0.00000	-0.00000
4	1.00000	.10000	-0.00000	-0.00000	-0.00000	-0.00000
J =	7	8	9	10	11	
1						
1	2.00000	0.00000	0.00000	2.00000	2.00000	
2	.53000	.53000	.53000	.25000	.10000	
3	.59000	-0.00000	-0.00000	.20000	.10000	
4	.67500	-0.00000	-0.00000	.20000	.10000	

MODAL AMPLITUDES = (MODULUS,PHASE)

PHASE.LT.180 DEG AND PHASE.GT.-180 DEG

	M = -5		M = 5	
N				
1	1.61E-03	-125.08	6.54E-03	71.63
2	8.74E-04	157.03	3.72E-03	133.00
3	4.39E-03	173.56	1.16E-02	-175.00

## SUBROUTINE AABAA

INPJT FOR CASE 4

## ARRAY ARMISC

INDEX	VALUE	INDEX	VALUE	INDEX	VALUE	INDEX	VALUE
1	0.0000	11	-0.0000	21	2.0000	31	-0.0000
2	.2000	12	-0.0000	22	-0.0000	32	-0.0000
3	.3500	13	-0.0000	23	-0.0000	33	-0.0000
4	-1.0000	14	1.0000	24	-0.0000	34	-0.0000
5	2.0000	15	-0.0000	25	2.0000	35	-0.0000
6	0.0000	16	1.0000	26	-0.0000	36	-0.0000
7	.8750	17	0.0000	27	-0.0000	37	-0.0000
8	0.0000	18	-1.0000	28	-0.0000	38	-0.0000
9	10.0000	19	0.0000	29	-0.0000	39	-0.0000
10	15.0000	20	2.0000	30	-0.0000	40	-0.0000

## ARRAY AR

K = 2

J =	1	2	3	4	5	6
I						
1	2.00000	2.00000	-0.00000	0.00000	-0.00000	0.00000
2	.67500	.15000	-0.00000	.01000	-0.00000	.62800
3	.35000	.20000	-0.00000	-0.00000	-0.00000	-0.00000
4	1.00000	.10000	-0.00000	-0.00000	-0.00000	-0.00000
J =	7	8	9	10	11	
I						
1	2.00000	2.00000	0.00000	2.00000	2.00000	
2	.69500	.59000	.50000	.15000	.07500	
3	.59000	.50000	-0.00000	.20000	.10000	
4	.30000	.67500	-0.00000	.10000	.05000	

K = 3

J =	1	2	3	4	5	6
I						
1	2.00000	2.00000	-0.00000	0.00000	-0.00000	0.00000
2	.67500	.15000	-0.00000	.01000	-0.00000	.62800
3	.35000	.20000	-0.00000	-0.00000	-0.00000	-0.00000
4	1.00000	.10000	-0.00000	-0.00000	-0.00000	-0.00000
J =	7	8	9	10	11	
I						
1	2.00000	0.00000	0.00000	2.00000	2.00000	
2	.63000	.50000	.50000	.20000	.10000	
3	.59000	-0.00000	-0.00000	.20000	.10000	
4	.67500	-0.00000	-0.00000	.20000	.10000	

MODAL AMPLITUDES = (MODULUS,PHASE)

PHASE.LT.180 DEG AND PHASE.GT.-180 DEG

N	M = -5	M = 5
1	1.40E-02    -11.73	4.20E-02    23.32
2	3.39E-02    -55.51	1.96E-02    -19.56
3	4.93E-02    -65.46	4.95E-02    157.81

### 3.3 Primary Subroutine BCDA

#### Case

1 Cone model distortion:

ARMISC(22) = 1. = distortion model selector  
ARMISC(23) = .95 = maximum distortion  
ARMISC(24) = .8 = radial location of maximum distortion

2 Power law distortion model:

ARMISC(22) = 2.  
ARMISC(23) = 1. = exponent q  
AR(2,12,2) = .1 =  $a_1$ , first cosine coefficient of the  
Fourier series representation of the  
incident velocity distortion

3 Fourier series coefficient input for incident velocity  
distortion:

ARMISC(22) = 4. = The Fourier coefficients of the dis-  
distortion are computed by DISCOEF and  
ARMISC(22) is reset to 3 before used by  
subroutine BCDA

ARMISC(23) = 52. = number of Fourier series coefficients  
to be computed

ARMISC(24) = 1. = MULTFCT

4 Cone model distortion as in case 1, but use of noncompact  
source theory:

ARMISC(38) = 1.

### 3.3.1 Card Image of Main Driver Input

BCDAA

.0	15.	.35	-1.	.0	.75	.0
.0				1.	.0	.0
3.				1.	.95	.8

0	1	0				
2.	2.			.0	2.	2.
2.	2.					.0
.675	.15			6.28	.73	.61
.065	.06					.5
.35	.2				.56	.5
.1	.1					
1.	.1				.9	.725
.03	.02					

		.35	-1.	.0	.75	.0
.0	15.			1.	.0	.0
.0				2.		1.
3.						

0	1	0				
2.	2.			.0	2.	2.
2.	2.					.0
.675	.15			6.28	.73	.61
.065	.06	.1				.5
.35	.2				.56	.5
.1	.1					
1.	.1				.9	.725
.03	.02					

		.35	-1.	.0	.75	.0
.0	15.			1.	.0	.0
.0				4.	52.	1.
3.						

0	1	0				
17.				17.	17.	
.0						
.675	.1			6.28	.73	.62
.35					.56	.5
.68					.733	.614
.72					.754	.528
.74					.764	.635
.76					.775	.642
.77					.780	.645
.78					.785	.649

.79					.790	.652
.80					.795	.656
.81					.800	.659
.82					.806	.663
.83					.811	.666
.84					.816	.670
.85					.827	.677
.86					.837	.684
.87					.858	.697
1.					.9	.725

15	17							
-10.	-9.	-6.	-4.	-3.	-2.	-1.		.0
1.	2.	3.	4.	5.	6.	7.	10.	

.0	.0	.00094	.00282	.00413	.00543	.30641	.00677
.00641	.00543	.00413	.00282	.00094	.0	.0	
.0	.0	.00214	.00659	.00977	.01296	.01534	.01623
.01534	.01296	.00977	.00659	.00214	.0	.0	
.0	.0	.00378	.01202	.01302	.02406	.02862	.03033
.02862	.02406	.01802	.01202	.00378	.0	.0	
.0	.0	.00458	.01477	.02227	.02952	.03559	.03774
.03559	.02952	.02227	.01477	.00458	.0	.0	
.0	.0	.00521	.01736	.02586	.03479	.04158	.04412
.04158	.03479	.02586	.01736	.00521	.0	.0	
.0	.0	.00557	.01851	.02820	.03810	.04563	.04846
.04553	.03810	.02820	.01851	.00557	.0	.0	
.0	.0	.00559	.01987	.02390	.03919	.04704	.05
.04704	.03919	.02890	.01887	.00559	.0	.0	
.0	.0	.00527	.01837	.02782	.03787	.04556	.04846
.04556	.03787	.02782	.01837	.00527	.0	.0	
.0	.0	.00467	.01625	.02516	.03437	.04145	.04412
.04145	.03437	.02516	.01625	.00467	.0	.0	
.0	.0	.00389	.01373	.02137	.02931	.03543	.03774
.03543	.02931	.02137	.01373	.00389	.0	.0	
.0	.0	.00304	.01090	.01705	.02348	.02845	.03033
.02845	.02348	.01705	.01090	.00304	.0	.0	
.0	.0	.00154	.00569	.00900	.01249	.01520	.01623
.01620	.01249	.00900	.00569	.00154	.0	.0	

.0	.0	.00061	.00232	.00370	.00517	.00633	.00677
.00633	.00517	.00370	.00232	.00061	.0	.0	

.0	15.	.35	-1.	.0	.75	.0
.0				1.	.0	.0
.0				1.	.95	.8
3.				1.		
0	1	0				
2.	2.			.0	2.	2.
2.	2.					
.675	.15			6.28	.73	.61
.065	.36					.5
.35	.2				.56	.5
.1	.1					
1.	.1				.9	.725
.03	.02					

### 3.3.2. Primary Subroutine Input/Output

SUBROUTINE BCDAA

INPUT FOR CASE 1

ARRAY ARMISC

INDEX	VALUE	INDEX	VALUE	INDEX	VALUE	INDEX	VALUE
1	-0.0000	11	-0.0000	21	-0.0000	31	-0.0000
2	-0.0000	12	-0.0000	22	1.0000	32	-0.0000
3	.3500	13	-0.0000	23	.9500	33	-0.0000
4	-1.0000	14	1.0000	24	.8000	34	-0.0000
5	-0.0000	15	0.0000	25	3.0000	35	-0.0000
6	0.0000	16	0.0000	26	-0.0000	36	-0.0000
7	.7500	17	0.0000	27	-0.0000	37	-0.0000
8	0.0000	18	-0.0000	28	-0.0000	38	-0.0000
9	0.0000	19	-0.0000	29	-0.0000	39	-0.0000
10	15.0000	20	-0.0000	30	-0.0000	40	-0.0000

ARRAY AR

K = 2

J =	1	2	3	4	5	6
I						
1	2.00000	2.00000	-0.00000	-0.00000	-0.00000	0.00000
2	.67500	.15000	-0.00000	-0.00000	-0.00000	6.23000
3	.35000	.20000	-0.00000	-0.00000	-0.00000	-0.00000
4	1.00000	.10000	-0.00000	-0.00000	-0.00000	-0.00000

J = 7 8 9 10 11

I	1	2	3	4	
1	2.00000	2.00000	0.00000	2.00000	2.00000
2	.73000	.61000	.50000	.06500	.06000
3	.56000	.50000	-0.00000	.10000	.10000
4	.90000	.72500	-0.00000	.03000	.02000

## MODAL AMPLITUDES = (MODULUS,PHASE)

PHASE.LT.180 DEG AND PHASE.GT.-180 DEG

	M = -11	M = -10	M = -9
N 1	3.45E-05    113.90	1.71E-05    -62.43	1.95E-05    121.31
	M = -8	M = -7	M = -6
N 1	1.57E-05    -54.88	1.66E-05    129.00	1.79E-05    -47.07
2	4.19E-05	116.92	1.10E-05    -61.65
	M = -5	M = -4	M = -3
N 1	1.97E-05    136.91	2.19E-05    -39.07	2.43E-05    144.97
2	6.09E-06    115.95	2.39E-06    -87.97	3.16E-06    -7.20
3		2.37E-05    125.25	1.75E-05    -51.00
	M = -2	M = -1	M = 0
N 1	2.66E-05    -30.99	2.90E-05    153.05	3.29E-05    -22.33
2	7.97E-06    157.72	1.33E-05    -22.45	1.75E-05    160.71
3	1.59E-05    132.76	1.57E-05    -43.27	1.70E-05    -33.83
	M = 1	M = 2	M = 3
N 1	4.02E-05    -18.78	5.10E-05    -14.66	6.44E-05    -10.59
2	1.86E-05    165.69	1.56E-05    173.29	9.21E-06    -170.14
3	2.00E-05    146.30	2.53E-05    152.07	3.39E-05    158.25
	M = 4	M = 5	M = 6
N 1	8.05E-05    -6.61	1.01E-04    -2.77	1.27E-04    .89
2	4.83E-06    -74.96	1.70E-05    -21.42	3.14E-05    -7.39
3	4.75E-05    164.57		
	M = 7	M = 8	M = 9
N 1	1.62E-04    4.33	2.07E-04    7.48	2.54E-04    10.30
2	7.31E-05    163.55		
	M = 10	M = 11	
N 1	2.42E-04    12.85	1.02E-03    -166.87	

## SUBROUTINE BCDAAC

INPUT FOR CASE 2

## ARRAY ARMISC

INDEX	VALUE	INDEX	VALUE	INDEX	VALUE	INDEX	VALUE
1	-0.0000	11	-0.0000	21	-0.0000	31	-0.0000
2	-0.0000	12	-0.0000	22	2.0000	32	-0.0000
3	.3500	13	-0.0000	23	1.0000	33	-0.0000
4	-1.0000	14	1.0000	24	-0.0000	34	-0.0000
5	-0.0000	15	0.0000	25	3.0000	35	-0.0000
6	0.0000	16	0.0000	26	-0.0000	36	-0.0000
7	.7500	17	0.0000	27	-0.0000	37	-0.0000
8	0.0000	18	-0.0000	28	-0.0000	38	-0.0000
9	0.0000	19	-0.0000	29	-0.0000	39	-0.0000
10	15.0000	20	-0.0000	30	-0.0000	40	-0.0000

## ARRAY AR

K = 2

J =	1	2	3	4	5	6
I						
1	2.00000	2.00000	-0.00000	-0.00000	-0.00000	0.00000
2	.67500	.15000	-0.00000	-0.30000	-0.00000	5.28000
3	.35000	.20000	-0.00000	-0.00000	-0.00000	-0.00000
4	1.00000	.10000	-0.20000	-0.00000	-0.00000	-0.00000
J =	7	8	9	10	11	12
I						
1	2.00000	2.00000	0.00000	2.00000	2.00000	-0.00000
2	.73000	.51000	.50000	.06500	.06000	.10000
3	.56000	.50000	-0.00000	.10000	.10000	-0.00000
4	.90000	.72500	-0.00000	.03000	.02000	-0.00000

## MODAL AMPLITUDES = (MODULUS,PHASE)

PHASE.LT.180 DEG AND PHASE.GT.-180 DEG

	M = -11		M = -10		M = -9
N 1	2.16E-03	109.99	9.74E-04	-66.89	8.10E-04
					115.02
N 1	M = -8		M = -7		M = -6
2	7.47E-04	-61.21	7.20E-04	121.38	7.11E-04
			3.25E-03	68.82	1.00E-03
					-113.02
N 1	M = -5		M = -4		M = -3
2	7.15E-04	125.74	7.27E-04	-52.77	7.45E-04
3	8.07E-04	64.02	7.06E-04	-120.35	6.23E-04
			5.41E-04	-153.35	2.56E-04
					9.39
N 1	M = -2		M = -1		M = 0
2	7.59E-04	-51.59	7.58E-04	129.69	7.55E-04
3	5.58E-04	-137.84	5.28E-04	30.33	5.16E-04
		1.64E-04	1.34E-04	-36.12	1.26E-04
					-49.01
N 1	M = 1		M = 2		M = 3
2	7.74E-04	-36.28	8.21E-04	-25.81	8.81E-04
3	4.79E-04	-153.82	3.97E-04	-145.27	2.89E-04
		1.23E-04	1.25E-04	122.98	1.39E-04
					113.10
N 1	M = 4		M = 5		M = 6
2	9.45E-04	-9.60	1.01E-03	-3.99	1.09E-03
3	1.78E-04	-117.79	7.06E-05	-99.54	7.36E-05
		2.64E-04			.63
					125.03
N 1	M = 7		M = 8		M = 9
2	1.16E-03	4.54	1.23E-03	7.90	1.22E-03
	1.69E-03	149.72			10.76
N 1	M = 10		M = 11		
	9.13E-04	13.37	3.26E-03	-166.95	

## DISTORTION INPUT FOR CASE 3

K = 2

ANGLE	-10.0000	-9.0000	-6.0000	-4.0000	-3.0000
SPAN					
.3500	-0.0000	-0.0000	-0.0000	-0.0000	-0.0000
.6800	-0.0000	-0.0000	-0.0000	-0.0000	-0.0000
.7200	0.0000	0.0000	.0009	.0028	.0041
.7400	0.0000	0.0000	.0021	.0066	.0098
.7600	0.0000	0.0000	.0038	.0120	.0180
.7700	0.0000	0.0000	.0046	.0148	.0223
.7800	0.0000	0.0000	.0052	.0171	.0259
.7900	0.0000	0.0000	.0056	.0185	.0282
.8000	0.0000	0.0000	.0056	.0189	.0289
.3100	0.0000	0.0000	.0053	.0181	.0278
.8200	0.0000	0.0000	.0047	.0162	.0252
.8300	0.0000	0.0000	.0039	.0137	.0214
.8400	0.0000	0.0000	.0030	.0109	.0171
.3600	0.0000	0.0000	.0015	.0057	.0090
.3800	0.0000	0.0000	.0006	.0023	.0037
.9200	-0.0000	-0.0000	-0.0000	-0.0000	-0.0000
1.0000	-0.0000	-0.0000	-0.0000	-0.0000	-0.0000
ANGLE	-2.0000	-1.0000	0.0000	1.0000	2.0000
SPAN					
.3500	-0.0000	-0.0000	-0.0000	-0.0000	-0.0000
.6800	-0.0000	-0.0000	-0.0000	-0.0000	-0.0000
.7200	.0054	.0064	.0068	.0064	.0054
.7400	.0130	.0153	.0162	.0153	.0130
.7600	.0241	.0286	.0303	.0286	.0241
.7700	.0295	.0356	.0377	.0356	.0295
.7800	.0348	.0416	.0441	.0416	.0348
.7900	.0381	.0456	.0485	.0456	.0381
.8000	.0392	.0470	.0500	.0470	.0392
.8100	.0379	.0456	.0435	.0456	.0379
.8200	.0344	.0414	.0441	.0414	.0344
.3300	.0293	.0354	.0377	.0354	.0293
.8400	.0235	.0284	.0303	.0284	.0235
.8600	.0125	.0152	.0162	.0152	.0125
.3800	.0052	.0063	.0068	.0063	.0052
.9200	-0.0000	-0.0000	-0.0000	-0.0000	-0.0000
1.0000	-0.0000	-0.0000	-0.0000	-0.0000	-0.0000
ANGLE	3.0000	4.0000	6.0000	9.0000	10.0000
SPAN					
.3500	-0.0000	-0.0000	-0.0000	-0.0000	-0.0000
.6800	-0.0000	-0.0000	-0.0000	-0.0000	-0.0000
.7200	.0041	.0028	.0009	.0000	.0000
.7400	.0093	.0060	.0021	.0000	.0000
.7600	.0130	.0120	.0033	.0000	.0000
.7700	.0223	.0143	.0046	.0000	.0000
.7800	.0259	.0171	.0052	.0000	.0000
.7900	.0232	.0195	.0056	.0000	.0000

.8000	.0289	.0189	.0056	0.0000	0.0000
.8100	.0278	.0181	.0053	0.0000	0.0000
.8200	.0252	.0162	.0047	0.0000	0.0000
.8300	.0214	.0137	.0039	0.0000	0.0000
.8400	.0171	.0109	.0030	0.0000	0.0000
.8600	.0090	.0057	.0015	0.0000	0.0000
.8800	.0037	.0023	.0006	0.0000	0.0000
.9200	-0.0000	-0.0000	-0.0000	-0.0000	-0.0000
1.0000	-0.0000	-0.0000	-0.0000	-0.0000	-0.0000

## SUBROUTINE BCDAA

INPUT FOR CASE 3

## ARRAY ARMISC

INDEX	VALUE	INDEX	VALUE	INDEX	VALUE	INDEX	VALUE
1	-0.0000	11	-0.0000	21	-0.0000	31	-0.0000
2	-0.0000	12	-0.0000	22	4.0000	32	-0.0000
3	.3500	13	-0.0030	23	52.0000	33	-0.0000
4	-1.0000	14	1.0000	24	1.0000	34	-0.0000
5	-0.0000	15	0.0000	25	3.0000	35	-0.0000
6	0.0000	16	0.0000	26	-0.0000	36	-0.0000
7	.7500	17	0.0000	27	-0.0000	37	-0.0000
8	0.0000	18	-0.0000	28	-0.0000	38	-0.0000
9	0.0000	19	-0.0000	29	-0.0000	39	-0.0000
10	15.0000	20	-0.0000	30	-0.0000	40	-0.0000

## ARRAY AR

K = 2

J =	1	2	3	4	5	6
1	17.00000	-0.00000	-0.00000	-0.00000	-0.00000	-0.00000
2	.67500	.10000	-0.00000	-0.00000	-0.00000	0.28000
3	.35000	-0.00000	-0.00000	-0.00000	-0.00000	-0.00000
4	.68000	-0.00000	-0.00000	-0.00000	-0.00000	-0.00000
5	.72000	-0.00000	-0.00000	-0.00000	-0.00000	-0.00000
6	.74000	-0.00000	-0.00000	-0.00000	-0.00000	-0.00000
7	.76000	-0.00000	-0.30000	-0.00000	-0.00000	-0.00000
8	.77000	-0.00000	-0.30000	-0.00000	-0.00000	-0.00000
9	.78000	-0.00000	-0.00000	-0.00000	-0.00000	-0.00000
10	.79000	-0.00000	-0.30000	-0.00000	-0.00000	-0.00000
11	.80000	-0.00000	-0.30000	-0.00000	-0.00000	-0.00000
12	.81000	-0.00000	-0.30000	-0.00000	-0.00000	-0.00000
13	.82000	-0.00000	-0.30000	-0.00000	-0.00000	-0.00000
14	.83000	-0.00000	-0.30000	-0.30000	-0.00000	-0.00000
15	.84000	-0.00000	-0.30000	-0.00000	-0.00000	-0.00000
16	.86000	-0.00000	-0.30000	-0.00000	-0.00000	-0.00000
17	.88000	-0.00000	-0.30000	-0.00000	-0.00000	-0.00000
18	.92000	-0.00000	-0.30000	-0.00000	-0.00000	-0.00000
19	1.00000	-0.00000	-0.30000	-0.00000	-0.00000	-0.00000
J =	7	8	9	10	11	12
1	17.00000	17.00000	-0.00000	0.00000	-0.00000	17.00000
2	.73000	.62000	.50000	-0.00000	-0.00000	.10000
3	.56000	.50000	-0.00000	-0.00000	-0.00000	0.00000
4	.73200	.51400	-0.30000	-0.30000	-0.30000	0.00000
5	.75400	.52800	-0.30000	-0.00000	-0.30000	.03131
6	.76400	.53500	-0.00000	-0.00000	-0.00000	.00428
7	.77500	.54200	-0.00000	-0.00000	-0.00000	.00790

8	.78000	.64500	-0.00000	-0.00000	-0.00000	.00975
9	.78500	.64900	-0.00000	-0.00000	-0.00000	.01130
10	.79000	.65200	-0.00000	-0.00000	-0.00000	.01240
11	.79500	.65600	-0.00000	-0.00000	-0.00000	.01272
12	.80000	.65900	-0.00000	-0.00000	-0.00000	.01225
13	.80600	.66300	-0.00000	-0.00000	-0.00000	.01109
14	.81100	.66600	-0.00000	-0.00000	-0.00000	.00943
15	.81600	.67000	-0.00000	-0.00000	-0.00000	.00754
16	.82700	.67700	-0.00000	-0.00000	-0.00000	.00393
17	.83700	.68400	-0.00000	-0.00000	-0.00000	.00165
18	.85800	.69700	-0.00000	-0.00000	-0.00000	0.00000
19	.90000	.72500	-0.00000	-0.00000	-0.00000	0.00000

J =	13	14	15	16	17	18
I						
1	17.00000	17.00000	17.00000	17.00000	17.00000	17.00000
2	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000
3	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000
4	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000
5	.00000	.00180	.00000	.00179	.00000	.00177
6	.00000	.00427	.00000	.00424	.00000	.00420
7	.00000	.00787	.00000	.00783	.00000	.00775
8	.00000	.00972	.00000	.00966	.00000	.00957
9	.00000	.01132	.00000	.01125	.00000	.01115
10	.00000	.01236	.00000	.01228	.00000	.01218
11	.00000	.01267	.00000	.01260	.00000	.01250
12	.00000	.01221	.00000	.01214	.00000	.01234
13	.00000	.01105	.00000	.01099	.00000	.01090
14	.00000	.00940	.00000	.00935	.00000	.00927
15	.00000	.00751	.00000	.00747	.00000	.00741
16	.00000	.00397	.00000	.00395	.00000	.00392
17	.00000	.00164	.00000	.00163	.00000	.00162
18	0.00000	0.00000	0.03000	0.00000	0.00000	0.00000
19	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000

J =	19	20	21	22	23	24
I						
1	17.00000	17.00000	17.00000	17.00000	17.00000	17.00000
2	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000
3	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000
4	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000
5	.00000	.00175	.00000	.00173	.00000	.00170
6	.00000	.00416	.00000	.00410	.00000	.00403
7	.00000	.00767	.00000	.00757	.00000	.00745
8	.00000	.00947	.00000	.00934	.00000	.00919
9	.00000	.01103	.00000	.01039	.00000	.01072
10	.00000	.01205	.00000	.01139	.00000	.01171
11	.00000	.01236	.00000	.01220	.00000	.01201
12	.00000	.01191	.00000	.01176	.00000	.01158
13	.00000	.01079	.00000	.01065	.00000	.01049
14	.00000	.00913	.00000	.00906	.00000	.00392
15	.00000	.00733	.00000	.00724	.00000	.00713
16	.00000	.00733	.00000	.00383	.00000	.00373
17	.00000	.00160	.00000	.00158	.00000	.00150
18	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000
19	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000

J =	25	26	27	28	29	30
1	17.00000	17.00000	17.00000	17.00000	17.00000	17.00000
2	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000
3	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000
4	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000
5	.00000	.00167	.00000	.00163	.00000	.00159
6	.00000	.00396	.00000	.00387	.00000	.00373
7	.00000	.00731	.00000	.00716	.00000	.00699
8	.00000	.00903	.00000	.00334	.00000	.00353
9	.00000	.01052	.00000	.01031	.00000	.01007
10	.00000	.01150	.00000	.01126	.00000	.01100
11	.00000	.01180	.00000	.01156	.00000	.01130
12	.00000	.01138	.00000	.01115	.00000	.01090
13	.00000	.01031	.00000	.01010	.00000	.00933
14	.00000	.00877	.00000	.00860	.00000	.00841
15	.00000	.00701	.00000	.00688	.00000	.00673
16	.00000	.00371	.00000	.00364	.00000	.00357
17	.00000	.00153	.00000	.00151	.00000	.00147
18	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000
19	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000
J =	31	32	33	34	35	36
1	17.00000	17.00000	17.00000	17.00000	17.00000	17.00000
2	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000
3	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000
4	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000
5	.00000	.00155	.00000	.00150	.00000	.00145
6	.00000	.00363	.00000	.00357	.00000	.00346
7	.00000	.00681	.00000	.00661	.00000	.00641
8	.00000	.00841	.00000	.00817	.00000	.00792
9	.00000	.00981	.00000	.00954	.00000	.00924
10	.00000	.01073	.00000	.01043	.00000	.01011
11	.00000	.01102	.00000	.01071	.00000	.01039
12	.00000	.01053	.00000	.01034	.00000	.01003
13	.00000	.00963	.00000	.00937	.00000	.00910
14	.00000	.00820	.00000	.00798	.00000	.00775
15	.00000	.00656	.00000	.00639	.00000	.00621
16	.00000	.00343	.00000	.00339	.00000	.00330
17	.00000	.00144	.00000	.00140	.00000	.00136
18	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000
19	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000
J =	37	38	39	40	41	42
1	17.00000	17.00000	17.00000	17.00000	17.00000	17.00000
2	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000
3	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000
4	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000
5	.00000	.00140	.00000	.00135	.00000	.00129
6	.00000	.00314	.00000	.00311	.00000	.00303
7	.00000	.00613	.00000	.00615	.00000	.00613
8	.00000	.00755	.00000	.00737	.00000	.00739
9	.00000	.00894	.00000	.00862	.00000	.00829
10	.00000	.00973	.00000	.00943	.00000	.00907

11	.00000	.01005	.00000	.00970	.00000	.00934
12	.00000	.00971	.00000	.00937	.00000	.00902
13	.00000	.00851	.00000	.00851	.00000	.00319
14	.00000	.00751	.00000	.00725	.00000	.00699
15	.00000	.00601	.00000	.00581	.00000	.00560
16	.00000	.00319	.00000	.00309	.00000	.00298
17	.00000	.00132	.00000	.00128	.00000	.00124
18	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000
19	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000

J =	43	44	45	46	47	48
I						
1	17.00000	17.00000	17.00000	17.00000	17.00000	17.00000
2	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000
3	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000
4	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000
5	.00000	.00124	.00000	.00118	.00000	.00112
6	.00000	.00295	.00000	.00282	.00000	.00268
7	.00000	.00549	.00000	.00524	.00000	.00499
8	.00000	.00679	.00000	.00649	.00000	.00619
9	.00000	.00795	.00000	.00760	.00000	.00724
10	.00000	.00871	.00000	.00833	.00000	.00795
11	.00000	.00896	.00000	.00858	.00000	.00819
12	.00000	.00867	.00000	.00830	.00000	.00792
13	.00000	.00787	.00000	.00754	.00000	.00720
14	.00000	.00672	.00000	.00644	.00000	.00615
15	.00000	.00538	.00000	.00516	.00000	.00494
16	.00000	.00287	.00000	.00275	.00000	.00253
17	.00000	.00119	.00000	.00114	.00000	.00109
18	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000
19	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000

J =	49	50	51	52	53	54
I						
1	17.00000	17.00000	17.00000	17.00000	17.00000	17.00000
2	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000
3	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000
4	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000
5	.00000	.00105	.00000	.00100	.00000	.00094
6	.00000	.00254	.00000	.00240	.00000	.00226
7	.00000	.00474	.00000	.00449	.00000	.00423
8	.00000	.00583	.00000	.00557	.00000	.00520
9	.00000	.00689	.00000	.00653	.00000	.00617
10	.00000	.00756	.00000	.00717	.00000	.00673
11	.00000	.00779	.00000	.00739	.00000	.00700
12	.00000	.00755	.00000	.00716	.00000	.00678
13	.00000	.00636	.00000	.00652	.00000	.00618
14	.00000	.00537	.00000	.00558	.00000	.00529
15	.00000	.00471	.00000	.00448	.00000	.00425
16	.00000	.00251	.00000	.00239	.00000	.00227
17	.00000	.00105	.00000	.00100	.00000	.00095
18	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000
19	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000

J =	55	56	57	58	59	60
I						

1	17.00000	17.00000	17.00000	17.00000	17.00000	17.00000
2	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000
3	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000
4	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000
5	.00000	.00039	.00000	.00082	.00000	.00077
6	.00000	.00212	.00000	.00199	.00000	.00155
7	.00000	.00393	.00000	.00373	.00000	.00348
8	.00000	.00495	.00000	.00464	.00000	.00434
9	.00000	.00531	.00000	.00545	.00000	.00510
10	.00000	.00639	.00000	.00600	.00000	.00582
11	.00000	.00660	.00000	.00620	.00000	.00581
12	.00000	.00640	.00000	.00602	.00000	.00585
13	.00000	.00533	.00000	.00549	.00000	.00516
14	.00000	.00500	.00000	.00471	.00000	.00442
15	.00000	.00402	.00000	.00379	.00000	.00355
16	.00000	.00215	.00000	.00203	.00000	.00192
17	.00000	.00090	.00000	.00035	.00000	.00030
18	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000
19	0.00000	0.00000	0.00000	0.00000	0.00000	0.00000

J = 61      62      63

I			
1	17.00000	17.00000	17.00000
2	0.00000	0.00000	0.00000
3	0.00000	0.00000	0.00000
4	0.00000	0.00000	0.00000
5	.00000	.00071	.00000
6	.00000	.00172	.00000
7	.00000	.00324	.00000
8	.00000	.00404	.00000
9	.00000	.00476	.00000
10	.00000	.00524	.00000
11	.00000	.00543	.00000
12	.00000	.00528	.00000
13	.00000	.00483	.00000
14	.00000	.00414	.00000
15	.00000	.00334	.00000
16	.00000	.00180	.00000
17	.00000	.00075	.00000
18	0.00000	0.00000	0.00000
19	0.00000	0.00000	0.00000

MODAL AMPLITUDES = (MODULUS,PHASE)

PHASE.LT.180 DEG AND PHASE.GT.-180 DEG

	M = -11	M = -10	M = -9
N 1	7.36E-04 144.26	3.55E-04 -33.02	3.14E-04 149.59
	M = -3	M = -7	M = -6
N 1 2	3.04E-04 -27.61	3.05E-04 155.06	3.11E-04 -22.23
		7.92E-04 152.52	1.9CE-04 -25.14
	M = -5	M = -4	M = -3
N 1 2 3	3.19E-04 160.35	3.26E-04 -17.03	3.29E-04 165.55
	9.17E-05 156.40	1.94E-05 -30.20	4.61E-05 -10.54
		3.47E-04 160.52	2.33E-04 -16.31
	M = -2	M = -1	M = 0
N 1 2 3	3.24E-04 -11.90	3.12E-04 170.62	3.03E-04 -6.91
	1.07E-04 159.25	1.58E-04 -8.79	1.79E-04 173.55
	1.39E-04 165.76	1.65E-04 -11.67	1.57E-04 -9.06
	M = 1	M = 2	M = 3
N 1 2 3	3.23E-04 -4.49	3.47E-04 -2.12	3.62E-04 .17
	1.63E-04 176.04	1.15E-04 178.70	5.38E-05 -177.91
	1.61E-04 173.58	1.78E-04 176.21	2.04E-04 173.73
	M = 4	M = 5	M = 6
N 1 2 3	3.66E-04 2.38	3.62E-04 4.49	3.51E-04 0.43
	9.53E-06 -8.67	6.96E-05 3.20	1.16E-04 0.08
	2.43E-04 -178.74		
	M = 7	M = 8	M = 9
N 1 2	3.32E-04 8.30	3.04E-04 9.92	2.58E-04 11.28
	5.06E-06 116.58		
	M = 10	M = 11	
N 1	1.67E-04 12.29	3.53E-04 -167.19	

## SUBROUTINE BCDAAC

INPUT FOR CASE 4

## ARRAY ARMISC

INDEX	VALUE	INDEX	VALUE	INDEX	VALUE	INDEX	VALUE
1	-0.0000	11	-0.0000	21	-0.0000	31	-0.0000
2	-0.0000	12	-0.0000	22	1.0000	32	-0.0000
3	.3500	13	-0.0000	23	.9500	33	-0.0000
4	-1.0000	14	1.0000	24	.8000	34	-0.0000
5	-0.0000	15	0.0000	25	3.0000	35	-0.0000
6	0.0000	16	0.0000	26	-0.0000	36	-0.0000
7	.7500	17	0.0000	27	-0.0000	37	-0.0000
8	0.0000	18	-0.0000	28	-0.0000	38	1.0000
9	0.0000	19	-0.0000	29	-0.0000	39	-0.0000
10	15.0000	20	-0.0000	30	-0.0000	40	-0.0000

## ARRAY AR

K = 2

J =	1	2	3	4	5	6
I						
1	2.000000	2.000000	-0.000000	-0.000000	-0.000000	0.000000
2	.675000	.150000	-0.000000	-0.000000	-0.000000	5.280000
3	.350000	.200000	-0.000000	-0.000000	-0.000000	-0.000000
4	1.000000	.100000	-0.000000	-0.000000	-0.000000	-0.000000
J =	7	8	9	10	11	
I						
1	2.000000	2.000000	0.000000	2.000000	2.000000	
2	.730000	.610000	.500000	.365000	.060000	
3	.560000	.500000	-0.000000	.100000	.100000	
4	.900000	.725000	-0.000000	.030000	.020000	

## MODAL AMPLITUDES = (MODULUS,PHASE)

PHASE.LT.180 DEG AND PHASE.GT.-130 DEG

	M = -11	M = -10	M = -9	
N 1	3.50E-05      106.57	1.72E-05      -63.38	1.60E-05      116.44	
	M = -8	M = -7	M = -6	
N 1 2	1.63E-05      -63.16	1.73E-05      117.54	1.83E-05      -61.56	
		4.19E-05      116.82	1.15E-05      -68.91	
	M = -5	M = -4	M = -3	
N 1 2 3	2.06E-05      119.48	2.28E-05      -59.38	2.51E-05      121.35	
	6.53E-06      104.24	2.60E-06      -101.70	3.15E-06      -23.98	
		2.52E-05      115.62	1.91E-05      -66.24	
	M = -2	M = -1	M = 0	
N 1 2 3	2.73E-05      -56.86	2.95E-05      124.51	3.23E-05      -54.25	
	7.97E-06      135.30	1.33E-05      -48.10	1.73E-05      132.62	
	1.74E-05      113.21	1.72E-05      -66.57	1.85E-05      -65.48	
	M = 1	M = 2	M = 3	
N 1 2 3	3.98E-05      -52.08	4.98E-05      -49.99	6.13E-05      -47.73	
	1.81E-05      136.12	1.49E-05      144.24	9.10E-06      167.83	
	2.17E-05      116.75	2.70E-05      119.42	3.54E-05      124.84	
	M = 4	M = 5	M = 6	
N 1 2 3	7.59E-05      -45.34	9.34E-05      -42.80	1.16E-04      -40.07	
	7.79E-06      -112.23	1.89E-05      -68.18	3.11E-05      -48.07	
	4.88E-05      132.98			
	M = 7	M = 8	M = 9	
N 1 2	1.46E-04      -37.08	1.83E-04      -33.71	2.24E-04      -29.58	
	8.91E-05      118.86			
	M = 10	M = 11		
N 1	2.16E-04      -22.38	8.99E-04      151.09		

### 3.4 Primary Subroutine BBCAA

#### Case

1       Base case:

Eddy with axial eddy velocity component only

2       Base case with:

ARMISC(25) = 4. indicates that Filotas lift response  
function is used

3       Base case with:

ARMISC(38) = 1. indicates that noncompact source theory is  
used

4       Base case with:

ARMISC(34) = .04 indicates short length eddy

5       Base case with:

ARMISC(34) = 10. indicates long length eddy

6       Base case with angular rather than axial eddy velocity  
component:

ARMISC(30) = .0 = axial eddy velocity

ARMISC(31) = .05 = angular eddy velocity component

ARMISC(34) = .0 = eddy length for axial eddy velocity  
component

ARMISC(35) = .4 = eddy length for angular eddy velocity  
component

Case

7       Base case with both velocity components:

ARMISC(31) = .05 = angular eddy velocity component  
ARMISC(35) = 0.4 = eddy length for angular eddy velocity component

8       Base case with:

ARMISC(26) = 1. indicates start of accumulation of mode amplitudes  
ARMISC(29) = 3.1416 = angular location of eddy center

9       Base case with:

ARMISC(26) = 3. = end of accumulation of mode amplitudes

10      Base case with:

ARMISC(37) = .8 = time delay resulting from the axial position of the eddy center at the temporal origin

11      Base case with:

ARMISC(34) = 10. = long length eddy  
AR(2,2,2) = .1 = average rotor chord length  
AR(I,10,2) = .0 = maximum blade camber of rotor  
AR(I,11,2) = .0 = rotor blade angle of attack

The data of this case represents the same conditions as case 3 of primary subroutine BCDA.

3.4.1 Card Image of Main Driver Input

88CAA		.35	-1.	.0	.75	.0
.0	15.			1.	.0	
.0					.0	
3.		.8	.0	.05	.0	.04
.04	.4		1.			
0	1	0				
2.	2.			.0	2.	2.
2.	2.					.0
.675	.15			6.28	.73	.61
.065	.06					.5
.35	.2				.56	.5
.1	.1					
1.	.1				.9	.725
.03	.02					
		.35	-1.	.0	.75	.0
.0	15.			1.	.0	
.0					.0	
4.		.8	.0	.05	.0	.04
.04	.4		1.			
0	1	0				
2.	2.			.0	2.	2.
.675	.15			6.28	.73	.61
.35	.2				.56	.5
1.	.1				.9	.725
		.35	-1.	.0	.75	.0
.0	15.			1.	.0	
.0					.0	
3.		.8	.0	.05	.0	.04
.04	.4		1.			
0	1	0				
2.	2.			.0	2.	2.
2.	2.					.0
.675	.15			6.28	.73	.61
.065	.06					.5
.35	.2				.56	.5
.1	.1					
1.	.1				.9	.725
.03	.02					
		.35	-1.	.0	.75	.0
.0	15.			1.	.0	
.0					.0	
3.		.8	.0	.05	.0	.04
.04	.04		1.			
0	1	0				
2.	2.			.0	2.	2.
2.	2.					.0
.675	.15			6.28	.73	.61
.065	.06					.5
.35	.2				.56	.5
.1	.1					
1.	.1				.9	.725

.03	.02						
.0		15.		.35	-1.		
.0						.0	.75
3.						1.	.0
.04		10.					
0	1	0					
2.	2.					.0	2.
2.	2.					2.	.0
.675	.15					6.28	.73
.065	.06						.61
.35	.2						.5
.1	.1					.56	
1.	.1						
.03	.02					.9	.725
.0		15.		.35	-1.		
.0						.0	.75
3.						1.	.0
.04		.0		.4	.8		
0	1	0			1.		
2.	2.					.0	2.
2.	2.					2.	.0
.675	.15					6.28	.73
.065	.06						.61
.35	.2						.5
.1	.1					.56	
1.	.1						
.03	.02					.9	.725
.0		15.		.35	-1.		
.0						.0	.75
3.						1.	.0
.04		.4		.4	.8		
0	1	0			1.		
2.	2.					.0	2.
2.	2.					2.	.0
.675	.15					6.28	.73
.065	.06						.61
.35	.2						.5
.1	.1					.56	
1.	.1						
.03	.02					.9	.725
.0		15.		.35	-1.		
.0						.0	.75
3.		1.		.8		3.1416	.05
.04		.4		1.			
0	1	0					
2.	2.					.0	2.
2.	2.					2.	.0
.675	.15					6.28	.73
							.61
							.5

.065	.06							
.35	.2							
.1	.1							
1.	.1							
.03	.02							
.3	15.		.35	-1.				
.0								
3.	3.							
.04	.4							
0	1	0						
2.	2.							
2.	2.							
.675	.15							
.065	.06							
.35	.2							
.1	.1							
1.	.1							
.03	.02							
.0	15.		.35	-1.				
.0								
3.								
.04	.4							
0	1	0						
2.	2.							
2.	2.							
.675	.15							
.065	.06							
.35	.2							
.1	.1							
1.	.1							
.03	.02							
.0	15.		.35	-1.				
.0								
3.								
.04	10.							
0	1	0						
2.	0.							
.675	.1							
.35	.0							
1.	.0							

### 3.4.2 Primary Subroutine Input/Output

SUBROUTINE 88CAA

INPUT FOR CASE 1

ARRAY ARMISC

INDEX	VALUE	INDEX	VALUE	INDEX	VALUE	INDEX	VALUE
1	-0.0000	11	-0.0000	21	-0.0000	31	0.0000
2	-0.0000	12	-0.0000	22	-0.0030	32	.0430
3	.3500	13	-0.0000	23	-0.0030	33	.0400
4	-1.0000	14	1.0000	24	-0.0030	34	.4000
5	-0.0000	15	0.0000	25	3.0000	35	-0.0000
6	0.0000	16	-0.0000	26	-0.0030	36	1.0000
7	.7500	17	0.0000	27	-0.0030	37	-0.0030
8	0.0000	18	-0.0000	28	.8000	38	-0.0000
9	0.0000	19	-0.0000	29	0.0030	39	-0.0000
10	15.0000	20	-0.0000	30	.0530	40	-0.0000

ARRAY AR

K = 2

J =	1	2	3	4	5	6
I						
1	2.00000	2.00000	-0.00000	-0.00000	-0.00000	0.00000
2	.67500	.15000	-0.00000	-0.00000	-0.00000	.528000
3	.35000	.20000	-0.00000	-0.00000	-0.00000	-0.00000
4	1.00000	.10000	-0.00000	-0.00000	-0.00000	-0.00000
J =	7	8	9	10	11	
I						
1	2.00000	2.00000	0.00000	2.00000	2.00000	
2	.73000	.61000	.50000	.06500	.06000	
3	.56000	.50000	-0.00000	.10000	.10000	
4	.90000	.72500	-0.00000	.03000	.02000	

MODAL AMPLITUDES = (MODULUS,PHASE)

PHASE.LT.180 DEG AND PHASE.GT.-180 DEG

	M = -11	M = -10	M = -9
N			
1	4.04E-04 108.46	1.90E-04 -68.03	1.64E-04 115.57
N	M = -8	M = -7	M = -6
1	1.50E-04 -60.73	1.53E-04 123.07	1.53E-04 -53.03
2		4.53E-04 114.90	1.03E-04 -52.12
N	M = -5	M = -4	M = -3
1	1.54E-04 130.99	1.54E-04 -44.90	1.53E-04 139.30
2	5.40E-05 119.05	1.66E-05 -72.41	1.36E-05 -24.00
3		1.91E-04 130.31	1.27E-04 -46.01
N	M = -2	M = -1	M = 0
1	1.49E-04 -36.43	1.42E-04 147.94	1.39E-04 -27.56
2	4.76E-05 148.29	7.09E-05 -29.45	8.03E-05 154.56
3	1.01E-04 137.39	8.73E-05 -37.87	8.19E-05 -33.14
N	M = 1	M = 2	M = 3
1	1.45E-04 -22.94	1.56E-04 -18.29	1.64E-04 -13.71
2	7.24E-05 159.35	5.02E-05 165.10	2.20E-05 174.58
3	8.37E-05 152.06	9.18E-05 157.54	1.05E-04 163.03
N	M = 4	M = 5	M = 6
1	1.67E-04 -9.28	1.57E-04 -5.03	1.64E-04 -1.00
2	8.08E-05 -33.64	3.50E-05 -10.21	5.46E-05 -3.42
3	1.26E-04 168.34		
N	M = 7	M = 8	M = 9
1	1.58E-04 2.76	1.47E-04 6.18	1.27E-04 9.13
2	2.62E-05 173.47		
N	M = 10	M = 11	
1	8.42E-05 11.67	1.83E-04 -160.55	

## SUBROUTINE BBCAA

INPUT FOR CASE 2

## ARRAY ARMISC

INDEX	VALUE	INDEX	VALUE	INDEX	VALUE	INDEX	VALUE
1	-0.0000	11	-0.0000	21	-0.0000	31	0.0000
2	-0.0000	12	-0.0000	22	-0.0000	32	.0400
3	.3500	13	-0.0000	23	-0.0000	33	.0400
4	-1.0000	14	1.0000	24	-0.0000	34	.4000
5	-0.0000	15	0.0000	25	4.0000	35	-0.0000
6	0.0000	16	-0.0000	26	-0.0000	36	1.0000
7	.7500	17	0.0000	27	-0.0000	37	-0.0000
8	0.0000	18	-0.0000	28	.8000	38	-0.0000
9	0.0000	19	-0.0000	29	0.0000	39	-0.0000
10	15.0000	20	-0.0000	30	.0500	40	-0.0000

## ARRAY AR

K = 2

J =	1	2	3	4	5	6
I						
1	2.00000	2.00000	-0.00000	-0.00000	-0.00000	0.00000
2	.67500	.15000	-0.00000	-0.00000	-0.00000	6.23000
3	.35000	.20000	-0.00000	-0.00000	-0.00000	-0.00000
4	1.00000	.10000	-0.00000	-0.00000	-0.00000	-0.00000
J =	7	8	9			
I						
1	2.00000	2.00000	0.00000			
2	.73000	.61000	.50000			
3	.56000	.50000	-0.00000			
4	.90000	.72500	-0.00000			

MODAL AMPLITUDES = (MODULUS,PHASE)

PHASE.LT.180 DEG AND PHASE.GT.-180 DEG

	M = -11	M = -10	M = -9
N 1	2.04E-04      180.00	1.13E-04      0.00	1.14E-04      130.00
N 1	M = -8	M = -7	M = -6
N 1	1.23E-04      0.00	1.36E-04      180.00	1.5CE-04      0.00
N 2		1.07E-03      180.00	3.13E-04      0.00
N 1	M = -5	M = -4	M = -3
N 1	1.66E-04      180.00	1.83E-04      0.00	1.99E-04      180.00
N 2	2.22E-04      180.00	1.59E-04      0.00	1.02E-04      130.00
N 3		1.88E-04      180.00	1.64E-04      0.00
N 1	M = -2	M = -1	M = 0
N 1	2.10E-04      0.00	2.13E-04      180.00	2.12E-04      0.00
N 2	4.64E-05      0.00	5.22E-07      0.00	2.49E-05      180.00
N 3	1.56E-04      180.00	1.48E-04      0.00	1.42E-04      0.00
N 1	M = 1	M = 2	M = 3
N 1	2.13E-04      0.00	2.15E-04      0.00	2.12E-04      0.00
N 2	2.12E-05      180.00	2.43E-06      0.00	3.0CE-05      0.00
N 3	1.38E-04      180.00	1.37E-04      180.00	1.41E-04      180.00
N 1	M = 4	M = 5	M = 6
N 1	2.07E-04      0.00	1.99E-04      0.00	1.90E-04      0.00
N 2	5.10E-05      0.00	5.99E-05      0.00	4.29E-05      0.00
N 3	1.58E-04      180.00		
N 1	M = 7	M = 8	M = 9
N 1	1.77E-04      0.00	1.50E-04      0.00	1.33E-04      0.00
N 2	3.03E-04      180.00		
N 1	M = 10	M = 11	
N 1	7.32E-05      0.00	2.39E-04      180.00	

## SUBROUTINE BBCAA

INPUT FOR CASE 3

## ARRAY ARMISC

INDEX	VALUE	INDEX	VALUE	INDEX	VALUE	INDEX	VALUE
1	-0.0000	11	-0.0000	21	-0.0000	31	0.0000
2	-0.0000	12	-0.0000	22	-0.0000	32	.0400
3	.3500	13	-0.0000	23	-0.0000	33	.0400
4	-1.0000	14	1.0000	24	-0.0000	34	.4000
5	-0.0000	15	0.0000	25	3.0000	35	-0.0000
6	0.0000	16	-0.0000	26	-0.0000	36	1.0000
7	.7500	17	0.0000	27	-0.0000	37	-0.0000
8	0.0000	18	-0.0000	28	.8000	38	1.0000
9	0.0000	19	-0.0000	29	0.0000	39	-0.0000
10	15.0000	20	-0.0000	30	.0500	40	-0.0000

## ARRAY AR

K = 2

J =	1	2	3	4	5	6
I						
1	2.00000	2.00000	-0.00000	-0.00000	-0.00000	0.00000
2	.67500	.15000	-0.00000	-0.00000	-0.00000	.523000
3	.35000	.20000	-0.00000	-0.00000	-0.00000	-0.00000
4	1.00000	.10000	-0.00000	-0.00000	-0.00000	-0.00000
J =	7	8	9	10	11	
I						
1	2.00000	2.00000	0.00000	2.00000	2.00000	
2	.73000	.61000	.50000	.05500	.06000	
3	.56000	.50000	-0.00000	.10000	.10000	
4	.90000	.72500	-0.00000	.03000	.02000	

MODAL AMPLITUDES = (MODULUS,PHASE)

/PHASE.07E180 DEG AND PHASE.GT.-180 DEG

	M = -11	M = -10	M = -9
N 1	4.11E-04    100.60	1.92E-04    -68.94	1.59E-04    110.79
	M = -8	M = -7	M = -5
N 1 2	1.63E-04    -68.92	1.61E-04    111.68	1.62E-04    -67.53
		4.53E-04    114.93	1.13E-04    -69.63
	M = -5	M = -4	M = -3
N 1 2 3	1.62E-04    113.43	1.63E-04    -65.50	1.61E-04    115.55
	5.31E-05    106.64	1.36E-05    -38.42	1.39E-05    -43.45
		2.01E-04    120.50	1.35E-04    -61.29
	M = -2	M = -1	M = 0
N 1 2 3	1.55E-04    -63.11	1.46E-04    118.17	1.42E-04    -60.16
	4.92E-05    124.14	7.29E-05    -57.07	8.15E-05    123.94
	1.08E-04    118.38	9.36E-05    -60.96	8.73E-05    -59.39
	M = 1	M = 2	M = 3
N 1 2 3	1.46E-04    -53.11	1.54E-04    -55.75	1.59E-04    -53.14
	7.24E-05    126.58	4.92E-05    131.27	2.11E-05    143.43
	8.78E-05    122.31	9.47E-05    126.46	1.07E-04    131.53
	M = 4	M = 5	M = 6
N 1 2 3	1.59E-04    -50.51	1.56E-04    -47.76	1.5CE-04    -44.87
	9.95E-06    -80.39	3.50E-05    -51.13	5.28E-05    -41.07
	1.27E-04    138.78		
	M = 7	M = 8	M = 9
N 1 2	1.42E-04    -41.31	1.30E-04    -38.52	1.11E-04    -34.93
	2.72E-05    132.84		
	M = 10	M = 11	
N 1	7.34E-05    -30.71	1.62E-04    155.39	

## SUBROUTINE BBCAA

INPUT FOR CASE 4

## ARRAY ARMISC

INDEX	VALUE	INDEX	VALUE	INDEX	VALUE	INDEX	VALUE
1	-0.0000	11	-0.0000	21	-0.0000	31	0.0000
2	-0.0000	12	-0.0000	22	-0.0000	32	.0400
3	.3500	13	-0.0000	23	-0.0000	33	.0400
4	-1.0000	14	1.0000	24	-0.0000	34	.0400
5	-0.0000	15	0.0000	25	3.0000	35	-0.0000
6	0.0000	16	-0.0000	26	-0.0000	36	1.0000
7	.7500	17	0.0000	27	-0.0000	37	-0.0000
8	0.0000	18	-0.0000	28	.8000	38	-0.0000
9	0.0000	19	-0.0000	29	0.0000	39	-0.0000
10	15.0000	20	-0.0000	30	.0500	40	-0.0000

## ARRAY AR

K = 2

J =	1	2	3	4	5	6
I						
1	2.00000	2.00000	-0.00000	-0.00000	-0.00000	0.00000
2	.67500	.15000	-0.00000	-0.00000	-0.00000	6.28000
3	.35000	.20000	-0.00000	-0.00000	-0.00000	-0.00000
4	1.00000	.10000	-0.00000	-0.00000	-0.00000	-0.00000
J =	7	8	9	10	11	
I						
1	2.00000	2.00000	0.00000	2.00000	2.00000	
2	.73000	.61000	.50000	.06500	.06000	
3	.56000	.50000	-0.00000	.10000	.10000	
4	.90000	.72500	-0.00000	.03000	.02000	

## MODAL AMPLITUDES = (MODULUS,PHASE)

PHASE.LT.180 DEG AND PHASE.GT.-180 DEG

	M = -11	M = -10	M = -9
N 1	4.48E-05    108.46	2.11E-05    -68.03	1.82E-05    115.57
	M = -3	M = -7	M = -6
N 1	1.73E-05    -60.73	1.70E-05    123.07	1.70E-05    -53.03
2		5.01E-05    114.95	1.20E-05    -62.12
	M = -5	M = -4	M = -3
N 1	1.70E-05    130.99	1.71E-05    -44.90	1.70E-05    139.30
2	5.98E-06    119.05	1.84E-06    -72.41	2.06E-06    -24.06
3		2.11E-05    130.31	1.40E-05    -40.01
	M = -2	M = -1	M = 0
N 1	1.65E-05    -36.43	1.57E-05    147.94	1.54E-05    -27.56
2	5.27E-06    143.29	7.95E-06    -29.45	8.89E-06    154.50
3	1.12E-05    137.89	9.67E-06    -37.87	9.08E-06    -33.14
	M = 1	M = 2	M = 3
N 1	1.61E-05    -22.94	1.73E-05    -18.29	1.81E-05    -13.71
2	8.02E-06    159.35	5.56E-06    165.10	2.44E-06    174.53
3	9.27E-06    152.06	1.02E-05    157.54	1.17E-05    163.03
	M = 4	M = 5	M = 6
N 1	1.35E-05    -9.28	1.95E-05    -5.03	1.31E-05    -1.00
2	8.95E-07    -33.64	3.88E-06    -10.21	5.35E-06    -3.42
3	1.40E-05    168.34		
	M = 7	M = 8	M = 9
N 1	1.75E-05    2.76	1.63E-05    6.13	1.41E-05    9.13
2	2.90E-06    173.47		
	M = 10	M = 11	
N 1	9.32E-06    11.67	2.03E-05    -166.55	

## SUBROUTINE BBCAA

INPUT FOR CASE 5

## ARRAY ARMISC

INDEX	VALUE	INDEX	VALUE	INDEX	VALUE	INDEX	VALUE
1	-0.0000	11	-0.0000	21	-0.0000	31	0.0000
2	-0.0000	12	-0.0000	22	-0.0000	32	.C400
3	.3500	13	-0.0000	23	-0.0000	33	.0400
4	-1.0000	14	1.0000	24	-0.0000	34	10.0000
5	-0.0000	15	0.0000	25	3.0000	35	-0.0000
6	0.0000	16	-0.0000	26	-0.0000	36	1.0000
7	.7500	17	0.0000	27	-0.0000	37	-0.0000
8	0.0000	18	-0.0000	28	.8000	38	-0.0000
9	0.0000	19	-0.0000	29	0.0000	39	-0.0000
10	15.0000	20	-0.0000	30	.0500	40	-0.0000

## ARRAY AR

K = 2

J =	1	2	3	4	5	6
1	2.00000	2.00000	-0.00000	-3.00000	-0.00000	0.00000
2	.67500	.15000	-0.00000	-0.00000	-0.00000	6.23000
3	.35000	.20000	-0.00000	-3.00000	-0.00000	-0.00000
4	1.00000	.10000	-0.00000	-0.00000	-0.00000	-0.00000

J =	7	8	9	10	11
1	2.00000	2.00000	0.00000	2.00000	2.00000
2	.73000	.51000	.50000	.05500	.06000
3	.56000	.50000	-0.00000	.10000	.10000
4	.90000	.72500	-0.00000	.03000	.02000

MODAL AMPLITUDES = (MODULUS,PHASE)

PHASE.LT.130 DEG AND PHASE.GT.-130 DEG

	M = -11	M = -10	M = -9
N 1	7.01E-04    105.46	3.30E-04    -58.03	2.85E-04    115.57
	M = -3	M = -7	M = -6
N 1 2	2.71E-04    -60.73	2.66E-04    123.07 7.85E-04    114.96	2.66E-04    -53.03 1.87E-04    -02.12
	M = -5	M = -4	M = -3
N 1 2 3	2.66E-04    130.99 9.38E-05    119.05	2.68E-04    -44.90 2.88E-05    -72.41 3.31E-04    130.31	2.66E-04    139.30 3.23E-05    -24.00 2.20E-04    -46.01
	M = -2	M = -1	M = 0
N 1 2 3	2.58E-04    -36.43 8.26E-05    143.29 1.75E-04    137.39	2.46E-04    147.94 1.23E-04    -29.45 1.51E-04    -37.87	2.41E-04    -27.55 1.39E-04    154.56 1.42E-04    -33.14
	M = 1	M = 2	M = 3
N 1 2 3	2.52E-04    -22.94 1.26E-04    159.35 1.45E-04    152.06	2.70E-04    -18.29 8.71E-05    165.10 1.59E-04    157.54	2.84E-04    -13.71 3.82E-05    174.58 1.83E-04    163.03
	M = 4	M = 5	M = 6
N 1 2 3	2.89E-04    -9.28 1.40E-05    -33.64 2.19E-04    163.34	2.89E-04    -5.03 6.08E-05    -10.21	2.84E-04    -1.00 9.48E-05    -3.42
	M = 7	M = 8	M = 9
N 1 2	2.74E-04    2.76 4.55E-05    173.47	2.55E-04    6.18	2.21E-04    9.13
	M = 10	M = 11	
N 1	1.46E-04    11.67	3.18E-04    -166.55	

## SUBROUTINE BBCAA

INPUT FOR CASE 6

## ARRAY ARMISS

INDEX	VALUE	INDEX	VALUE	INDEX	VALUE	INDEX	VALUE
1	-0.0000	11	-0.0000	21	-0.0000	31	.0500
2	-0.0000	12	-0.0000	22	-0.0000	32	.0400
3	.3500	13	-0.0000	23	-0.0000	33	.0400
4	-1.0000	14	1.0000	24	-0.0000	34	0.0000
5	-0.0000	15	0.0000	25	3.0000	35	.4000
6	0.0000	16	-0.0000	26	-0.0000	36	1.0000
7	.7500	17	0.0000	27	-0.0000	37	-0.0000
8	0.0000	18	-0.0000	28	.8000	38	-0.0000
9	0.0000	19	-0.0000	29	-0.0000	39	-0.0000
10	15.0000	20	-0.0000	30	0.0000	40	-0.0000

## ARRAY AR

K = 2

J =	1	2	3	4	5	6
1						
1	2.00000	2.00000	-0.00000	-0.00000	-0.00000	0.00000
2	.67500	.15000	-0.00000	-0.00000	-0.00000	6.28000
3	.35000	.20000	-0.00000	-0.00000	-0.00000	-0.00000
4	1.00000	.10000	-0.00000	-0.00000	-0.00000	-0.00000
J =	7	8	9	10	11	
1						
1	2.00000	2.00000	0.00000	2.00000	2.00000	
2	.73000	.51000	.50000	.06500	.06000	
3	.56000	.50000	-0.00000	.10000	.10000	
4	.90000	.72500	-0.00000	.03000	.02000	

MODAL AMPLITUDES = (MODULUS,PHASE)

PHASE.LT.180 DEG AND PHASE.GT.-180 DEG

	M = -11	M = -10	M = -9	
N 1	4.85E-04      -46.02	2.35E-04      137.05	2.10E-04      -39.94	
	M = -8	M = -7	M = -6	
N 1	2.05E-04      143.03	2.07E-04      -34.05	2.13E-04      148.33	
2		6.28E-04      -38.30	1.55E-04      144.31	
	M = -5	M = -4	M = -3	
N 1	2.19E-04      -28.33	2.26E-04      154.48	2.29E-04      -22.76	
2	8.16E-05      -33.92	2.69E-05      142.85	2.23E-05      166.67	
3		2.88E-04      -27.72	1.97E-04      154.89	
	M = -2	M = -1	M = 0	
N 1	2.27E-04      159.98	2.19E-04      -17.31	2.19E-04      165.42	
2	6.88E-05      -17.72	1.06E-04      163.93	1.22E-04      -13.58	
3	1.62E-04      -22.48	1.44E-04      160.24	1.33E-04      163.08	
	M = 1	M = 2	M = 3	
N 1	2.29E-04      168.17	2.47E-04      170.90	2.53E-04      173.59	
2	1.10E-04      -10.73	7.42E-05      -7.38	2.30E-05      -1.37	
3	1.43E-04      -13.95	1.56E-04      -10.91	1.73E-04      -7.88	
	M = 4	M = 5	M = 6	
N 1	2.62E-04      176.22	2.59E-04      173.79	2.51E-04      -178.74	
2	1.97E-05      168.41	5.32E-05      170.37	9.15E-05      179.99	
3	2.10E-04      -4.91			
	M = 7	M = 8	M = 9	
N 1	2.38E-04      -176.36	2.17E-04      -174.13	1.84E-04      -172.10	
2	5.76E-05      -.72			
	M = 10	M = 11		
N 1	1.19E-04      -170.34	2.53E-04      10.98		

## SUBROUTINE BBCAA

INPUT FOR CASE 7

## ARRAY ARMISC

INDEX	VALUE	INDEX	VALUE	INDEX	VALUE	INDEX	VALUE
1	-0.0000	11	-0.0000	21	-0.0000	31	.0500
2	-0.0000	12	-0.0000	22	-0.0000	32	.0400
3	.3500	13	-0.0000	23	-0.0000	33	.0400
4	-1.0000	14	1.0000	24	-0.0000	34	.4000
5	-0.0000	15	0.0000	25	3.0000	35	.4000
6	0.0000	16	-0.0000	26	-0.0000	36	1.0000
7	.7500	17	0.0000	27	-0.0000	37	-0.0000
8	0.0000	18	-0.0000	28	.8000	38	-0.0000
9	0.0000	19	-0.0000	29	-0.0000	39	-0.0000
10	15.0000	20	-0.0000	30	.0500	40	-0.0000

## ARRAY AR

K = 2

J =	1	2	3	4	5	6
1						
1	2.00000	2.00000	-0.00000	-0.00000	-0.00000	0.00000
2	.67500	.15000	-0.00000	-0.00000	-0.00000	6.28000
3	.35000	.20000	-0.00000	-0.00000	-0.00000	-0.00000
4	1.00000	.10000	-0.00000	-0.00000	-0.00000	-0.00000
J =	7	8	9	10	11	
1						
1	2.00000	2.00000	0.00000	2.00000	2.00000	
2	.73000	.61000	.50000	.06500	.06000	
3	.56000	.50000	-0.00000	.10000	.10000	
4	.90000	.72500	-0.00000	.03000	.02000	

## MODAL AMPLITUDES = (MODULUS,PHASE)

PHASE.LT.180 DEG AND PHASE.GT.-180 DEG

	M = -11		M = -10		M = -9	
N 1	2.11E-04	9.43	1.02E-04	-170.94	9.03E-05	9.59
	M = -8		M = -7		M = -6	
N 1 2	8.84E-05	-171.66	8.90E-05	8.00	9.08E-05	-172.32
			3.03E-04	3.97	7.61E-05	-176.55
	M = -5		M = -4		M = -3	
N 1 2 3	9.29E-05	7.36	9.50E-05	-172.93	9.57E-05	6.79
	4.15E-05	2.37	1.64E-05	178.55	5.30E-06	-156.64
			1.32E-04	4.97	9.11E-05	-175.41
	M = -2		M = -1		M = 0	
N 1 2 3	9.40E-05	-173.48	9.01E-05	6.29	8.32E-05	-173.89
	2.54E-05	9.19	4.08E-05	-172.39	4.05E-05	7.14
	7.53E-05	4.30	6.09E-05	-175.35	6.37E-05	-175.85
	M = 1		M = 2		M = 3	
N 1 2 3	9.12E-05	-174.00	9.61E-05	-174.09	9.32E-05	-174.17
	4.07E-05	7.11	2.53E-05	7.67	6.24E-06	13.02
	6.47E-05	4.30	6.91E-05	4.52	7.00E-05	4.77
	M = 4		M = 5		M = 6	
N 1 2 3	9.59E-05	-174.27	9.31E-05	-174.38	9.74E-05	-174.50
	1.26E-05	-177.68	2.87E-05	-175.61	3.72E-05	-175.31
	8.61E-05	4.99				
	M = 7		M = 8		M = 9	
N 1 2	8.00E-05	-174.53	7.03E-05	-174.78	5.71E-05	-174.95
	3.16E-05	4.09				
	M = 10		M = 11			
N 1	3.51E-05	-175.16	7.03E-05	4.59		

## SUBROUTINE BBCAA

INPUT FOR CASE 8

## ARRAY ARMISC

INDEX	VALUE	INDEX	VALUE	INDEX	VALUE	INDEX	VALUE
1	-0.0000	11	-0.0000	21	-0.0000	31	0.0030
2	-0.0000	12	-0.0000	22	-0.0000	32	.0400
3	.3500	13	-0.0000	23	-0.0000	33	.0400
4	-1.0000	14	1.0000	24	-0.0000	34	.4000
5	-0.0000	15	0.0000	25	3.0000	35	-0.0000
6	0.0000	16	-0.0000	26	1.0000	36	1.0030
7	.7500	17	0.0000	27	-0.0000	37	-0.0000
8	0.0000	18	-0.0000	28	.8000	38	-0.0000
9	0.0000	19	-0.0000	29	3.1416	39	-0.0000
10	15.0000	20	-0.0000	30	.0500	40	-0.0000

## ARRAY AR

K = 2

J =	1	2	3	4	5	6
I						
1	2.00000	2.00000	-0.00000	-0.00000	-0.00000	0.00000
2	.67500	.15000	-0.00000	-0.00000	-0.00000	6.28000
3	.35000	.20000	-0.00000	-0.00000	-0.00000	-0.00000
4	1.00000	.10000	-0.00000	-0.00000	-0.00000	-0.00000
J =	7	8	9	10	11	
I						
1	2.00000	2.00000	0.00000	2.00000	2.00000	
2	.73000	.61000	.50000	.06500	.06000	
3	.56000	.50000	-0.00000	.10000	.10000	
4	.90000	.72500	-0.00000	.03000	.02000	

MODAL AMPLITUDES = (MODULUS,PHASE)

PHASE.LT.180 DEG AND PHASE.GT.-180 DEG

	M = -11		M = -10		M = -9
N 1	4.04E-04	108.47	1.90E-04	111.98	1.64E-04
					115.53
N 1	M = -8		M = -7		M = -6
N 2	1.56E-04	119.28	1.53E-04	123.08	1.53E-04
			4.53E-04	114.96	1.08E-04
					126.98
					117.89
N 1	M = -5		M = -4		M = -3
N 2	1.54E-04	131.00	1.54E-04	135.11	1.53E-04
N 3	5.40E-05	119.06	1.66E-05	107.60	1.86E-05
			1.91E-04	-49.68	1.27E-04
					139.31
					-24.05
					-46.00
N 1	M = -2		M = -1		M = 0
N 2	1.49E-04	143.58	1.42E-04	147.94	1.39E-04
N 3	4.76E-05	-31.70	7.09E-05	-29.44	8.03E-05
			8.73E-05	-37.86	8.19E-05
					152.44
					-25.44
					146.86
N 1	M = 1		M = 2		M = 3
N 2	1.45E-04	-22.93	1.56E-04	161.72	1.64E-04
N 3	7.24E-05	159.36	5.02E-05	-14.89	2.20E-05
			9.18E-05	-22.45	1.05E-04
					174.59
					163.04
N 1	M = 4		M = 5		M = 6
N 2	1.67E-04	170.72	1.67E-04	-5.02	1.64E-04
N 3	8.08E-06	146.36	3.50E-05	-10.20	5.46E-05
					179.01
					176.59
N 1	M = 7		M = 8		M = 9
N 2	1.58E-04	2.76	1.47E-04	-173.82	1.27E-04
			173.47		9.19
N 1	M = 10		M = 11		
	8.42E-05	-168.33	1.83E-04	-166.55	

## SUBROUTINE BBCAA

INPUT FOR CASE 9

## ARRAY ARMISC

INDEX	VALUE	INDEX	VALUE	INDEX	VALUE	INDEX	VALUE
1	-0.0000	11	-0.0000	21	-0.0000	31	0.0000
2	-0.0000	12	-0.0000	22	-0.0000	32	.0400
3	.3500	13	-0.0000	23	-0.0000	33	.0400
4	-1.0000	14	1.0000	24	-0.0000	34	.4000
5	-0.0000	15	0.0000	25	3.0000	35	-0.0000
6	0.0000	16	-0.0000	26	3.0000	36	1.0000
7	.7500	17	0.0000	27	-0.0000	37	-0.0000
8	0.0000	18	-0.0000	28	.8000	38	-0.0000
9	0.0000	19	-0.0000	29	0.0000	39	-0.0000
10	15.0000	20	-0.0000	30	.0500	40	-0.0000

## ARRAY AR

K = 2

J =	1	2	3	4	5	6
I						
1	2.00000	2.00000	-0.00000	-0.00000	-0.00000	0.00000
2	.67500	.15000	-0.00000	-0.00000	-0.00000	.628000
3	.35000	.20000	-0.00000	-0.00000	-0.00000	-0.00000
4	1.00000	.10000	-0.00000	-0.00000	-0.00000	-0.00000
J =	7	8	9	10	11	
I						
1	2.00000	2.00000	0.00000	2.00000	2.00000	
2	.73000	.61000	.50000	.06500	.06000	
3	.56000	.50000	-0.00000	.10000	.10000	
4	.90000	.72500	-0.00000	.03000	.02000	

MODAL AMPLITUDES = (MODULUS,PHASE)

PHASE.LT.180 DEG AND PHASE.GT.-180 DEG

	M = -11		M = -10		M = -9	
N 1	4.04E-04	108.46	1.90E-04	-68.03	1.64E-04	115.57
	M = -8		M = -7		M = -6	
N 1 2	1.56E-04	-60.73	1.53E-04	123.07	1.53E-04	-53.03
			4.53E-04	114.96	1.08E-04	-62.12
	M = -5		M = -4		M = -3	
N 1 2 3	1.54E-04	130.99	1.54E-04	-44.90	1.53E-04	139.30
	5.40E-05	119.05	1.66E-05	-72.41	1.86E-05	-24.06
			1.91E-04	130.31	1.27E-04	-46.01
	M = -2		M = -1		M = 0	
N 1 2 3	1.49E-04	-36.43	1.42E-04	147.94	1.39E-04	-27.56
	4.76E-05	148.29	7.09E-05	-29.45	8.03E-05	154.56
	1.01E-04	137.89	8.73E-05	-37.87	8.19E-05	-33.14
	M = 1		M = 2		M = 3	
N 1 2 3	1.45E-04	-22.94	1.56E-04	-18.29	1.64E-04	-13.71
	7.24E-05	159.35	5.02E-05	165.10	2.20E-05	174.58
	8.37E-05	152.06	9.18E-05	157.54	1.05E-04	163.03
	M = 4		M = 5		M = 6	
N 1 2 3	1.67E-04	-9.28	1.67E-04	-5.03	1.64E-04	-1.00
	8.08E-06	-33.64	3.50E-05	-10.21	5.46E-05	-3.42
	1.26E-04	168.34				
	M = 7		M = 8		M = 9	
N 1 2	1.58E-04	2.76	1.47E-04	6.18	1.27E-04	9.18
	2.62E-05	173.47				
	M = 10		M = 11			
N 1	8.42E-05	11.67	1.83E-04	-166.55		

## ACCUMULATION OF EDDYS

MODAL AMPLITUDES = (MODULUS,PHASE)

PHASE.LT.180 DEG AND PHASE.GT.-180 DEG

	M = -11	M = -10	M = -9	
N 1	8.08E-04    108.47	3.50E-08    -158.03	3.29E-04    115.57	
N 1	M = -8	M = -7	M = -6	
N 1	2.63E-08    -150.73	3.07E-04    123.08	2.36E-08    -143.02	
N 2		9.05E-04    114.96	1.67E-08    -152.12	
N 1	M = -5	M = -4	M = -3	
N 1	3.07E-04    130.99	2.15E-08    -134.90	3.06E-04    139.30	
N 2	1.08E-04    119.05	2.32E-09    -162.41	3.72E-05    -24.06	
N 3		2.66E-08    40.31	2.53E-04    -40.00	
N 1	M = -2	M = -1	M = 0	
N 1	1.86E-08    -126.43	2.83E-04    147.94	1.53E-08    -117.56	
N 2	5.94E-09    58.30	1.42E-04    -29.45	8.85E-09    64.50	
N 3	1.26E-08    47.89	1.75E-04    -37.87	9.03E-09    -123.14	
N 1	M = 1	M = 2	M = 3	
N 1	2.90E-04    -22.94	1.49E-08    -108.29	3.27E-04    -13.71	
N 2	1.45E-04    159.35	4.79E-09    75.11	4.40E-05    174.58	
N 3	1.67E-04    152.06	8.76E-09    67.54	2.11E-04    163.03	
N 1	M = 4	M = 5	M = 6	
N 1	1.35E-08    -99.28	3.33E-04    -5.03	1.08E-08    -91.00	
N 2	6.53E-10    -123.64	7.00E-05    -10.20	3.61E-09    -93.42	
N 3	1.02E-08    78.34			
N 1	M = 7	M = 8	M = 9	
N 1	3.15E-04    2.76	7.55E-09    -93.82	2.55E-04    9.19	
N 2	5.24E-05    173.47			
N 1	M = 10	M = 11		
N 1	3.09E-09    -78.33	3.66E-04    -166.55		

## SUBROUTINE BBCAA

INPUT FOR CASE 10

## ARRAY ARMISC

INDEX	VALUE	INDEX	VALUE	INDEX	VALUE	INDEX	VALUE
1	-0.0000	11	-0.0000	21	-0.0000	31	0.0000
2	-0.0000	12	-0.0000	22	-0.0000	32	.0400
3	.3500	13	-0.0000	23	-0.0000	33	.0400
4	-1.0000	14	1.0000	24	-0.0000	34	.4000
5	-0.0000	15	0.0000	25	3.0000	35	-0.0000
6	0.0000	16	-0.0000	26	-0.0000	36	1.0000
7	.7500	17	0.0000	27	-0.0000	37	.8000
8	0.0000	18	-0.0000	28	.8000	38	-0.0000
9	0.0000	19	-0.0000	29	0.0000	39	-0.0000
10	15.0000	20	-0.0000	30	.0500	40	-0.0000

## ARRAY AR

K = 2

J =	1	2	3	4	5	6
I						
1	2.00000	2.00000	-0.00000	-0.00000	-0.00000	0.00000
2	.67500	.15000	-0.00000	-0.00000	-0.00000	5.28000
3	.35000	.20000	-0.00000	-0.00000	-0.00000	-0.00000
4	1.00000	.10000	-0.00000	-0.00000	-0.00000	-0.00000
J =	7	8	9	10	11	
I						
1	2.00000	2.00000	0.00000	2.00000	2.00000	
2	.73000	.61000	.50000	.06500	.06000	
3	.56000	.50000	-0.00000	.10000	.10000	
4	.90000	.72500	-0.00000	.03000	.02000	

## MODAL AMPLITUDES = (MODULUS,PHASE)

PHASE.LT.180 DEG AND PHASE.GT.-180 DEG

	M = -11	M = -10	M = -9
N 1	3.66E-04      108.46	1.72E-04      -68.03	1.49E-04      115.57
	M = -8	M = -7	M = -6
N 1 2	1.41E-04      -60.73	1.39E-04      123.07 4.10E-04      114.96	1.39E-04      -53.03 9.77E-05      -62.12
	M = -5	M = -4	M = -3
N 1 2 3	1.39E-04      130.99 4.89E-05      119.05	1.40E-04      -44.90 1.50E-05      -72.41 1.73E-04      130.31	1.39E-04      139.30 1.68E-05      -24.06 1.15E-04      -46.01
	M = -2	M = -1	M = 0
N 1 2 3	1.35E-04      -36.43 4.31E-05      148.29 9.13E-05      137.89	1.28E-04      147.94 6.41E-05      -29.45 7.90E-05      -37.87	1.26E-04      -27.56 7.27E-05      154.56 7.42E-05      -33.14
	M = 1	M = 2	M = 3
N 1 2 3	1.31E-04      -22.94 6.55E-05      150.35 7.58E-05      152.06	1.41E-04      -18.29 4.54E-05      165.10 3.31E-05      157.54	1.48E-04      -13.71 1.99E-05      174.58 9.53E-05      163.03
	M = 4	M = 5	M = 6
N 1 2 3	1.51E-04      -9.28 7.31E-06      -33.64 1.14E-04      158.34	1.51E-04      -5.03 3.17E-05      -10.21	1.48E-04      -1.00 4.94E-05      -3.42
	M = 7	M = 8	M = 9
N 1 2	1.43E-04      2.76 2.37E-05      173.47	1.33E-04      6.18	1.15E-04      9.13
	M = 10	M = 11	
N 1	7.62E-05      11.67	1.66E-04      -166.55	

## SUBROUTINE B8CAA

INPUT FOR CASE 11

## ARRAY ARMISC

INDEX	VALUE	INDEX	VALUE	INDEX	VALUE	INDEX	VALUE
1	-0.0000	11	-0.0000	21	-0.0000	31	0.0000
2	-0.0000	12	-0.0000	22	-0.0000	32	.0400
3	.3500	13	-0.0000	23	-0.0000	33	.0400
4	-1.0000	14	1.0000	24	-0.0000	34	10.0000
5	-0.0000	15	0.0000	25	3.0000	35	-0.0000
6	0.0000	16	-0.0000	26	-0.0000	36	1.0000
7	.7500	17	0.0000	27	-0.0000	37	-0.0000
8	0.0000	18	-0.0000	28	.8000	38	-0.0000
9	0.0000	19	-0.0000	29	0.0000	39	-0.0000
10	15.0000	20	-0.0000	30	.0500	40	-0.0000

## ARRAY AR

K = 2

J =	1	2	3	4	5	6
I						
1	2.00000	0.00000	-0.00000	-0.00000	-0.00000	0.00000
2	.67500	.10000	-0.00000	-0.00000	-0.00000	0.28000
3	.35000	0.00000	-0.00000	-0.00000	-0.00000	-0.00000
4	1.00000	0.00000	-0.00000	-0.00000	-0.00000	-0.00000
J =	7	8	9	10	11	
I						
1	2.00000	2.00000	0.00000	-0.00000	-0.00000	
2	.73000	.61000	.50000	-0.00000	-0.00000	
3	.56000	.50000	-0.00000	-0.00000	-0.00000	
4	.90000	.72500	-0.00000	-0.00000	-0.00000	

MODAL AMPLITUDES = (MODULUS, PHASE)

PHASE.LT.180 DEG AND PHASE.GT.-180 DEG

	M = -11	M = -10	M = -9
N 1	7.00E-04    143.18	3.35E-04    -34.10	2.94E-04    143.62
	M = -8	M = -7	M = -6
N 1 2	2.84E-04    -28.68	2.84E-04    154.01	2.88E-04    -23.31
		7.78E-04    152.74	1.87E-04    -24.72
	M = -5	M = -4	M = -3
N 1 2 3	2.94E-04    159.35	3.00E-04    -18.02	3.02E-04    164.60
	9.23E-05    157.46	2.27E-05    -23.42	3.91E-05    -13.11
		3.45E-04    161.26	2.32E-04    -16.20
	M = -2	M = -1	M = 0
N 1 2 3	2.97E-04    -12.32	2.86E-04    169.74	2.82E-04    -7.73
	9.71E-05    167.92	1.44E-04    -9.82	1.64E-04    172.64
	1.88E-04    166.34	1.65E-04    -11.11	1.56E-04    -3.54
	M = 1	M = 2	M = 3
N 1 2 3	2.96E-04    -5.23	3.19E-04    -2.78	3.34E-04    -.40
	1.49E-04    175.16	1.04E-04    177.75	4.62E-05    -179.22
	1.61E-04    174.05	1.78E-04    176.62	2.04E-04    179.14
	M = 4	M = 5	M = 6
N 1 2 3	3.38E-04    1.90	3.35E-04    4.09	3.26E-04    5.14
	1.32E-05    -2.27	6.92E-05    3.35	1.10E-04    5.80
	2.43E-04    -178.45		
	M = 7	M = 8	M = 9
N 1 2	3.10E-04    8.04	2.84E-04    9.73	2.42E-04    11.15
	2.75E-05    -174.37		
	M = 10	M = 11	
N 1	1.57E-04    12.22	3.33E-04    -167.21	

Boeing Commercial Airplane Company

P.O. Box 3707

Seattle, Washington 98124, May 31, 1974.